



SUITABLE FOR ALL BREEDS



Bark collar



English 01-16



Español 17-31

USER MANUAL

MODEL: TT21

Please read the operating instructions carefully before using the product. Pay special attention to all warnings and safety instructions. Keep this manual for later reference.

Important Safety Information



NOT for
aggressive dogs!



For dogs over 6 months



Keep out reach of Children!
For DOG use only!



Place the Conductive Silicone Covers on the Metal Prongs to protect the dog's skin.
The Conductive Silicone Covers can deliver static shock.

- DO NOT leave the collar on the dog for more than 12 hours per day.
- When possible, re-position the collar on the dog's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- DO NOT connect an extra leash to the collar, which will cause excessive pressure on the contacts.
- Clean the contact area on your dog's neck and the Metal prongs of the collar with a damp cloth every week.

Product Information



Bark Collar



Remote Tag



User Manual



Magnetic
Charging Cable



Test Bulb



 
 
 
 
Wrist Strap



Metal Prongs




Conductive
Silicone Covers

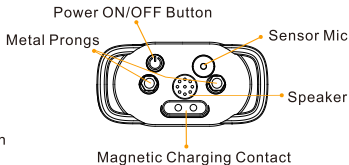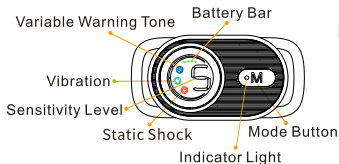

Test The Bark Collar

 1A. Charge the Bark Collar before Use

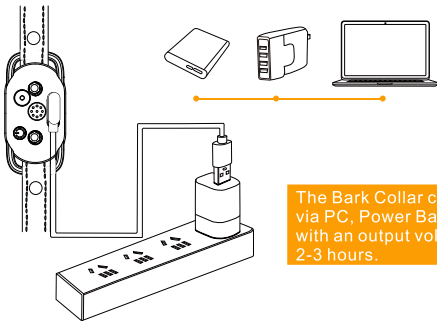

The Bark Collar can be charged via PC, Power Bank, or Charger with an output voltage of 5V for 2-3 hours.

Description of Charging



When the Bark Collar is on charge, the Battery Bar blinks from left to right and the Indicator blinks fast.

When the Bark Collar is fully charged, the Battery Bar stops blinking and the Indicator becomes solid.

 


A Beeping will be delivered if the Bark Collar is not on charge with a 5V-rated charger.

Note:

1. Make sure to use a 5V-rated charger to charge the Bark Collar.
2. Use the magnetic charging cable in the package when charging. Other charging cables may not be suitable for this Bark Collar and may cause electric damage.
3. The charger, power bank and other charging devices shown in the above picture are not included in the box.

1B. Power on the Bark Collar



Press and hold the Power ON/OFF Button for 3 seconds to power it on.

 


The display will turn on with a vibration /beeping.

1C. Set the Bark Collar to Test Mode

Set the Bark Collar to Test Mode by pressing the Power ON/OFF Button until the display shows .

After that, imitate a dog bark towards the Sensor Mic located at the back of the Bark Collar.

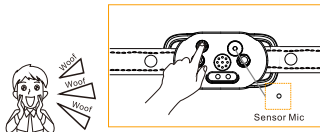


- Press the Power ON/OFF Button to get to the Test Mode, and make sure the digit shows 0 before the test.

1D. The Response of the Bark Collar in the Test Mode



 When the Bark Collar is set to the Test Mode, no matter what mode it is in, it will deliver a Tone, a Vibration, and a Static Shock after you imitate a dog bark towards the Sensor Mic.

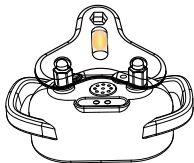


Hold the Test Bulb Tool on the Metal Prongs when test the shock function.


If the Bark Collar responds as described above, you've succeeded in setting up the Bark Collar properly.

How to Set the Automatic Modes?

 The following instructions will guide you on how to switch modes.

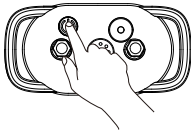

 1. Power on the Bark Collar by pressing and holding the Power ON/OFF Button for 3 seconds

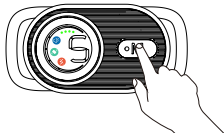

2. Press the Mode Button to switch modes, the mode icons will be changed.

3.Four Main Training Modes:



Variable Warning Tone Mode

6 Variable Warning Tone of different frequencies in 6 steps.



Vibration Mode

3 different levels of Vibration in 3 steps.



Variable Warning Tone +Vibration Mode

6 Variable Warning Tone+3 different levels of Vibration Working collaboratively in 6 steps.



Variable Warning Tone + Vibration +Static Shock Mode

6 Variable Warning Tone+High level Vibration+6 level Static Shock working collaboratively in 6 steps.

 
How to Use Remote Tag?

Usually the Automatic Modes can stop the dog barking. With the Remote Tag, you can manually stop the excessive barking in some situations or from dogs with behavior issues and not well-trained. Use it only when necessary.


1.Slide to Power ON the Remote Tag



2. Press the Transmit Button, the product will activate Tone+Vibration indicated by the green indicator.

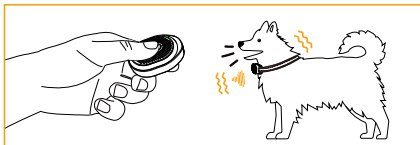

 
3. Press and hold the Transmit Button for 1.5 seconds, the product will activate Tone+Vibration indicated by the green indicator, after which the Static Shock +Tone will be activated, indicated by the red indicator.

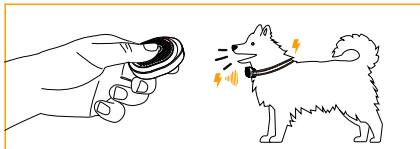

How to Pair the Remote Tag to the Bark Collar?

In case the Bark Collar is not responding to the Remote Tag, please follow these steps to pair them up:

 1. Press and hold the Mode Button on the Bark Collar for 3 seconds to enter the Pairing Mode. You will hear a Beeping tone, and the Display will light up. You will now have 10 seconds to complete the pairing.
2. Press the Transmit Button on the Remote Tag. The Bark Collar will beep 3 times and respond correspondingly.

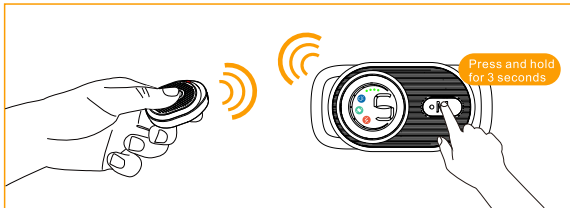


Tips:

The Bark Collar is paired up to the Remote Tag by factory default setting. If you can not pair your device successfully, it may be due to signal interference. Please try pairing again in a different location or contact our service center.


How to Replace A New Battery

The Remote Tag comes with a 3V lithium coin cell battery (CR2032) installed. If the Remote Tag is not responding, you will need to purchase a new battery and replace it by yourself.

 
Here are instructions for coin cell battery replacement.

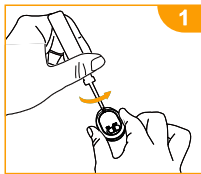

 1. Use a Phillips Screwdriver to disassemble the Remote Tag.

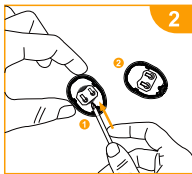


 2. Take out the old battery from the battery holder.

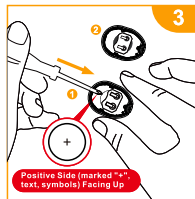

3. Prepare a new battery, then install it into the battery holder.
Note: 1. The new battery is not included in the package, you need to buy it yourself.

 
2. Install the coin battery with the positive side (marked "+", text, symbols) facing up to prevent damage to the Remote Tag.

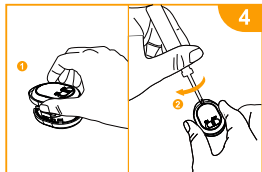

4. Use a Phillips Screwdriver to assemble the Remote Tag.

Put the Bark Collar on Your Dog

 Note: have a look if you have a small dog!



Please ensure to fit the Bark Collar snugly, yet loosely enough to allow one finger to fit between the strap and your dog's neck.



Great! Now you have successfully put the Bark Collar on your dog and it's ready for training!

Display & Indicator

Display on Bark Collar

Modes Icons



Variable Warning Tone



Vibration



Static Shock