

2 IN 1 ULTRASONIC DOG TRAINING COLLAR



EN English 01-23

ES Español 25-47

USER MANUAL

MODEL: TT31



CONTENT

I. Important Safety Information	01
II. Package Content	02
III. Product Overview	03
IV. Quick Start Guide	04
V. Setting Up	08
VI. Training Modes	10
VII. Fitting the Receiver	13
VIII. Pairing Up	14
IX. LCD Display & Indicator Definitions	18
X. Training Tip	19
XI. Frequently Asked Questions	21
XII. Troubleshooting	23
XIII. FCC Statement	23





ÍNDICE

I. Información De Seguridad Importante	25
II. Contenido Del Paquete	26
III. Descripción Del Producto	27
IV. Guía De Inicio Rápido	28
V. Configuración	32
VI. Modos de Entrenamiento	34
VII. Ajuste Del Receptor	37
VIII. Emparejamiento	38
IX. Definiciones de pantalla e indicadores LCD	42
X. Consejo de entrenamiento	43
XI. Preguntas Frecuentes	45
XII. Solución de Problemas	47



I. Important Safety Information:

WARNING

Not for use with aggressive dogs. Do not use this product if your dog is aggressive or prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.


- ◆ **Ultrasonic Sound Warning:** The Remote Transmitter must not be used within 12 inches of human ears when operating in Ultrasonic Mode.
- ◆ For use with dogs over 6 months of age and over 8 lbs.
- ◆ **DO NOT** use when the dog or the collar is wet.
- ◆ **DO NOT** press and hold shock or vibrate for more than 10 seconds to avoid physical or psychological damage to your dog.
- ◆ Your dog **SHOULD NOT WHINE OR PANIC** when receiving stimulation. If this happens, the stimulation level is too high and you need to go back to the previous level and repeat the process.
- ◆ **DO NOT** charge the device near any flammable substances.
- ◆ For dog use **ONLY**. Not for use on children.
- ◆ This is not a toy, and should only be operated by a responsible adult.

CAUTION


Before your first training, please carefully read and follow the instructions in this manual. The cautions below will help keep your dog safe and comfortable. Millions of dogs are comfortable wearing collars, while some are sensitive to the pressure from the contacts.

- ◆ It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash (do not attach the leash to the receiver). The leash should be long enough for your dog to attempt to chase an object but short enough to prevent reaching roads or other hazards. You must also be physically strong enough to restrain your dog when he tries to chase.
- ◆ Risk of skin damage. Proper Receiver fitment is important. A Receiver worn for too long or made too tight on the dog's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.
- ◆ **DO NOT** leave the Receiver on the dog for more than 12 hours per day.
- ◆ When possible re-position the Receiver on the dog's neck every 1 to 2 hours.
- ◆ Check the fit to prevent excessive pressure; follow the instructions in this manual.
- ◆ Never connect an extra leash to the Receiver; it will cause excessive pressure on the contacts.
- ◆ Clean the dog's neck area and the Metal Prongs of the Receiver weekly with a damp cloth.
- ◆ Examine the contact area daily for signs of a rash or a sore.
- ◆ If a rash or sore is found, discontinue the use of the Receiver until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- ◆ The Receiver Collar meets IP67 waterproof rating. It can be submerged in water up to 1 meter for up to 30 minutes. If submerged and wet, please do not use it.


II. Package Content

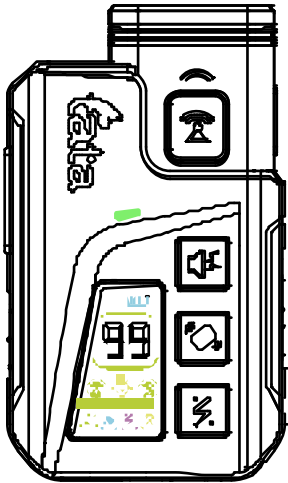

Remote Transmitter

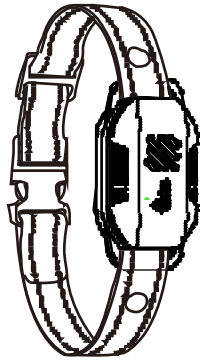


Receiver Collar

 

Test Bulb



 Metal Prongs

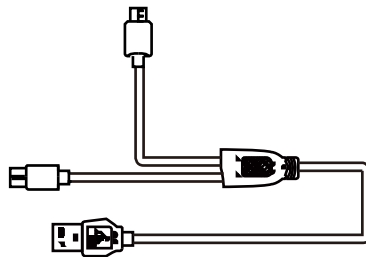


USB Type-C Cable



Conductive
Silicone Caps



 
User Manual

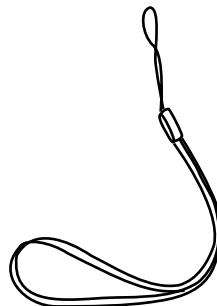


Wrist Strap

III. Product Overview

 Remote Transmitter


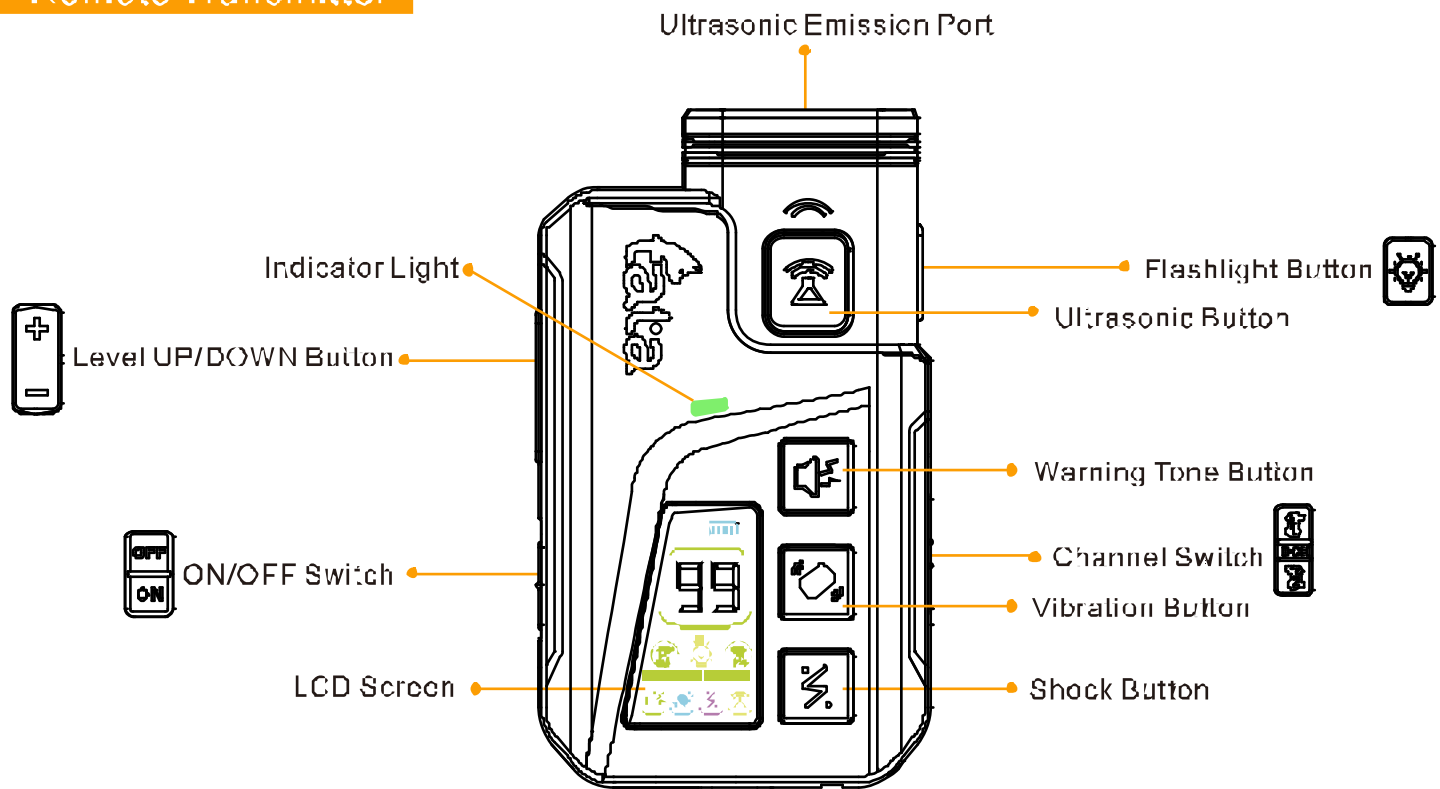


Display Screen

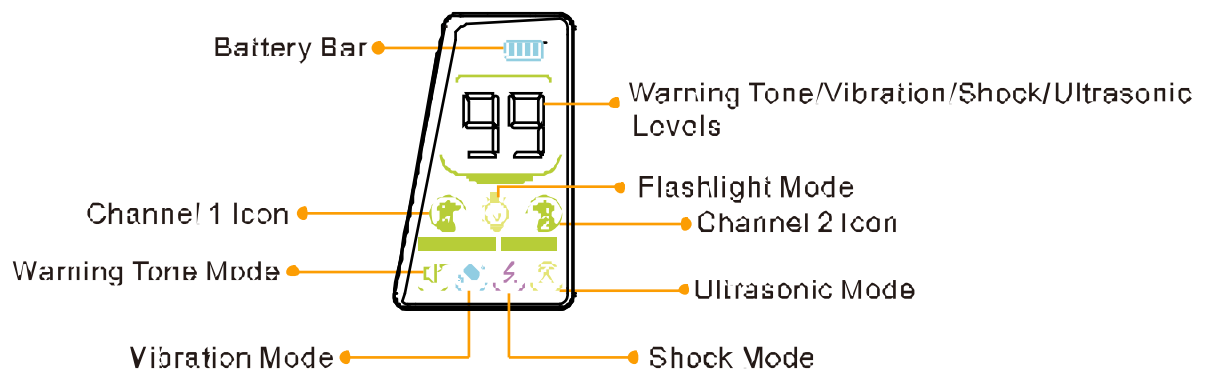 


Note: The Remote Transmitter will go into sleep mode if no operation is made for 10 seconds.

  Receiver

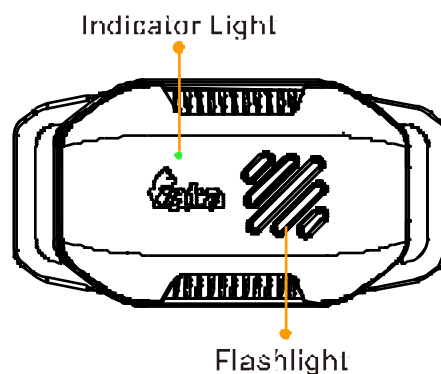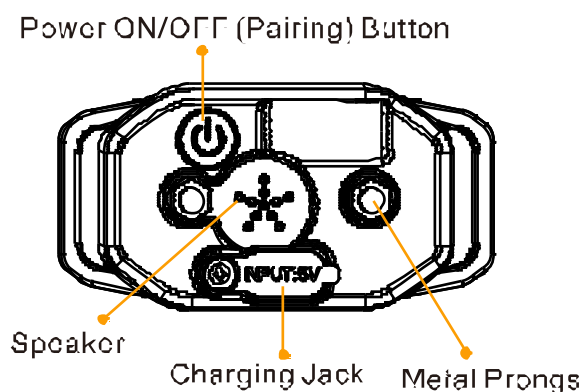


IV. Quick Start Guide

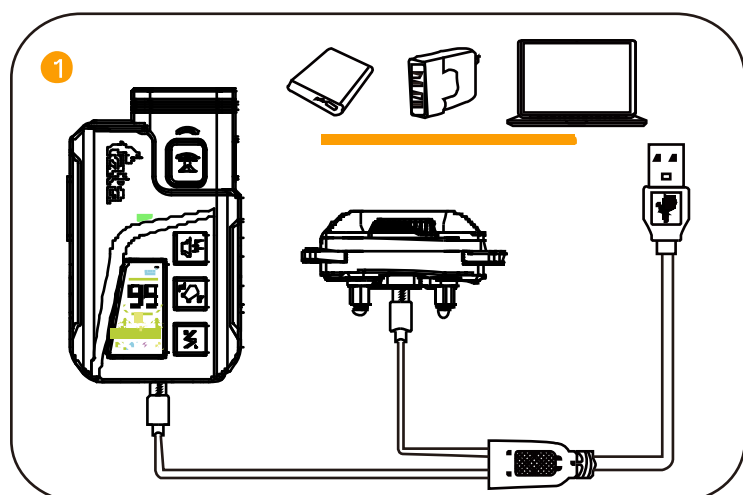 


Charge the Receiver and the Remote Transmitter for 2-3 hours with the Charging Cable from the package box.

 
Note: The charger, power bank and other charging devices shown in the above picture are not included in the box.

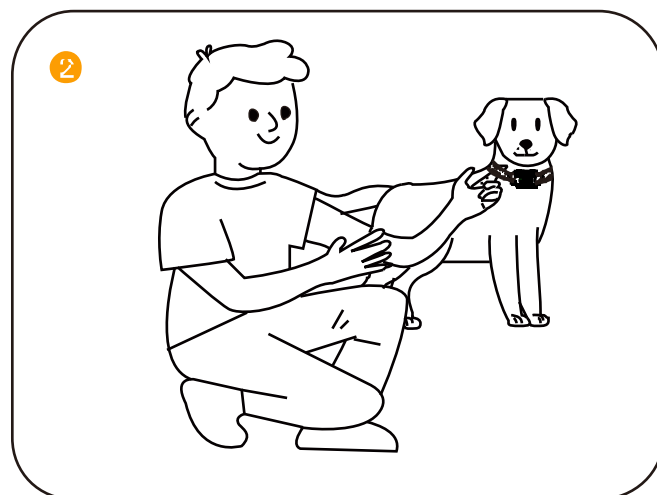

Make your dog sit down and fit the Receiver to your dog by leaving one finger space between the collar and your dog's neck. Center the Metal Prongs underneath your dog's neck, touching the skin.

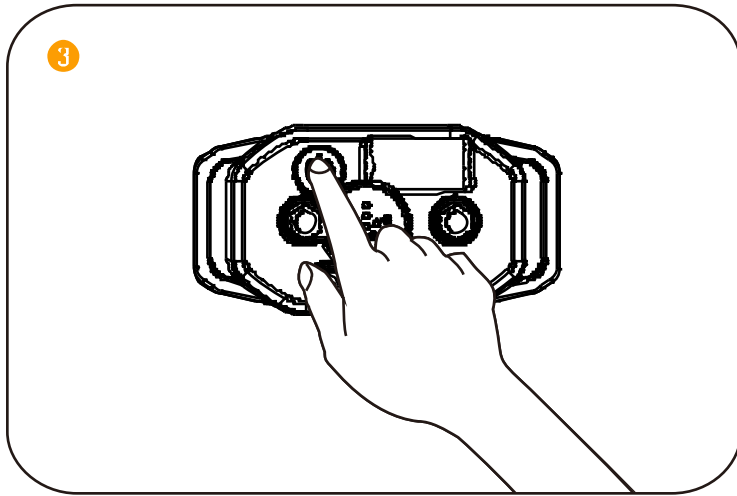

Turn on the Receiver by pressing and holding the Power Button for 2 seconds with a vibration to indicate that the Receiver is turned on. The green LCD Indicator light now continues to blink regularly.

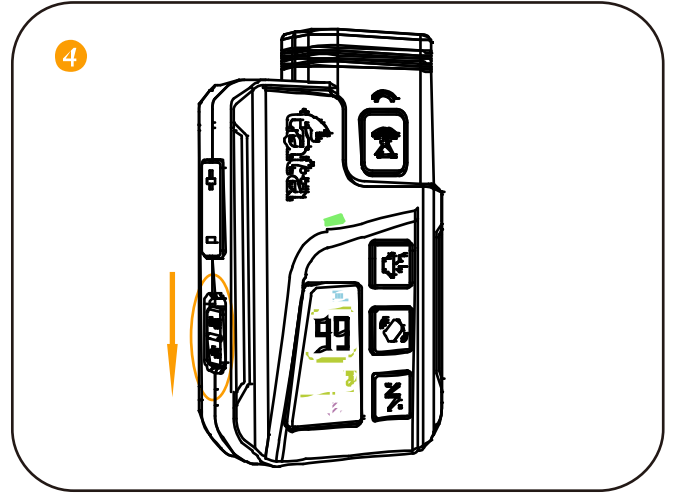


To turn on the Remote Transmitter, slide the Switch to ' ON ', and the LCD Screen will light up.



Ultrasonic Sound Warning: The Remote Transmitter must not be used within 12 inches of human ears when operating in Ultrasonic Mode.


Ultrasonic Mode: Press the Ultrasonic Mode Button, the Ultrasonic Emission Port will emit an Ultrasonic Sound, and the red indicator light on the Remote Transmitter will rapidly light up.

To adjust the Ultrasonic level, press the  button first, then press the UP/DOWN Button  to raise /lower to the desired level.

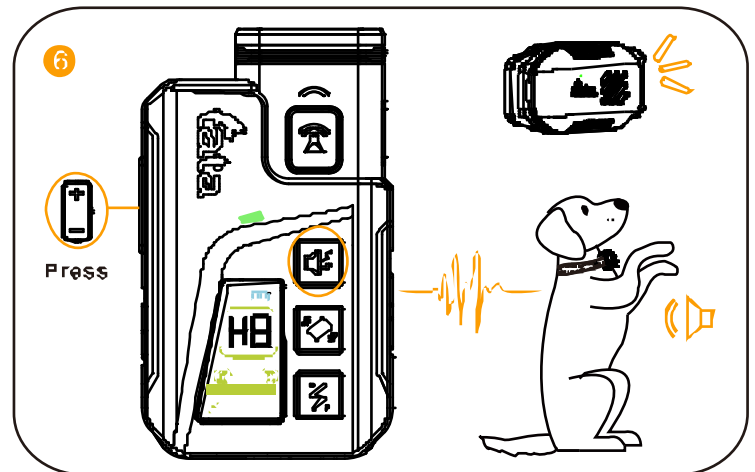


Warning Tone Command: Press the Warning Tone Button, and the green indicator light on the Remote Transmitter rapidly lights up. The Receiver will deliver a warning tone, and the green LCD indicator light on the Receiver will come up simultaneously.


To adjust the warning tone level, press the  button first, then press the UP/DOWN Button  to raise /lower to the desired level.

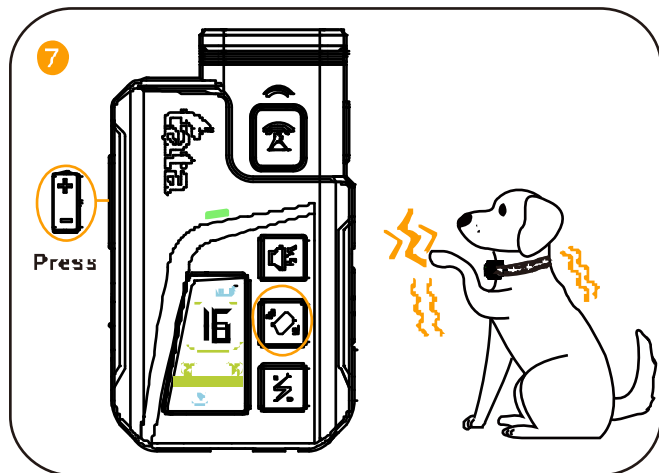

Vibration Command: Press the Vibration Button, and the green indicator light on the Remote Transmitter rapidly lights up. The Receiver will deliver vibration, and the green LED indicator light on the Receiver will come up simultaneously. To adjust the Vibration level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

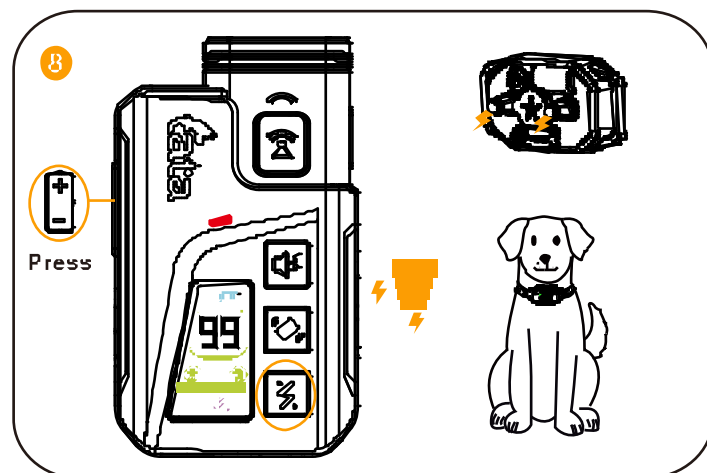

Shock Command: Press the Shock Button, and the red indicator Light on the Remote Transmitter rapidly lights up. The Receiver will deliver a shock, and the green LED Indicator light on the Receiver comes up simultaneously. To adjust the shock level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

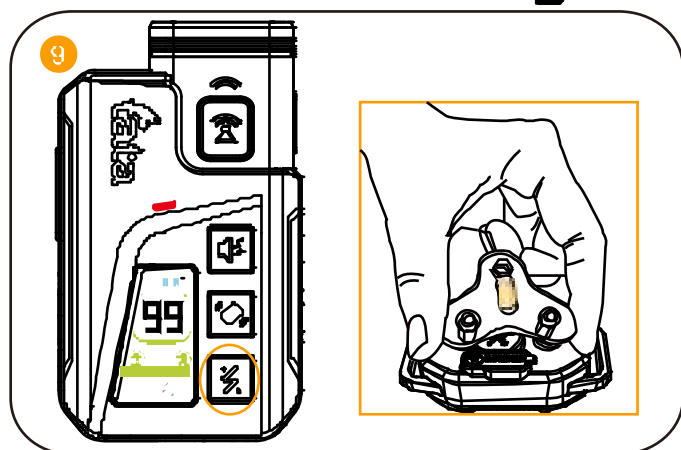


Test the Receiver with the Test Bulb:

1. Turn the Receiver on.
2. Hold the Test Bulb to the Metal Prongs on the Receiver. Make sure the metal wire in the Test Bulb has direct contact with both of the tops of the Metal Prongs.
3. Press the Shock Button on the Remote Transmitter.
4. The Red Test Light will flash if the Receiver works normally. At higher shock levels, the Test Bulb will flash brighter.


Note:

- (1) While you test the Receiver with your fingers, please put your two fingers on the top of the Metal Prongs separately to form a closed loop circle.
- (2) Please always start from the lowest Shock level to avoid accidental injury.

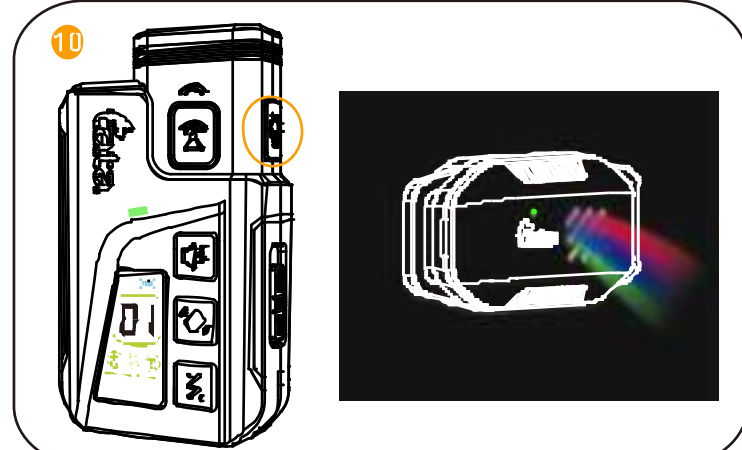

Flashlight Mode: Press the Flashlight Button, and the Flashlight on the Receiver will be on. Press the Flashlight Button again, and the Flashlight Mode will be off. Once the Flashlight is on, it will cut off automatically after 30 minutes if there is no operation on the Remote Transmitter.

To adjust the type of the Flashlight, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired type of flashlight.

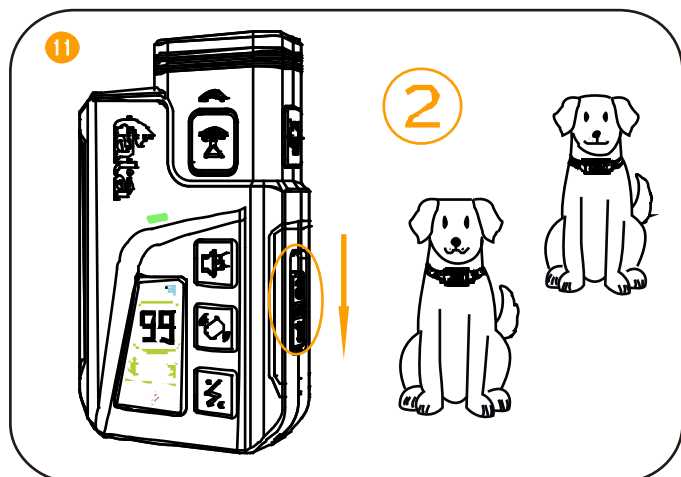

This product can train up to 2 dogs. You can either train 2 dogs independently by sliding the Channel Switch to 1 or 2, or train two dogs simultaneously by sliding the Channel Switch to the middle position 3. This Receiver is paired to Channel 1 by the factory default setting. If you have an extra receiver to pair up, please follow the instructions in the section Pairing Up on page 14.

How the System Works

The Remote Training Collar is easy to use with an advanced LCD Screen that tells you the exact stimulation level you are using.

The Remote Training Collar assists you in controlling your dog without a leash. By simply pressing a button, your Remote Transmitter sends a signal to your dog's Receiver or emits an ultrasonic sound that effectively captures your dog's attention. The dog receives a safe but noticeable stimulation.


He'll quickly learn the association between his behavior and your correction, and soon you'll have a better-behaved dog. The Remote Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

If using the Remote Training Collar consistently and correctly, any basic obedience commands can be taught and will help correct any misbehavior that your dog exhibits.

V. Setting Up

1. Charge the Product

Charge both the Receiver and Remote Transmitter with the Charging Cable in the package box until their Indicator becomes solid green, which will take around 2-3 hours.

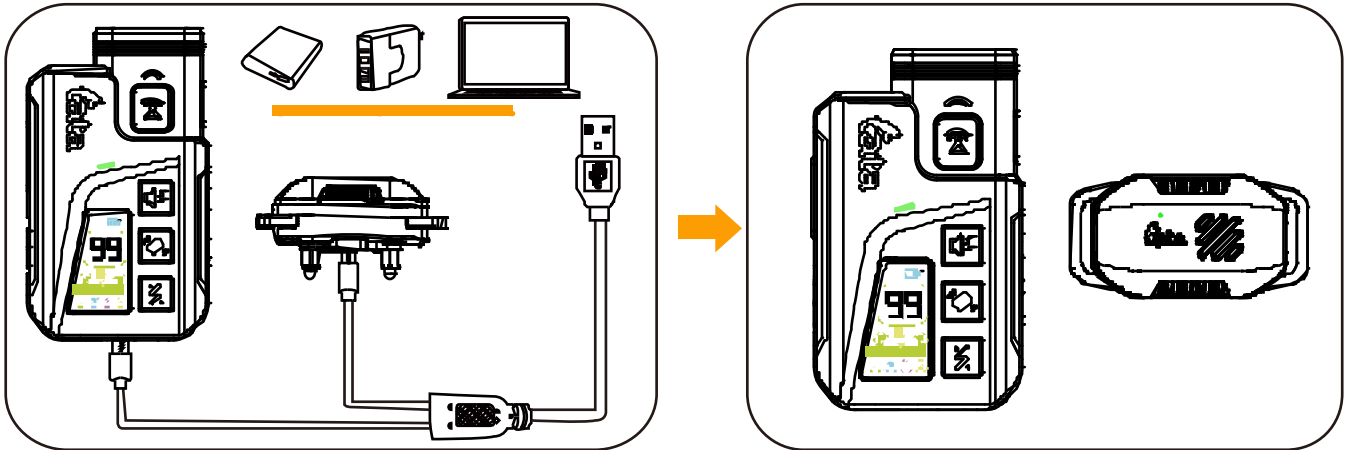


Note:


- (1) The charger, power bank, and other charging devices shown in the above picture are not included in the box.
- (2) Use the charging cable in the package when charging. Other charging cables may not be suitable for this Dog Training Collar, which may cause electrical damage.
- (3) The Dog Training Collar ONLY supports a 5V-rated power source. If charged with an improper charger:
Receiver Collar—delivers a rapid warning tone and stops charging automatically.
Remote Transmitter—stop charging automatically with the Indicator rapidly blinking in red.

2. Turn On/Off the Product


Turn on the Remote Transmitter by sliding the Switch to 'ON', and the LCD Screen will light up.

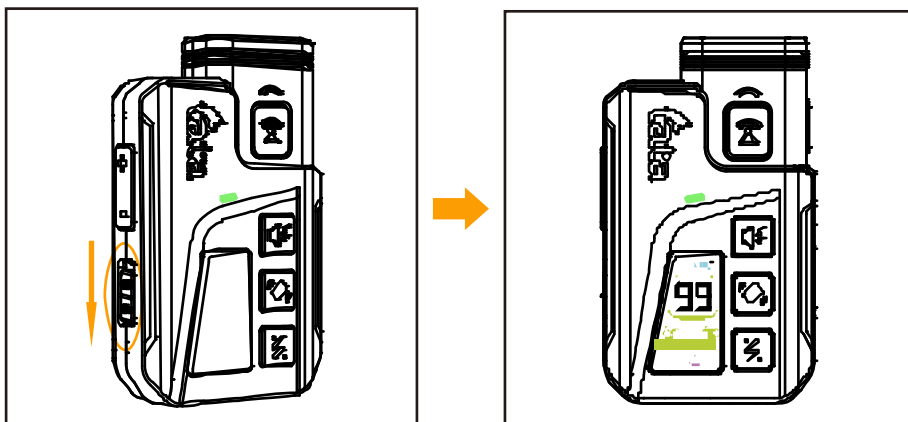


Turn off the Remote Transmitter by sliding the Switch to ' OFF ', and the LCD Screen will shut down.

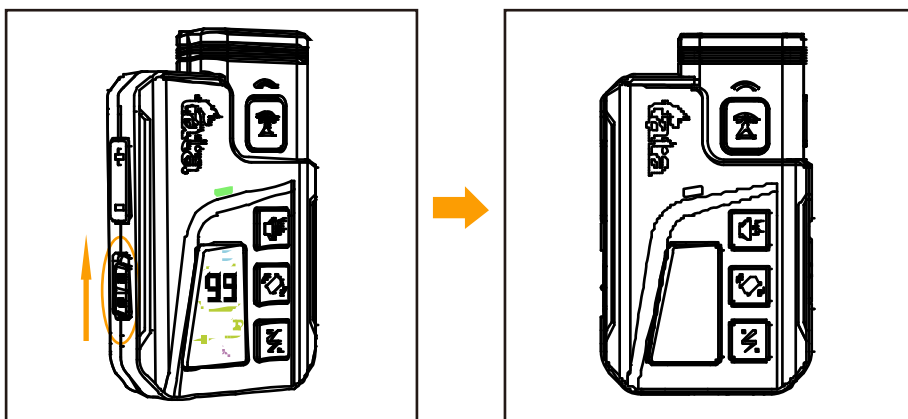

Turn on the Receiver by pressing and holding the Power Button for 2 seconds with a vibration to indicate that the Receiver turns on, as the green LED Indicator light blinks regularly.

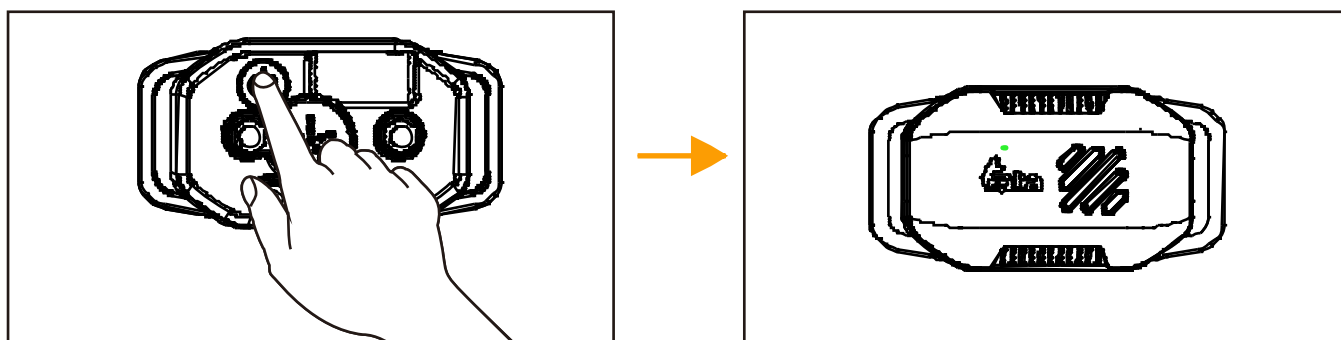

Turn off the Receiver by pressing and holding the Power Button for 2 seconds with a long beeping to indicate that the Receiver turns off, as the green LED Indicator light stops blinking.

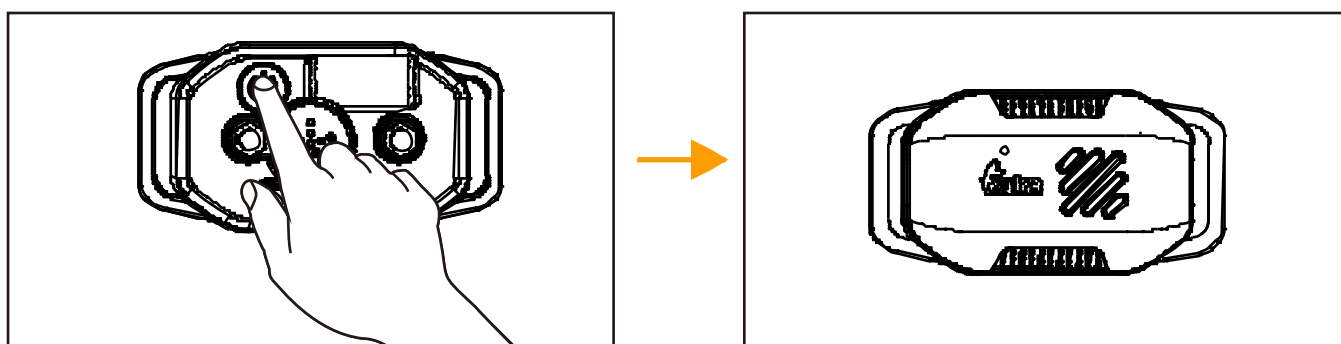


VI. Training Modes

1. Ultrasonic Mode


Press the Ultrasonic Button, and the Ultrasonic Emission Port will emit an Ultrasonic Sound. It will cut off automatically if you press and hold the Ultrasonic Button for 10 seconds. There is a total of 3 levels of Ultrasonic. To adjust the Ultrasonic level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

Note: (1) It is suggested to start with Level 1 (Low). If the dog doesn't respond, try Level 2 (Medium) or Level 3 (Strong). The LCD Screen will show the corresponding level number.

(2) The maximum ultrasonic emission distance is 50 feet. Please use within this range; otherwise, it may not function properly.

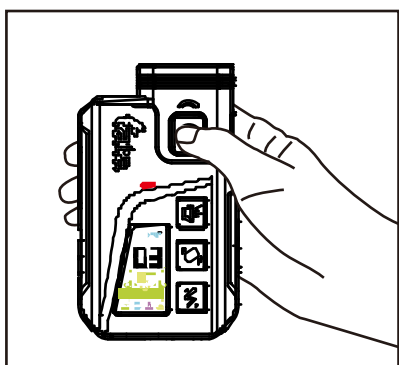


Press

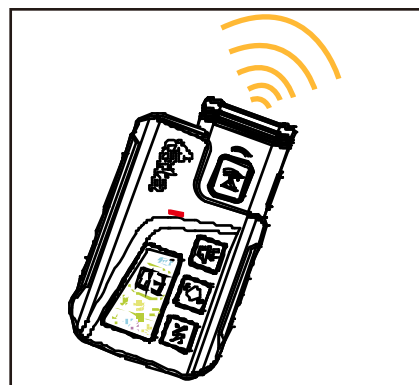


2. Warning Tone Mode

Press the Warning Tone Button, and the Receiver will deliver a warning tone. It will cut off automatically if you press and hold the Warning Tone Button for 10 seconds. There is a total of 8 levels of Warning Tone for training. To adjust the warning tone level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

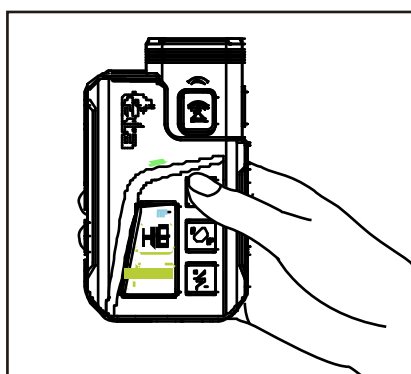


Press

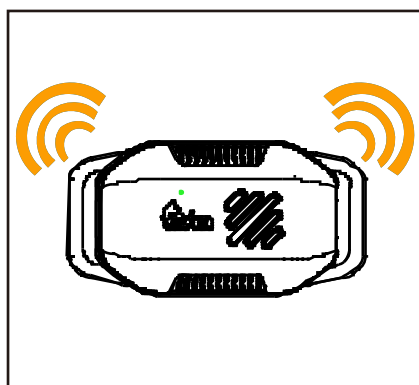


3.Vibration Mode

Press the Vibration Button, and the Receiver will deliver a vibration. It will cut off automatically if you press and hold the Vibration Button for 10 seconds. There is a total of 16 levels of Vibration.
To adjust the Vibration level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

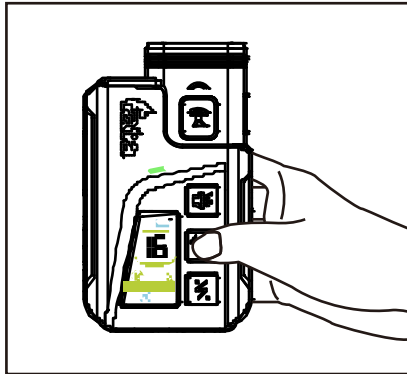


Press


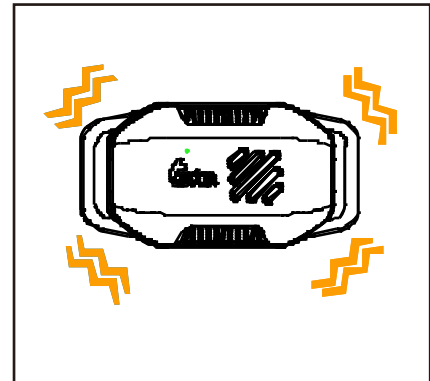


4.Shock Mode

Press the Shock Button, and the Receiver will deliver a static shock. It will cut off automatically if you press and hold the Shock Button for 10 seconds. There is a total of 99 levels of Shock.
To adjust the shock level, press the  button first, then press the UP/DOWN Button  to raise/lower to the desired level.

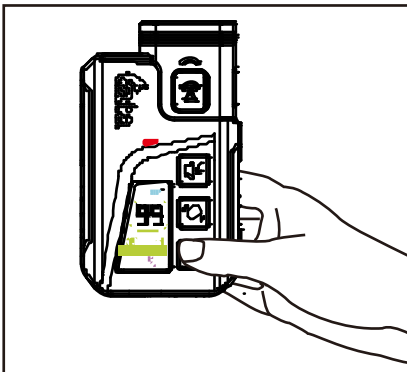

Press

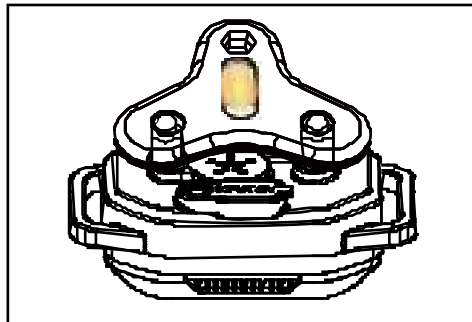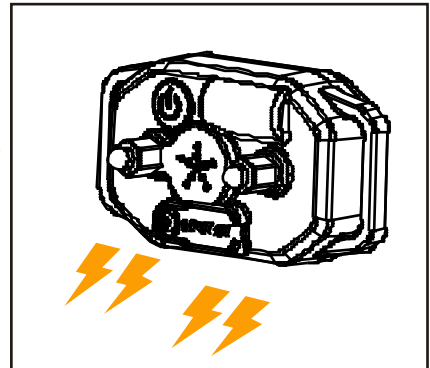

When testing the Shock function for the first time, place the Test Bulb on the Metal Prongs. The Test Bulb lights up to indicate that the Shock function is working, and it will become brighter at higher shock levels.


5. Flashlight Mode

There are seven types of flashlight modes.


Icon on the Remote Transmitter	Flashlight Color	Press the Flashlight Button, the Receiver will illuminate the corresponding Flashlight color based on the icon shown on the Remote Transmitter.
L1	Blue, Green, Red 	
L2	White 	
L3	Green 	
L4	Red 	
L5	Blue 	
L6	Yellow 	
L7	Purple 	

Press the Flashlight Button again, and the Flashlight Mode will be off. Once the Flashlight is on, it will cut off automatically after 30 minutes if there is no operation on the Remote Transmitter.

To adjust the different types of Flashlight, press the  button first, then press the UP/DOWN Button  to raise /lower to the desired level.

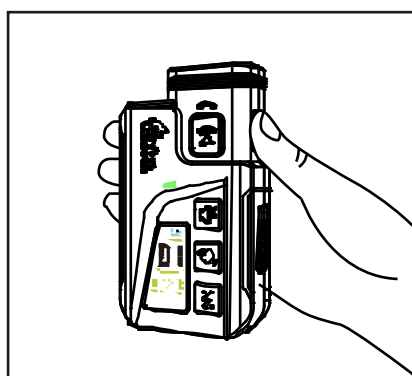


Press

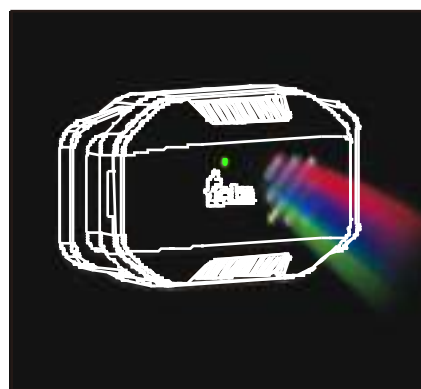

Note: When the dog training collar is in Flashlight mode, pressing any of the buttons for the other three training modes will temporarily turn off the Flashlight. Once the operation is complete, the receiver will automatically return to Flashlight mode and resume lighting up.

6. Switching Channels

Use the Channel Switch on the right side of the Remote Transmitter to select the Receiver you wish to control if you have paired two Receivers.

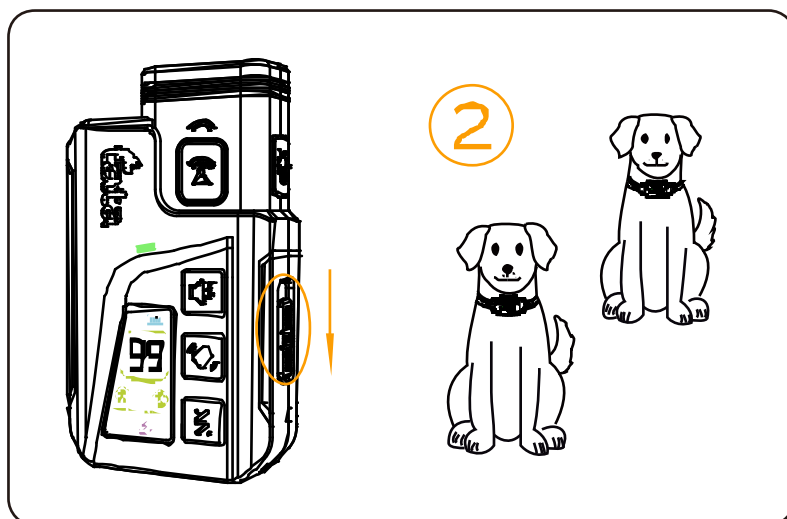

Note:

The Remote Transmitter will go into sleep mode if no operation is made for 10 seconds, saving battery power.

VII. Fitting the Receiver


IMPORTANT:

The proper fit and placement of your Receiver are important for effective training. The Metal Prongs with Conductive Silicone Caps must have direct contact with your dog's skin on the underside of his neck. To ensure a proper fit, please follow these steps:


1. Make sure that the Receiver is turned off.
2. Let your dog stand on four feet or lay down fully (A).
3. Place the Receiver on your dog's neck close to the ears. Center the Metal Prongs underneath your dog's neck, touching the skin (B).

Note: It is sometimes necessary to trim the hair around the Metal Prongs to make sure that contact is consistent.

4. The Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (C).
5. Allow your dog to wear the Receiver for several minutes then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver.

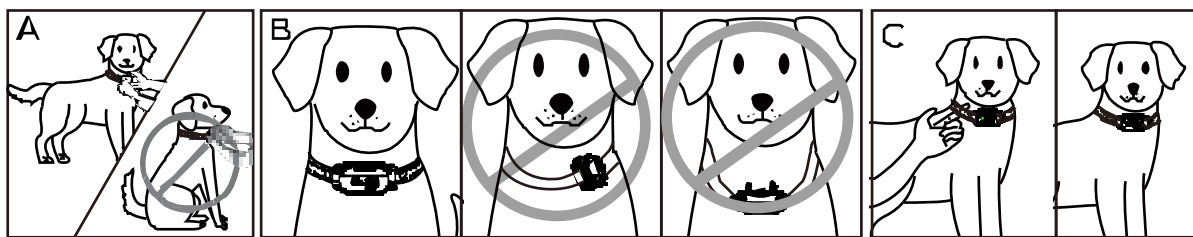

6. To attach the collar to the Receiver, please follow the following steps as instructed to thread the strap.

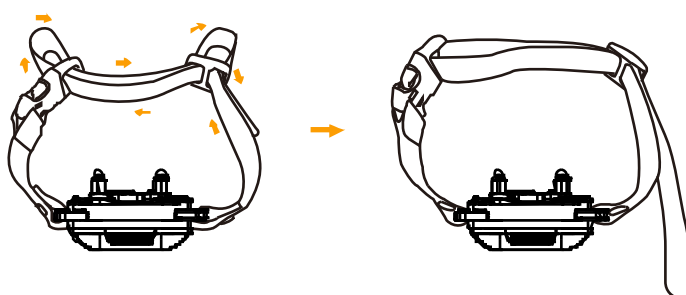


CAUTION:

- **DO NOT** leave the Receiver on your dog's neck for continuous 12 hours.
- **Never** attach a leash to the collar.
- **Never** fit the Receiver too tight to your dog's neck.
- **DO NOT** shave the dog's neck as this may increase the risk of skin irritation.
- **Check the fit regularly** to make your dog more comfortable with the Receiver.


VIII. Pairing Up

In case the Receiver is not responding to the Remote Transmitter, follow these steps to pair them up:


1. Press and hold the Power Button on the Receiver for 2 seconds to turn it on. Turn on the Remote Transmitter by sliding the Switch to 'ON', and the LCD Screen will light up.

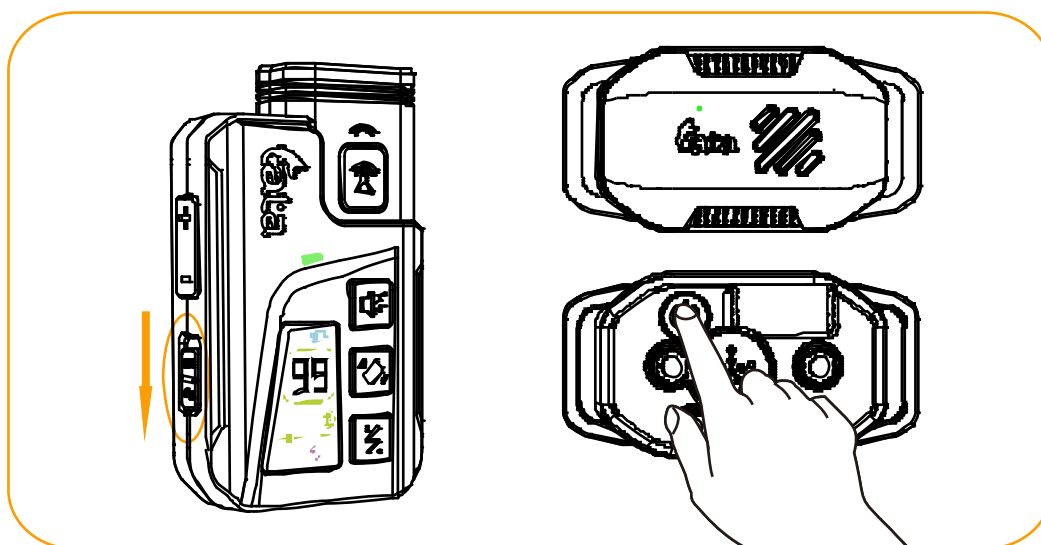

2. Press the Power Button on the Receiver 3 times to enter the Pairing Mode. You will hear a Beeping tone, and the Indicator light becomes solid green. You will now have 10 seconds to finish the pairing.

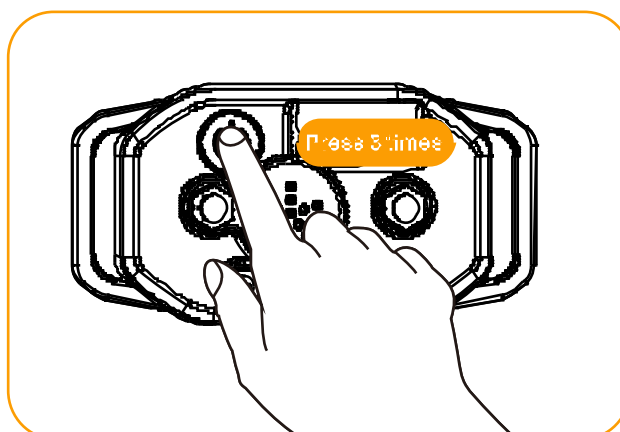


3. Press the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will beep 3 times and respond respectively after you press any of the above buttons, indicating that the pairing process is completed.

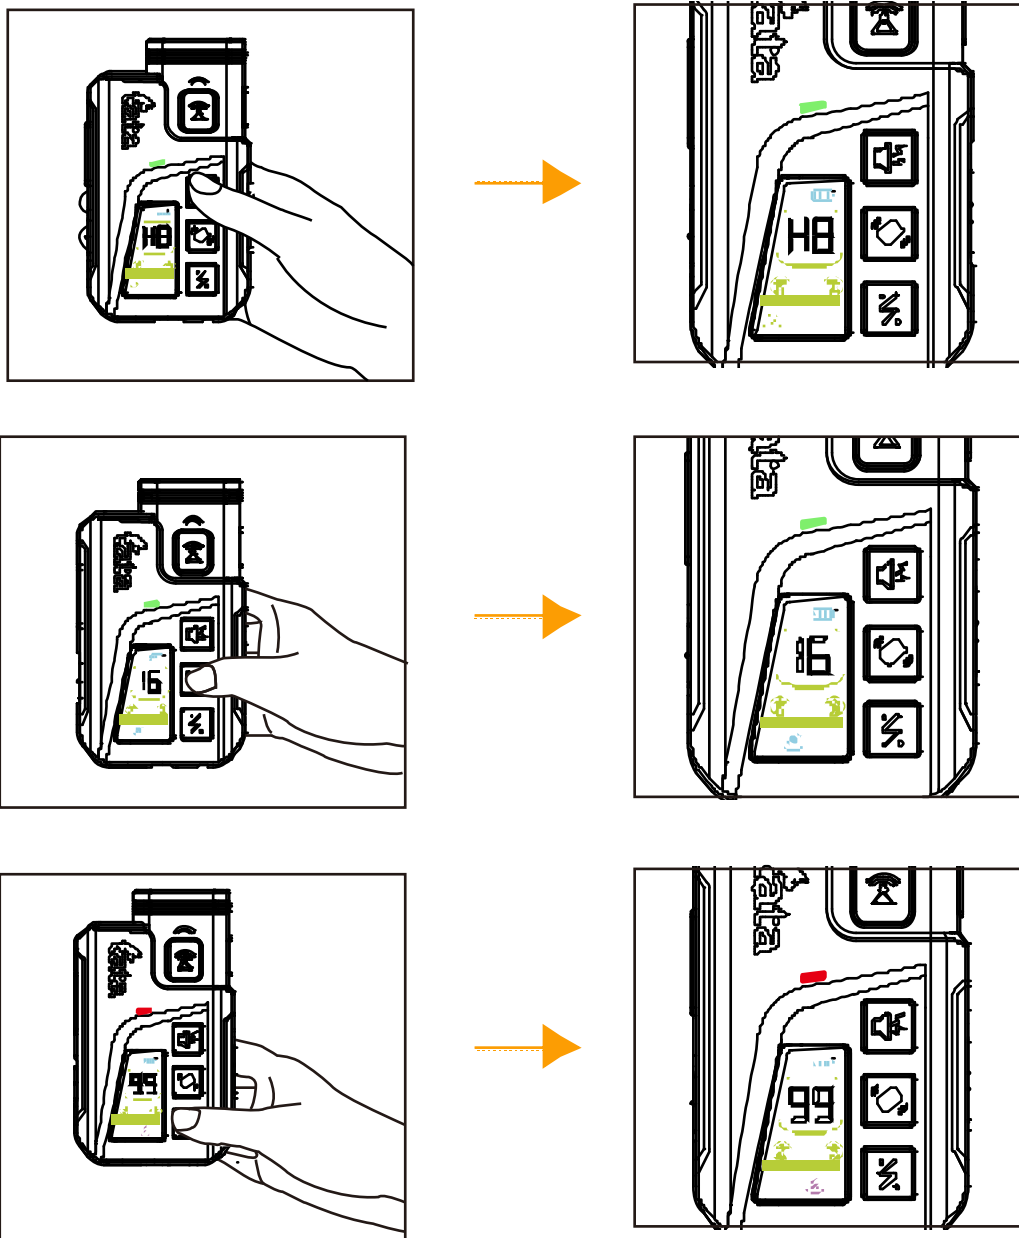


Tips:

- (1) The Receiver is paired up to the Remote Transmitter in Channel 1 by the factory default setting.
- (2) If you buy an extra Receiver, please follow the above instructions to pair it up to Channel 2. Then you can control two Receivers independently by sliding the ON/OFF (Channel) Switch.

(3) By sliding the Channel Switch to the middle position, you're able to control two receivers simultaneously.

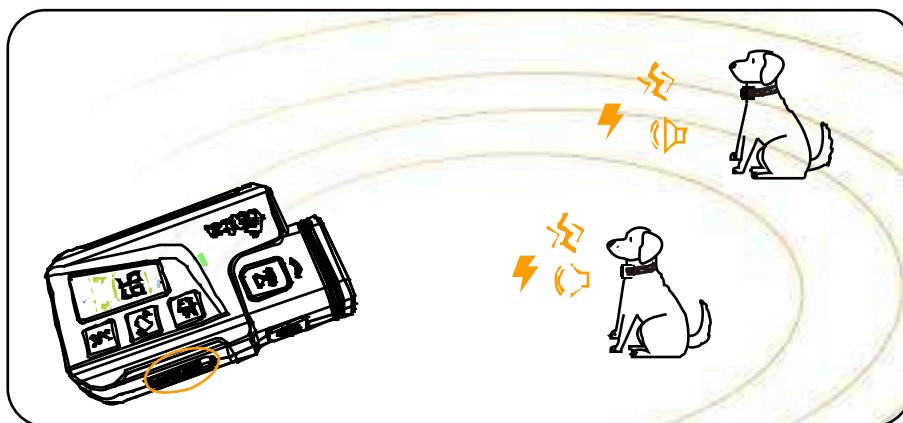

(1) Do not pair the Receivers when the Remote Transmitter is set to 'Two channels work synchronously' (Channel Switch in the middle position). If this occurs, the Receiver will not respond when the Remote Transmitter is on Channel 1 or 2.

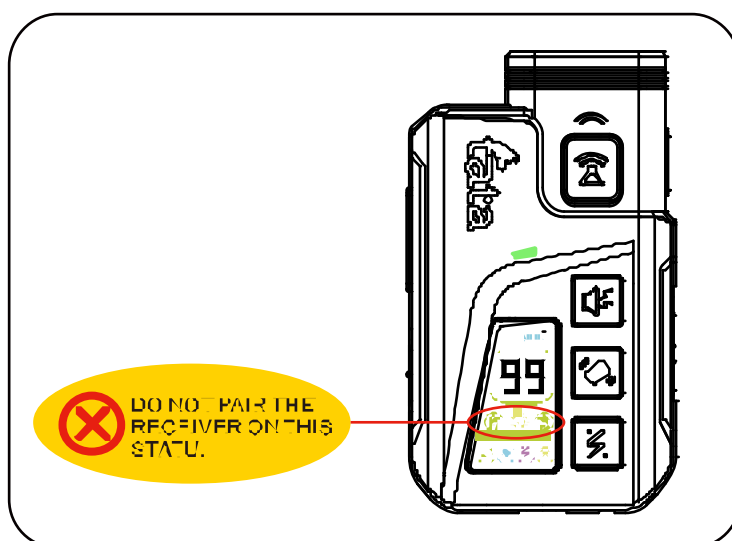

If you can not pair your device successfully, it may be due to signal interference. Please try pairing again in a different location or contact our service center.

IX. LCD Display & Indicator Definitions

Remote Transmitter:

	Warning Tone Mode
	Vibration Mode
	Shock Mode
	Ultrasonic Mode
	Level for Warning Tone/Vibration/Shock/Ultrasonic/Flashlight
	Flashlight Mode
	Remote Transmitter Battery

Remote Transmitter Indicator Light:

Charging	The Green Indicator light blinks regularly
Fully Charged	The Green Indicator light becomes solid
Press 	The Green Indicator light comes up
Press 	The Green Indicator light comes up
Press 	The Green Indicator light comes up
Press 	The Red Indicator light comes up
Press 	The Red Indicator light comes up

Receiver Indicator Light :

	Slowly blinking indicates the Receiver is on
	Fast blinking indicates the Receiver is in charge
	Faster blinking indicates the Receiver battery is low

X. Training Tip

How to find the best stimulation for your dog?

Important: Always start at the lowest level and work your way up. The Remote Training Collar has 3 levels of Ultrasonic, 8 types of Warning Tones, 16 levels of Vibration, and 99 levels of Shock. For Ultrasonic and Warning Tones, there are only frequency differences. For Vibration and Shock, level 1 is the lowest; the highest level for Vibration is level 16, and level 99 for Shock.

This allows you to choose the Stimulation Level that is best for your dog. Once you have placed the Receiver on your dog, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level.

When using the four modes of training, follow the principle of starting from gentle to strong. Begin with the Warning Tone and Vibration mode, and only use the Ultrasonic mode if necessary. The high-frequency Ultrasonic sound waves provide a strong stimulation to the dog's sense of hearing without causing harm, making it more effective than the Warning Tone and Vibration mode. The Shock mode should be used only as a last resort. Additionally, combining these methods with positive reinforcement, such as rewards and praise, can enhance the training effectiveness. A slight change in your dog's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for your dog.

Follow the steps below to find your dog's Recognition Level:

1. Starting at Level 1, press the Warning Tone/Vibration/Shock Button continuously for 1 to 2 seconds.

Note: When the Warning Tone/Vibration/Shock Button is held down for 10 consecutive seconds, the Remote Transmitter will "time out", and you must release and press the button again before additional stimulation can be delivered.

2. If your dog shows no reaction, repeat the Stimulation Level several times before moving up to the next level.
3. YOUR DOG SHOULD NOT WHINE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.
4. Move up through the Stimulation Levels until your dog reliably responds to the stimulation.
5. If your dog continues to show no response at the highest level of Vibration or Static Shock, check the fit of the Receiver. If your dog has long or thick hair, you can change to a longer set of metal prongs included in the package. Then go back to #1 and repeat the process. If this still does not yield any results, your dog's hair will need to be trimmed around the Metal Prongs. If after completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

How to capture your dog's attention with Ultrasonic Sound?

Press the Ultrasonic mode to emit an ultrasonic sound that can effectively capture your dog's attention. This will make it easier for them to understand and respond to your training commands. While your dog engages in unwanted behaviors such as barking, jumping, stealing food, or chewing inappropriately, quickly press the Ultrasonic Button. At the same time, give a verbal command like "NO", "QUIET", "SIT", "STAY", or "OFF" to help train your dog to stop the undesired behavior.

Note: This feature is specifically designed for dogs. It may not be audible to all humans. Avoid placing it near human ears.


How to Maximize the Ultrasonic Transmission Distance?

1. Choose a clear, open area without shade. Avoid dense woods, buildings, strong winds, and moisture. Limit use in high temperatures and humidity to ensure better transmission.
2. Aim the Ultrasonic Transmitter Port directly at the dog, keeping it aligned in a straight line.
3. Regularly clean the transmitter port on the dog training collar to prevent dust and moisture, ensuring optimal ultrasonic sound output.

How to Maximize the Wireless Remote Distance?

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For maximum signal strength, keep the device properly charged.

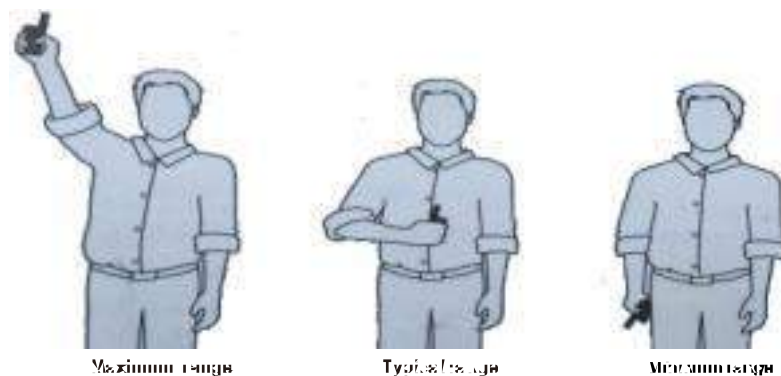

*Avoid touching the antenna or the range may decrease substantially.

XI. Frequently Asked Questions

Q: Is the Stimulation safe for my dog?

A: While the Stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my dog have to be before using the Dog Training Collar Mode?

A: Your dog should be able to recognize basic obedience commands such as "Sit" or "Stay". Dogs should be at least 6 months old before using the Trainer.

Q: Once my dog is trained and has been obeying my commands, will he have to continue to wear the Receiver?

A: Probably not. You may need to reinforce training with the Receiver from time to time.

Q: Is the Receiver waterproof?

A: Yes. The Receiver meets the IP67 waterproof rating, but make sure to keep the area dry when charging.

Note: The Remote Transmitter is not waterproof.

Q: Does the Ultrasonic Mode work effectively for all dogs?

A: The product emits Ultrasonic Sound, which may not be effective for old dogs or dogs with hearing problems. Different breeds of dogs react differently to the Ultrasonic Sound. Please use it as a training aid together with verbal commands, and be patient during the training process.

Q: Will I get a maximum range with the Remote Training Collar?

A: The range of the Dog Training Collar Mode will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "How to Maximize the Distance" on page 21 for tips on maximizing your range.

Q: How long can I continuously deliver stimulation to my dog?

A: The maximum amount of time you can press the Warning Tone/Vibration/Shock/Ultrasonic button and deliver stimulation to your dog continuously is 10 seconds. After this, the Remote Transmitter will time out, and these stimulation buttons must be released and pressed again.

Q: How do I know if I can use this product for my dog?

A: The product is designed for healthy dogs over 6 months old. Most importantly, this product cannot be used on unhealthy or aggressive dogs, and if you are unsure whether this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

Q: Can I charge this product with any type of charger?

A: No, you are suggested to charge this product with a charger of 5V output voltage, because a charger with an output voltage over 5V may cause damage to the product. The product will stop charging automatically if the input voltage becomes too high and delivers a warning tone.

XII. Troubleshooting

1. My dog does not respond when I press a button.

- Make sure the Receiver has been turned on.
- If your range has reduced from the first time you used the Remote Training Collar, the battery(-ies) may be low in either the Remote Transmitter or Receiver.
- Many factors can impact the amount of range. For a list of these factors, see "How to Maximize the Distance" on page 21.
- Test the Receiver with the Test Bulb.

NOTE: If the Test Bulb does not flash, recharge the Receiver and re-test. If the Test Bulb Tool still does not flash, please contact our customer service.

- Increase the Stimulation Level. Refer to "How to find the best stimulation for your dog" on page 19 for more information.
- Make sure the Receiver's Metal Prongs are placed snugly against your dog's skin. Refer to "Fitting the Receiver" on page 13 for more information.

2. The Receiver will not turn on.

- Make sure the Receiver has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2-3 hours.

3. The Receiver is not responding to the Remote Transmitter.

- Verify the Receiver is on.
- If the indicator is blinking rapidly, fully charge the Receiver.
- If the first two solutions did not resolve your problems, please check the "Pairing Up" on page 14 to re-pair the Receiver to the Remote Transmitter.

XIII. FCC Statement

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a specific installation.

If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Model: TT31
Made in China
Version: V1.0



ESPAÑO

I. Información De Seguridad Importante:

ADVERTENCIA

No debe utilizarse con perros agresivos. No utilice este producto si su perro es agresivo o propenso a comportarse de forma agresiva. Los perros agresivos pueden causar lesiones graves o incluso la muerte a su dueño y a otras personas. Si no está seguro de si este producto es adecuado para su perro, consulte a su veterinario o a un adiestrador certificado.


- ◆ **Advertencia sobre el sonido ultrasónico:** El transmisor remoto no debe utilizarse a menos de 30 cm de los oídos humanos cuando funcione en modo ultrasónico.
- ◆ Para uso con perros de más de 6 meses de edad y más de 3.6 kg (8 lbs).
- ◆ NO utilizar cuando el perro o el collar estén mojados.
- ◆ NO mantenga pulsado el electrochoque o la vibración durante más de 10 segundos para evitar daños físicos o psicológicos a su perro.
- ◆ Su perro NO DEBE QUEJARSE NI ENTRAR EN PÁNICO cuando reciba la estimulación. Si esto ocurre, el nivel de estimulación es demasiado alto y debe volver al nivel anterior y repetir el proceso.
- ◆ NO cargue el aparato cerca de sustancias inflamables.
- ◆ SÓLO para uso canino. No debe usarse con niños.
- ◆ No es un juguete y sólo debe ser manejado por un adulto responsable.

PRECAUCIÓN


Antes de su primer entrenamiento, lea y siga cuidadosamente las instrucciones de este manual. Las precauciones a continuación ayudarán a mantener a su perro seguro y cómodo. Millones de perros se sienten cómodos usando collares, mientras que algunos son sensibles a la presión de los contactos.

- ◆ Es de vital importancia que tú y tu perro permanezcan seguros mientras aprenden durante el entrenamiento con correa. Tu perro debe estar con una correa fuerte (no conectar la correa al receptor). La correa debe ser lo suficientemente larga para que tu perro intente perseguir un objeto, pero lo suficientemente corta para evitar que alcance carreteras u otros peligros. También debes ser físicamente lo suficientemente fuerte para contener a tu perro cuando intente perseguir.
- ◆ Riesgo de daño en la piel. Un ajuste adecuado del receptor es importante. Un receptor que se use durante demasiado tiempo o que esté demasiado apretado en el cuello del perro puede causar daño en la piel, que va desde enrojecimiento hasta úlceras por presión; esta condición es comúnmente conocida como úlceras por presión.
- ◆ NO dejes el receptor en el perro por más de 12 horas al día.
- ◆ Cuando sea posible, reposiciona el receptor en el cuello del perro cada 1 a 2 horas.
- ◆ Verifica el ajuste para prevenir presión excesiva; sigue las instrucciones en este manual.
- ◆ Nunca conectes una correa extra al receptor; causará presión excesiva en los contactos.
- ◆ Limpia el área del cuello del perro y los picos metálicos del receptor semanalmente con un paño húmedo.
- ◆ Examina el área de contacto diariamente en busca de signos de erupción o llaga.
- ◆ Si se encuentra una erupción o llaga, interrumpe el uso del receptor hasta que la piel haya sanado. Si la condición persiste más de 48 horas, consulta a tu veterinario.
- ◆ El collar receptor tiene una clasificación de impermeabilidad IP67, lo que permite sumergirlo en agua hasta 1 metro durante un máximo de 30 minutos. Si se sumerge y se moja, no lo utilice.


II. Contenido Del Paquete

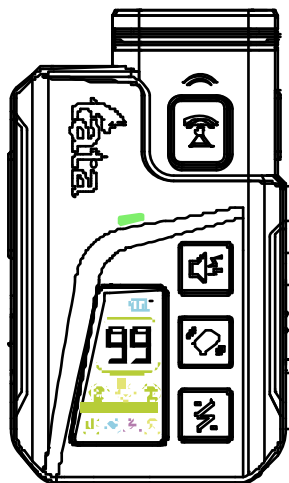

Transmisor remoto

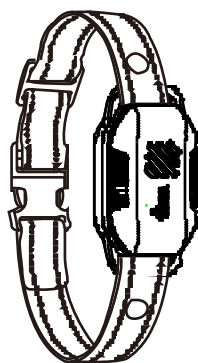


Collar receptor

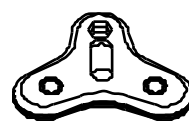 

Bombilla de prueba



 Púas metálicas

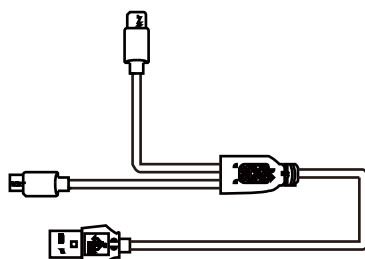


Cable de carga USB tipo C



Tapas de silicona conductora



 
Manual del usuario

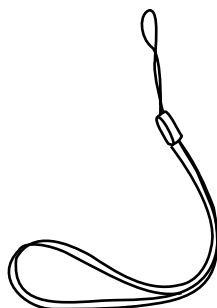


Correa de muñeca

III.Descripción Del Producto

 Transmisor remoto

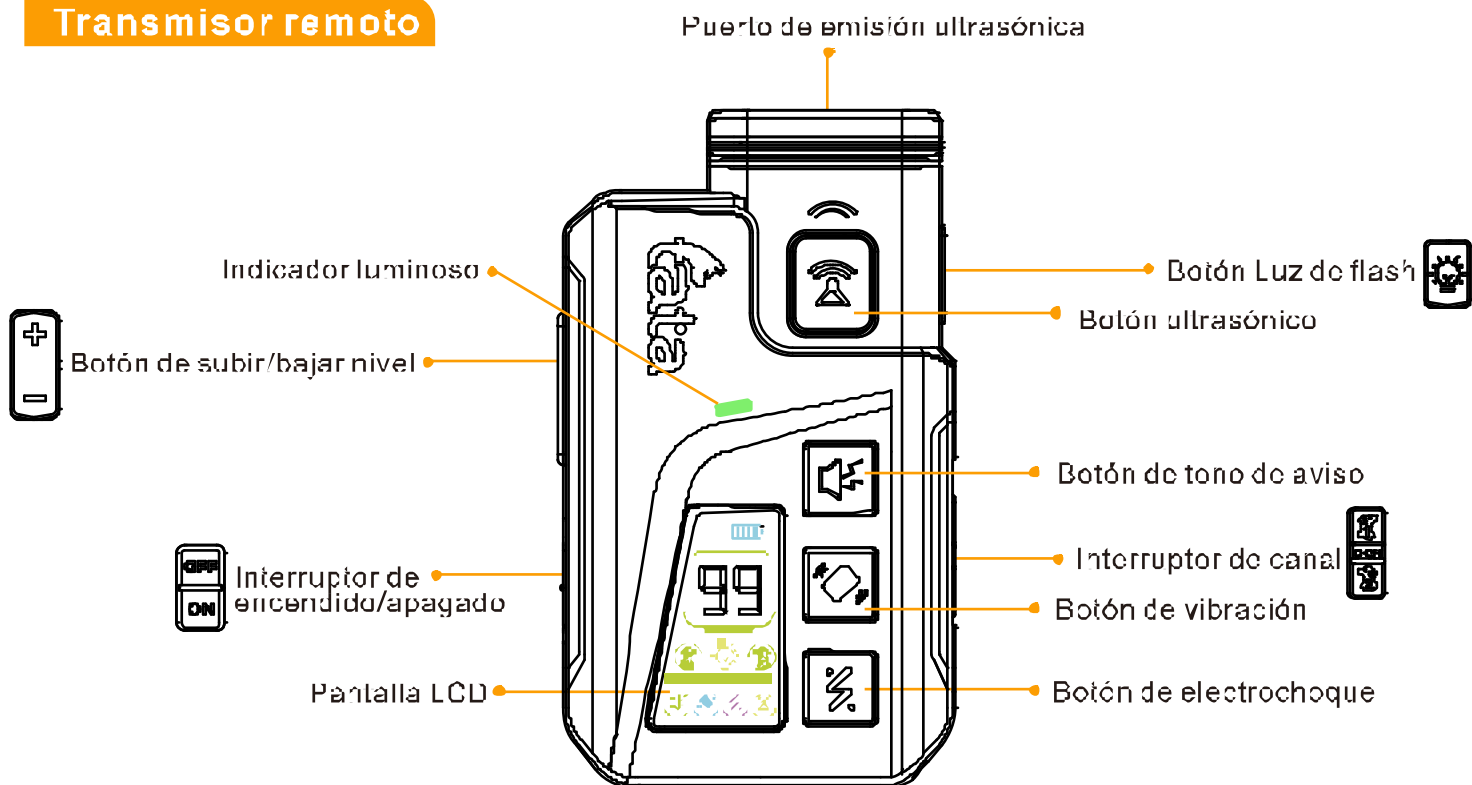

Pantalla

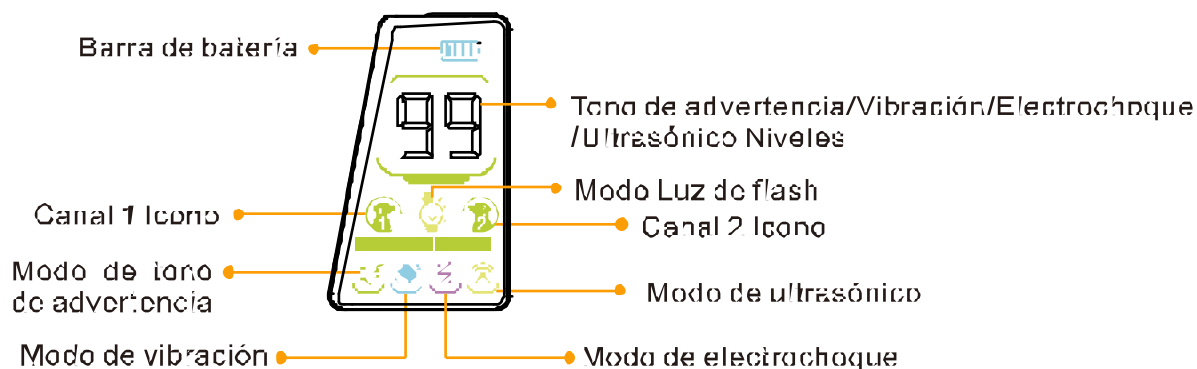 


Nota:


El transmisor remoto entrará en modo de suspensión si no se realiza ninguna operación en 10 segundos.

Receptor

 
Botón de encendido/apagado
(botón de emparejamiento)

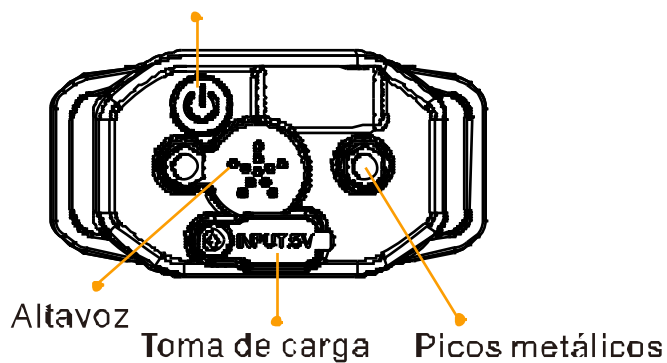

Indicador luminoso

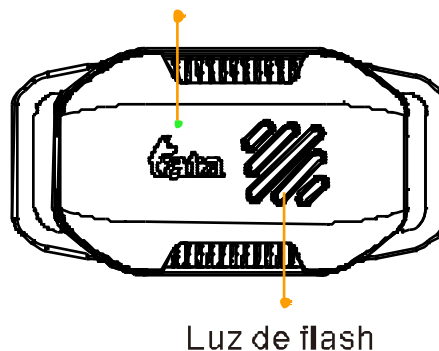 


IV. Guía De Inicio Rápido

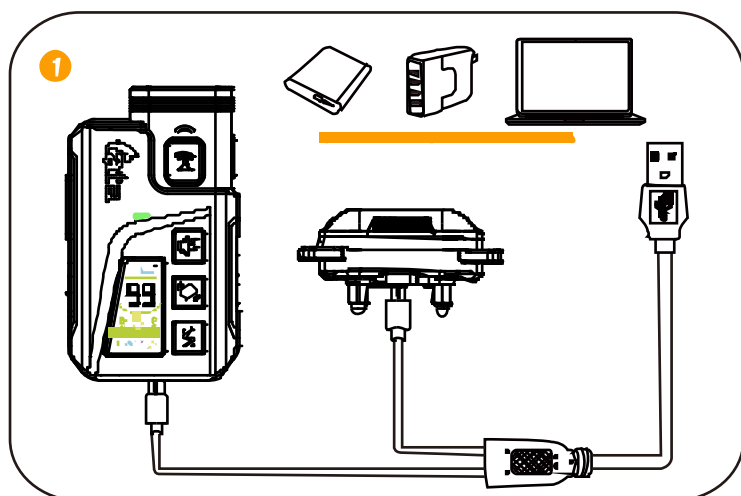 


Cargue el receptor y el transmisor remoto durante 2-3 horas con el cable USB tipo C de la caja del paquete.

 Nota: El cargador, el banco de energía y otros dispositivos de carga que se muestran en la imagen anterior no están incluidos en la caja.

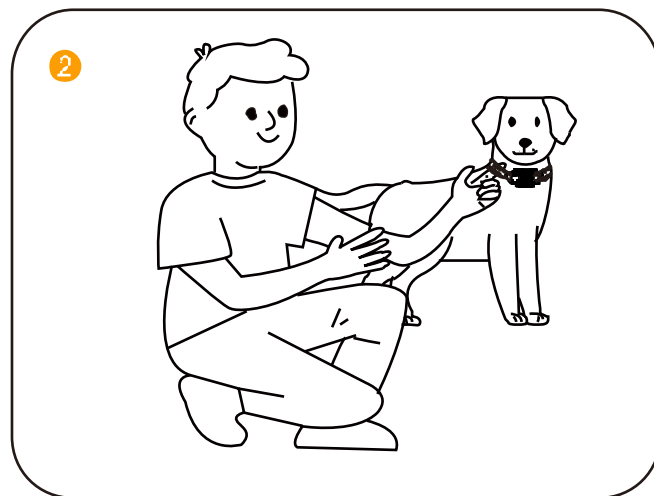

Haga que su perro se sienta y ajuste el receptor a su perro dejando un espacio de un dedo entre el collar y el cuello de su perro. Centre los picos metálicos debajo del cuello de su perro, tocando la piel.

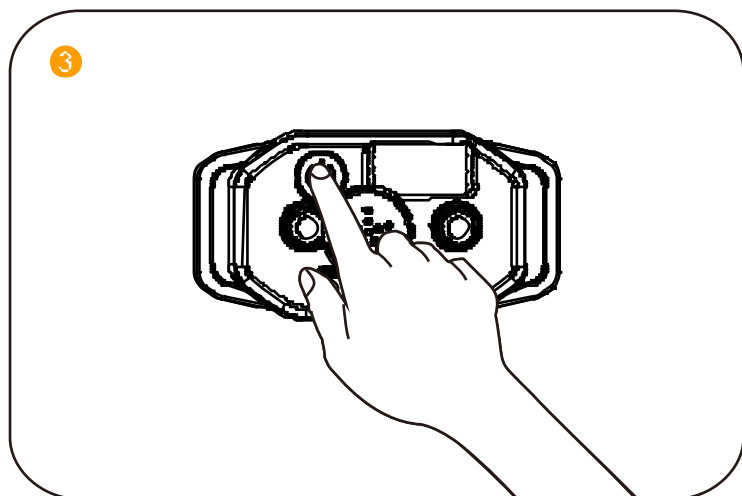

Encienda el receptor presionando y manteniendo el botón de encendido durante 2 segundos con una vibración para indicar que el receptor está encendido. La luz indicadora LED verde ahora continúa parpadeando regularmente.



Para encender el transmisor remoto, deslice el interruptor a la posición «ON» y la pantalla LCD se iluminará.




Advertencia sobre el sonido ultrasónico:

El transmisor remoto no debe utilizarse a menos de 30 cm de los oídos humanos cuando funcione en modo ultrasónico.

Modo ultrasónico: pulse el botón de modo ultrasónico, el puerto de emisión ultrasónico emitirá un sonido ultrasónico y la luz indicadora roja del transmisor remoto se encenderá rápidamente.


Para ajustar el nivel ultrasónico, pulse primero el botón , y, a continuación, pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

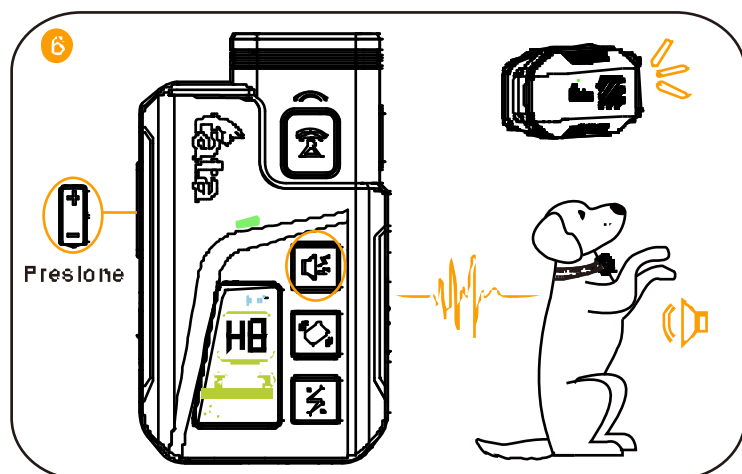


Comando de tono de advertencia: Presiona el Botón de tono de aviso, y la luz indicadora verde del Transmisor Remoto se iluminará rápidamente.

El Receptor emitirá un tono de advertencia, y la luz indicadora LED verde del Receptor se encenderá simultáneamente.

Para ajustar el nivel del tono de advertencia, presiona primero el botón , luego presiona el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

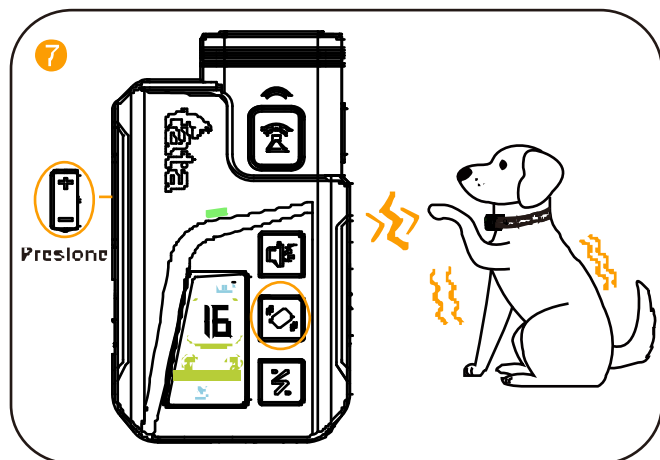

Comando de Vibración: Presione el botón de Vibración y la luz indicadora verde del Transmisor a distancia se encenderá rápidamente. El Receptor emitirá vibraciones y al mismo tiempo la luz indicadora LED verde del Receptor se encenderá. Para ajustar el nivel de vibración, presione primero el botón [V], luego presiona el Botón de subir/bajar nivel [↑/↓] para subir o bajar hasta el nivel deseado.

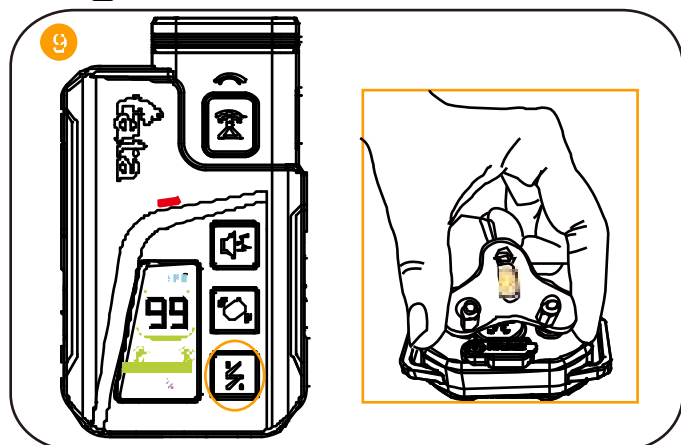


Probar el receptor con la bombilla de prueba:


1. Encienda el receptor.
2. Mantenga la bombilla de prueba contra los puntos metálicos del receptor. Asegúrese de que el contactos metálicos en la bombilla de prueba tenga contacto directo con la parte superior de los puntos metálicos.
3. Presione el botón de choque en el transmisor remoto.
4. La luz de prueba roja parpadeará si el receptor funciona correctamente. A niveles de choque más altos, la bombilla de prueba parpadeará más brillantemente.

Nota:

- (1) Mientras prueba el Receptor con tus dedos, por favor coloca tus dos dedos en la parte superior de los Puntas Metálicas separadamente para formar un círculo cerrado.
- (2) Siempre comienza desde el nivel de choque más bajo para evitar accidentes.

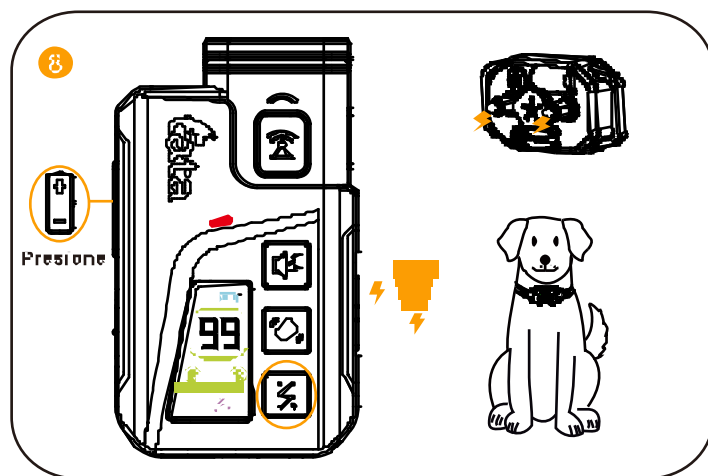


Comando de electrochoque: presione el botón de electrochoque y la luz indicadora roja en el transmisor remoto se encenderá rápidamente. El receptor entregará un electrochoque y la luz indicadora LED verde en el receptor se encenderá simultáneamente. Para ajustar el nivel de choque, presione primero el botón [E], luego presiona el Botón de subir/bajar nivel [↑/↓] para subir o bajar hasta el nivel deseado.

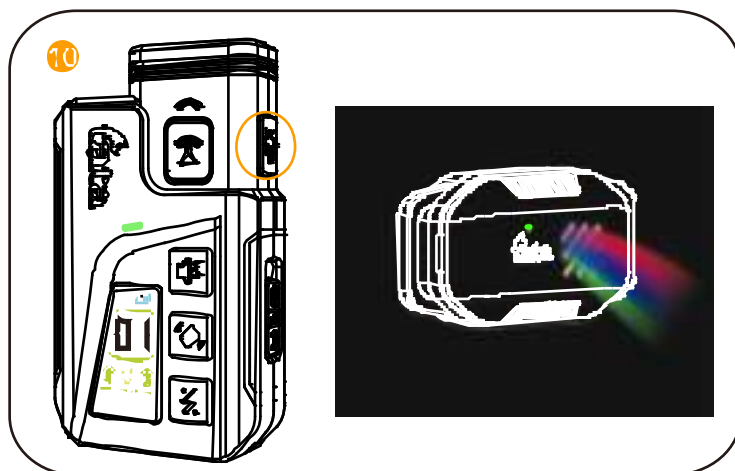

Modo de linterna: Presiona el Botón de la linterna y la linterna del Receptor se encenderá. Presiona el Botón de la linterna nuevamente y el Modo de linterna se apagará.

Una vez encendida, se apagará automáticamente después de 30 minutos si no hay operación en el Transmisor Remoto. Para ajustar el tipo de la linterna, presiona primero el Botón de [M], luego presiona el Botón de subir/bajar nivel [↑/↓] al tipo de linterna deseado.

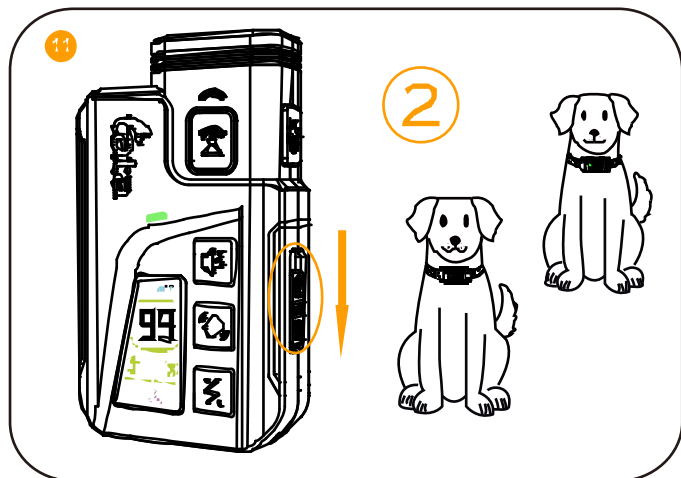

Este producto puede entrenar hasta 2 perros. Puedes entrenar 2 perros independientemente al deslizar el Interruptor de Canal a  o , o entrenar dos perros simultáneamente al deslizar el Interruptor de Canal a la posición central .

Este Receptor está emparejado con el Canal  por defecto de fábrica, si tienes un receptor adicional para emparejar, por favor sigue las instrucciones en la sección Emparejamiento en la página 38.

Cómo Funciona El Sistema

El Collar de Entrenamiento Remoto es fácil de usar con una Pantalla LCD avanzada que lo indica el nivel exacto de estimulación que está utilizando.

El Collar de Entrenamiento Remoto le ayuda a controlar a su perro sin correa. Simplemente pulsando un botón, su Transmisor Remoto envía una señal al Receptor de su perro o emite un sonido ultrasónico que captura efectivamente la atención de su perro. El perro recibe una estimulación segura pero perceptible.


Rápidamente aprenderá la asociación entre su comportamiento y su corrección, y pronto tendrá un perro de mejor comportamiento. El Collar de Entrenamiento Remoto ha demostrado ser seguro, cómodo y efectivo para razas de perros pequeñas y grandes.

Si se utiliza el Collar de Entrenamiento Remoto de manera consistente y correcta, se pueden enseñar cualquier comando de obediencia básica y ayudará a corregir cualquier mal comportamiento que muestre su perro.

V. Configuración

1. Recargar el Producto

Recarga tanto el Receptor como el Transmisor Remoto con el Cable de Carga incluido en la caja hasta que su Indicador se torne verde sólido, lo cual tomará aproximadamente 2-3 horas.

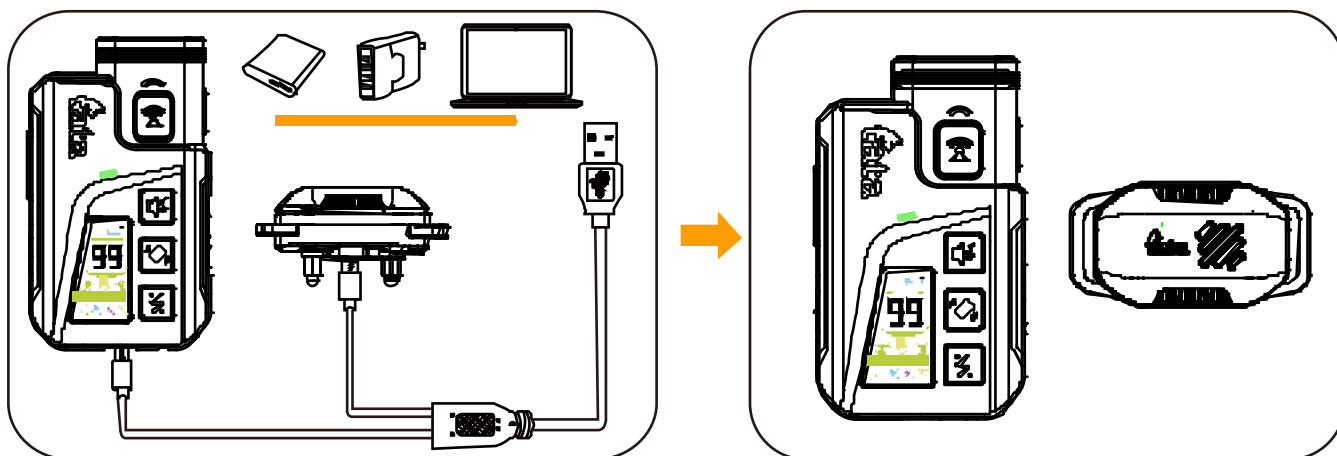

Nota:

(1) El cargador, la batería portátil y otros dispositivos de carga mostrados en la imagen superior no están incluidos en la caja.

(2) Usa el cable de carga incluido en el paquete para la carga. Otros cables de carga pueden no ser adecuados para este Collar de Entrenamiento para Perros, lo que podría causar daños eléctricos.


(3) El Collar de Entrenamiento para Perros SOLO admite una fuente de alimentación con una capacidad de 5V. Si se carga con un cargador inapropiado:

Receptor Collar — emite un tono de alarma rápido y detiene la carga automáticamente.


Transmisor Remoto — detiene la carga automáticamente con el Indicador parpadeando rápidamente en rojo.

2. Encender/Apagar el Transmisor Remoto


Enciendo el Transmisor Remoto deslizando el interruptor a 'ON', y la Pantalla LCD se iluminará.

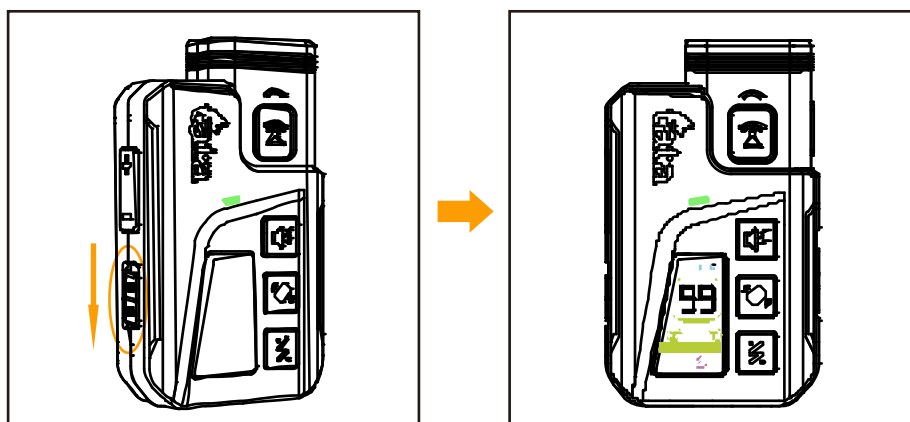


Apague el Transmisor Remoto deslizando el interruptor a 'APAGADO', y la Pantalla LCD se apagará.

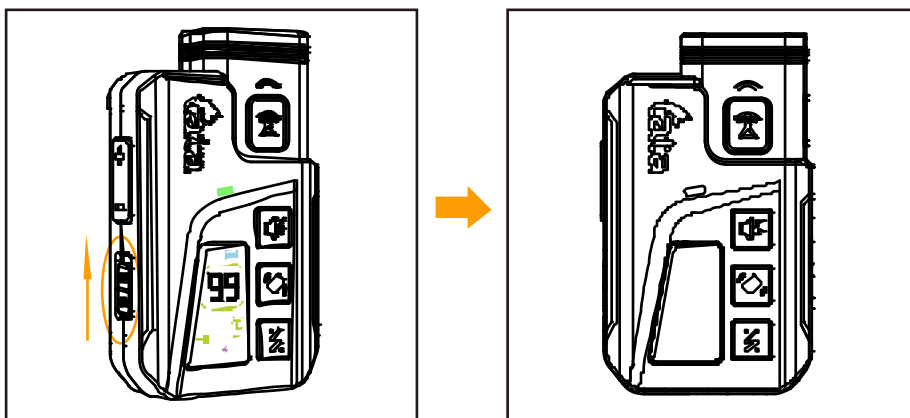

Encienda el Receptor: presione y mantenga el botón de encendido durante 2 segundos. Una vibración indicará que el Receptor se ha encendido, y el indicador LED verde parpadeará regularmente.

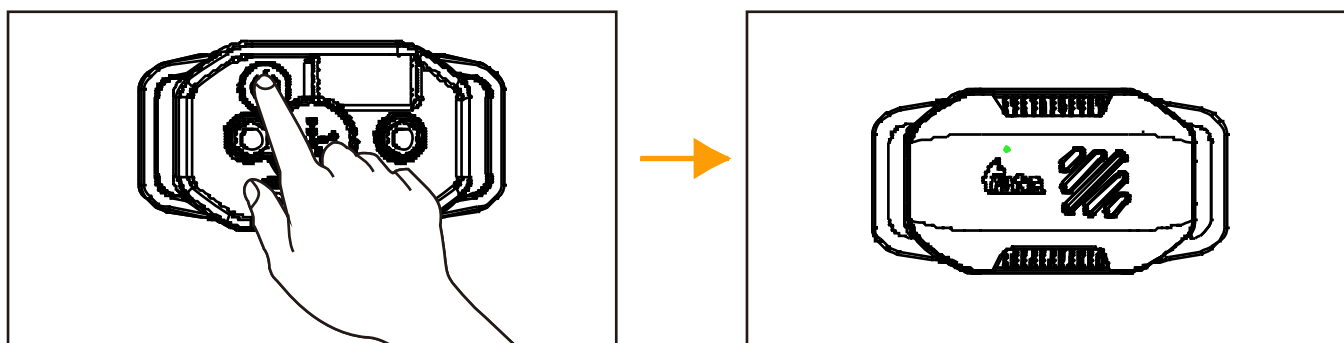

Apague el Receptor presionando y manteniendo el botón de encendido durante 2 segundos, con un pitido largo para indicar que el Receptor se apaga, ya que el indicador LED verde deja de parpadear.

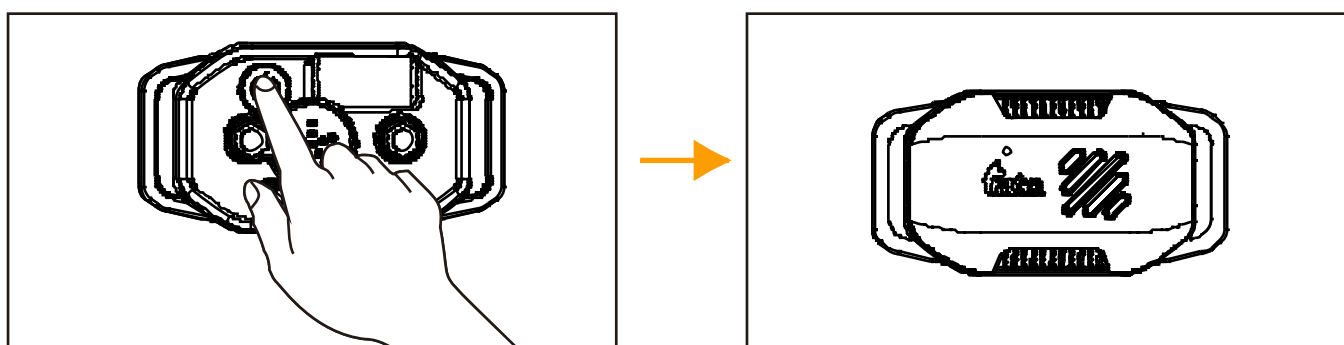

VI. Modos de Entrenamiento


1. Modo Ultrasónico

Presione el botón Ultrasónico y la salida de emisión Ultrasónica emitirá un sonido Ultrasónico. Se detendrá automáticamente si presiona y mantiene el botón Ultrasónico durante 10 segundos. Hay un total de 3 niveles de Ultrasónico.


Para ajustar el nivel Ultrasónico, presione primero el botón , pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

Nota: (1) Se recomienda comenzar con el Nivel 1 (Bajo). Si el perro no responde, intente con el Nivel 2 (Medio) o el Nivel 3 (Fuerte). La pantalla LCD mostrará el número del nivel correspondiente.

(2) La distancia máxima de emisión ultrasónica es de 50 pies. Por favor, úsela dentro de este rango; de lo contrario, puede que no funcione adecuadamente.

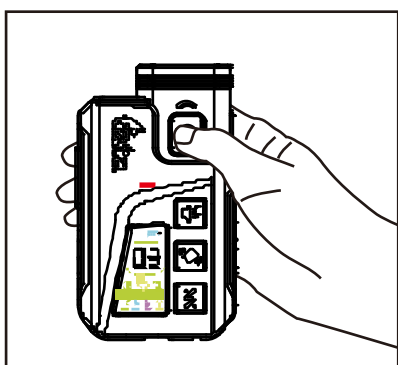


Presione

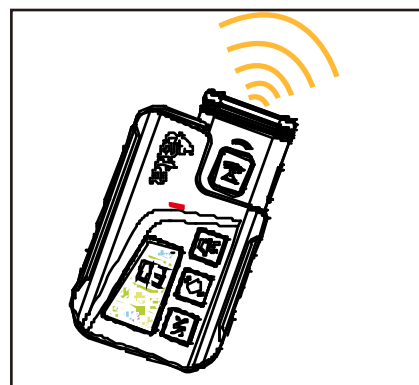


2. Modo de Tono de Advertencia

Pulse el botón de Tono de Advertencia y el Receptor emitirá un tono de advertencia. Se detendrá automáticamente si mantiene pulsado el botón de Tono de Advertencia durante 10 segundos. Hay un total de 8 niveles de Tono de Advertencia para el entrenamiento.

Para ajustar el nivel del tono de advertencia, presione primero el botón , pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

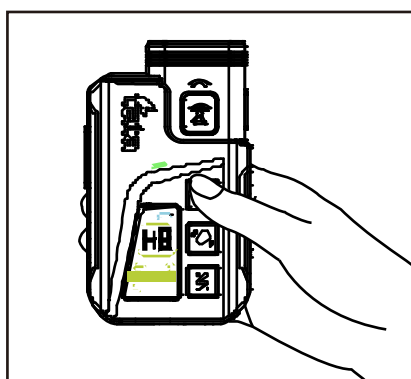

Presione

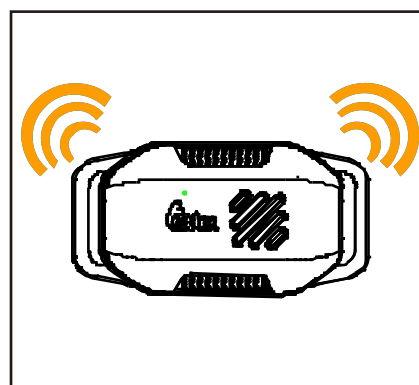

3. Modo de Vibración

Pulse el botón de Vibración y el Receptor emitirá una vibración. Se detendrá automáticamente si mantiene pulsado el botón de Vibración durante 10 segundos. Hay un total de 16 niveles de Vibración.


Para ajustar el nivel de vibración, presione primero el botón ; pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.



4. Modo de Electrochoque

Pulse el botón de electrochoque y el Receptor emitirá un electrochoque estático. Se detendrá automáticamente si mantiene pulsado el botón de Electrochoque durante 10 segundos. Hay un total de 99 niveles de Electrochoque.

Para ajustar el nivel de choque, presione primero el botón ; pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

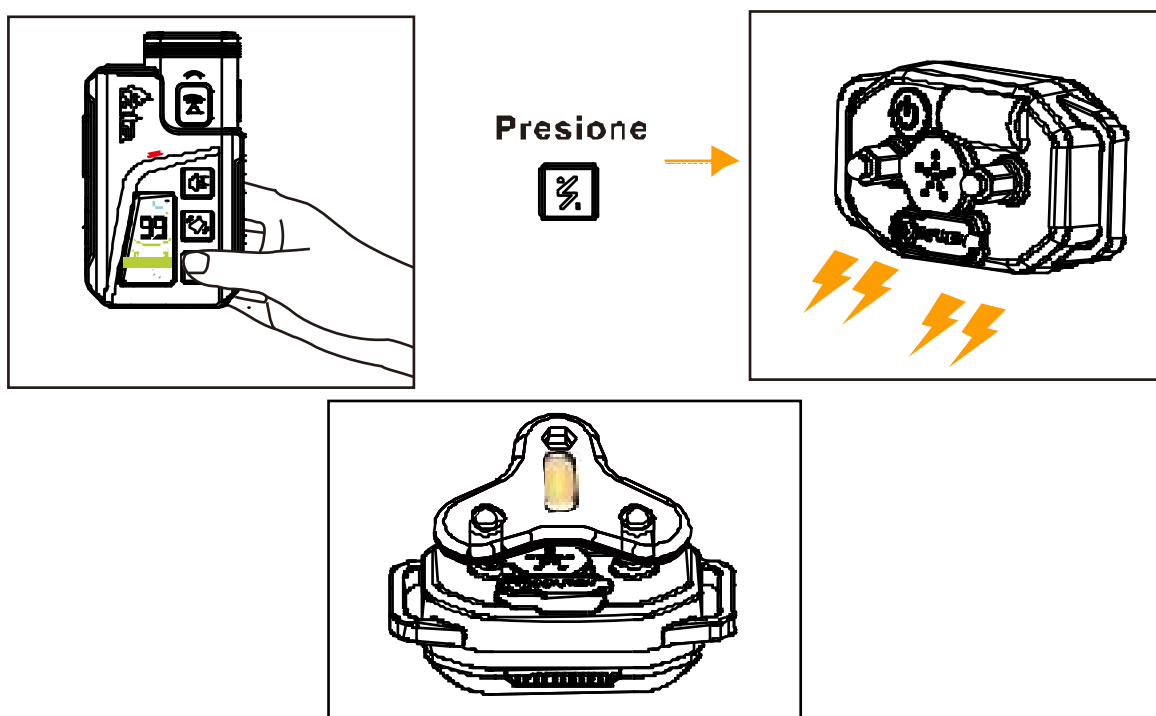


Al probar la función de choque por primera vez, coloque la Bombilla de Prueba en los Puntas Metálicas. La Bombilla de Prueba se enciende para indicar que la función de choque está funcionando, y se volverá más brillante a niveles de choque más altos.

5.Modos de Linterna


Hay siete tipos de modos de linterna.

Icono en el Transmisor Remoto	Color de la Linterna	Pulse el Botón de la Linterna, el Receptor iluminará el color de la Linterna correspondiente basado en el icono mostrado en el Transmisor Remoto.
L1	Azul, Verde, Rojo 	
L2	Blanco 	
L3	Verde 	
L4	Rojo 	
L5	Azul 	
L6	Amarillo 	
L7	Púrpura 	

Presione el botón de la linterna nuevamente y el modo de linterna se apagará. Una vez encendida, se apagará automáticamente después de 30 minutos si no hay operación en el Transmisor Remoto.
Para ajustar los diferentes tipos de linterna, pulse primero el botón ; pulse el Botón de subir/bajar nivel  para subir o bajar hasta el nivel deseado.

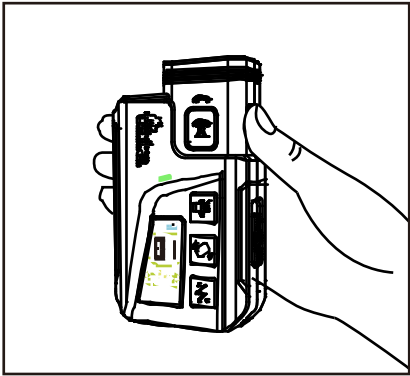


Presione

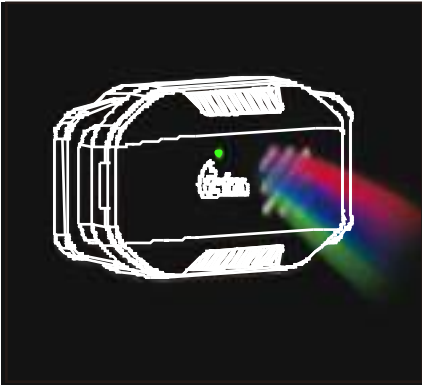

Nota: Cuando el collar de adiestramiento de perros está en modo de linterna, presionar cualquier uno de los botones para los otros tres modos de adiestramiento apagará temporalmente la linterna. Una vez completada la operación, el receptor volverá automáticamente al modo de luz y continuará iluminando.

6. Cambiar de canales

Utilice el interruptor de canal en el lado derecho del transmisor remoto para seleccionar el receptor que desea controlar si ha emparejado dos receptores.

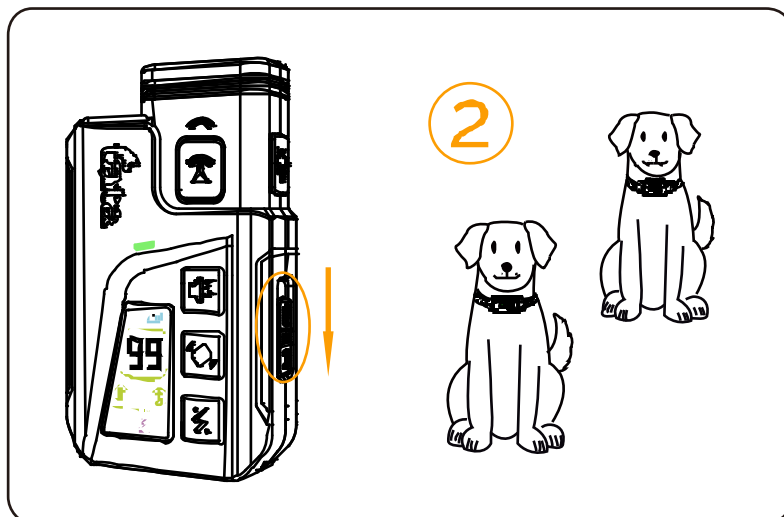

Nota:

El transmisor remoto entrará en modo de sueño si no hay operación en 10 segundos para ahorrar energía de la batería.

VII. Ajuste Del Receptor


IMPORTANTE:

El ajuste y colocación adecuados de su Receptor son importantes para un entrenamiento efectivo. Las Puntas Metálicas con Cápsulas de Silicona Conductiva deben tener contacto directo con la piel de su perro en la parte inferior de su cuello. Para asegurar un ajuste adecuado, siga estos pasos:


1. Asegúrate de que el Receptor esté apagado.
2. Deje que su perro se quede en cuatro palas o se acueste completamente (A).
3. Coloca el receptor en el cuello de tu perro cerca de las orejas. Centraliza los puntas metálicas debajo del cuello de tu perro, tocando la piel (B).

Nota: A veces es necesario cortar el cabello alrededor de los Prong de Metal para asegurarse de que el contacto sea consistente.

4. El receptor debe ajustarse cómodamente, pero lo suficientemente holgado para permitir que se ajuste un dedo entre la correa y el cuello de su perro (C).
5. Permita que su perro lleve el Receptor durante varios minutos y luego revise nuevamente el ajuste. Vuélva a revisar el ajuste a medida que su perro se sienta más cómodo con el Receptor.

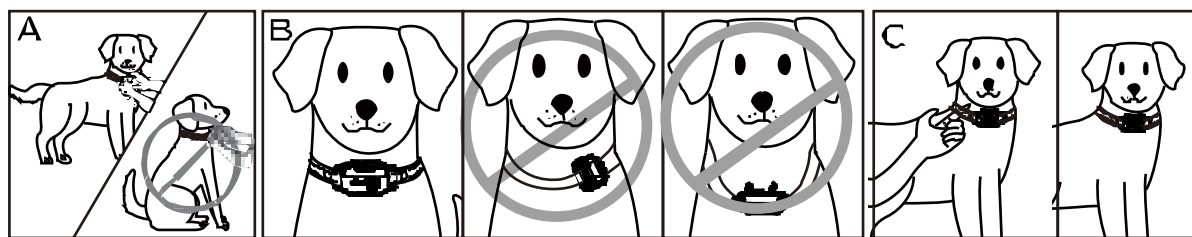

6. Para conectar el collar al Receptor, siga los siguientes pasos según las instrucciones para pasar la correa.

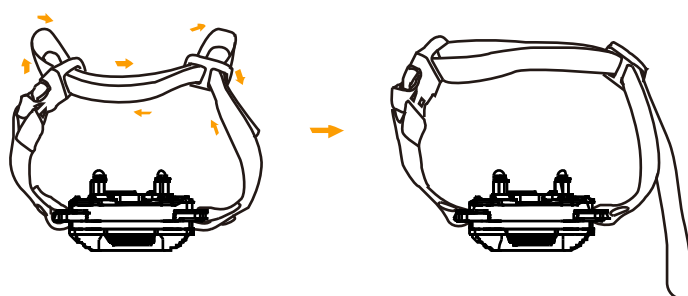


PRECAUCIÓN:

- NO deje al Receptor en el cuello de su perro durante **12 horas** continuas.
- NI jamás adjunte una correa al collar.
- NI ajuste el Receptor demasiado apretado en el cuello de su perro.
- NO afeite el cuello del perro, ya que esto puede aumentar el riesgo de irritación de la piel.
- Revise regularmente el ajuste para que su perro se sienta más cómodo con el Receptor.


VIII. Emparejamiento

En caso de que el Receptor no responda al Transmisor Remoto, siga estos pasos para emparejarlos:


1. Pulse y mantenga pulsado el Botón de Encendido en el Receptor durante 2 segundos para encenderlo. Encienda el Transmisor Remoto deslizando el interruptor a 'ENCENDIDO', y la Pantalla LCD se iluminará.

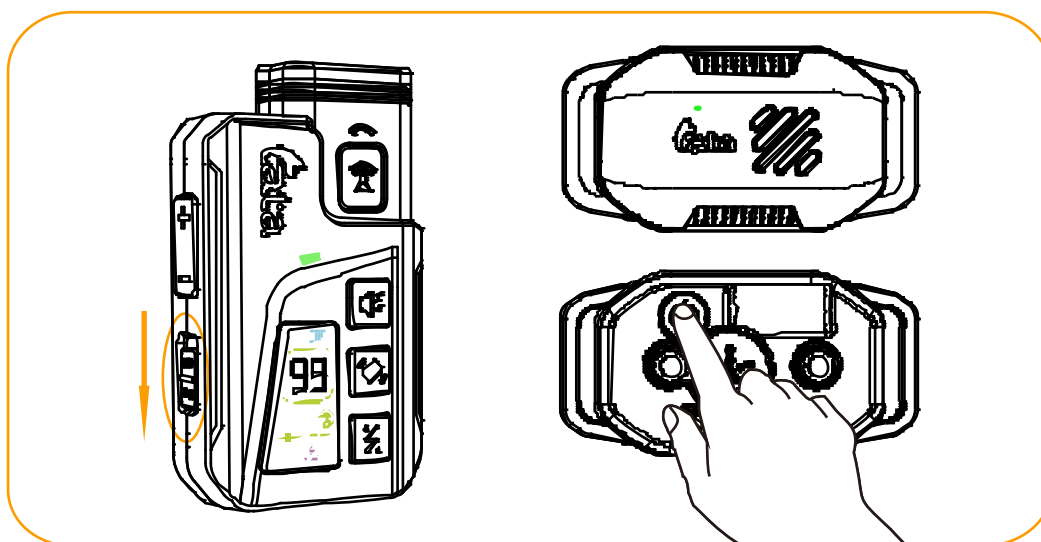

2. Pulse el Botón de Encendido en el Receptor 3 veces para entrar en el Modo de Emparejamiento. Escuchará un tono de pitido y la luz de Indicador se volverá verde fijo. Tendrá 10 segundos para completar el emparejamiento.

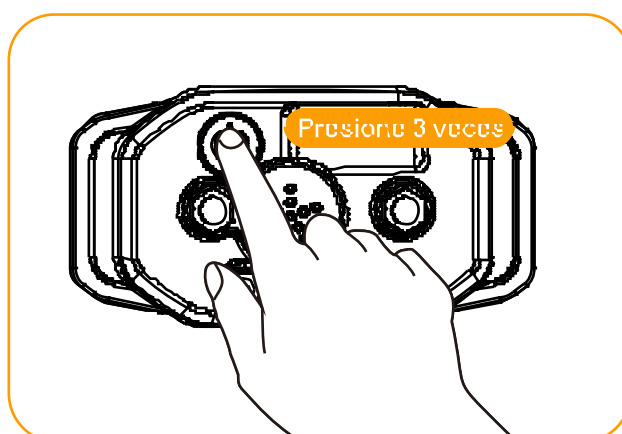

3. Pulse el Botón de Tono de Advertencia, el Botón de Vibración o el Botón de Electrochoque en el Transmisor Remoto, y el Receptor pitará 3 veces y responderá respectivamente después de pulsar cualquiera de los botones anteriores, lo que indica que el proceso de emparejamiento se ha completado.

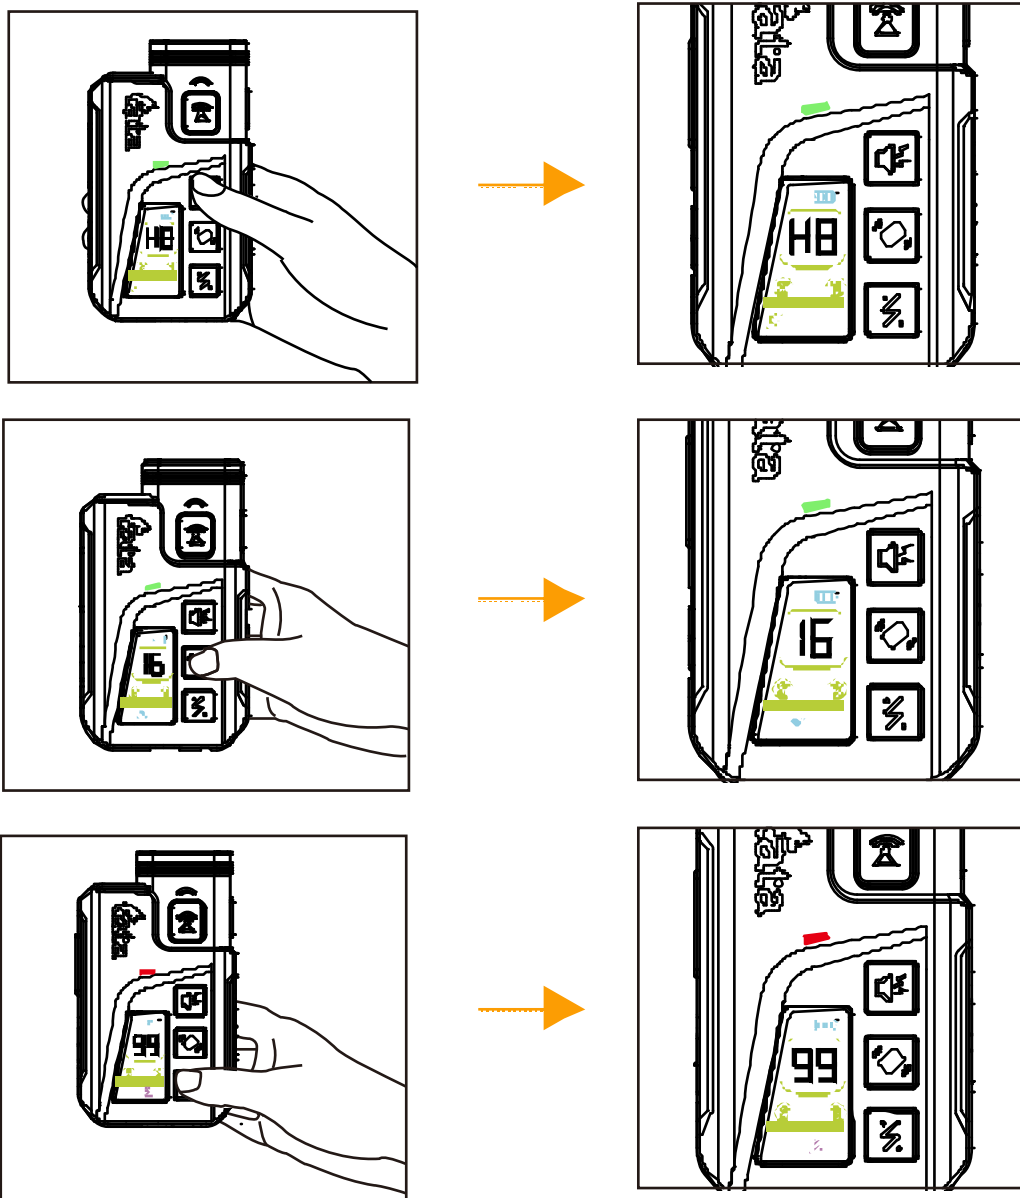


Consejos:


(1) El receptor se empareje con el transmisor remoto en el canal 1 por la configuración predeterminada de fábrica.

(2) Si compra un receptor adicional, siga las instrucciones anteriores para combinarlo con el canal. Luego puede controlar a dos receptores de forma independiente deslizando el interruptor de encendido/apagado (canal).

(3) Al deslizar el canal Switch a la posición media, puede controlar a dos receptores simultáneamente.

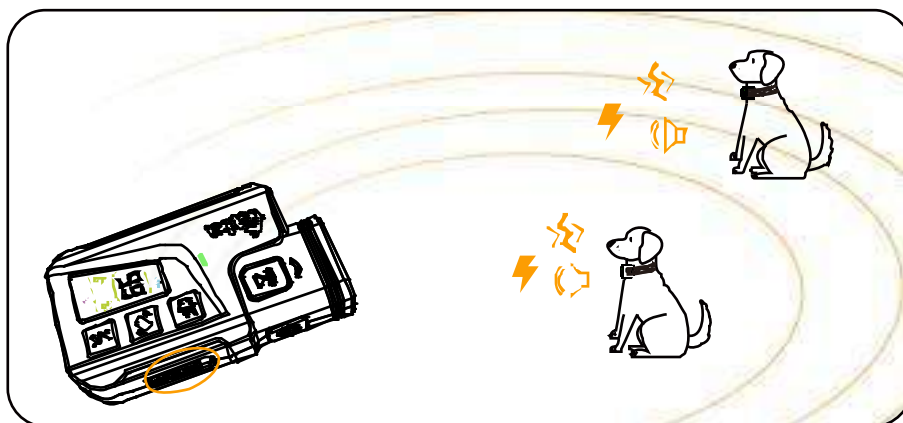

(4) No empareje los receptores cuando el transmisor remoto se establece en 'dos canales funcionan sincrónicamente' (interruptor de canal en la posición media). Si esto ocurre, el receptor no responderá cuando el transmisor remoto esté en el canal 1 o 2.

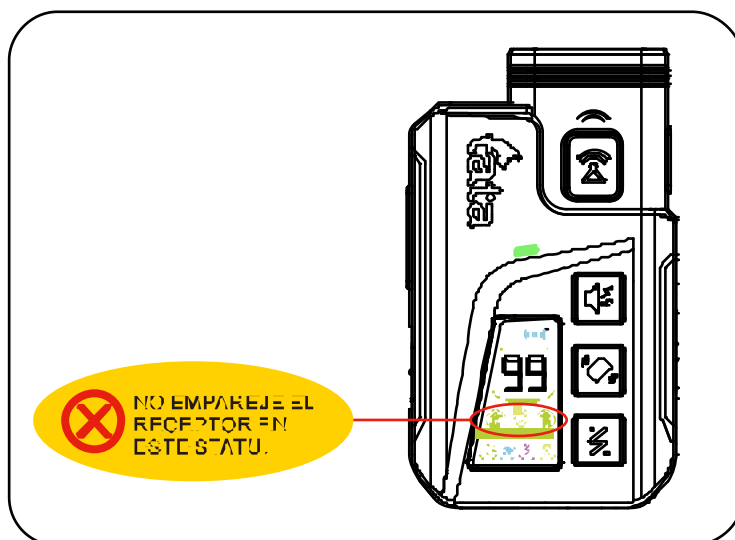

Si no puede emparejar su dispositivo con éxito, puede deberse a la interferencia de la señal. Intente emparejarse nuevamente en una ubicación diferente o comuníquese con nuestro centro de servicio.

IX. Definiciones de pantalla e indicadores LCD

Transmisor remoto:

	Modo de Tono de Advertencia
	Modo de Vibración
	Modo de Electrochoque
	Modo Ultrasonico
	Nivel para tono de alarma/vibración/electrochoque /ultrasonido
	Modo Luz de flash
	Batería del transmisor remoto

Indicador de luz del transmisor remoto:

Cargando	La luz indicadora verde parpadea regularmente
Completamente cargado	La luz indicadora verde se vuelve sólida
Presione 	La luz indicadora verde se enciende
Presione 	La luz indicadora verde se enciende
Presione 	La luz indicadora verde se enciende
Presione 	La luz indicadora roja se enciende
Presione 	La luz indicadora roja se enciende

Indicador de luz del receptor:

	Parpadeo lento indica que el receptor está encendido
	Parpadeo rápido indica que el receptor está en carga
	Parpadeo más rápido indica que la batería del receptor está baja

X. Consejo de entrenamiento

Cómo encontrar la mejor estimulación para su perro?

Importante: Siempre comience en el nivel más bajo y vaya aumentando. El collar de entrenamiento a distancia tiene 3 niveles de ultrasonido, 8 tipos de tonos de aviso, 16 niveles de vibración y 99 niveles de descarga. Para el ultrasonido y los tonos de aviso, solo hay diferencias de frecuencia. Para la vibración y la descarga, el nivel 1 es el más bajo; el nivel más alto para la vibración es el 16, y el 99 para la descarga. Esto le permite elegir el Nivel de Estimulación que es mejor para su perro. Una vez que haya colocado el receptor en su perro, es hora de encontrar el Nivel de Estimulación que es mejor para él. Esto se llama Nivel de Reconocimiento.

Al usar los cuatro modos de entrenamiento, siga el principio de comenzar desde lo suave hasta lo fuerte. Comience con el modo de tono de aviso y vibración y úselo solo si es necesario. Las ondas sonoras de alta frecuencia del ultrasonido proporcionan una estimulación fuerte al sentido del oído del perro sin causar daño, lo que lo hace más efectivo que los modos de tono de aviso y vibración. El modo de descarga debe usarse solo como último recurso. Además, combinar estos métodos con refuerzos positivos, como recompensas y elogios, puede mejorar la eficacia del entrenamiento.

Un ligero cambio en el comportamiento de tu perro, como mirar a su alrededor con curiosidad, rascarse el collar o mover las orejas, indica el Nivel de Reconocimiento que es mejor para tu perro.

Sigue los pasos a continuación para encontrar el Nivel de Reconocimiento de tu perro:

1. Comenzando en el Nivel 1, presione continuamente el Botón de Tonos de Advertencia/Vibración/Electrochoque durante 1 a 2 segundos.

Nota: Cuando se mantiene presionado el botón de Tonificación de Advertencia/Vibración/Electrochoque durante 10 segundos consecutivos, el Transmisor Remoto "se agotará", y debe soltar y presionar el botón nuevamente antes de que se pueda proporcionar estímulo adicional.