

1. EUT PHOTO

1.1 External Photos-PEPS




EUT-1



EUT-2




EUT-3

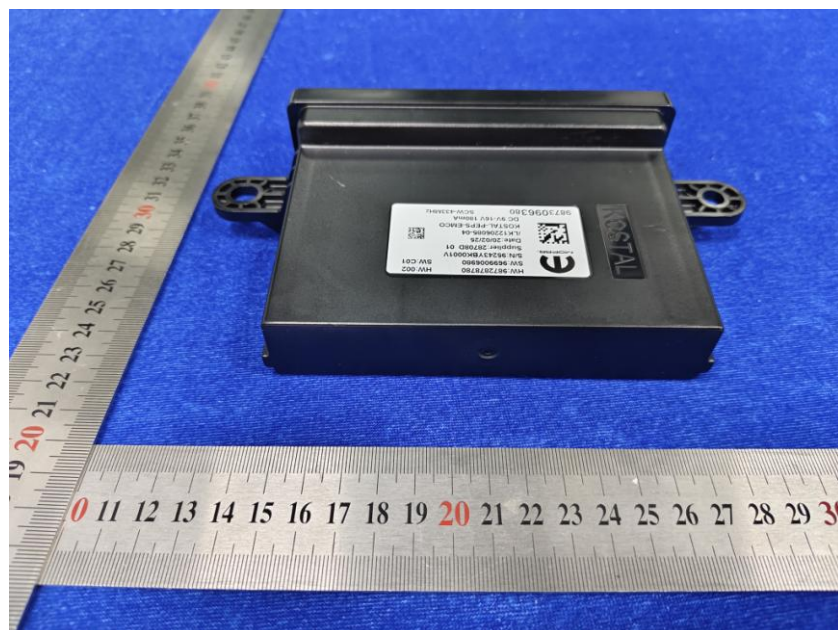


EUT-4



EUT-5

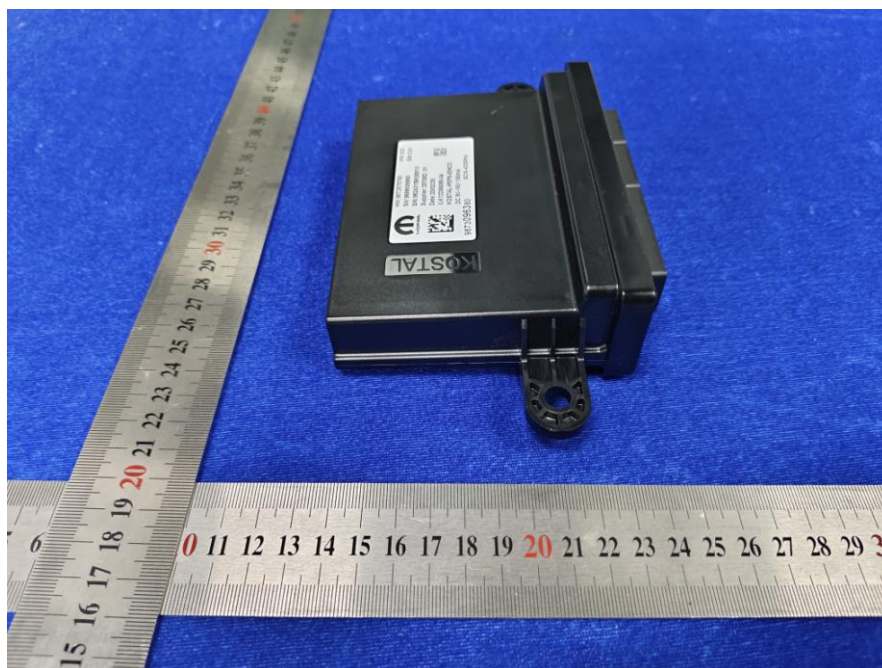


EUT-6

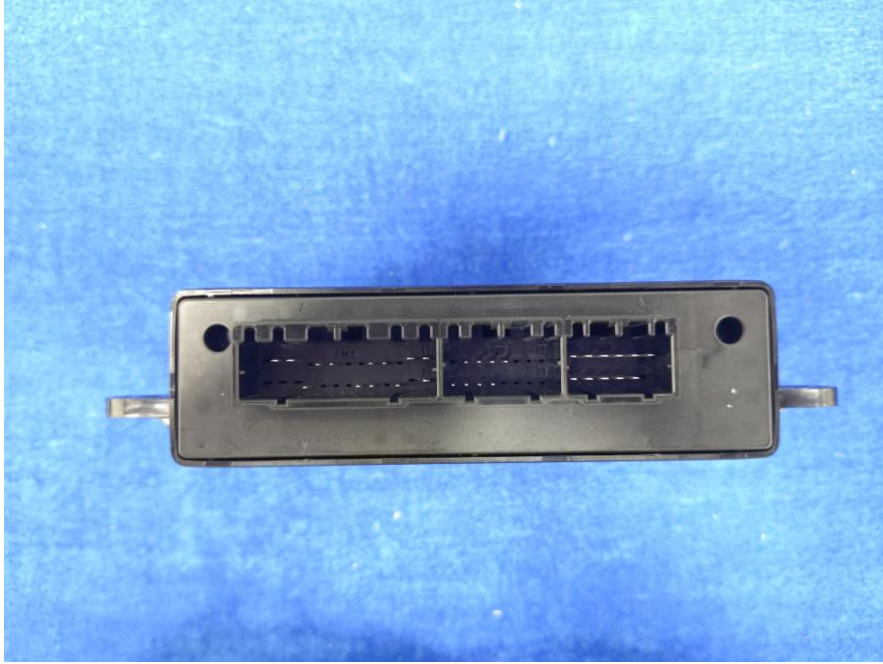


EUT-7

—Blank space below this page—

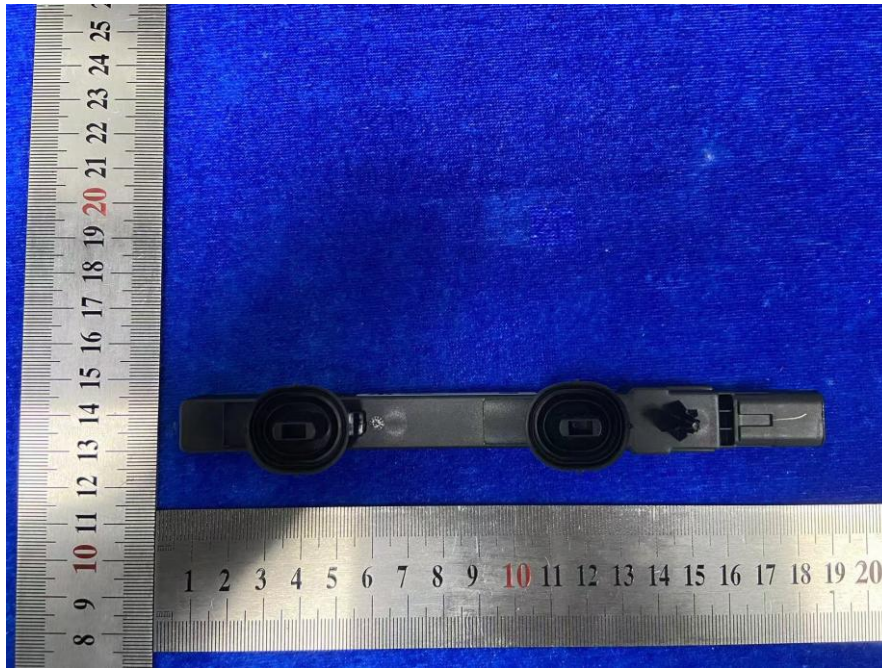


EUT-11-125kHz Antenna

Antenna 1: LF Antenna with high performance(in the driver door)

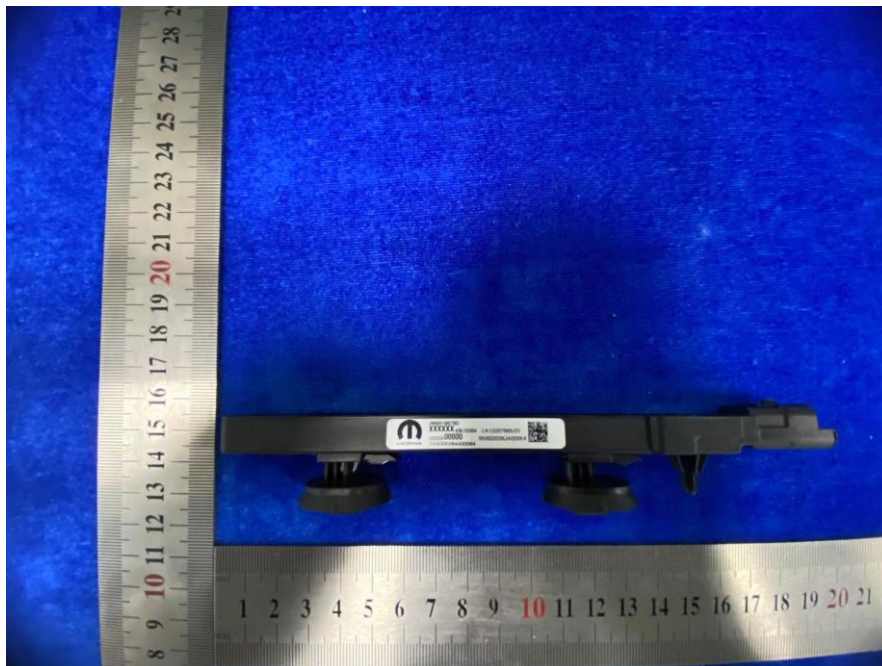


EUT-12-125kHz Antenna

Antenna 1: LF Antenna with high performance(in the driver door)

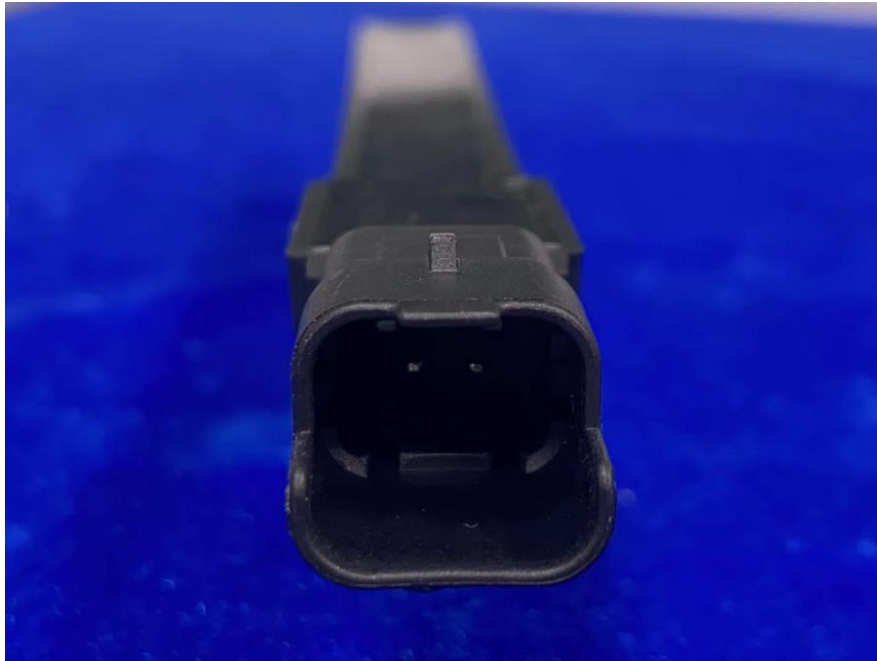


EUT-13-125kHz Antenna

Antenna 1: LF Antenna with high performance(in the driver door)

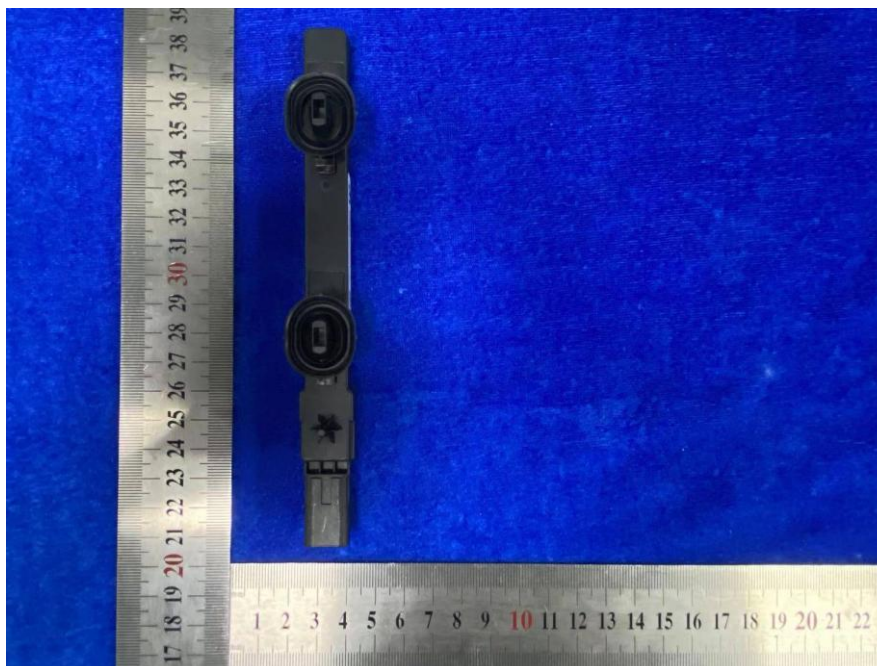


EUT-14-125kHz Antenna

Antenna 2: LF Antenna with high performance(in the passenger door)

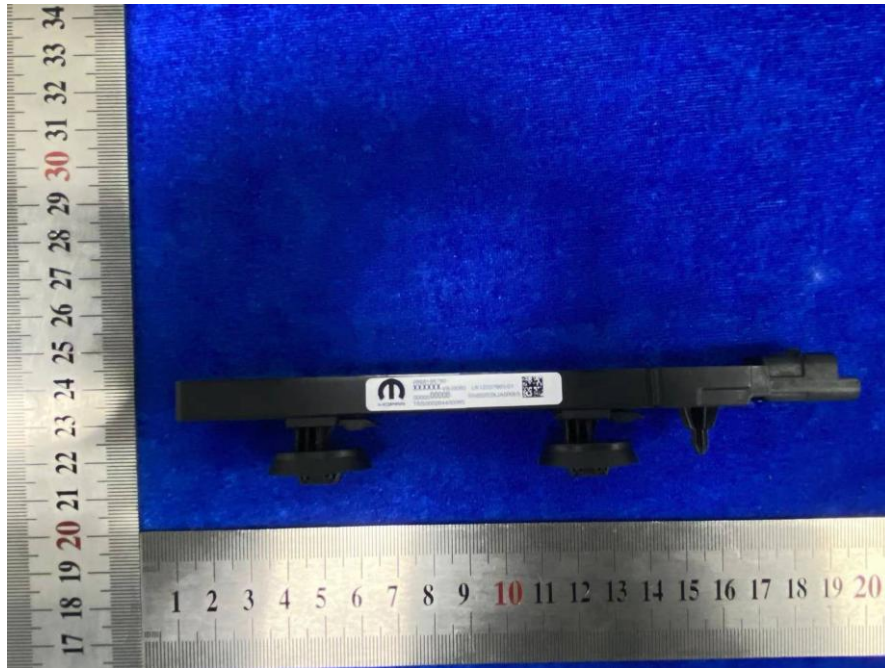


EUT-15-125kHz Antenna

Antenna 2: LF Antenna with high performance(in the passenger door)

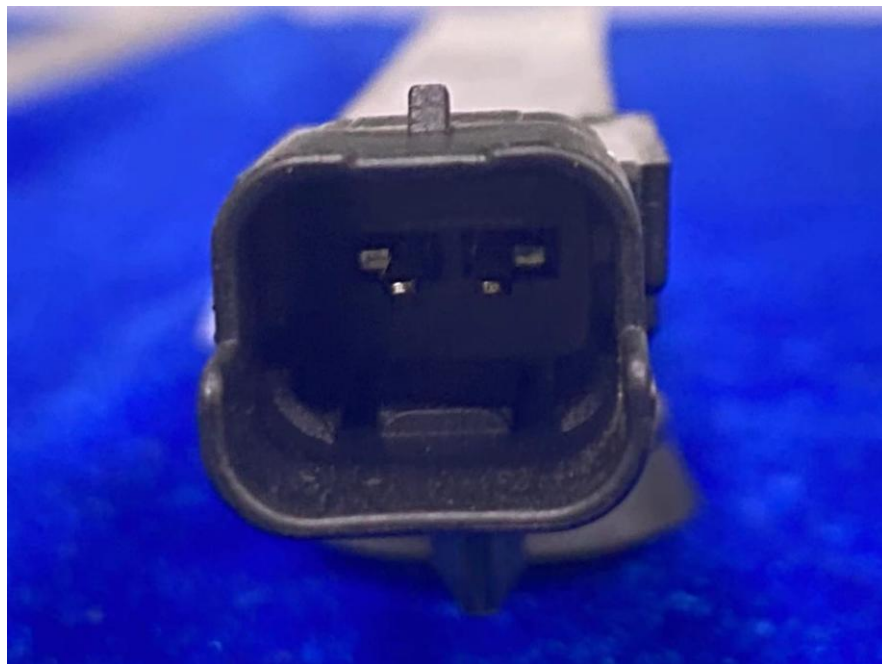

EUT-16-125kHz Antenna

Antenna 2: LF Antenna with high performance(in the passenger door)

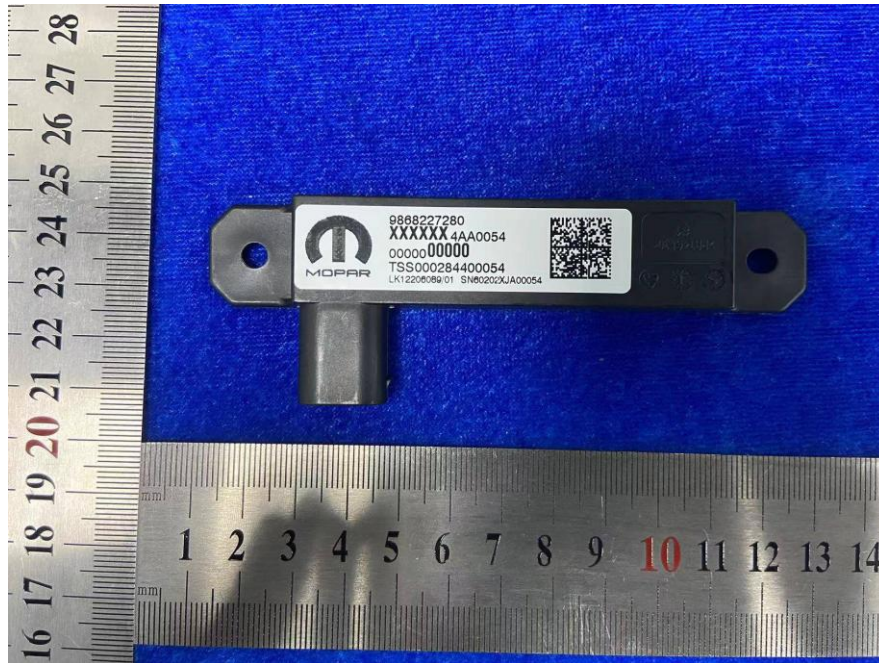


EUT-17-125kHz Antenna

Antenna 3: LF Antenna with IMMO(under the cup holder)



EUT-18-125kHz Antenna

Antenna 3: LF Antenna with IMMO(under the cup holder)

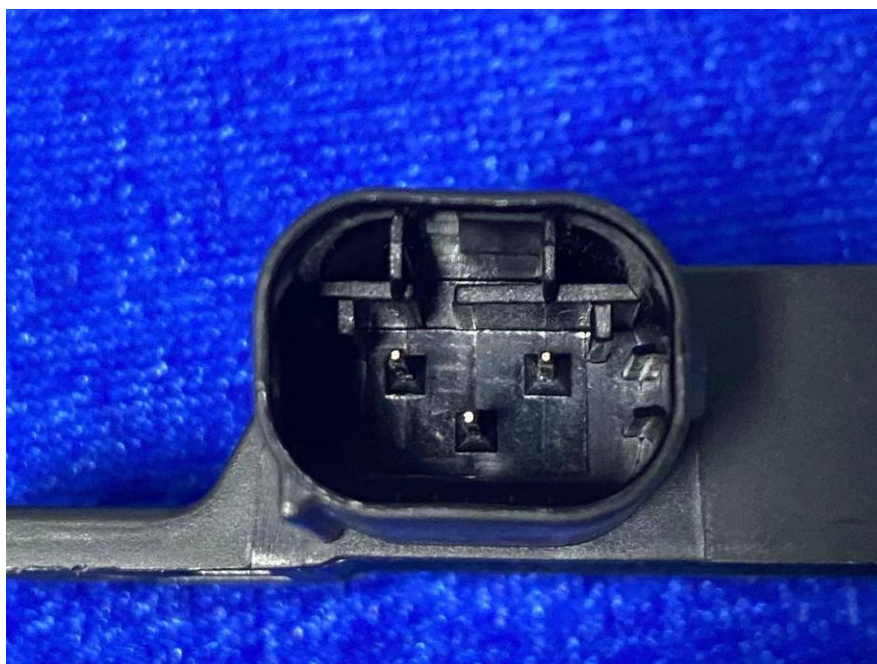


EUT-19-125kHz Antenna

Antenna 3: LF Antenna with IMMO(under the cup holder)



EUT-20-125kHz Antenna

Antenna 4: LF antenna(on the rear bumper)

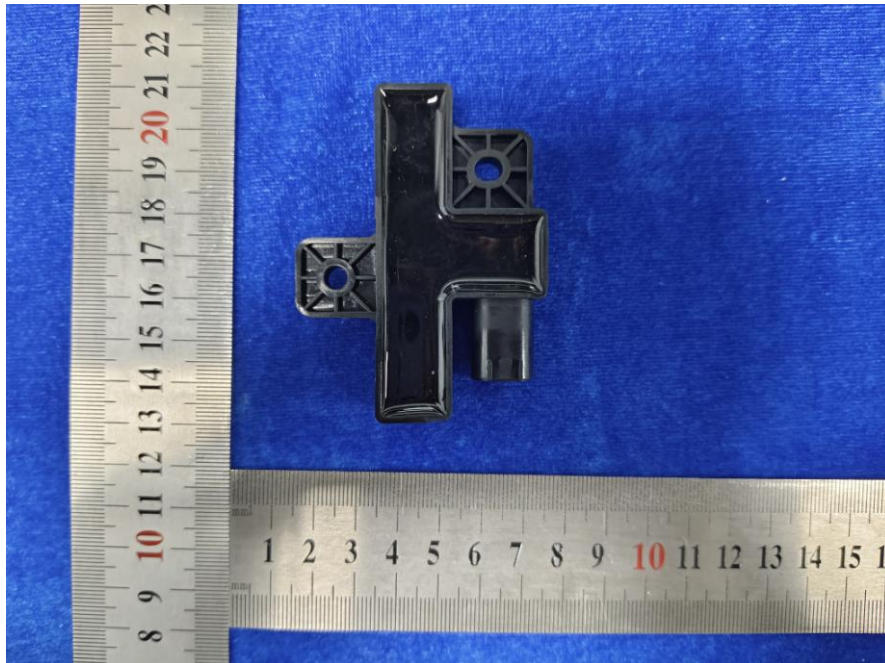

EUT-21-125kHz Antenna

Antenna 4: LF antenna(on the rear bumper)



EUT-22-125kHz Antenna

Antenna 4: LF antenna(on the rear bumper)