


Size: 190x210mm

USER MANUAL TIPPY ALPHABET KEYBOARD

Model: MU21035

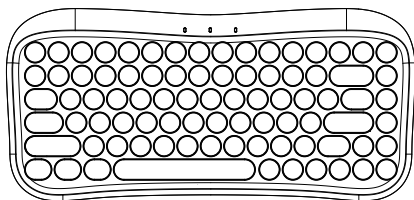


Includes:

- 1 (One) Tippy Alphabet Keyboard
- 1 (One) 2.4 GHz USB Receiver
- 1 (One) Instruction Manual

Specifications:

Connection: 2.4 GHz Wireless
Battery Requirement: 1 x 1.5 V AA Alkaline Battery (Not Included)
Number of Keys: 84 keys
Keyboard FCC ID: 2AYB6-MU21035
USB Receiver FCC ID: 2AYB6-M2

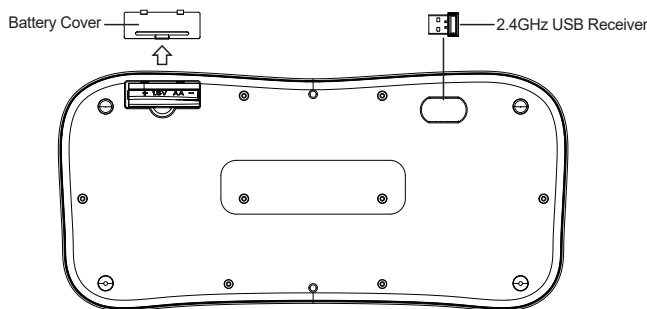

Battery Installation Instructions

Open the battery cover on the battery compartment, insert 1pc "AA" batteries and remember to check for the correct polarity(+/-).

Setup Instructions

1. Insert the USB receiver into a free USB-A port on your computer (use a USB-A → USB-C adapter or hub if your host only has USB-C).
2. Wait for automatic connection. Most keyboards and receivers are factory paired.
3. Test typing. Open a text editor and type to confirm the connection.
4. If the keyboard fails to pair properly, press ESC+Q for 3 seconds to re-pair.

Pairing if automatic connection fails

Remove and reinsert the receiver, restart the computer, then attempt pairing again.

Usage Tips

- Keep the keyboard on a flat, stable surface.
- Avoid eating or drinking near the keyboard to prevent damage.
- Clean the keyboard regularly using a soft, dry cloth.

Troubleshooting

Test the receiver on another computer to confirm whether the receiver is faulty.

Important safety information

- Read all instructions before use. Keep this manual for future reference.
- Use only the indicated batteries.
- Do not expose the unit to water, moisture, or extreme temperatures.
- Do not attempt to open or disassemble the keyboard or battery pack. Repairs must be performed by authorized service personnel.
- Risk of fire or burns if the battery is replaced incorrectly. Replace only with same or equivalent type as recommended by the manufacturer.
- Keep packaging and small parts away from children.
- For indoor use only.

⚠ WARNING: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the battery correctly, and always follow the toy/game and battery manufacturers' instructions.
- 2) Always remove a weak or dead battery from the product.
- 3) Remove the battery if the product is left unused for a long period of time.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Distributed By: 1616 Holdings, Inc
701 Market Street, Suite 200,
Philadelphia, PA 19106
Made in China