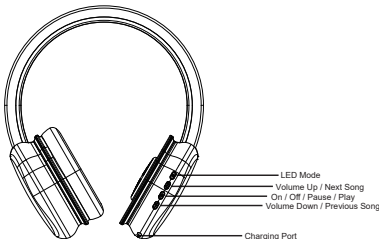


User Manual					
SHINE WIRELESS HEADPHONES	Tips:	FCC statement:	 WARNING:		
	• Low Battery: A low beep prompt sound will be heard. • To Charge: 1. Insert the USB connector end of the included cable (see packing list) into the USB jack on the charger or USB port on the computer. Then insert the Type C end of the included cable into the headphone's Type C charging port. 2. The indicator light will be red while charging. 3. When the headphones is fully charged, the indicator light will turn off. Please unplug your charger from the power source. 4. Please use a qualified charger to recharge your headphones, If not, it may result in damage or even explosion. 5. Repeated charging and discharging of the headphones will lead to decreased battery life over time, which is normal for rechargeable batteries. 6. You must charge the Bluetooth® Headphones if it has not been used for more than 6 months. 	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the the following measures : • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.  WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  WARNING: This product can expose you to chemicals including Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.  CAUTION: FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.	• Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury. • To avoid risk of shock or injury, do not dismantle the device or insert any objects into the Heaphone. • To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so. • Do not pull the Heaphone charging cable. Damage may result to the cable. • Keep out of reach of children. This is not a toy. • Avoid exposure to moisture, liquids, heat, flame and high voltage equipment. • Retain these instructions as they contain important information. • Do not short circuit the input terminals of the Heaphone. • Do not drop, place heavy weight or allow heavy impact to the Heaphone. • PCB of battery should not be crushed and twisted. • Battery body should not be Bended. • Do not disassemble and Do not dispose of in fire. • Do not use the product while driving or crossing the road. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are owned by the Bluetooth® SiG. All other trademarks appearing, herein are the property of their respective owners. Depends upon third party device compatibility. Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China Keep All Relevant Information For Future Reference 		
Package Contents:	Technical Specifications:				
- 1 (One) Shine Wireless Headphones - 1 (One) Type C Charging Cable - 1 (One) Instruction Manual	• Model Number: MU01053 • Battery Capacity: 360 mAh • Input: 5V==200mA • PlayTime (LED on): 3-4 hours • PlayTime (LED off): 8-10 hours • Charge Time: 2-3 hours • 6 single color LED modes + color-changing breathing mode • Working Distance: 10m • 3.5mm auxiliary input (cable not included) • Accessory:Type-C USB Cable Rating 1.0A max. • FCC ID: 2AYB6-MU01053				
Button Description:	FAQ:				
“”: ON/OFF/Pause/Play “V+”: Next song / Volume Up “V-”: Previous song / Volume Down “⚙”: LED Lamp	1) Why can't I start my Bluetooth® headphones? Answer: Please ensure that the headphones is fully charged for your first use. 2) Why won't sound come out of the headphones? Answer: Check whether the playback device and the Bluetooth® headphones connection is successfully established. If the audio device is not properly connected, please reconnect. Please also adjust your mobile phone or Bluetooth® headphones volume to a suitable volume level. 3) Why can't I find this headphones in my Bluetooth® options? Answer: Make sure the Bluetooth® is in "visible mode". If no pairing occurs, the Bluetooth® function will automatically shut off. Please reopen Bluetooth® to "visible mode". If there is a program error, please reboot your phone, and if a program error is caused by your Bluetooth® headphones, please restart the headphones.				
How To Use:					
• Power on: Press and hold the key “” for 2 seconds to turn it on. The blue LED will flash in blue and red alternatively. You will hear a voice prompt “Bluetooth Mode” indicating the headphones is now in pairing mode. • Pairing: Activate the Bluetooth® function on your phone within range and select “ SHINE LED BT HDPHN ” from the list shown. When the blue/red LED light stops flashing, it has paired successfully and you will hear Connected “. The blue LED will flash slowly when playing music. • Play/Pause: When it is playing, press the key “” to pause, then press the key “” again to play. • Next song: Press “+” once to play the next song. • Previous song : Press “-” once to play the previous song. • Volume up: Press and hold the “+” to increase the volume. • Volume down : Press and hold the “-” to decrease the volume. • LED Light up: Short press “” to change the light mode. Long press “” key to turn off/on LED light. • Phone Call: Press “” to answer/end a call. • Power off: When the headphones is on standby or in operation, press the key “” 3 seconds to shut down the headphones (voice prompt “power off ”).					