


Product Manual

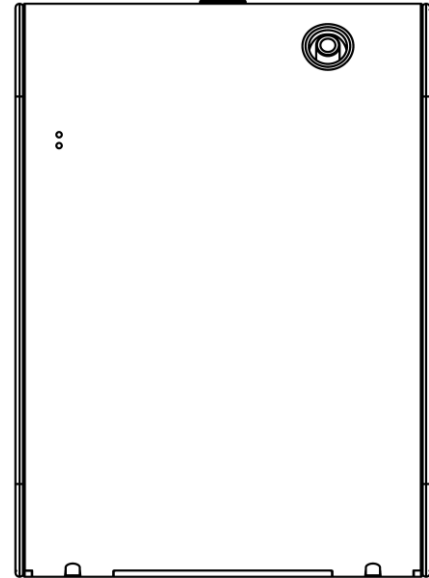

APP icon :  Note: Android users scan the QR code to download. IOS users search Aroma IOT in the Apple Store to download.

The device administrator adds scent name through PC Management Background - consume center-consume lib-add consume. After unifying the name of the scent type, we can choose it on the mobile App to make group management.


APP download





APP PC Management Background




product manual

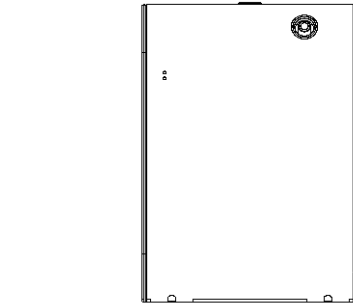

Model No.: 500L
Product Size: 152*68*210mm
Voltage: DC12V
Power: 6W
Coverage: 400-600m³
Capacity: 350ml
Product weight: 827g

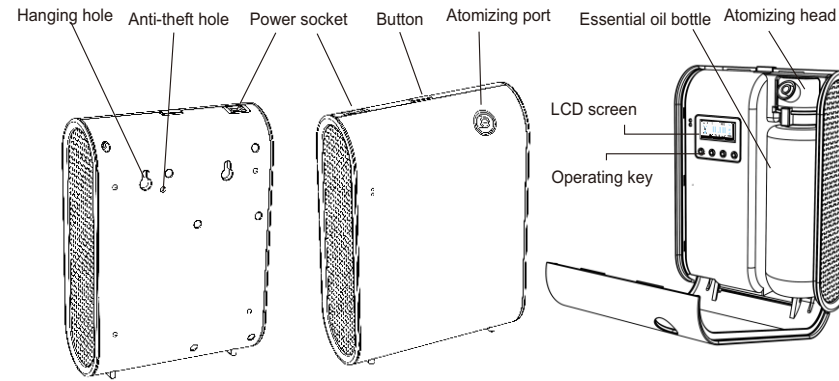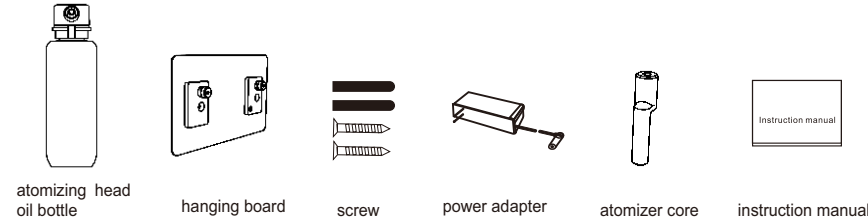


installation procedure

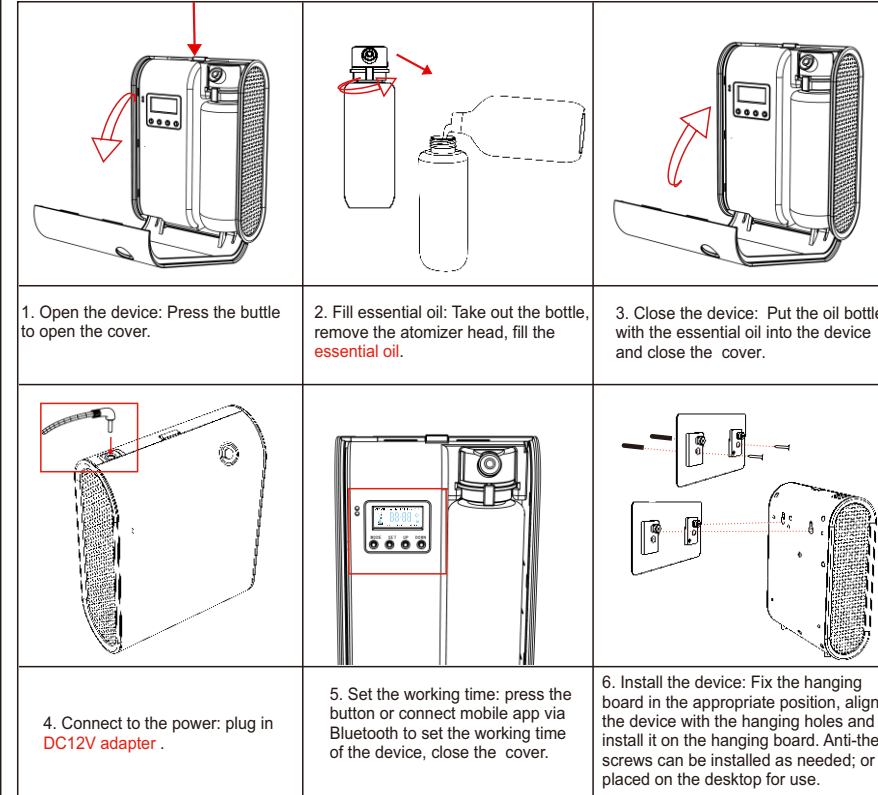

Warning

- After installation, please keep the device vertical. Tilt or flip the device will leak oil and cause damage to the device.
- If you are not a technician, shall not modify, disassemble or repair the device. If the device is faulty, please contact technical staff in time.

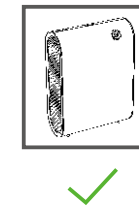

maintenance of device

When the following happens, the device needs to be cleaned

- You are going to change another essential oil to use;
- The amount of atomizing is getting weaker and weaker;

Cleaning steps

- Take out the oil bottle, take off the atomizer head ;
- Fill appropriate amount of alcohol into the oil bottle, install it in the device to work 5 -10 times to prevent cross-odor;
- Cleaning is finished after oil bottle drying.

Troubleshooting

Before repairing the device, try to solve the problems according to the following methods.


Problem	Solution
No fogging	1.Check whether the device is in "OFF" state . 2.Check whether the air outlet seal oring is damaged. 3.Check whether the air pump is working or replace atomizing core. 4.Check whether the air pipe connected to the air pump is sealed or damaged.
Small fog	1.Check whether the air outlet seal oring is damaged. 2.Check whether the atomizing core is blocked. 3.Check whether the atomizing core inside is loose or replace it.
Oil leak	1.Check whether the atomizing core is damaged. 2.Check whether the gasket is damaged needs to be replaced. 3.Check whether the essential oil bottle and the atomizing head are twisted parallel or tightened.
Abnormal noise	1.Check if the air pump is loose, then fix the air pump again. 2.Check whether the air pump is damaged, replace with a new one.

After-sales service

- Device from the date of sale, one year warranty, but not warranty shell, wire , ultrasonic module and external vulnerable items, man-made or accidental damage is not within the scope of warranty, beyond the free warranty period, paid maintenance.
- If you encounter any after-sales problems, you can contact the authorized sales service providers in each region, or contact our sales center.

Button operation instruction

Main Menu Display:

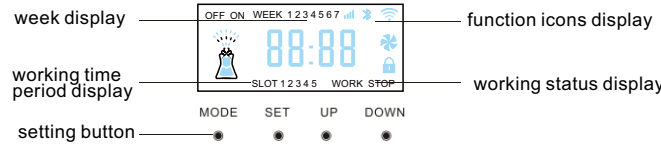


button function:

- [MODE]:** long press: factory reset (standalone version) or entering network pairing mode;
short press: enter into timer setting state;
- [up]:** long press: test , air pump and fan run for 15 seconds;
short press: Increase "+"
- [set]:** long press: turn on/off built-in fan ;
short press: enter into timer setting state;
- [down]:** long press: lock/unlock the device;
short press: Decrease "-"

button operation flow:

- 1. Power on:** Connect the DC12V power adapter . The indicator light is on indicating the device working normally. The screen displays the local time and working status.
- Note:** If the device no operation continuously 15 seconds the screen will be off, you need to press any button to wake up then press the button to set.

 home page:




- 2. Set the local time of the device:** On the default device screen, press **[SET]** firstly to enter the hour setting screen, press **[SET]** secondly to switch the minute setting, press **[SET]** thirdly to switch the week setting, and the corresponding display number will flash respectively, press **[UP]** **[DOWN]** to adjust the correct number.The local time is set successfully.

local time setting page:



- 3. Set the working period and fragrance frequency of the device:**
Press the [MODE] firstly, the screen displays **[SLOT 1 ON]**, indicating the start time of the first working period. Press **[SET]** to switch the hour, minute, and date settings (digits will flash), and press **[UP]** / **[DOWN]** to adjust. There are a variety of date combinations: (Monday); (Tuesday); (Wednesday); (Thursday); (Friday); (Saturday); (Sunday) (Monday to Sunday); (Monday to Saturday); (Monday to Friday); (Monday to Wednesday); (Tuesday to Thursday); (Saturday to Sunday); (Monday, Wednesday and Friday); (Tuesday Thursday Saturday)

 work start time setting page:



Button operation instruction

 
Press **[MODE]** secondly, the screen displays **[SLOT 1 OFF]**, indicating the stop time of the first working period; press **[SET]** enter to set its hour, minute, adjust by **[UP/DOWN]**.

work stop time setting page:



Press **[MODE]** thirdly, the screen displays **[SLOT 1 WORK]**, indicating each atomization working time. Adjust it from 10 to 300 seconds by press **[UP/DOWN]**.

work time setting page:



Press **[MODE]** fourthly, the screen displays **[SLOT 1 STOP]**, indicating each atomization pause time. Adjust it from 10 to 300 seconds by press **[UP/DOWN]**. The first working period is set. Press **[MODE]** five times continuously or pause for 10 seconds and the device will automatically return to the main menu interface.

pause time setting page:



If you want set the second working periods, press **[MODE]** fifthly, the screen displays **[SLOT ON 2]**, press **[SET]** to enter the adjustment state, same setting as SLOT 1, the process is as shown above. 5 working periods can be set according to the demand.

Notice:

When setting its working time period, the shutdown time cannot be earlier than the startup time; If the working time period cross 00:00, it needs to be set 2 time periods. Such as the working time is: 21:00-9:00; It should set 2 times period, the first time period SLOT 1 is: 21:00-23:59; the second time period SLOT 2 is: 00:00-9:00.

Working time /single times (s)	10s-300s (adjustable)
Interval time/single time (s)	10s-300s (adjustable)

APP operation instruction

Step 1: Open the Aroma IOT APP and log in to your account (Note: you need to register first time)


Step 2: Choose the appropriate network pairing mode (Note: Bluetooth network mode first)

Operation method of single Bluetooth version: Keep the phone's Bluetooth and positioning function on and network signal stable. Click the "+" or ICON to enter the Bluetooth connection page, choose the device's serial number (the numbers under the QR code) and click **[PAIR]** to enter operation page.

Bluetooth-wifi network pair method (priority): After the WiFi version of the device is connected to Bluetooth, click the **[WIFI CONNECTION]** and enter the WiFi password of your phone, then click **[CONNECTING]**, WiFi connection successful.


Other WiFi Connection: Press **[MODE]** for 3 seconds firstly to enter the "AP-CONFIG" connecting mode (the screen displays **[AP]**); long press again to enter the "EZ C 2" connecting mode (the screen displays **[C2]**); Select the corresponding mode on the APP and enter WiFi password for pairing.

※ : Supports 2.4G network, does not support 5G network

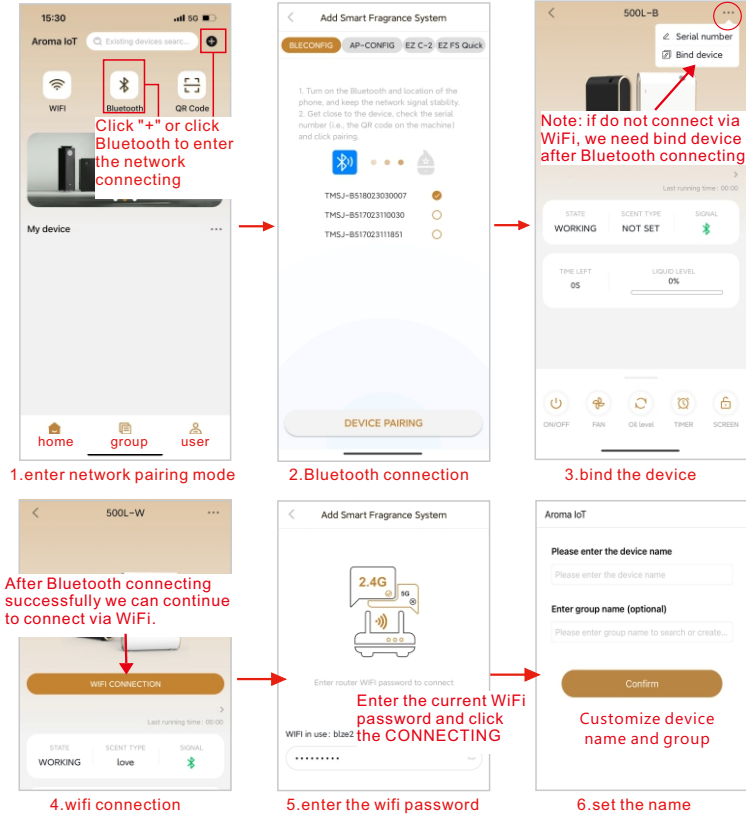


APP operation instruction

Device Setup Method:

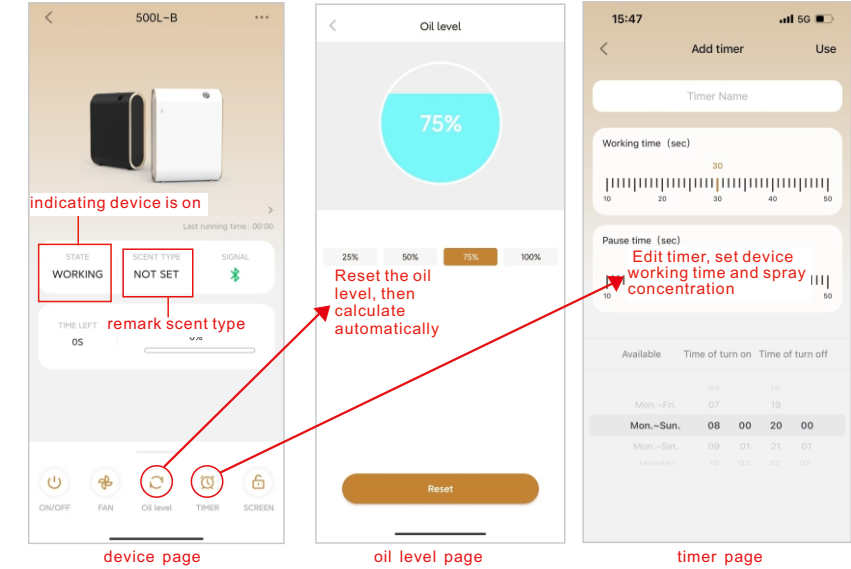

Authorization and group setting methods:

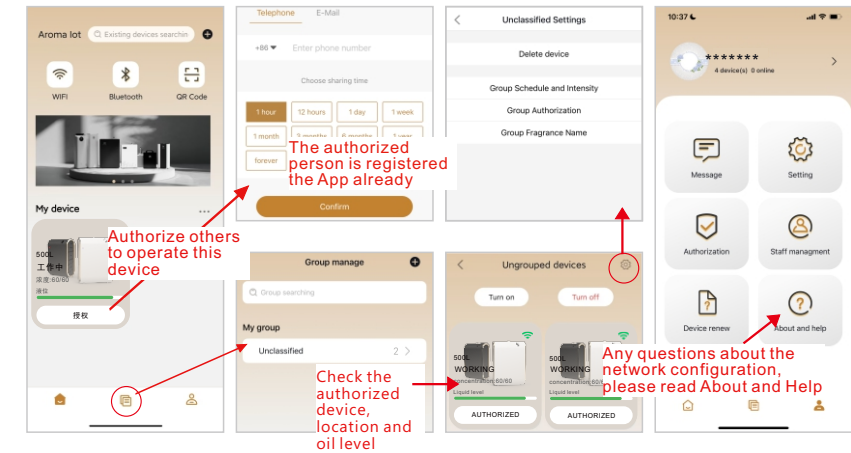

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.