

1、Model：R100

2、Size：310*100mm

3、Material：157g coated paper

Product Manual

1

Note: the third-party unofficial controllers are currently NOT supported.
ご注意: 只今、対応デバイスの公式コントローラーのみを対応します。
暫く未対応第三方非官方手柄。

Package Contents · パッケージ内容 · 包装内容

R100 USB Wireless Adapter	Type-C to USB Cable
R100 USB ワイヤレスアダプター	Type-C to USB ケーブル
R100 USB 无线接收器	Type-C to USB 数据线

User Manual
取扱説明書

*Device with a free USB port
*空きのUSB端子を備えるデバイス
*设备需具有可用USB接口

For 対応システム · 适用于
PS5/PS4/PS3/Switch/Windows PC

DEVICE LAYOUT

2

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

3

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

4

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

5

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

6

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

7

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

8

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

9

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

10

1. Connect the R100 wireless adapter to the USB port on the console.
2. Turn on the console.
3. Press the PS button on the controller to enter pairing mode.
4. The indicator light on the adapter will flash, and the controller will be paired.

11

PLAY BIG. WON BIG

© 2021 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.

12

MONTH WARRANTY

13

NOTICE Please read this Precautions carefully.

CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.

DO NOT use the product near fire.

DO NOT expose to direct sunlight or high temperatures.

DO NOT leave the product in a humid or dusty environment.

DO NOT impact the product or cause it to fall due to strong impact.

DO NOT touch USB port directly or it might cause malfunctions.

DO NOT strongly bend or pull cable parts.

Use a soft, dry cloth while cleaning.

DO NOT use chemicals such as gasoline or thinner.

DO NOT disassemble, repair or modify.

DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.

DO NOT look directly at the optical light. It might damage your eyes.

If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.

* PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Elite and Elite Series 2 are registered trademarks of Microsoft Inc. Switch and Switch Lite are registered trademarks of Nintendo Inc. All rights reserved. All other trademarks are the property of their respective owners. Photos and illustrations are not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under an approved official license and is not licensed or endorsed by Sony Computer Entertainment Inc. This product is not manufactured by Sony Computer Entertainment Inc. or Nintendo Inc.

14

USE TUTORIAL

GET HELP WITH BIGBIG WON SUPPORT

We are here to assist you with your BIGBIG WON devices, if you have any questions, please feel free to contact us:

BIGBIG WON Official Web: www.bigbigwon.com
Customer Service: support@bigbigwon.com

15

R100

FCC CAUTION

- 1. 15.19 Labelling requirements**
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- 2. 15.19 Labelling requirements**
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 3. 15.105 Information to the user**
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

- 1. NOTICE Please read this Precautions carefully.**
- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
 - DO NOT use the product near fire.
 - DO NOT expose to direct sunlight or high temperatures.
 - DO NOT leave the product in a humid or dusty environment.
 - DO NOT impact the product or cause it to fall due to strong impact.
 - DO NOT touch USB port directly or it might cause malfunctions.
 - DO NOT strongly bend or pull cable parts.
 - Use a soft, dry cloth while cleaning.
 - DO NOT use chemicals such as gasoline or thinner.
 - DO NOT disassemble, repair or modify.
 - DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
 - DO NOT look directly at the optical light. It might damage your eyes.
 - If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.
- * PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Elite and Elite Series 2 are registered trademarks of Microsoft Inc. Switch and Switch Lite are registered trademarks of Nintendo Inc. All rights reserved. All other trademarks are the property of their respective owners. Photos and illustrations are not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under an approved official license and is not sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured by Sony Computer Entertainment Inc. or Microsoft Inc. or Nintendo Inc.