

V1

front

122mm

61mm

[back](#)

305mm



GET STARTED

Commencez / Inizia / Loslegen / Empezar / Kom i gang / Kom i gang /
Kom igång / Commencez / Inizia / Loslegen / Empezar

①
SCAN TO GET STARTED

Scannez pour commencer / Scansiona per iniziare / Scannen, um zu starten / Escanea para començar /
Skann for å komme i gang / Skanna för att börja / Scan for at komme i gang / Scannez pour commencer /
Scansiona per iniziare / Scannen, um zu starten / Escanea para començar




②
PULL TAB

Tirez la languette / Rimuovi la linguetta / Aufreißlasche / Tire de la lengüeta / Træk tap / Pull tab / Dra flik
Tirez la languette / Rimuovi la linguetta / Aufreißlasche / Tire de la lengüeta



CHARGING

Comment charger / Come caricare / Wie man auflädt / Cómo cargar / Opladning / Lader laddning
Comment charger / Come caricare / Wie man auflädt / Cómo cargar / Opladning


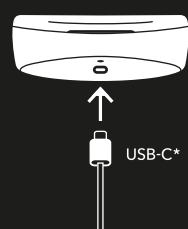


BATTERY LEVEL

Indicateur de batterie / Indicatore della batteria / Batterieanzeige / Indicador de Bateria / Batteriniveau / Batterinivå / Batterinivå / Indicateur de batterie / Indicatore della batteria / Batterieanzeige / Indicador de Bateria



OFFSET PRINTING BLACK 2 HIT

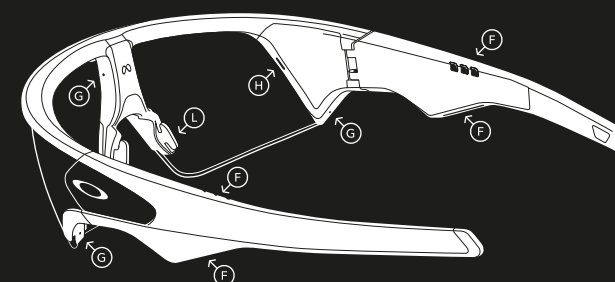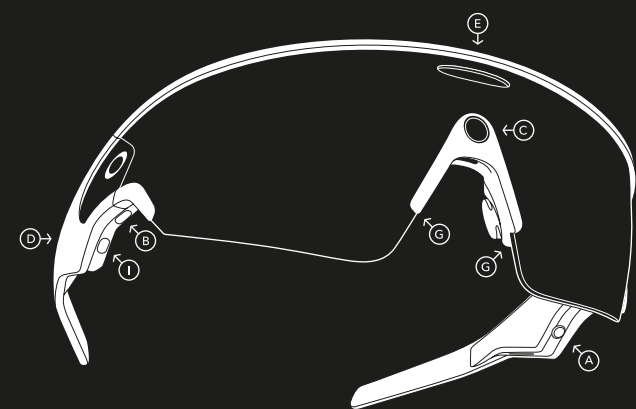

- | | | |
|------------|------------------------------|---|
| (A) | Power Switch | Bouton d'alimentation / Pulsante di accensione / Hauptschalter / Botón de encendido / Strömafbryder / Strömstyrer / Strömbrytare / Bouton d'alimentation / Pulsante di accensione / Hauptschalter |
| (B) | Capture Button | Bouton de capture / Pulsante di acquisizione / Aufnahme-button / Botón de captura / Optagseknap / Opttaksknapp / Capture-knappen / Bouton de capture / Pulsante di acquisizione / Aufnahme-button |
| (C) | Camera | Camera / Fotocamera / Kamera / Cámara / Camera / Fotocamera / Kamera / Cámara / Camera / Fotocamera |
| (D) | Touchpad | Touchpad / Panel táctil / Pekklapp / Touchpad / Panel táctil / Pekklapp / Touchpad / Panel táctil / Pekklapp / Touchpad |
| (E) | Capture LED | LED de capture / LED di acquisizione / Aufnahme-LED / LED de captura / Optage-LED / LED de capture / LED di acquisizione / Aufnahme-LED / LED de captura / Optage-LED |
| (F) | Speakers | Haut-parleurs / Altoparlanti / Lautsprecher / Altopoces / Højtalere / Højtalere / Högaltare / Haut-parleurs / Altoparlanti / Lautsprecher / Altopoces |
| (G) | Microphones | Microfoni / Mikrofone / Microfónos / Mikrofoner / Microfoni / Mikrofone / Microfónos / Mikrofoner / Microfoni / Mikrofone |
| (H) | Notification LED | LED de notification / LED di notifica / Hinweis-LED / LED de notificación / Notifikations-LED / LED-varsling / Meddelande-LED / LED de notificación / LED di notifica / Hinweis-LED |
| (I) | Action Button | Bouton d'alimentation / Pulsante di accensione / Hauptschalter / Botón de encendido / Strömafbryder / Strömstyrer / Strömbrytare / Bouton d'alimentation / Pulsante di accensione / Hauptschalter |
| (L) | Three Nosepad Options | Bouton d'alimentation / Pulsante di accensione / Hauptschalter / Botón de encendido / Strömafbryder / Strömstyrer / Strömbrytare / Bouton d'alimentation / Pulsante di accensione / Hauptschalter |



F.A.Q.

Preguntas frecuentes / Ofte stilte spørsmål / Preguntas frecuentes /
Ofte stilte spørsmål / Preguntas frecuentes / Ofte stilte spørsmål /
Preguntas frecuentes / Ofte stilte spørsmål /

[illegible]colta
RTA

Papel y cartón