

FOSHP-2406_USER_MANUAL

Size: 490 (w) x 90 (L) mm

Bluetooth 5.0 Wireless Sports Earphones w/ Microphone and Volume Control - Black

Package Includes

1x FosPower Bluetooth Earphones
1x Micro USB Charging Cable
1x User Manual

Specifications

Bluetooth Version	5.0
Connection Distance	10 ft
Speaker Impedance	32Ω
Frequency	20Hz-20KHz
Sensitivity	105dB/±3dB
Microphone Sensitivity	-42dB/±3dB
Output Power	20mW
Working Voltage	3.3V-4.2V
Working Time	3 hours
Standby Time	300 hours
Charging Time	1 hour
Battery	Polymer battery (55mAh 3.7.V)
Charging Voltage	DC 5V

Product Diagram



- 1 Earcups
- 2 Microphone
- 3 Next song, Volume up (hold)
- 4 Power button, Play/Stop
- 5 Previous song, Volume down (hold)
- 6 Cable

Earphone Functionality

Power On	Long press the power button for 3 seconds to turn on the earphones.
Power Off	Long press the power button for 3 seconds to turn off the earphones (while powered on).
Bluetooth Reconnect	When the first Bluetooth pairing is successful, turning on the earphones will automatically connect it to the currently paired device.
Play/Pause	While in standby mode, click the power button to play music directly. Pause the music by clicking on the power button again.
Song Switching	Clicking the "-" button during music playback will go back to the previous song. Clicking the "+" button during music playback will go to the next song.
Volume Up/Down	Long press the "-" button to decrease the volume. Long press the "+" button to increase the volume.
Answering a Call/Hanging up a Call	When receiving a mobile phone call, click the power button to answer the call. When you are finished with your call or want to hang up, press the power button again.
Refusing a Call	When receiving a mobile phone call, press and hold the power button for 2 seconds to reject the call.

Power On	While in standby or playing music, double-tap the power button to dial the last number dialed in your call history.
Low battery	When the Bluetooth earphone battery is low, it will issue a low battery alert tone.
LEDs	Charging = Red light. Full battery = No LED light. Playing music = Blue light.

Bluetooth Pairing Instructions

- Press and hold the power button for 3 seconds until you see blue and red lights flashing alternately. This will put the earphones in pairing mode, and enters its searching/matching status.
- Turn on the Bluetooth function on your mobile phone or other device. If it is an Android mobile phone or device, click on the "Search for Bluetooth Device" option. Some Android devices also have auto searching/pairing. If it is an iOS mobile phone or device, it will automatically search for the device.
- After the earphones are found on your mobile phone or device, click on the earphones to finish the pairing. When the pairing is successful, the earphone will send out a pairing is successful connection tone. The earphone indicator will slowly flash blue and enter the connection standby status.
- To unpair, simply unpair the earphones from your mobile phone or device, by clicking unpair or removing the earphone Bluetooth device from your Bluetooth device's list.

Caution

- Please charge your earphones in a safe environment. Note that the charger voltage is consistent with the requirements of the headset. Unplug your micro-USB cable from the earphones when it is finished charging, to prevent long term damage from over charging.
- Be mindful of the volume of your earphones, as overly loud sounds can possibly affect your hearing and cause damage. Adjust the volume accordingly to your needs.
- Try to avoid using the earphones for long periods of time, so as not to harm your hearing in the long term.
- When you do not use the headset after long periods of time, it should be fully charged and stored in a safe and cool place. Remember to remove the micro-USB to prevent it from charging after it is fully charged.
- Avoid storing the earphones in a high temperature, high humidity and corrosive gas environment.
- Avoid an environment with signal interference so there is less interference between the connection of your earphones to your device.

Troubleshooting

Earphones not powering up	- Make sure that your earphones are properly/fully charged before use. - Red lights = charging / No lights = fully battery / Blue lights = music is playing.
Pairing issues/Device not found	- Make sure your device has Bluetooth enabled and in searching/pairing mode. - Make sure the earphones are also in pairing mode by holding the power button down for 3 seconds. You should see red and blue lights flashing alternately when you enter pairing mode.
Cannot hear sounds/Low volume	- Long press on either the "-" or "+" buttons to decrease or increase the volume. - Remember that you have to long press the buttons, and not click them. Just clicking on them will either go to the previous or next song.

Limited Lifetime Warranty

Visit fospower.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.