

# 1-Pack

[setup for unconfigured Node to Router]


inside front cover

DRAFT for review only

### Step 1

**Disconnect your old router from your modem or gateway.**

**Restart your modem or gateway** by unplugging it. Wait 3 minutes and plug it back in.

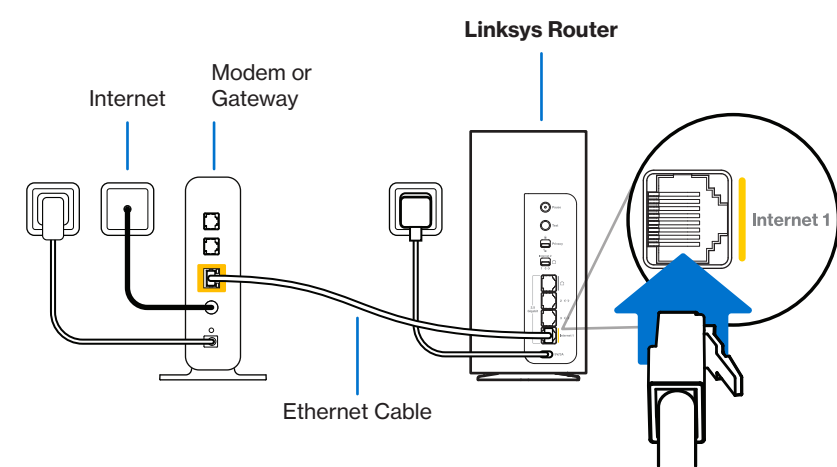


**Connect your Router to the modem.**

Use the provided Ethernet cable to connect the modem to the Internet port on the Router.

### Plug your Router into a power outlet

Give it a minute to start up. The Router light will blink blue as it is starting up and turn **solid blue** once ready for setup.

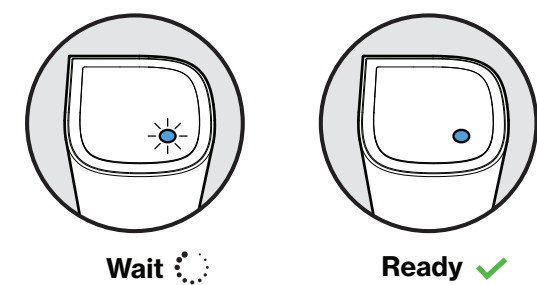


ait :

**Ready**

## Step 2

Scan the QR code to connect to your WiFi.

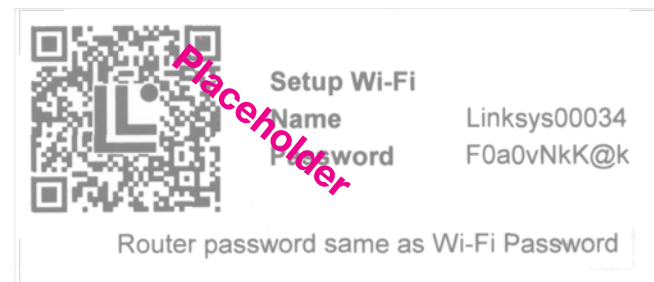

Save this guide for future reference. Your default WiFi Name and Password are also printed on the bottom of your Router.

**Scan the QR code to set up your Router.**  
Follow the on-screen instructions.

Visit **www.myrouter.info**

- Personalise your WiFi Name
- Enable Guest WiFi



The Router light will blink white as it is being set up and turn **solid white** once setup is complete.

### Unable to visit [www.myrouter.info](http://www.myrouter.info)?

1. Make sure your Router is connected to your modem and internet is available.
2. Confirm that you are connected to your new Router's WiFi.


**Receive an error message?**

Don't be concerned. Your connection is private, secure and encrypted. It's safe to proceed to 192.168.1.1 This error only occurs when accessing a router using an HTTPS connection. For more information visit: <https://support.linksys.com/kb/article/65-en/>

### What do the lights mean?

- |                                                                                       |                      |                                                                                                                                              |
|---------------------------------------------------------------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
|    | Off                  | <ul style="list-style-type: none"><li>• Not powered ON</li><li>• Night mode enabled: light turned off from 8:00 PM to 8:00 AM</li></ul>      |
|    | Blue<br>(blinking)   | <ul style="list-style-type: none"><li>• Starting up</li></ul>                                                                                |
|    | Blue                 | <ul style="list-style-type: none"><li>• Ready for setup</li></ul>                                                                            |
|    | White<br>(blinking)  | <ul style="list-style-type: none"><li>• Setup in progress</li><li>• Firmware update in progress</li><li>• Changes to WiFi settings</li></ul> |
|    | White                | <ul style="list-style-type: none"><li>• Set up and online</li></ul>                                                                          |
|    | White<br>(breathing) | <ul style="list-style-type: none"><li>• WiFi is paused</li><li>• Press Instant-Pause button to pause or unpair WiFi</li></ul>                |
|   | Red<br>(blinking)    | <ul style="list-style-type: none"><li>• The Child Node is too far from the Router</li></ul>                                                  |
|  | Red                  | <ul style="list-style-type: none"><li>• No internet connection</li><li>• Check your internet connection</li></ul>                            |
|  | Yellow<br>(blinking) | <ul style="list-style-type: none"><li>• Pairing failed</li></ul>                                                                             |
|  | Yellow               | <ul style="list-style-type: none"><li>• Instant-Test error</li><li>• Router restart required</li></ul>                                       |

tri-fold brochure

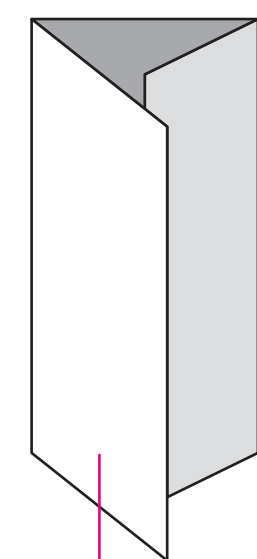



front cover

rear cover

front cover

DRAFT for review only

## Buttons and Switches

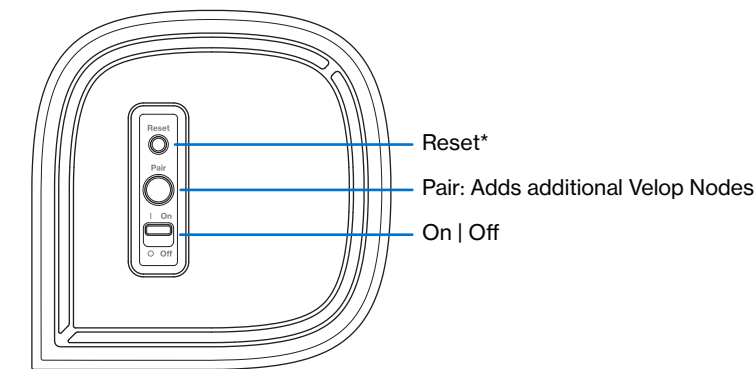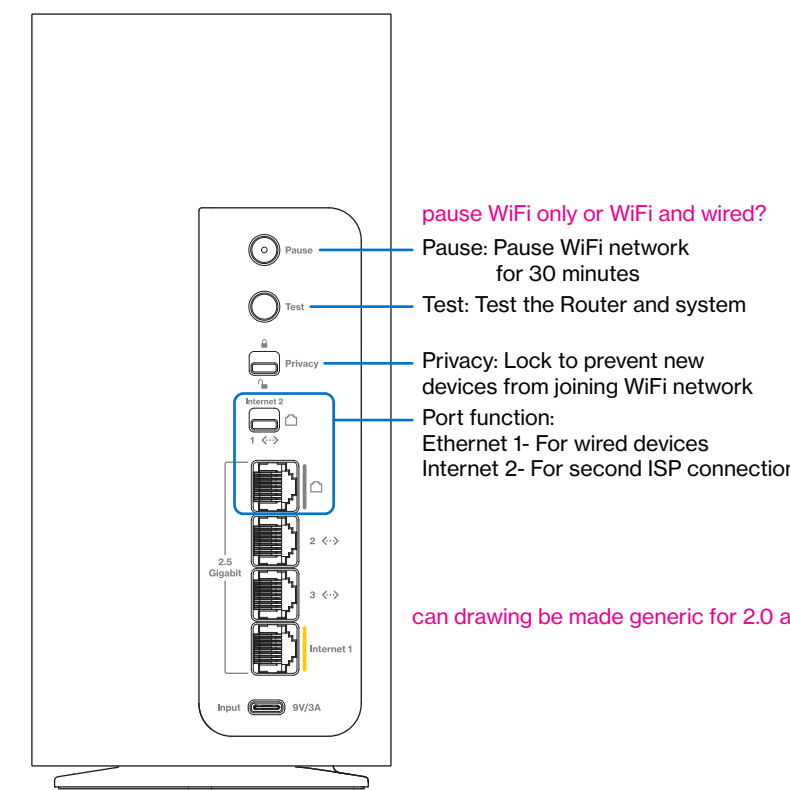

\*Factory resetting your Router will restore the default WiFi Name and Password (printed on bottom of Router) and remove any connections to Child Nodes. Visit [Linksys.com/support](https://www.linksys.com/support) for factory reset instructions. The Linksys Mobile App is not supported by this product.

8820-0xxxx Rev.A0C

**Need help?**



Visit [Linksys.com/support](http://Linksys.com/support)

\* Factory resetting your Router will restore the default WiFi Name and Password (printed on bottom of Router) and remove any connections to Child Nodes. Visit [Linksys.com/support](http://Linksys.com/support) for factory reset instructions.

120 mm

360 mm