 
 


onn
13" Pro

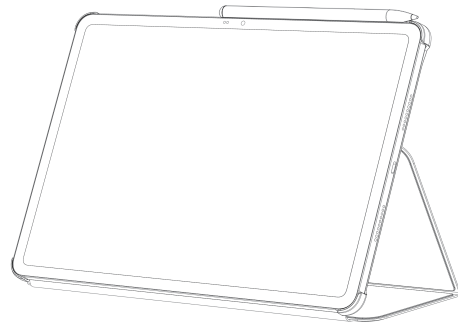 


36018343_EN_11242025


In The Box

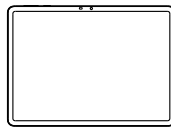

13" Tablet

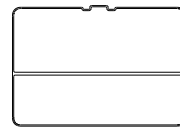


Folio Case

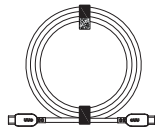 

USB-C 3.2 Cable



 Quick Start Guide

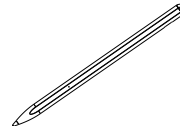


Stylus



Memory Card
Ejection Pin

 Get To Know Your Tablet

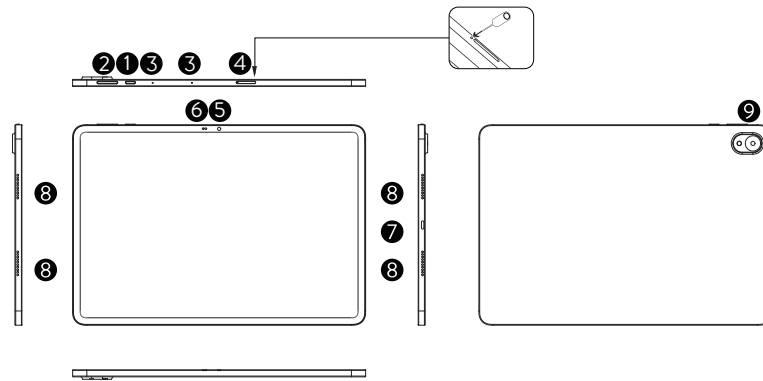

- | | | |
|--------------------|------------------|----------------|
| ❶ Power button | ❷ Volume Control | ❸ Microphone |
| ❹ Memory Card Slot | ❺ Camera(Front) | ❻ Light Sensor |
| ❼ USB-C 3.2 Port | ❽ Speakers | ❾ Camera(Rear) |

To learn more about your tablet, go to **Settings** > **About Tablet** > **Get to Know Your Tablet** for detailed information.

 
Get Started

Turn on your tablet

Press and hold the **Power** button for a few seconds until the tablet turns on.

Turn off your tablet

Press the **Power** button and **Volume+** button at the same time to turn off your tablet.

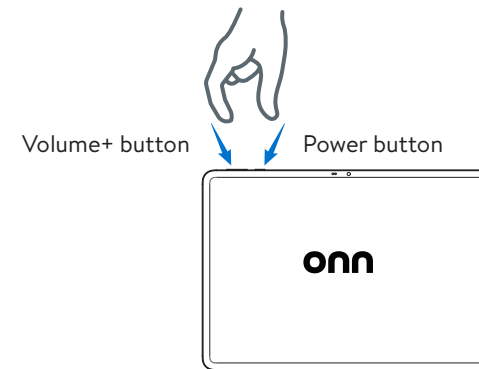

Navigation Mode

The navigation mode on your tablet allows you to choose between Gesture navigation and 3-Button navigation.

 
Gesture navigation



Swipe up to
go home




Swipe up and hold
for recent apps



Swipe from the
edges to go back

 3-Button navigation

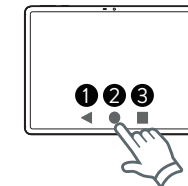

- ❶ Back button
- ❷ Home button
- ❸ Recent apps button

To select the mode that best fits your preferences, go to **Settings** > **System** > **Gestures** > **Navigation mode**.

Factory Reset

Factory reset

To erase all data from your tablet, you can reset your tablet to factory settings. Please back up important data before performing the factory reset.

To perform a factory reset, follow the below steps:

1. From the Home screen, swipe up to access App tray and tap **Settings**.
2. Tap **System** > **Reset options** > **Erase all data (factory reset)**.
3. Enter your PIN (if previously set).
4. Tap **Erase all data** again to confirm.
5. Your tablet will start the reset process.

Force shutdown

 
 
If your device is not responding and you want to perform a force shutdown, simply press and hold the **Power** button and the **Volume +** button at the same time for about 8 seconds.

Stylus

Your tablet supports the US1 2.0 stylus for improved writing, drawing, and navigation. To connect, simply place the stylus near the tablet, and it will automatically connect for use.

Write in text fields

Use a stylus to write directly in any text field, converting handwriting into editable text for easy modification.

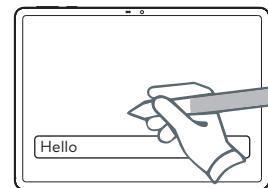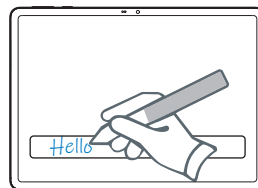


To enable Write in text fields or adjust related settings, go to **Settings** > **Keyboard** > **On-screen keyboard** > **Gboard** > **Write in text fields**.

Note: If the stylus is not responding, ensure it is charged and properly connected to your device. Restart your device if you experience connectivity issues.

Reading Mode

 Reading mode optimizes the screen display to enhance the reading experience and reduce eye strain during prolonged use. To enable Reading mode and choose desired effect, go to **Settings** > **Display** > **Reading mode**.

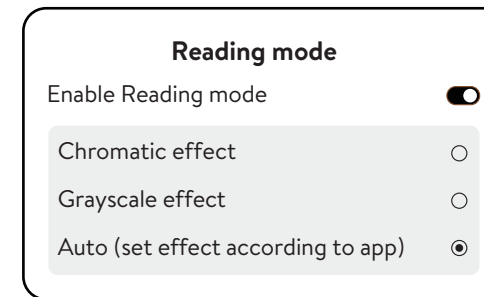


- **Chromatic effect:**Enhances colors for better vibrancy and contrast.
- **Grayscale effect:**Converts the display to grayscale, minimizing distractions and improving text clarity.
- **Auto:**Automatically applies specified reading effects for each app, personalizing the reading experience.

Quick Wake & AI Assistance

Single tap to wake

 Single tap to wake lets you easily activate your tablet's screen with a tap, allowing quick access without pressing the **Power** button.

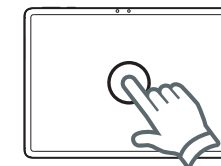

To enable this function, go to **Settings** > **Display** > **Single tap to wake**.

Google Gemini

Google Gemini is your AI assistant that enhances interactions and aids in writing, learning, and creativity. To access Gemini app, press and hold the **Power** button.

Note: Check responses. Setup required. Compatibility and availability varies.

Google and Gemini are trademarks of Google LLC.

For product assistance & missing or replacement parts:

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7 a.m. – 9 p.m. CST

Find more at **Walmart.com**

SCAN HERE FOR MORE
PRODUCT INFORMATION
AND LEAVE US A REVIEW!

 
Manufactured in Vietnam for: Walmart, Inc.



90101-46510

Extend Display Mode

Expansion mode is to horizontally expand the desktop of a computer to multiple displays, each displaying different content, forming a wider workspace.

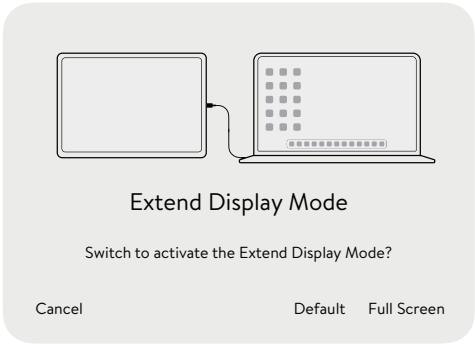

1. Connect the tablet with source device using the inbox cable or USB 3.2 and up version cable
2. Click the Default or full screen button
3. Source device confirm the output

Safety Instructions

- California to cause cancer, birth defects, or other reproductive harm.
- Avoid using the tablet in extremely hot, cold, dusty, and humid environments.
- The tablet is not moisture-proof/waterproof. Avoid using tablets around water sources.

Avoid dropping or forcibly placing the tablet on a hard surface. This may damage the screen or internal electronics and void the warranty.

- Do not use alcohol, thinner, or benzene to clean the tablet surface.
- Use only cleaning products that are designed for computer tablet devices.
- Do not use the tablet while walking or driving.
- To prevent possible hearing damage, do not listen at high volumes for long periods of time. When you are exposed to high sound pressure, a warning will be displayed on the device.
- The images in this guide may differ slightly from the actual product.
- Charge the tablet battery under any of the following circumstances:
 1. The battery level icon indicates low power, by showing a drained, red battery icon.
 2. The tablet powers-off automatically, and continues to do so even after restarting.
 3. On-screen keys do not work.
- Do not suddenly disconnect the tablet when formatting, uploading or



 
Voice assistant & Facial Recognition

Voice assistant

Voice assistant function, which can be set after logging in to Google account, And it needs to be clear the screen must be on in order to use your voice. if the screen is off, voice assistant will not work. The wake-up word is Ok google/Hey google ; To enable this function, go to **Settings > Google > All Services > Search, Assistant&Voice > Google Assistant > Voice Match.**

Facial recognition

Facial recognition, Before you can enable the facial recognition feature, you must first set up a screen lock method.

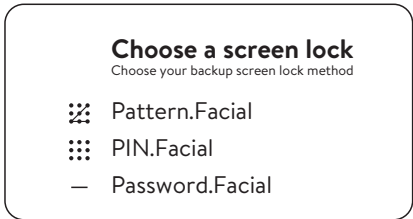

To enable this function, go to **Settings > Security & Privacy > Device Unlock > Face Unlock.**

Safety Instructions

- downloading data. This can lead to program errors (e.g., system or screen “freezing”).
- Electrostatic discharge is normal and can occur in electronic devices, and although it is not life-threatening, it can damage files or damage memory and its contents.
- Disposing of the battery in a fire or hot oven, or mechanically crushing or cutting the battery, may result in an explosion.
- Leaving the battery in extremely hot surroundings, such as sunlight, fire, or hot surfaces, may result in an explosion or leakage of flammable liquid or gas.
- Batteries subjected to extremely low air pressure may cause an explosion or leakage of flammable liquid or gas, risk of fire or explosion if the battery is replaced by an incorrect type!
- Disassembling the tablet will void the manufacturer’s warranty.
- Tablet functionality, hardware, software, and warranty information may be improved or modified by the manufacturer or their respective owners and are subject to change without notice.

From the Home screen, swipe up to access App tray and tap **Settings > About Tablet > Regulatory labels** to view the cetification information. Applicable products have the FCC logo on the product label and/or an FCC ID in the format FCC ID: 2AYT536018343. Google, Android, Google Play, and other marks are trademarks of Google LLC.

Other Useful Features

System maintenance

Your tablet is guaranteed to receive software security updates for three years from its launch date, ensuring continued access to the latest features and enhancements. It will support Android 16 and will be eligible for an upgrade to the next Android operating system. Regular security patches will be provided to help keep your device secure and up to date.

Widevine Level 1

Experience enhanced performance and efficiency with Widevine Level 1.

DTS:X Ultra™ audio effect

Immerse yourself in high-fidelity sound with DTS:X Ultra™, enhancing your music and movie experiences.

Refresh rate

The default refresh rate is set to 90Hz, providing smooth visuals for a more fluid and responsive viewing experience.

Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installtion. This equipment generates uses and radiates radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or position the receiving antenna.
 - Increase the distance between the device and the receiver.
 - Connect the device to an outlet on a circuit different from the one to which the receiver is connected.
 - Consult your dealer or an experienced radio/TV technician for assistance.
- WARNING:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user’t authority to operate the equipment. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Troubleshooting

Problem	Solution/Prevention
Cannot turn my device on.	- Press and hold the Power button for more than 3 seconds. - Charge the tablet for 10-15 minutes.
My tablet does not charge.	- Use your charger and USB cable to charge the tablet. - Check that the power outlet is working and that the charger is properly plugged into the outlet. - Reconnect the charger to the device and let it charge for 10-15 minutes. Then press the Power button to check if there is a charging prompt.
My tablet cannot connect to Wi-Fi.	Get the tablet close to the router, if it doesn’t fix the problem, try restart the tablet or the router.
My tablet runs slow.	Close or uninstall unwanted applications.
My tablet’s system is abnormal.	- Uninstall third-party programs. - Restore factory settings.

Certification Information

This device complies with Part 15 of the FCC Rules. The operation must meet the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, and DTS:X Ultra are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved. The FCC’s SAR limit is 1.6 W/kg, with a maximum SAR value of 1.234 W/kg when testing the device for use on the body. The device was tested at 0 mm and meets RF exposure requirements.

Safety Instructions

Refer to the electrical and safety information on the tablet before installing or operating the appliance.

- Do not install near any heat sources such as radiators, heat regulators, stoves or other equipment (including amplifiers) that generate heat.
 - Use only accessories specified or provided by the manufacturer (e.g., dedicated power adapters, batteries, etc.). Replacing with an incorrect battery type may compromise safety measures.
 - The specification of the charger is 9.0V(DC), 2.2A. We recommend that you use this specification to charge the tablet, the USB(C) port of the tablet supports 5.0V(DC), 1.1A output.
 - The power plug should be kept in a state that can be disconnected at any time to avoid emergencies.
 - The device should not be exposed to dripping or splashing water.
- Use the device at an ambient temperature between 0° and 35° C (32° o 95° F) and at an altitude of no more than 2000 m (air pressure not less than 80kPa). Store or transport the device at ambient temperatures between -20° and 50° C (-4° to 122°F). Low or high temperature conditions may cause the device to change its behavior to regulate its temperature.
- We want you to have a safe and enjoyable experience. Please read the following instructions and precautions before using the tablet.
- Warning: This product may contain a chemical known to the State of