

Uesr Manual T7 Ture Wireless Earbuds	What's in the box 1. Charging Case 2. Earphones 3. Charging Cable 4. Ear tips 5. User Manual	PRODUCT OVERVIEW Charging Case Indicator Charging port	PRODUCT OVERVIEW Earbud Touch button Indicator Silicone eartips L&R Identification Charging pin	INSTRUCTION Play / Pause / Answer Call / End Call / Reject Call /SIRI /Next song/Previous song/Volume up/Volume down touch and hold for 3s touch and hold for 6s short touch touch and hold for 2s touch 3 times touch and hold touch and hold touch 2 times touch 2 times Power on Power off Play / Pause Answer Call End Call Reject Call SIRI/S-Voice Earbud "L" Volume down Earbud "R" Volume up Earbud "L" Previous song Earbud "R" Next song	INSTRUCTION 1. How to pair and connect when first use? Step 1:Take out the earbuds from charging case,it will power on and pairing.Then can be searched in your device. Step 2: Activate the Bluetooth on your device. Find and connect 'T7'. 2. Don't have master/slave relationship 1.In binaural mode, only need to put any earphone back into the charging case and the other earphone will continues to work. 2.Under single ear mode, whichever earphone you use, take out another earphone, they will automatically connect and convert to binaural mode. CHARGING MODE Charging case :charged by Typc C cable Earbuds : charged via charging case
TROUBLE SHOOTING Issue: 1. One of earbud stop working. 2. One of earbud can't pair. 3. Fail to connect 'T7' Solution: Step 1: Put two earbuds into charging case and close it. Step 2: Forget the device from your bluetooth on your device. Step 3: Take out the earbuds from charging case, Activate the Bluetooth on your device. Find and connect 'T7'. Issue: 4. One of ear bud keep flashing blue light with fast speed. 5. Both of two earbuds indicator alternately flash red and blue. Solution: Please reset them. Issue: 6. Two earbuds show blue light with slow speed. Solution: Check whether earbuds connect with other device automatically. You need to disconnect them with other device.	TROUBLE SHOOTING If you need to reset, please follow the below steps, Step 1: Turn off both of the earbuds firstly. (Touch the touch panel and hold for 5s, you will hearing the 'power off' from two earbuds.) Step 2: Forget the device from your Bluetooth on your phone. Step 3: You can reset them now. (Touch the touch panel and hold on 10 seconds for both earbus until hearing three short beeps from two earbuds. Please don't release the touch panel even hearing 'power on'.) Step 4: Activate the Bluetooth on your device. Find and connect 'T7'. PRODUCT PARAMETERS Bluetooth Ver.:NoV5.0 Transmission frequency:2.4G~2.48G Wireless Range:≥10m BT Music Play Time:5-6H Talk time:≥6H Battery in headphone:40mAh x 2 Battery in case:450mah Charging time:1-1.5H Earbuds weight:4g* 2 Charging case weight:21g Speaker:13mm	FCC This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.	FCC If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. FCC ID: 2AYVK-GOME007	ATTENTION 1.Please fully charged the device before using it,if long time no used. 2.The earbuds will automatically turn on and paring when open the charging case. 3.Our wireless earbuds will connect with the latest device automatically after using. 4.Do not put the device in high temperature environment or into fire, as not to damage the battery. 5.To avoid damaging the battery, do not put the products into high temperature environment or fire. 6.Deal with the waste batteries according to national regulations. FCCERoHS COMPLIANT	