


HOW TO OPERATE

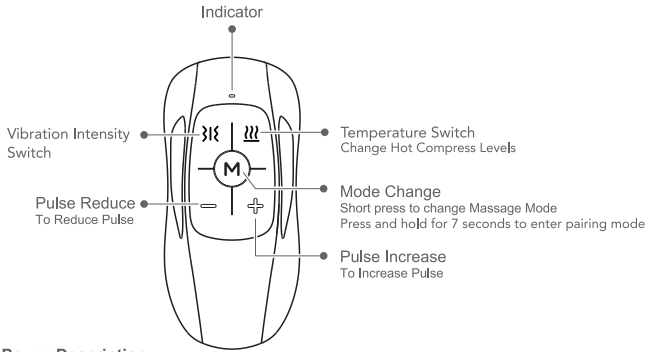

Power Description

Light Color	Light Status	Description
Blue Light	On	Battery Level Normal
Orange Light	On	Low Battery Level
Blue Light/Orange Light	Flashing	In Pairing Mode

Installing the Batteries

1. Slide the switch on the bottom of the remote control to open the battery compartment.
2. Insert two AAA batteries, ensuring the correct polarity (+/-), then close the battery compartment.

Pairing

1. Prepare the remote control and make sure the device is powered off.
2. Press and hold the device's power button and the remote control's "M" (Mode) button for 7 seconds.
3. The indicator lights on both the remote and the device will blink in a loop, indicating pairing mode.
4. When all indicator lights on the device flash rapidly three times, pairing is successful.

Getting Started

1. Press and hold the On/Off button for 1.5 seconds to turn it on. After the electrode pads are warm, wear the massage belt around the waist, and then tighten the belt so that the massage head electrode pads can be tightly attached to the skin.
2. Use the remote control to control the intensity, mode and hot compress intensity level.
3. After the massage, the product automatically turns off. Remove the belt and store it in a clean and safe place.

TROUBLESHOOTING

This page summarizes the most common problems you could encounter with the product. If you are unable to solve the problem with the information below, contact OTO or its authorised dealers immediately.

Problem	Possible Cause	Suggestion
The product does not work	The product is charging	Please use after charging
	The product has just finished its auto timer session and has automatically switched off	If you want another session, start again
	Low battery	Please use after charging
	An excessive load has been applied on the product	Reduce the excessive load and start again
The product is abnormally warm	The product is likely to be overused	Unplug the product and let it cool down before using it again
Noise can be heard from the product	Noise is made by the mechanical parts of the product	This is normal and does not mean that the product is faulty
No feeling of massager	The electrode is not in contact with the skin directly	The electrode must be in contact with the skin directly
	Hair, clothing or accessories where the electrode is in contact with the skin	Remove or separate the thing(s) blocking the electrodes from the skin
Tingling	The massager electrode is not tightly attached to the waist	Wipe the skin of the waist with a wet towel, and then attach the electrodes to the skin
	Massage time takes too long	Suitable time: 10-20 minutes
	Massage of intensity is too strong	Reduce the intensity appropriately
	Cold and dry skin	Wipe skin and electrode surface with a wet towel
	Waist skin and electrodes are not tight	Hold the electrode against your skin
	Dirt or oil on the electrodes	Clean the electrode surface

CARE & MAINTENANCE

Cleaning

1. Do not use steel wool, abrasive cleaning agents or corrosive liquids (such as gasoline or acetone) to clean the product.
2. Disconnect the USB cable from the power outlet.
3. Wipe with a dry cloth to clean the product.
4. Do not use a damp cloth or detergent.

Storage

1. Disconnect the USB cable from the power outlet.
2. Store the product in a cool dry place away from sunlight.
3. Do not put a heavy weight load on the product.

If the cover is damaged or there is any mechanical failure, please stop using the product.

PRODUCT SPECIFICATIONS

Name of Product	Remote Control
Model Number	S1439YK
Rated Voltage	3V
Power Consumption	0.06W
Battery Type	2 × AAA batteries
Product Weight	≈34g

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.