


LX3-S1蓝牙+红外 英文中性说明书,80铜版纸,彩印,含保修卡/合格证,双面印刷,后加工折叠,ROSH

G31-LX3BE03

日期---20250719 更新尺寸, 变更为长*宽 70mm*100mm

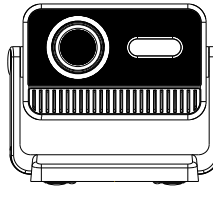

LX3 Projector

Product User Manual

Please read this instruction manual carefully before use.

Contents

Safety Cautions 1

Parts and Panel Instruction 4

Quick Guide 5

Remote Operation and Pairing Instruction 6

Focus Adjust 7

Home Interface Instruction 7

General Settings 8

Wi-Fi Connection 8

Bluetooth Connection 9

USB Connection 10

Google Account 11

Display Settings 12

Projection Mode 12

Trapezoid Settings 13

Screen Keystone 14

Screen Zoom 15

Screen Saver 16

System Configurations 17

Language 17

Time & Time zone 18

Upgrade 19

About Projector 20

More Apps Interface 22

Projector Distance Reference 23

Cleaning Method 24

Warranty Card 25

Safety Cautions

Thanks for your purchasing of our projector. Please read through this user manual and keep it properly after reading for future reference.

1. Do not put the projector in the place where the warm air flows from the air conditions directly. Condensation of water or high temperature may lead to product damage.
2. Please ensure no gather things around the projector and the vent is not blocked to avoid overheating.
3. Please prevent foreign objects such as nails or paper scraps from falling into the projector. Don't insert any metal objects such as iron wires or crowdrivers into the projector. If any foreign object falls into, please turn off the power immediately and ask professional technician to take it out.
4. Put the projector far away from the liquid to avoid damage by liquid leakage.
5. Please use soft packing material to protect the projector if any long distance transport needed. In the meanwhile, prevent from violent crashes and shaking. Use cotton sheet with 75% medical alcohol to wipe the less if any stains or finger prints on it.
6. Do not look into the lens directly when the projector is turned on, the strong lights might hurt your eyes.
7. Do not touch the front vent after a long time running, the vent may be heated and might burn your skin.

Caution

Please do not open the projector and conduct repair by yourself. If there is anything wrong, please contact with authorized customer service center for help.

Please do not locate the projector into the rain or heavy moist to avoid fire or electric shock danger.

Only applicable at altitudes of 2000 meters and below. Only applicable under non-tropical climatic conditions.

Safety Cautions

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC Radiation Exposure Statement:

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. The user and its customer must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure.

Safety Cautions




Parts and Panel Instruction

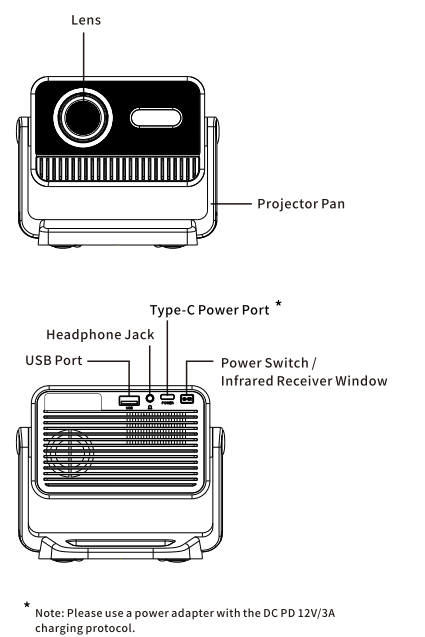


*Note: Please use a power adapter with the DC 12V/3A charging interface.

Quick Guide

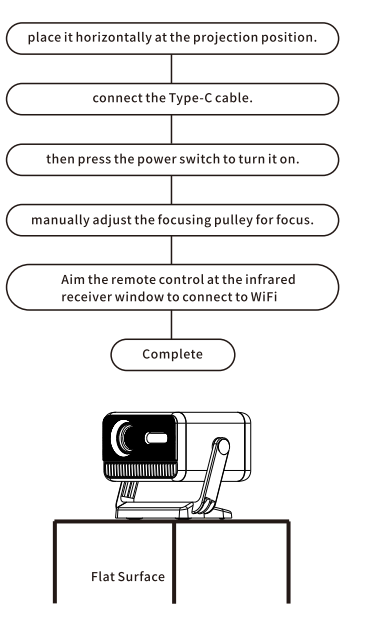


Remote Control Appearance and Instructions

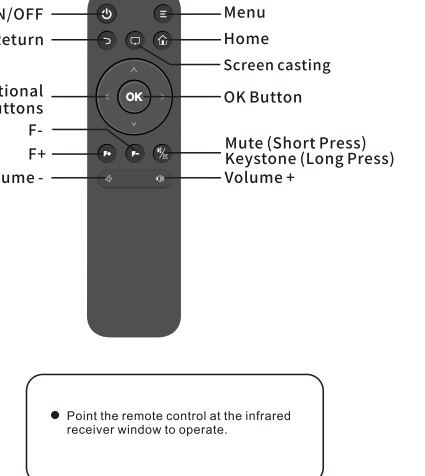

Point the remote control at the infrared receiver window to operate.


Focus Adjust

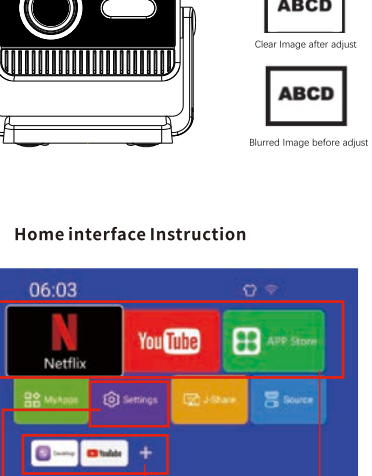

Settings Add app Your app lists


General Settings

On the main interface of the device, tap the "Settings" icon. After entering the settings page, locate the "General Settings" section, and tap the "Network" icon (with a Wi-Fi signal symbol) to enter the "Network" settings page.

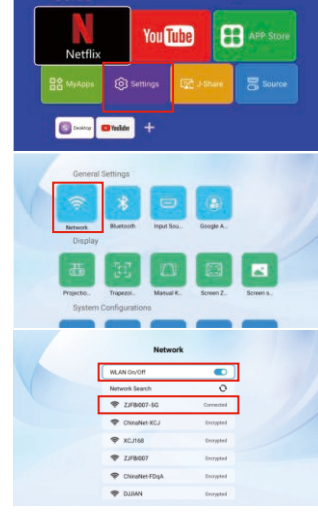


Bluetooth Connection

On the main interface of the device, tap the "Settings" icon. After entering the settings page, locate the "General Settings" section, and tap the "Bluetooth" icon (with the Bluetooth symbol) to enter the "Bluetooth" settings page.

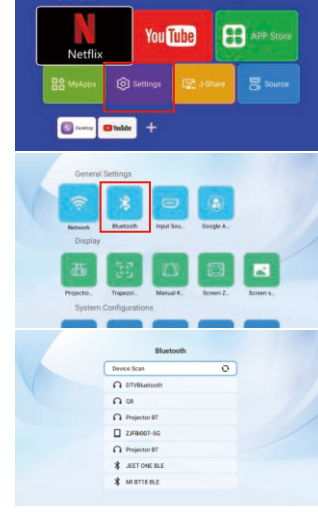


USB Connection

On the main interface of the device, tap the "Settings" icon. After entering the settings page, locate the "General Settings" section, and tap the "USB" icon (with the USB symbol) to enter the "USB" settings page.

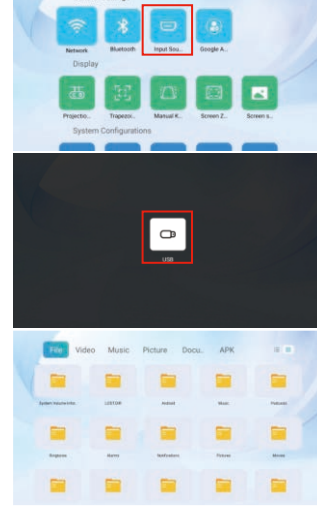

Google Account

On the main interface of the device, tap "Settings" to enter the settings page. Locate the "General Settings" section, and tap the "Google A..." icon (related to Google Account, with an icon featuring a person) to enter the "Google Account" association confirmation page.

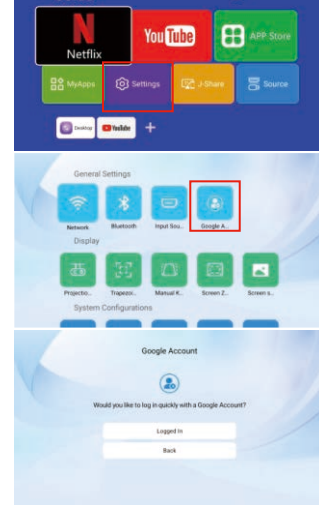


Display Settings

Projection Mode

On the main interface of the device, tap "Settings" to enter the settings page in the "Display" section, tap the "Projection" icon to enter the "Projection Mode" page.


The page offers four modes:

- Desktop Front Projection: Place the device on the desktop and project the image forward.
- Desktop Rear Projection: Place the device on the desktop and project onto the back of the screen/wall.
- Ceiling Front Projection: Mount the device on the ceiling and project downward forward.
- Ceiling Rear Projection: Mount the device on the ceiling and project downward onto the back.

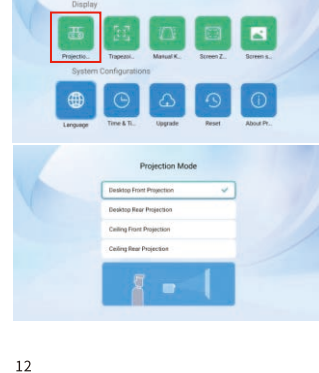


Trapezoid Settings

On the main interface of the device, tap "Settings" to enter the settings page in the "Display" section. After entering the "Trapezoid Settings" page, you can see the "Trapezoid" and "Lower..." option and the switch button on its right.

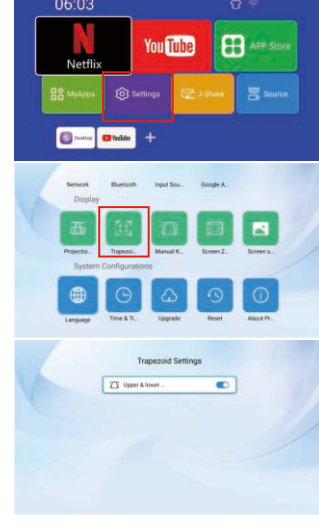


Screen Keystone

On the main interface of the device, tap the "Settings" icon. After entering the settings page, locate the "General Setting" section, and tap the "Manual Keystone Correction" icon (Manual Keystone Correction, with a trapezoid symbol) to enter the keystone correction operation page.

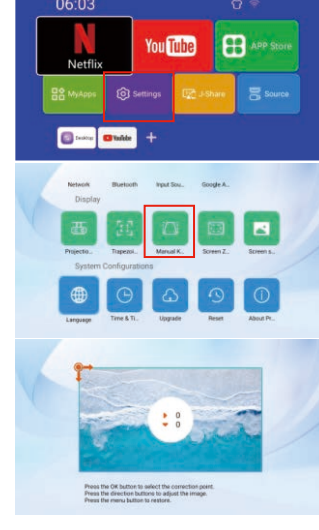


Screen Zoom

On the main interface of the device, tap the "Settings" icon. After entering the settings page, locate the "General Settings" section, and tap the "Screen Zoom" icon (Screen Zoom, with a zoom+ frame symbol) to enter the screen zoom operation page.

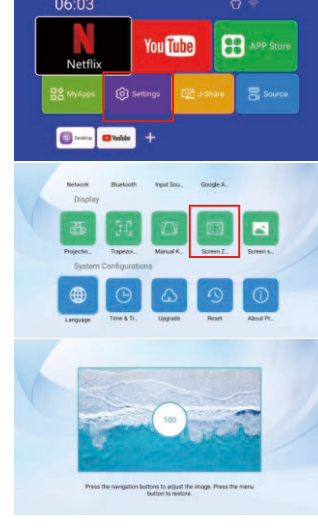

Screen Saver


On the main interface of the device, go to the "Settings" icon. After entering the settings page, locate the "Display" section in sequence, and tap the "Screen Saver" icon (Screen Saver, with an icon featuring a picture) to enter the "Screen Saver" settings page.

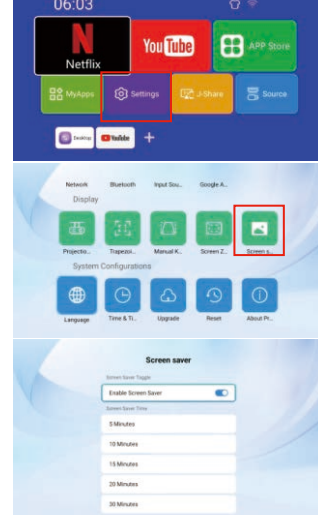

System Configurations


Language

On the main interface of the device, go to the "Settings" icon. After entering the settings page, locate the "System Configurations" section in sequence, and tap the "Language" icon (with a globe symbol) to enter the "Language" settings page.

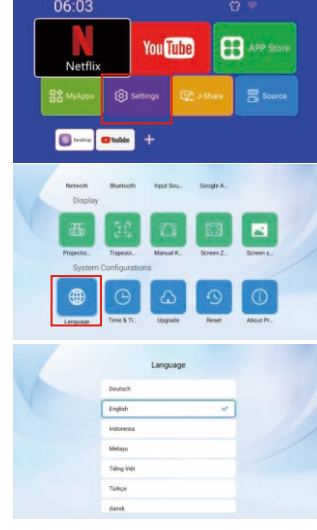


Time & Time zone

On the main interface of the device, go to the "Settings" icon. After entering the settings page, locate the "System Configurations" section in sequence, and tap the "Language" icon (with a globe symbol) to enter the "Language" settings page.

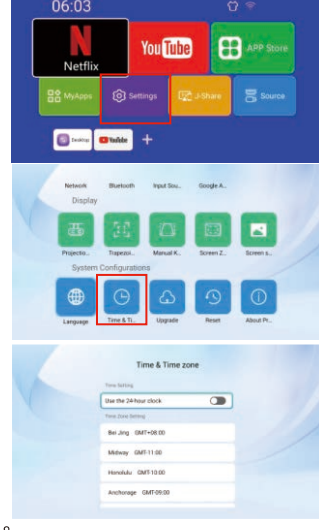


Upgrade

On the main interface of the device, navigate to the "Settings" icon. After entering the settings page, locate the "System Configurations" section in sequence, and tap the "Language" icon (with a globe symbol) to enter the "Language" settings page.

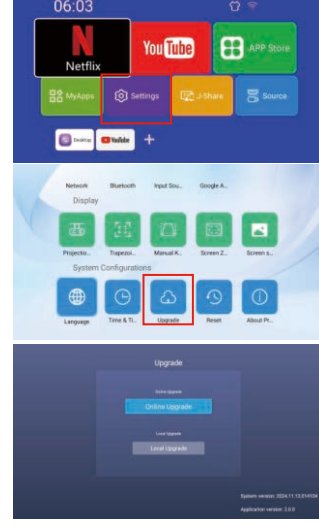


Reset

On the main interface of the device, go to the "Settings" icon. After entering the settings page, locate the "System Configurations" section in sequence, and tap the "Reset" icon (with a circular arrow symbol) to enter the "Reset" confirmation page.

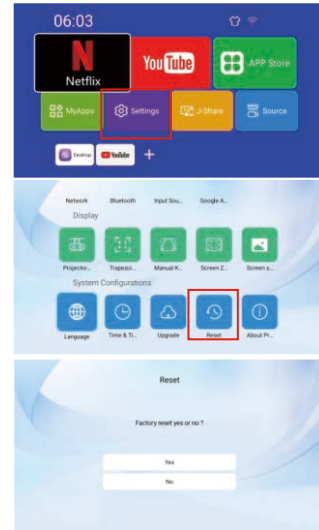


About Projector

On the main interface of the device, go to the "Settings" icon. After entering the settings page, locate the "System Configurations" section in sequence, and tap the "About Projector" icon to enter the "About Projector" confirmation page.

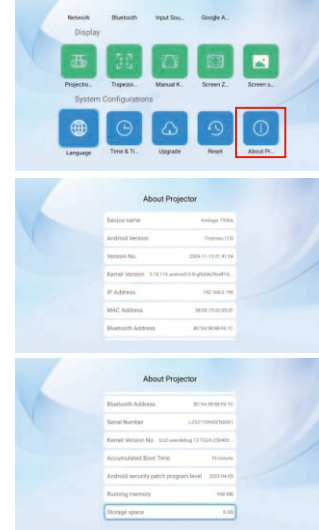


More Apps Interface

On the main interface of the device, tap the "MyApps" icon to enter the more app display page.

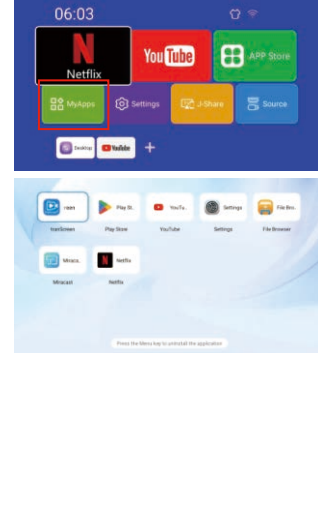

Projector Distance Reference

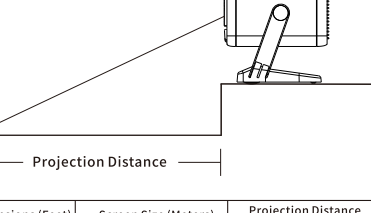

Dimensions (Feet)	Screen Size (Meters)	Projection Distance (Meters)
15.6	0.35x0.19	0.29
21.5	0.49x0.27	0.4
27	0.68x0.34	0.5
32	0.71x0.4	0.6
42	0.93x0.52	0.79
50	1.11x0.62	0.94
60	1.39x0.75	1.12
80	2.21x1.25	1.68

Note: The projector size and projection distance are results calculated based on the throw ratio. During actual debugging, there may be deviations. Please refer to the physical product.

Cleaning Method

How to Clean:

Please disconnect the power adapter before clean.

Please don't use metal tools or other violent chemicals on projector or its lens. Please don't let water or effluvia products contact the products for a long time. The coating will be damaged or peeled off.

Clean Projector:

Please wipe with soft and dry cotton cloth. If it is very dirty, please wipe with a soft cloth dampened with diluted neutral detergent and use dry cloth to make it dry. If you use chemical fiber cloth, please be careful.

To avoid damage or coating peeled off, please don't use abrasive detergent or other chemicals. Do not scratch the projector with nails or other hard objects to avoid scratching.

Clean Lens:

Please use the professional cleaning kit such as air blower, lens cleaning tissue etc. to clean the lens. Or it may cause scratches.

Clean Ventilation Holes:

Two mesh grids will cover the projector's overheating. Please clean ventilation holes at least every 1000 hours use.

Turn off the projector (power down) the power adapter must push into a clean vacuum cleaner (use it to clean corners of projector).

Avoid direct use of vacuum cleaners without accessories, or use vacuums for cleaning.

WARRANTY CARD

Please fill the requested information for official service and warranty.

Customer Name	Name	Signature
Product Model		
Product Serial		Date of Purchase
Address		
Phone Number		Phone No.
Other Information		

Please keep this card in a safe place. It is the basis for claiming warranty. Please do not lose it.

20

21

22

23

24

25

G31-LX3BE03