

A black, cylindrical, portable Bluetooth speaker with a carrying handle. The speaker has a textured, mesh-like surface. On the side, there are two circular buttons: a top one with a plus sign (+) and a bottom one with a minus sign (-). Below these buttons, there is small text that reads: "Model: TWS001", "100% Pure Natural Rubber", "CE, FCC, RoHS, REACH". The top of the speaker has a blue LED light ring.


1

Packing Content

Specifications

2

Device Overview

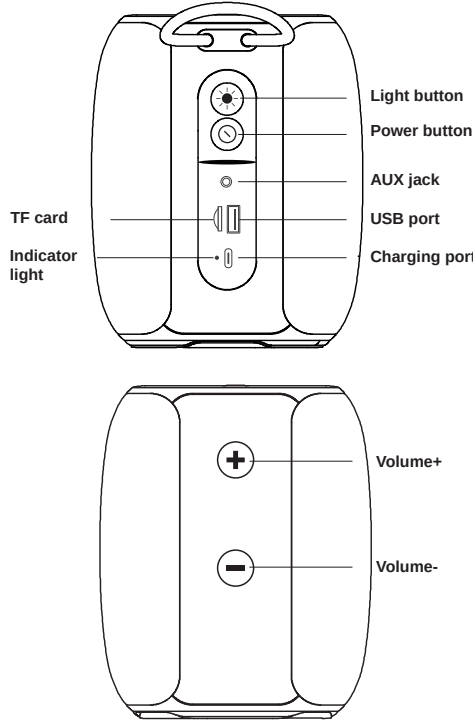

3

Buttons & Controls

Buttons	You want to	How to
⏻	Turn on/off	Long press
	Play/pause	Short press
	Call back	Double click (in BT mode)
	Accept an incoming call	Short press (in calling mode)
	End an incoming call	Short press(in calling mode)
⌘	Switch light (6 modes to light off)	Short press
	Switch play (BT-USB-TF-AUX mode)	Double click
	Pair two speakers (TWS)	Triple press
	Disconnect the BT	Long press (in BT mode)
	Reject an incoming call	Press 2s(in BT mode)
⏮	Increase the volume	Short press
	Next song	Long press
⏭	Decrease the volume	Short press
	Previous song	Long press

4

Getting Started



— Charging port (USB Type-C)

5

Bobtot


6

A diagram illustrating the connection of a portable device to a laptop. On the left is a portable device with a 3.5mm audio jack. A cable labeled "3.5mm Audio Cable" connects this jack to the audio input of a laptop on the right.

A diagram illustrating data transfer. On the left, a 'TF card playback' card is shown with a line connecting it to a central device. On the right, a 'USB Drive' is shown with a line connecting it to the same central device. The central device is a vertical rectangle with a circular button at the top and a rectangular slot at the bottom.

6

How to Set TWS Sync Mode?

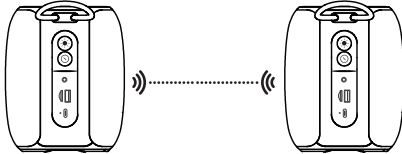

*When you are listening to the music from one speaker and want to set up the stereo pairing , triple-click the  button, would enter into stereo pairing mode.

5

Resetting your device

Troubleshooting:

1. Automatic shut down: when the battery power is low, the speaker will turn off automatically, please charge it.
2. Unable to play music: Reset the speaker and connect the bt again. If the music file store in the USB or TF card, check if the right connect mode, double press the  to choose the right mode.
3. Unable to connect to the computer: Check if the computer has bt function. If not, please connect the speaker and computer by the AUX cable and choose the right model by pressing the .
4. The button does not respond or the function is disordered: try again after reset.
5. Stuck in an abnormal situation: press the power button for 8 seconds to reset.

4

Warning

FCC Requirement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful

3

Need help?

25

bobot.net

1

成品尺寸：122.5x70mm

材质工艺：128g双铜，风琴折

深圳市恩科电子有限公司						SHENZHEN CITY ENKOR ELECTRONICS LTD					
设计绘图	技术员	品质经理	业务经理	产品经理	研发经理	客户品牌	内部型号	零件名称	材 料	单 位	版本
										MM	V1.0
料 号				部 门		研发部	PMC	采购部	品管部	木箱部	生产部
BZ0-ET22ASMSB03						✓		✓	✓		✓