

正面

Bobtot

Portable Wireless Speaker
Quick Start Guide
Q91

 
What's in the Box

Check to make sure you have everything below.

A



B



C



A:1*Q91 Portable Speaker

B:1*USB Charging Cable (Type-C)

C:1*Quick Start Guide

Buttons Overview

1. Power On/Off

2. Play/Pause/TWS

3. Volume Down/
Previous Song

4. Phone Call Button

5. Volume Up/
Next Song

Button Function



Power On/Off
Long press to turn the speaker on/off



Play/Pause/TWS
Short press to play/pause
Long press to disconnect BT mode
Double-click to TWS pairing/disconnect



Phone Call Button
Short press to answer the call
Long press to reject the call
Double-click to redial the last number




Volume Up/Next Song
Short press to go to the next song
Long press to increase the volume



Volume Down/Previous Song
Short press to go to the previous song
Long press to decrease the volume

Initial Setup

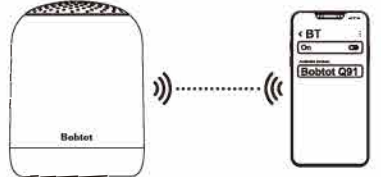

1) Once your speaker is fully charged, press and hold the  Power button to turn on the speaker, the indicator light flash means that the speaker enters BT pairing mode.

2) On your smartphone or tablet or other BT devices, search for the BT named" **Bobtot Q91**" and tap to connect.

3) It's successfully connected to your device if you hear prompt sound, and mode indicator turns solid

Notes: When power on the speaker but no connection or no playback, it will automatically shut down after 10 minutes to protect the battery.

TWS Wireless Stereo Pairing

Step 1: Long press  on two speakers to power on and the indicator light flashing.

Step 2: Quickly double-click  on any speaker, and you will hear the prompt sound indicating the speaker enters pairing mode, the indicator light of one speaker turns solid.

Step 3: Find "**Bobtot Q91**" speaker on the BT list of your phone or pad, and click to connect.

Step 4: The Speaker is successfully be connected with your smart device when the indicator light of both speakers turn solid.

Notes:

1. In TWS mode, turn off either one speaker, both of them are off.

2. Double-click the  button will be disconnected.

Specifications

- Frequency Response: 120Hz-18KHz

- Wireless Range: ≥33ft(10m)

- Charging port: Type C

- Life Waterproof, Sprayproof

- TWS Function

- Built-in Microphone

- 1200mAh Rechargeable Battery

Resetting Your Device

if your speaker is not operating properly, you may reset it. To do so, press and hold the  power button for approximately 8s until the speaker powers off, and then power it on again as usual.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

技术要求：

1. 成品尺寸75*75mm 展开尺寸：600*75mm
2. 128g铜版纸
3. 风琴折，红色线为刀模线无需印刷出来。
4. 单黑色双面印刷