

WENKEY

Contents

English ----- 01 - 10

Deutsch ----- 11 - 21

Francia ----- 22 - 32

Español ----- 33 - 43

Italiano ----- 44 - 54

User Manual

wireless earbuds

Utohoki Technology (Shenzhen) Co., Ltd

Room 402, No.4 DCC Creative Culture Center

No.98 Pinghu North Road,Shangmu Section,

Pinghu Street, Longgang District, Shenzhen, China

IPC ID: 24284512

IC: 27445 82

CE

RoHS

WEEE

Thank you for purchasing the E2 wireless earbuds. Please read the user manual carefully and keep it for future reference. If you need any assistance, please contact our support team at your product model number and Amazon order number.

Package Contents

Three Pairs of Tips (S/M/L)

 
USB-A to C Cable

User Manual

Quick Start Guide

Warranty Card

Product Diagram

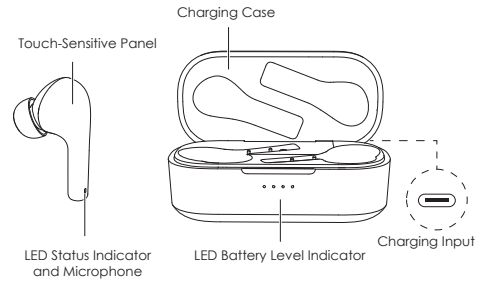

Specifications Earbuds

Model	E2
Technology	A2DP, AVRCP, HFP, HSP, AAC
Driver (each channel)	1.6mm / 7.27" speaker driver
Sensitivity	103dB ±3dB (94dB SPL @1kHz)
Frequency Range	20Hz - 20kHz
Impedance	32Ω ±5%
Microphone Type	MEMS (microphone chip)
Charging Time	1.5 hours
Battery Life	Up to 10h (S/M)
Battery Type	Lithium-ion (2 x 40mAh)
Operating Range	10m / 33ft
Weight	36g / 1.3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

Note: Remove the protective film from the earbuds when using for the first time.

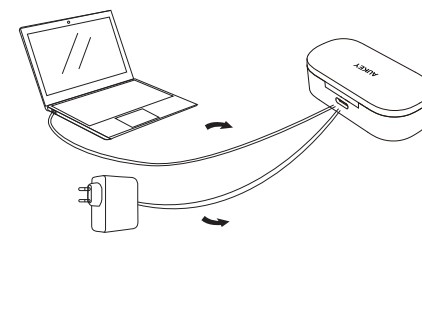

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Using the Left/Right Earbud Only

Starting with the earbuds in the case: 1. Take the left/right earbud out. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. From the lid of available devices, find and select "E2".

Reset the earbuds: Starting with the earbuds in the case: 1. Take both earbuds out of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds, then both earbuds will turn on and enter pairing mode. 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. Put both earbuds back in the charging case and close the lid to reset. 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Notes: • When you turn on the earbuds, they will be automatically reconnected to the previous paired device or enter pairing mode if no paired device is found. • If left ear or right earbud can be used individually once connected to your device when you keep the other earbud inside the charging case.

Controls & LED Indicators

Bleeding Audio

Once paired, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or pause music: Tap the touch-sensitive panel on either earbud.

Stop to previous track: Double tap the touch-sensitive panel on either earbud.

Stop to next track: Double tap the touch-sensitive panel on either earbud.

Calling Calls

Answer or end a call: Double-tap the touch-sensitive panel on the earbuds to answer or end the call about the incoming call.

Reject an incoming call: Long-press the touch-sensitive panel on either earbud for 5 seconds.

Activate Siri or other voice assistants: Triple-tap the touch-sensitive panel on either earbud.

LED Status Indicator

Flashing Red: Earbuds Charging

Red off (after charging): Earbuds fully charged

LED Battery Level Indicator

Status

Four LED indicator lights for 2 seconds: 80%-100% battery remaining

Three LED indicator lights for 3 seconds: 40%-80% battery remaining

Two LED indicator lights for 5 seconds: 20%-40% battery remaining

One LED indicator light for 5 seconds: <20% battery remaining

FAQ

The earbuds are on, but not connecting to my device. For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the pairing section of this manual.

I've connected the earbuds with my smart phone but can't hear any sound. Double-check the volume level on your smart phone and the earbuds. Some smart phones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

What's the wireless range of the earbuds?

The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles like reinforced steel walls between the earbuds and your device.

The earbuds won't turn on by charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support.

I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is probably out of power. Try charging it.

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: This device may be used in each member state of the EU.

CE Statement

Max power level: 0.1W (class 2B20-240 MHz) 2.4GHz RF exposure assessment has been performed to prove that the product will not generate the harmful EM emission above the reference level as specified in IEC Council Recommendation (1999/519/EC).

CAUTION: RISK OF EXPOSURE TO BATTERY IS RELAYED BY AN INADEQUATE TYPE, DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Vielen Dank, dass Sie sich für die WENKEY E2 wireless earbuds entschieden haben. Bitte lesen Sie diese Bedienungsanleitung sorgfältig durch und bewahren Sie sie zum späteren Nachschlagen auf. Wenn Sie Unterstützung benötigen, wenden Sie sich bitte an unser Produktmodellnummer und Amazon-Bestellnummer an unser Support-Team.

Lieferumfang

Drei Paare Ohrstöpsel (S/M/L)

 
USB-A zu C Kabel

User Manual

Quick Start Guide

Garantiekarte

Produktbild

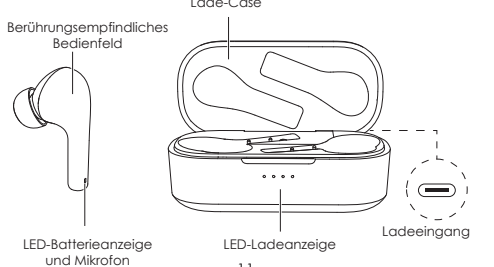

Specifications Earbuds

Modell	E2
Technologie	A2DP, AVRCP, HFP, HSP, AAC
Treiber (jeweils Kanal)	1,6 mm / 7,27" Lautsprecher
Sensitivität	103 dB ± 3 dB (94 dB SPL @ 1 kHz)
Frequenzbereich	20 Hz - 20 kHz
Impedanz	32 Ω ± 5 %
Microphone	MEMS (Microphone-Chip)
Ladezeit	1,5 Stunden
Batterielebensdauer	Bis zu 10 h (S/M)
Batterietyp	Lithium-Ionen (2 x 40 mAh)
Reichweite	10 m / 33 ft
Gewicht	36 g / 1,3 oz

Lade Case


Ladeeingang	DC 5V
Ladezeit	1,5 Stunden
Akku	Lithium-Ionen (500 mAh)
Anzahl der aufladbaren Kopfhörer	5-mal (S/M)
Gewicht	36 g / 1,3 oz

Loslegen

Aufbau

1. Laden Sie die Ladebox vor dem ersten Gebrauch vollständig auf. Schließen Sie das Gehäuse zum Aufladen mit dem mitgelieferten USB-A-zu-C-Kabel an ein USB-Ladegerät an. Das Aufladen des Gehäuses erfolgt in der Ladebox vollständig. Das Aufladen kann ca. 1,5 Stunden dauern. In diesem Fall können die Ohrhörer 5-mal vollständig aufgeladen werden. Die Ohrhörer sollten bei Nichtgebrauch im Koffer aufbewahrt werden.

Hinweis: Entfernen Sie die Schutzfolie bei der ersten Verwendung von den Ohrhörern.

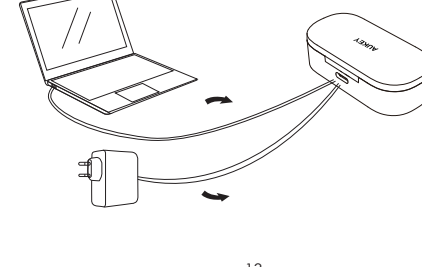

Ein-/Ausstellen

Einlegen: Öffnen Sie den Deckel der Ladebox oder berühren Sie beide Ohrhörer gleichzeitig für 2 Sekunden, um die Ohrhörer einzuschalten. Die Ohrhörer werden dann in den Pairing-Modus versetzt. 2. Berühren Sie die Pairing-Funktion Ihres BT auf dem Gerät, das Sie mit den Ohrhörern koppeln möchten. 3. Suchen und wählen Sie in der Liste der verfügbaren Geräte "E2" aus.

Ausstellen: Schließen Sie beide Ohrhörer wieder in den Ladebox ein und schließen Sie den Deckel. Sie werden ausgeschaltet.

Regelmäßige Verwendung nach dem Pairing

Sobald die Ohrhörer erfolgreich mit Ihrem Gerät gekoppelt wurden, können Sie wie folgt ein- und ausgeschaltet werden: • Öffnen Sie den Deckel der Ladebox, um die Ohrhörer einzuschalten. • Öffnen Sie den Deckel der Ladebox, um die Ohrhörer auszuschalten. • Berühren Sie die Pairing-Funktion Ihres BT auf dem Gerät, das Sie mit den Ohrhörern koppeln möchten. Wählen Sie "E2" aus der Liste der verfügbaren Geräte.

Specifications Earbuds

Modell	E2
Technologie	A2DP, AVRCP, HFP, HSP, AAC
Treiber (jeweils Kanal)	1,6 mm / 7,27" speaker driver
Sensitivity	103dB ±3dB (94dB SPL @1kHz)
Frequency Range	20Hz - 20kHz
Impedance	32Ω ±5%
Microphone	MEMS (microphone chip)
Ladezeit	1.5 hours
Battery Life	Up to 10h (S/M)
Battery Type	Lithium-ion (2 x 40mAh)
Operating Range	10m / 33ft
Weight	36g / 1.3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

 Note: Remove the protective film from the earbuds when using for the first time.

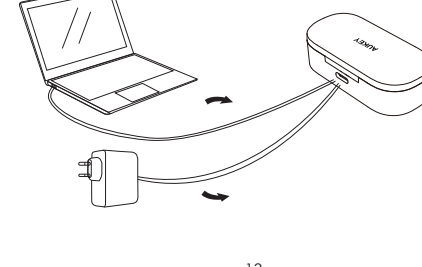

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Using the Left/Right Earbud Only

Starting with the earbuds in the case: 1. Take the left/right earbud out. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. From the lid of available devices, find and select "E2".

Reset the earbuds: Starting with the earbuds in the case: 1. Take both earbuds out of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds, then both earbuds will turn on and enter pairing mode. 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. Put both earbuds back in the charging case and close the lid to reset. 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Notes: • When you turn on the earbuds, they will be automatically reconnected to the previous paired device or enter pairing mode if no paired device is found. • If left ear or right earbud can be used individually once connected to your device when you keep the other earbud inside the charging case.

Controls & LED Indicators

Bleeding Audio

Once paired, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or pause music: Tap the touch-sensitive panel on either earbud.

Stop to previous track: Double tap the touch-sensitive panel on either earbud.

Stop to next track: Double tap the touch-sensitive panel on either earbud.

Calling Calls

Answer or end a call: Double-tap the touch-sensitive panel on the earbuds to answer or end the call about the incoming call.

Reject an incoming call: Long-press the touch-sensitive panel on either earbud for 5 seconds.

Activate Siri or other voice assistants: Triple-tap the touch-sensitive panel on either earbud.

LED Status Indicator

Flashing Red: Earbuds Charging

Red off (after charging): Earbuds fully charged

LED Battery Level Indicator

Status

Four LED indicator lights for 2 seconds: 80%-100% battery remaining

Three LED indicator lights for 3 seconds: 40%-80% battery remaining

Two LED indicator lights for 5 seconds: 20%-40% battery remaining

One LED indicator light for 5 seconds: <20% battery remaining

FAQ

The earbuds are on, but not connecting to my device. For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the pairing section of this manual.

I've connected the earbuds with my smart phone but can't hear any sound. Double-check the volume level on your smart phone and the earbuds. Some smart phones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

What's the wireless range of the earbuds?

The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles like reinforced steel walls between the earbuds and your device.

The earbuds won't turn on by charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support.

I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is probably out of power. Try charging it.

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: This device may be used in each member state of the EU.

CE Statement

Max power level: 0.1W (class 2B20-240 MHz) 2.4GHz RF exposure assessment has been performed to prove that the product will not generate the harmful EM emission above the reference level as specified in IEC Council Recommendation (1999/519/EC).

CAUTION: RISK OF EXPOSURE TO BATTERY IS RELAYED BY AN INADEQUATE TYPE, DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Waranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: This device may be used in each member state of the EU.

Garantie & Kundenservice

Für Fragen, Unterstützung oder Garantiesprachen, kontaktieren Sie uns unter der Adresse unten, die mit Ihrer Region übereinstimmt. Bitte geben Sie Ihr Amazon-Bestellnummer und das Produktmodellnummer an.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: Dieses Gerät darf in jedem EU-Mitgliedsstaat verwendet werden.

CE-Erklärung

Max. Leistungswert: 0,1 W (Klasse 2B20-240 MHz) 2,4 GHz Die HF-Expositionsbeurteilung wurde zum Beweisen durchgeführt, dass dieses Gerät keine schädlichen Auswirkungen hinsichtlich der Fernwirkung des elektromagnetischen Feldes verursacht (1999/519/CE).

ACHTUNG: RISIKO DER EXPOSITION DER BATTERIE BEI UNANGEMESSENEM GEBRAUCH. BATTERIEN SIND NUR ZUR RICHTIGEN VERWENDUNG ZU BESTIMMT. In der Bedienungsanleitung sind die Anweisungen für die Verwendung der Batterie angegeben.

Hersey, Utthoki Technology (Shenzhen) Co., Ltd. erklärt hiermit, dass das Funkgerät (E2) gemäß der EU-Richtlinie 2014/53/EU erfüllt.

Merci d'avoir acheté les écouteurs E2 wireless earbuds. Veuillez lire attentivement ce manuel d'utilisation et le conserver pour référence future. Si vous avez besoin d'aide, veuillez contacter notre équipe d'assistance au service client à votre produit et au numéro de commande Amazon.

Contenu de l'Emballage

Trois Paires d'embouts de Silicone (S/M/L)


Câble USB-A à C

Mode d'emploi

Guide de démarrage rapide

Carte de Garantie

 Schéma du produit

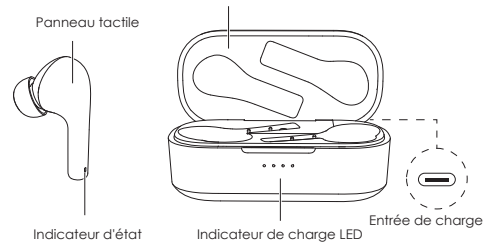

Specifications Earbuds

Modèle	E2
Technologie	A2DP, AVRCP, HFP, HSP, AAC
Conducteur (chaque canal)	1,6 mm / 7,27" haut-parleur
Sensibilité	103 dB ± 3 dB (94 dB SPL @ 1 kHz)
Plage de fréquences	20 Hz - 20 kHz
Impédance	32 Ω ± 5 %
Type de microphone	MEMS (microphone chip)
Temps de charge	1,5 heures
Autonomie de la batterie	Jusqu'à 10 h (S/M)
Type de batterie	Lithium-ion (2 x 40mAh)
Portée de fonctionnement	10 m / 33ft
Poids	36 g / 1,3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

 Note: Remove the protective film from the earbuds when using for the first time.

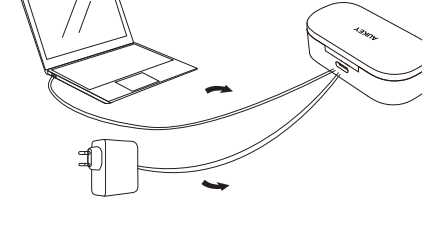

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Specifications Earbuds

Modell	E2
Technologie	A2DP, AVRCP, HFP, HSP, AAC
Treiber (jeweils Kanal)	1,6 mm / 7,27" speaker driver
Sensitivity	103dB ±3dB (94dB SPL @1kHz)
Frequency Range	20Hz - 20kHz
Impedance	32Ω ±5%
Microphone	MEMS (microphone chip)
Ladezeit	1.5 hours
Battery Life	Up to 10h (S/M)
Battery Type	Lithium-ion (2 x 40mAh)
Operating Range	10m / 33ft
Weight	36g / 1.3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

 Note: Remove the protective film from the earbuds when using for the first time.

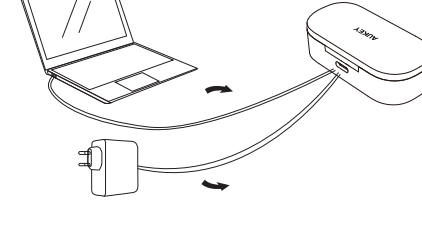

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Using the Left/Right Earbud Only

Starting with the earbuds in the case: 1. Take the left/right earbud out. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. From the lid of available devices, find and select "E2".

Reset the earbuds: Starting with the earbuds in the case: 1. Take both earbuds out of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds, then both earbuds will turn on and enter pairing mode. 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. Put both earbuds back in the charging case and close the lid to reset. 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Notes: • When you turn on the earbuds, they will be automatically reconnected to the previous paired device or enter pairing mode if no paired device is found. • If left ear or right earbud can be used individually once connected to your device when you keep the other earbud inside the charging case.

Controls & LED Indicators

Bleeding Audio

Once paired, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or pause music: Tap the touch-sensitive panel on either earbud.

Stop to previous track: Double tap the touch-sensitive panel on either earbud.

Stop to next track: Double tap the touch-sensitive panel on either earbud.

Calling Calls

Answer or end a call: Double-tap the touch-sensitive panel on the earbuds to answer or end the call about the incoming call.

Reject an incoming call: Long-press the touch-sensitive panel on either earbud for 5 seconds.

Activate Siri or other voice assistants: Triple-tap the touch-sensitive panel on either earbud.

LED Status Indicator

Flashing Red: Earbuds Charging

Red off (after charging): Earbuds fully charged

LED Battery Level Indicator

Status

Four LED indicator lights for 2 seconds: 80%-100% battery remaining

Three LED indicator lights for 3 seconds: 40%-80% battery remaining

Two LED indicator lights for 5 seconds: 20%-40% battery remaining

One LED indicator light for 5 seconds: <20% battery remaining

FAQ

The earbuds are on, but not connecting to my device. For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the pairing section of this manual.

I've connected the earbuds with my smart phone but can't hear any sound. Double-check the volume level on your smart phone and the earbuds. Some smart phones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

What's the wireless range of the earbuds?

The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles like reinforced steel walls between the earbuds and your device.

The earbuds won't turn on by charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support.

I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is probably out of power. Try charging it.

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: This device may be used in each member state of the EU.

CE Statement

Max power level: 0.1W (class 2B20-240 MHz) 2.4GHz RF exposure assessment has been performed to prove that the product will not generate the harmful EM emission above the reference level as specified in IEC Council Recommendation (1999/519/EC).

CAUTION: RISK OF EXPOSURE TO BATTERY IS RELAYED BY AN INADEQUATE TYPE, DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Waranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: This device may be used in each member state of the EU.

Garantie & Kundenservice

Für Fragen, Unterstützung oder Garantiesprachen, kontaktieren Sie uns unter der Adresse unten, die mit Ihrer Region übereinstimmt. Bitte geben Sie Ihr Amazon-Bestellnummer und das Produktmodellnummer an.

Amazon US orders: support.us@WENKEY.com Amazon EU orders: support.eu@WENKEY.com Amazon CA orders: support.ca@WENKEY.com Amazon JP orders: support.jp@WENKEY.com

Notice: Dieses Gerät darf in jedem EU-Mitgliedsstaat verwendet werden.

CE-Erklärung

Max. Leistungswert: 0,1 W (Klasse 2B20-240 MHz) 2,4 GHz Die HF-Expositionsbeurteilung wurde zum Beweisen durchgeführt, dass dieses Gerät keine schädlichen Auswirkungen hinsichtlich der Fernwirkung des elektromagnetischen Feldes verursacht (1999/519/CE).

ACHTUNG: RISIKO DER EXPOSITION DER BATTERIE BEI UNANGEMESSENEM GEBRAUCH. BATTERIEN SIND NUR ZUR RICHTIGEN VERWENDUNG ZU BESTIMMT. In der Bedienungsanleitung sind die Anweisungen für die Verwendung der Batterie angegeben.

Hersey, Utthoki Technology (Shenzhen) Co., Ltd. erklärt hiermit, dass das Funkgerät (E2) gemäß der EU-Richtlinie 2014/53/EU erfüllt.

Gracias por comprar E2 Auriculares inalámbricos. Por favor, lea atentamente el manual usuario y consérvelo para futuras consultas. Si necesita cualquier ayuda, póngase en contacto con nuestro equipo de servicio al cliente al número de modelo del producto y al número de pedido de Amazon.

Contenidos del Paquete

Tres Pares de auriculares de Silicona (S/M/L)


Cable USB-A a C

Manual Usuario

Guía de inicio rápido

Carta de Garantía

 Diagrama del producto

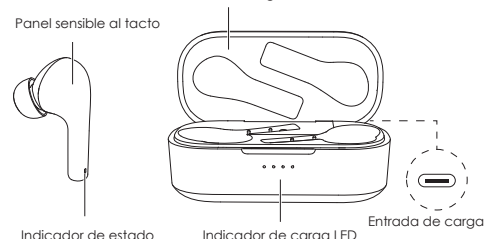

Specifications Auriculares

Modelo	E2
Tecnología	A2DP, AVRCP, HFP, HSP, AAC
Conductor (cada canal)	1,6 mm / 7,27" altavoz
Sensibilidad	103 dB ± 3 dB (94 dB SPL @ 1 kHz)
Rango de frecuencia	20 Hz - 20 kHz
Impedancia	32 Ω ± 5 %
Tipo de micrófono	MEMS (microphone chip)
Tiempo de carga	1,5 horas
Duración de la batería	Hasta 10 h (S/M)
Tipo de batería	Litio-ion (2 x 40mAh)
Distancia de funcionamiento	10 m / 33ft
Peso	36 g / 1,3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

 Note: Remove the protective film from the earbuds when using for the first time.

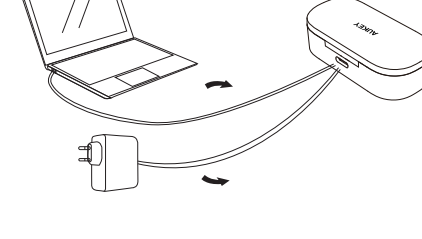

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Specifications Auriculares

Modelo	E2
Tecnología	A2DP, AVRCP, HFP, HSP, AAC
Conductor (cada canal)	1,6 mm / 7,27" speaker driver
Sensitivity	103dB ±3dB (94dB SPL @1kHz)
Frequency Range	20Hz - 20kHz
Impedance	32Ω ±5%
Microphone	MEMS (microphone chip)
Ladezeit	1.5 hours
Battery Life	Up to 10h (S/M)
Battery Type	Lithium-ion (2 x 40mAh)
Operating Range	10m / 33ft
Weight	36g / 1.3oz

Charging Case


Charging Input	DC 5V
Charging Time	1.5 hours
Battery Type	Lithium-ion (500mAh)
Number of Battery Recharges	5 times (S/M)
Weight	36g / 1.3oz

Getting Started

Charging

1. Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED charging indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours, then case can offer fully charge to the earbuds 5 times. The earbuds should be stored in the case when not in use.

 Note: Remove the protective film from the earbuds when using for the first time.

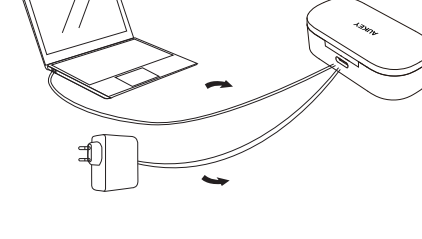

Turning On / Off

Turn On: Open the lid of the charging case or touch and hold the left/right earbud for 2 seconds when they are turned off.

Turn Off: 1. From the lid of available devices, find and select "E2". 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. From the lid of available devices, find and select "E2". 4. Open the lid again, and both earbuds will turn on and enter pairing mode.

Using the Left/Right Earbud Only

Starting with the earbuds in the case: 1. Take the left/right earbud out. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. From the lid of available devices, find and select "E2".

Reset the earbuds: Starting with the earbuds in the case: 1. Take both earbuds out of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds, then both earbuds will turn on and enter pairing mode. 2. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn off. 3. Put both earbuds back in the charging case and close the lid to reset. 4. Open the lid again, and both earbuds will turn on

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.