 
 


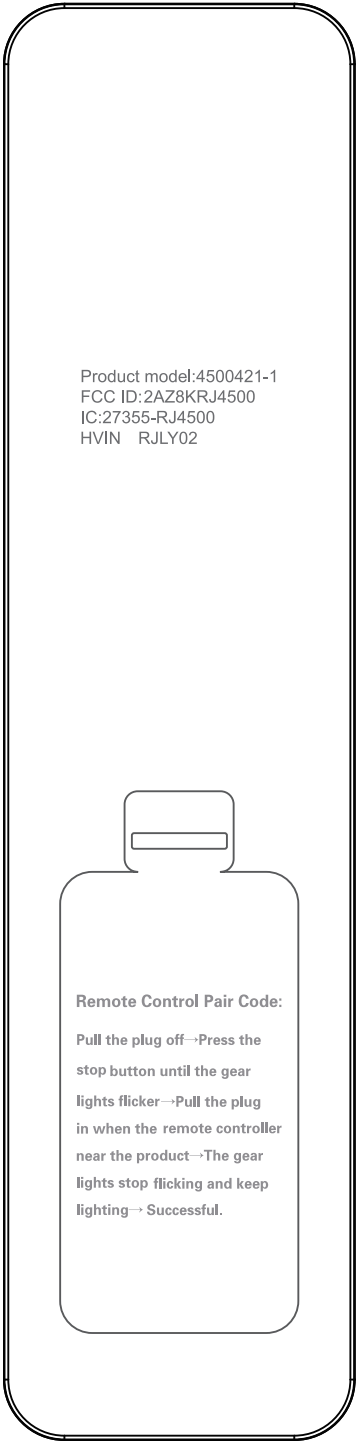

Remote Control Pair Code:

Pull the plug off→Press the stop button until the gear lights flicker→Pull the plug in when the remote controller near the product →The gear lights stop flicking and keep lighting→ Successful.

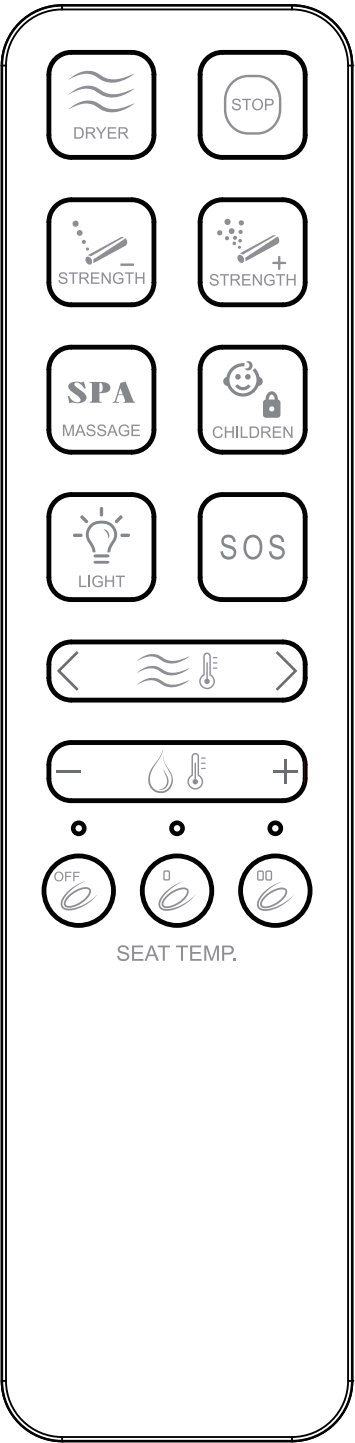