


Model: TC513-315

remote control model: 4500671-7

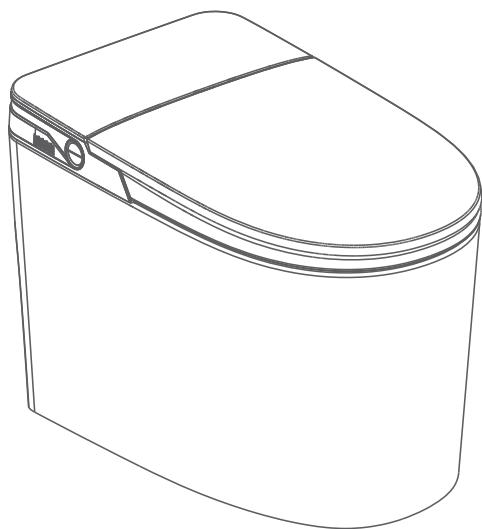

Smart Toilet Installation Manual

Thank you for choosing our product.
Please read the instructions carefully before installation and keep it available for future maintenance or reference.

RADIO FREQUENCY SPECIFICATION OF REMOTE CONTROL

Compliance Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Compliance:

This device has been tested to meet Industry Canada technical specifications. This device contains licence exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warning:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For toilet

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. installers must ensure that 20cm separation distance will be maintained between the device and users. Cet appareil est conforme aux limites d'exposition au rayonnement RF stipulées par la FCC et l'IC pour une utilisation dans un environnement non contrôlé. Les antennes utilisées pour cet émetteur doivent être installées et doivent fonctionner à au moins 20 cm de distance des utilisateurs et ne doivent pas être placées près d'autres antennes ou émetteurs ou fonctionner avec ceux-ci. Les installateurs doivent s'assurer qu'une distance de 20 cm sépare l'appareil des utilisateurs.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following **READ ALL INSTRUCTIONS BEFORE USING.**

DANGER-To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water, Unplug immediately.

WARNING-To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by on, or near children or on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachment not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Connect this product to a properly grounded outlet only. See Grounding Instructions.
10. Fill reservoir with water only unless otherwise specified by manufacturer.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product should be grounded in the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord that has a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed, grounded and GFCI protected.




DANGER - Improper use of the grounded plug can result in a risk of electric shock

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is for use on a nominal 120 V circuit, that has a grounding plug that looks like the plug illustrated in diagram A and is protected by a GFCI circuit breaker or with a GFCI receptacle as the one illustrated in diagram B.

Grounding methods

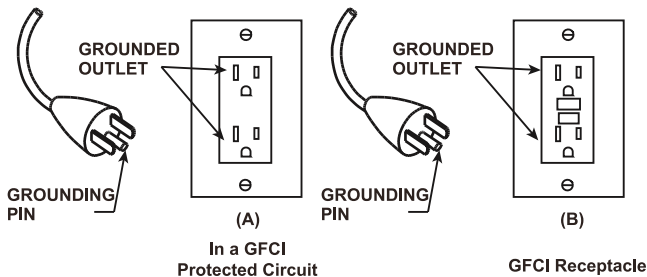

Function

Function		Model	TC513-315
Heating mode	FC Instant heating		●
Wash	Thermostatic cleaning		●
	Rear cleaning		●
	Lady cleaning		●
	Self-clean nozzle		●
	Water temp adjustable		●
	Flow rate adjustable		●
	Cold & hot cleaning		●
	Oscillating Wash		●
Seat	Seat temp adjustable		●
	Anti-bacterial		●
	Sensor		●
S&C open	Remote S&C open		●
	Auto lid open		●
	Foot sensor lid/Seat		●
Light	Night light		●
	Side light		●
Warm air	Wind temp adjustable		●
Deodorization	catalyst deodorization		●
Flushing	Off seat auto flush		●
	Power off flush		●
	Foot sensor flush		●
Controller	Side knob		●
	Remote control		●
LED display			●

- Standard configuration
- Optional configuration

Catalogue

● Attention	01	Before use
● Packing List	04	
● Product Description	05	
● Attention Before Installation	07	Installation and Use
● Install Toilet	08	
● Install Remote Control	09	
● Testing after Installation	10	
● Function Description	11	
● Function Description-Remote Control	14	
● Cleaning and Maintenance	16	Others
● Troubleshootings	17	
● Product Technical Parameters	19	
● Product Environmental Information	20	
● Warranty Card	21	
● Maintenance Record	22	

ATTENTION

1. Please read this manual carefully, so that you can use the product correctly. Please do read through all the precautions listed here, which are important content related to safety.
2. After reading, please keep the manual and warranty card together for future reference.
3. Please fill in the purchasing date and place carefully when purchasing.
4. We are not responsible for accidents or injuries caused by failure to install the product in accordance with the method shown in the manual or failure to use the specified components during the installation.

Identifications



Warning

- Warning Misoperation by ignoring the sign may lead to serious injury or death.



Prohibiting

- Prohibited operation.



- Do not disassemble or modify this product without authorization.



- Do not soak or spray.



- Class I appliances must be grounded.



Attention

- Misoperation by ignoring the sign may lead to personal injury or property damage.



Compulsory

- Operations must be observed.



- Do not touch with wet hands.



- High temperature and flammable materials are prohibited..

Precautions for use

Prevention of low temperature scald

Anyone (including children) that has physical, perception, or intellectual deficiencies or lacks of experience and common sense (including children) are not allowed to use the product without supervision, in consideration of their limited cognitive abilities and/or lack of necessary knowledge, unless they use the product under the supervision or instruction of the person responsible for the use safety of product. Make ensure children are not allowed to use the equipment alone without authorization and that the product is beyond their reach.


Low-temperature burning may happen, if the heated seat ring is in contact with the skin for a long time. Please set the seat ring temperature at [Low gear] or [Off] before using the product, if you are: Children and the elderly who cannot adjust the temperature to an appropriate level by themselves; People who cannot move freely, such as the sick and the disabled; People who are drowsy and overly tired due to hypnotics (such as sleeping pills, cold medicines, etc.).



Warning


Do not flush other things

- It may lead to clogging of the toilet and overflow of sewage.

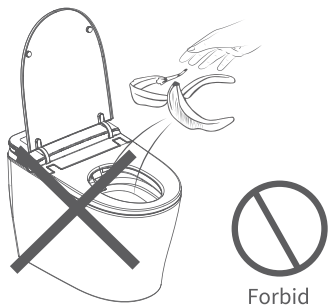

Do not use at 32°F or below.


- Below 32°F, please refer to the instructions on long-term non-use.

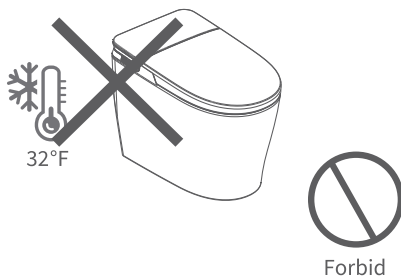


Please use kitchen cleaning agent (neutral) during maintenance.

Do not use the following items:


Cleaning agents for toilets, residential cleaning agents, volatile agents, banana oil, etc.

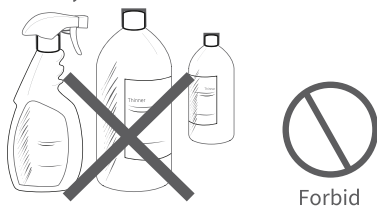

In case of thunder, disconnect the plug from the socket.

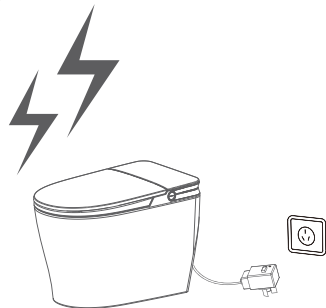


When the toilet is blocked, the power must be turned off, in case the sewage does not pass the flushing baffle.

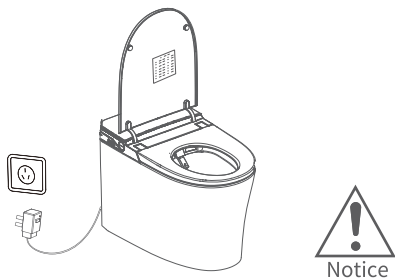

Do not forcibly close the stool cover and seat ring.

- The product may be damaged.

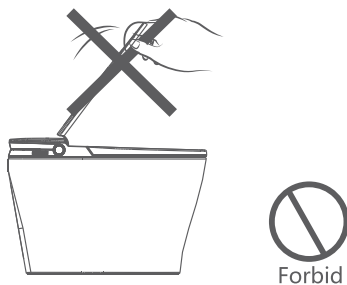




Warning

Please do not use cloth cover or cushion in the circle.

- May cause the seat induction is not good.

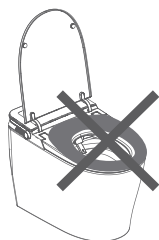


Forbid

Do not damage the power cord.

1. No damage, no processing, no heating;
2. Do not bend, do not curl, do not pull;
3. Do not place heavy objects on the power cord.


Failure to use the product despite damage may result in fire, electric short circuit and other conditions.

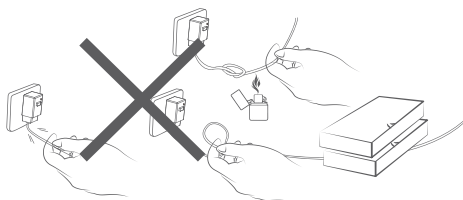

Forbid

This product belongs to electrical products, so do not put it in the place of water or high humidity. Please install it when using it in the bathroom, a ventilator or a ventilator outlet maintains good ventilation in the bathroom.

- Otherwise it could lead to fire or electric shock.

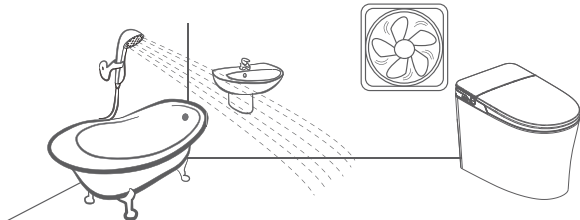


Coerce

In case of leakage, close the inlet Angle valve.

Prevent damage caused by freezing.


- Freezing will cause water inlet hose and product internal damage, and then cause water leakage.

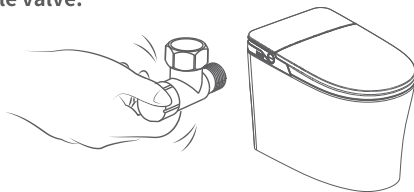

Notice

The product diagram above is for reference only. The real object shall prevail.


Packing List

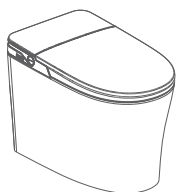

Toilet



 
Wax Ring



Instructions



 
Warranty card
(Attached to the manual)



Install template



 Remote control




T- Valve

* Please replace the valve before installation





Battery box

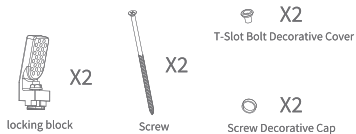


locking block components

Product Description - External Dimensions

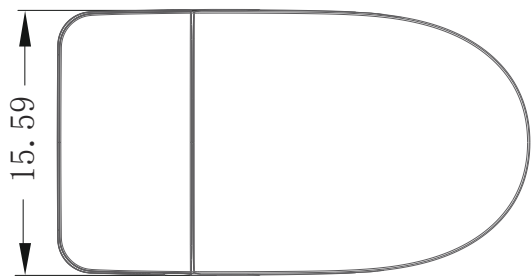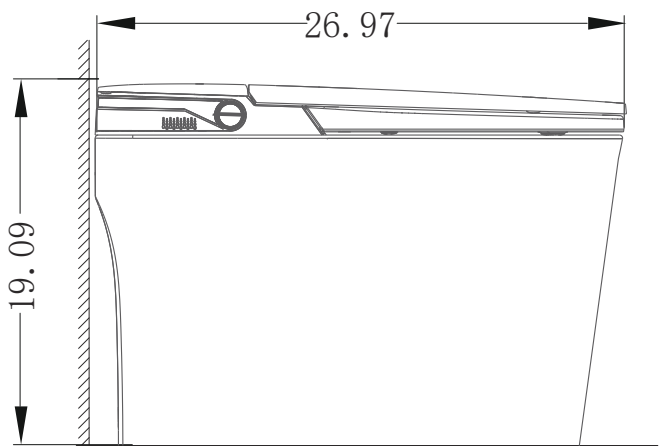

Unit: inch

Product Description - Part Name

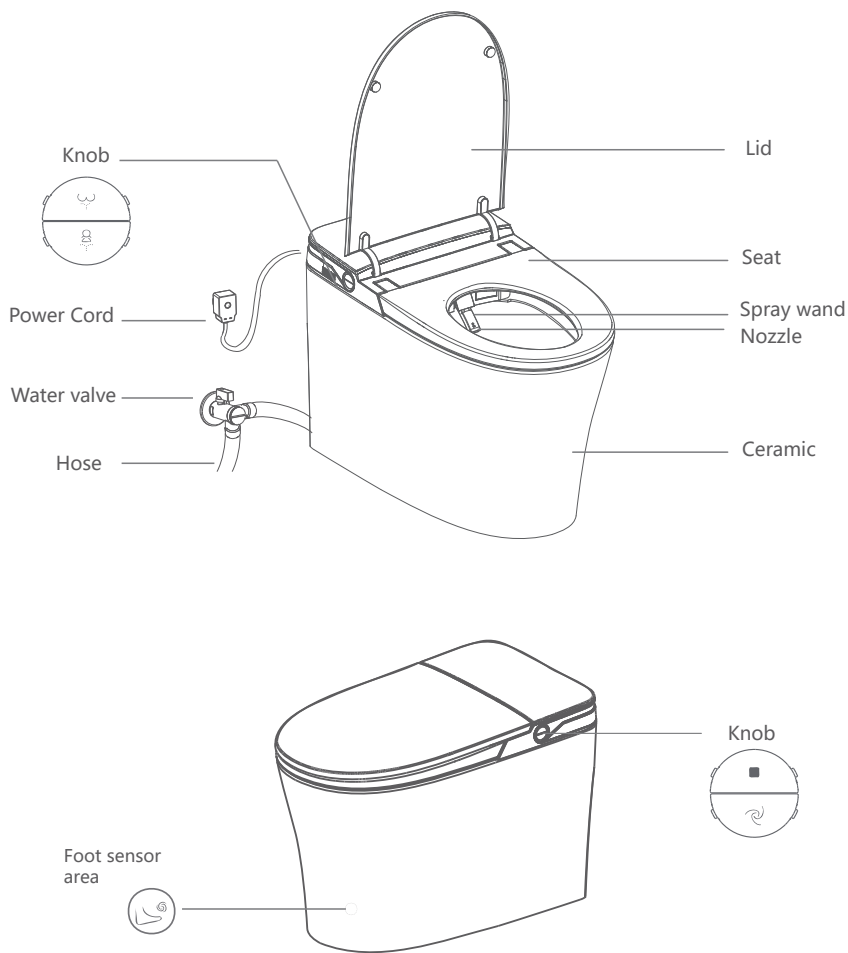

Attention Before Installation

Confirm Power


The power cord must be plugged into a socket with safety grounding above 120V, 60Hz and 13A (including).



120V ☒

60Hz ☒

13A Above ☒

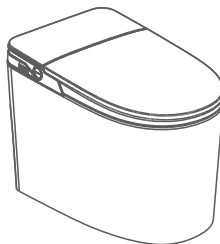


Notice

- (1) Do not spray water on the toilet.
- (2) If installed in cold environment, please keep it in a warm room for 2 hours before installation.
- (3) In case of accident or failure to use specified parts during installation due to failure to install according to the method shown in the installation instructions In the event of injury, the company is not responsible.


Install Toilet

Installation Steps


1. Confirm the drain holes center and place the installation template as shown in below picture. Trace the toilet profile at backside along the hollowed position on template

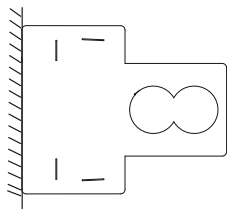


2. Install the angle valve on the corresponding position of the wall.

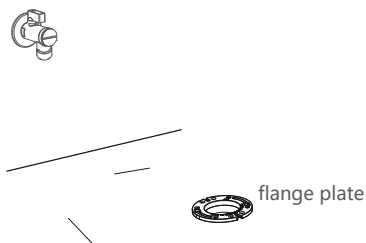

 
3. Place the wax ring on the flange, aligning its center. Place two locking blocks along the groove on the flange and secure them with bolts.




4. Place the ceramic align its profile at the back.

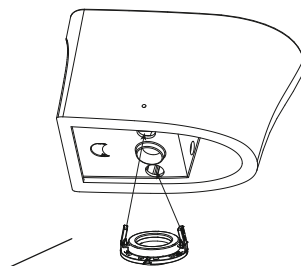

5. Fix the ceramic with the long screw by passing through the sleeve and ceramic side hole.

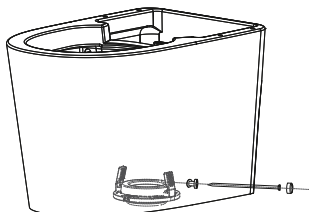


6. Connect the inlet hose.

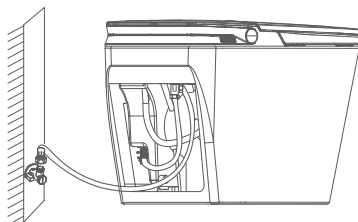

Install Remote Control

1.Remote control installation remote control model: 4500671-7

Installation Position: The diagram shows the recommended installation position for the remote control. You can choose the installation position according to the actual usage conditions at home.

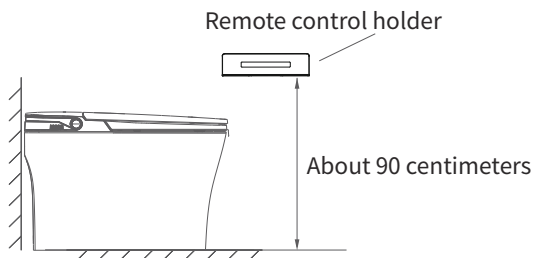

Installation steps:

- ① Drill two holes with a diameter of 6mm on the wall with a depth of more than 45mm, the distance between two holes is the same as the distance between the installation holes of the remote control.
- ② Insert the two expansion pipes in the accessory package into the two holes on the wall respectively.
- ③ Tear open the other side of double-sided adhesive tape, paste the remote control bracket on the wall, pay attention to align the opening hole of the remote control with the hole on the wall.
- ④ Fix the remote control bracket with two screws in the accessories package.
- ⑤ Open remote control battery cover, put the batteries in and put back battery cover.
- ⑥ Place the remote control on the bracket.

2. Match remote control

After the battery is loaded into the remote control, it can be used normally.

If the product has no action, the remote control can be repaired in the following ways:

- ① Disconnect the power supply
- ② Press the stop button of the remote control until the gear light flashes
- ③ Put the remote control close to the product, and then turn on the power
- ④ The gear light stops flashing when the match is successful

Testing After Installation


1. Turn on the angle valve

- Open the valve a little bit, observe whether there is leakage in each installation part.
- After confirming, open the valve completely



2. Product self-inspection

- After connect to the power supply, the product will give a "beep" sound prompt, knob lamp and key lamp on indicating the completion of self-test.

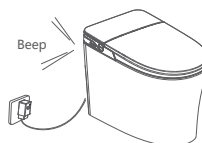

3. Product test


Washing test

- After being connected to the power supply, turn on the knob directly and the product will continue to self-clean to prevent spillage
- You must sit on the seat to use washing function

Flushing test

- Press the middle button of the knob or the remote control flush button to flush the toilet.

Notes: If there is no flushing, there may be residual air in the water pump, and this key needs to be repeatedly pressed to exhaust the water pump. (Repeating keys requires an interval of more than 40 seconds)

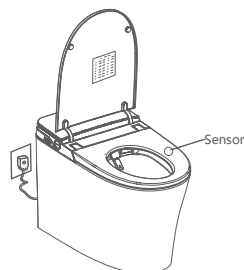


Function Description

Power-On Self-Test

- 1.After connecting the power supply, all indicator lights will turn on, accompanied by a "beep" prompt. All functions will be restored to the factory default settings.
- 2.Default heating settings:
Water temperature heating: Medium level, approx. 35°C;Seat temperature heating: Medium level, approx. 35°C.

Washing Function Description

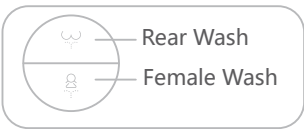

Rear Wash (Seated State)

1.Short press  to start rear washing. Short press again to toggle between oscillating washing modes.The washing mode will automatically stop after 3 minutes, followed by toilet flushing and 4-minute drying. The washing process can also be terminated midway via the stop button on the remote control or by leaving the seat.


2.Female Wash (Seated State)

Short press  to start feminine washing. Short press again to toggle between oscillating washing modes. The washing mode will automatically stop after 3 minutes, followed by toilet flushing and 4-minute drying. The washing process can also be terminated midway via the stop button on the remote control or by leaving the seat.

3.Nozzle Self-Cleaning

The nozzle will automatically perform a self-cleaning cycle every time the washing function is used.

Function Button Description

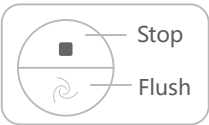

Stop Function

Short press  to immediately terminate any ongoing function.

Flush Function

Short press  to activate the toilet flush.

Other Function Description

Other Functions

1、Water temperature protection function


(1) If the water temperature exceeds 109.4°F during use, it will automatically switch to continuous self-cleaning mode and give out an alarm;

(2) At this time, reconnect power supply before it can be used normally.

2. Low temperature scald prevention function of seat.

After sitting down, the system will enter the low-temperature scald prevention mode automatically.

3. LED display function

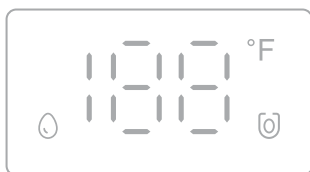


It is the current setting seat temp. When the seat heating is off, it will appear two cross bars.

It is the current setting water temp. When water heating is off, it will appear two cross bars.

4. Auto lid open function

(1) When people walk normally near to the toilet and into the sensor area, the lid will open automatically when the machine detects human activity.

(2) The lid will close automatically after people leave the sensor area by about 2 minutes.

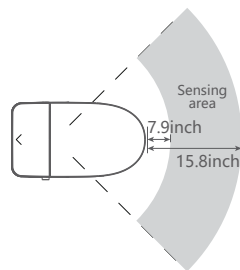

5. Microwave level adjustment (default state microwave in 1st gear)

Long press the "∧" button of the remote control, enter microwave adjustment mode. The display will show the current microwave level. Then you can press "∧" or "∨" to adjust the microwave level. The system will exit the adjustment mode and store the current setting without any action within 10S.


Notes: Sensor area as below: 1st level: 7.9-15.8in, 2nd level: 7.9-31.5in, 3rd level: 7.9-47.2in

6. Foot sensor lid/seat open and flushing function

(1) When both the lid and seat are closed, the lid will open automatically once the user touches the foot sensor area.

(2) When the lid is open and seat is closed, the seat will open automatically once the user touches the foot sensor area.


(3) When the lid and seat are open, both of them will close and start flushing once the user touches the foot sensor area.

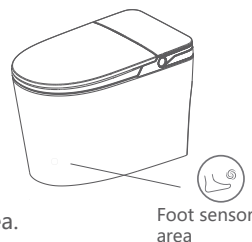

Other Function Description

7. Power off flush function

When power off, put the battery into the battery box on the toilet, and then short press the knob to flush.

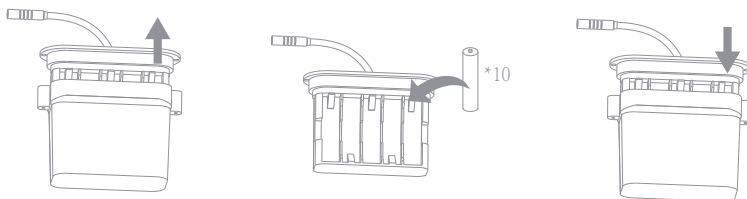


- 1.Open the battery compartment .
- 2.Remove the battery tray.
- 3.Load 10 pcs size AA batteries into the battery tray.
- 4.Put the battery tray back into the compartment.

Kindly Reminder

- 1.This product is designed for water flushing during a power outage. It is recommended to connect to the main unit when the power is off.
- 2.Strictly follow the "+" and "-" symbols in the battery compartment when inserting batteries. This battery compartment is a series battery pack and must not have reverse-connected cells, as this may cause battery damage, and in severe cases, safety hazards such as explosion or combustion.
- 3.Only size AA batteries should be used, and old and new batteries must not be mixed. Different models and brands of batteries must not be mixed. When replacing batteries, all of them should be replaced at the same time.
- 4.Do not disassemble the battery compartment casually. After replacing the batteries, make sure the battery compartment is securely locked and sealed to prevent bathroom moisture from entering the compartment, which could cause battery corrosion and damage.
- 5.When replacing batteries, disconnect the battery compartment from the main unit.
- 6.This product is not rechargeable to avoid danger.


Function Description-Remote Control

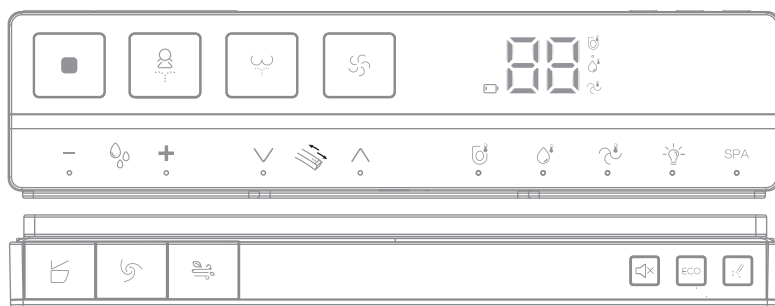

1.Short press to start the toilet flush.Long press to turn on/off the rear

2.Short press button to enter energy-saving mode. The seat temperature will be adjusted to the lowest setting (if the seat temperature was turned off before entering energy-saving mode, it will remain off). In this mode, only the flush function is available. The product will temporarily exit energy-saving mode when the user sits on the seat, and automatically revert to energy-saving mode when the user stands up.

 3.Short press to cycle through the ambient light settings:



4.After sitting down, short-press to activate rear wash or press again to activate oscillating rear wash or oscillating front wash.

During washing:

Short-press the cycle through water temperature settings:



The nozzle position can be adjusted (5 levels) using the or buttons.

The water pressure can be adjusted (4 levels) using the and buttons.

Short-press the to switch wash modes.

The wash can be stopped at any time by short-pressing the button or simply standing up.

5.After sitting down, short press to activate the warm air dryer. Then use to cycle through the dryer temperature settings:



6.Short-press to cycle through the seat temperature settings:



Function Description-Remote Control

7. When the lid is closed, Short-press  control to open the lid.

When the lid is open and the seat ring is closed, Short press  to open the seat ring.

(This action will not be performed if a person is sitting on the seat.)

When both the lid and seat ring are open, Short press  to close the lid/seat ring.

8. Short-press  to turn on/off the silent mode.

9. Short-press  to activate the deodorizer. Press again to cycle through its 4 adjustable levels. Long press  to turn on/off the automatic deodorizer function.

10. Short press  to initiate nozzle self-cleaning. The nozzle will first perform an internal clean, then extend fully to its maximum position for external cleaning. If you perform any operation during this process, the nozzle will retract immediately. If no action is taken, the nozzle will automatically retract after 15 minutes.

11. Hidden Functions:

Long press the  button to turn on/off the foot kick lid opening function.

Long press  to turn on/off the automatic lid opening function.

Cleaning and Maintenance

1.Maintenance of product surface and ceramics.

The detachable accessories can be removed before maintenance

Note before maintenance:

- (1) Make sure the power supply is disconnected.
- (2) Do not let water enter the product during the maintenance process.
- (3) Be sure to wipe off the detergent after cleaning to avoid its residue at the gap between the main body and the toilet.


● Product surface cleaning

Wet the soft cloth with water, wring it, and then wipe the product. If the product is dirty, you can use a soft cloth dipped a little of diluted neutral detergent to wipe it, and then use a clean damp cloth to wipe it clean.



2.Maintenance of the nozzle

- ① Press the " " key on the remote control to start the nozzle cleaning. The nozzle start self-clean first and then extend. (Keep 15 minutes, the nozzle will retract automatically.).
- ② Dip a soft cloth, sponge, or small brush in neutral detergent, then hold the spray wand, wipe it and the nozzle.
- ③ Press any key to exit the mode after cleaning.

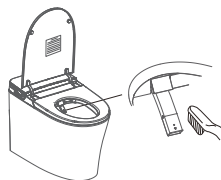

3.Maintenance of valve

1. Turn off the angle valve and rotate the filter screen down with a straight screwdriver.
2. Use a small brush to scrub the filter screen, and flush away the internal silt with clean water.
3. Reinstall the filter on to the angle valve and tighten it.



Troubleshootings

Failures	Confirmation	Solution
The product does not work.	Confirm whether cloth covers, cushions, etc. are used on the seat sensing area.	▶ Please remove cloth covers, cushions and other items.
	Confirm whether there is a power outage.	▶ Please wait for the power supply recovery.
	Confirm whether the socket is loose or in poor contact	▶ Please plug in to ensure good power supply.
No water when turning on the knob.	Confirm whether the water supply is cut off.	▶ Please wait for the water supply recovery.
	Confirm whether the water inlet valve is blocked by dirt.	▶ Open the water inlet angle valve.
	Confirm whether the water supply hose is bent and blocked.	▶ Straighten the bent part of the water supply hose.
The spray rod does not extend after turning on the knob. Water drips slowly from the water outlet without an alarm sound when it is not used.	No one is sitting on the seat .	▶ Sit on the sensing area of the seat (with a beep prompt), and then turn on the knob again to flush normally.
	Someone is sitting on the seat but not in the sensing area.	▶
	Solenoid valve fails.	▶ Contact after-sales personnel for repairing.
The nozzle extends too slowly. No enough water. While someone sitting on and washing, there is continuously alarm and dripping. The remote buttons are invalid at the same time. Low water temperature.	Self-clean before cleaning	▶ The nozzle stretches out and starts cleaning in 7s.
	The quantity of impurities in the water is so significant that it has blocked filter.	▶ Clean the filtermesh; a filter is recommended.
	Trigger safety protection or hardware failure.	▶ Stop using and reconnect to the power supply. If fault still remains, please contact after-sales personnel for replacement.
	The water temperature is set to a lower level.	▶ Set water temperature to a higher level.

Troubleshootings

Failures	Confirmation	Solution
The seat is not heated	Confirm whether the seat temperature is set in low level or closed state.	▶ Reset the seat temperature through the seat temperature setting button.
	Confirm whether there is a power outage.	▶ Please wait for the power supply recovery
No response when pressing the warm air button. No wind temperature after the warm air is turned on.	The Warm air function needs to be activated after sitting down.	▶ Start the warm air after sitting down.
	Thermostat is disconnected.	▶ Reconnect power supply after disconnection.
	Fuse is melted.	▶ Contact after-sales personnel for repairing.
Toilet light and knob light don't work.	The fault still exists after reconnect power supply.	▶ Contact after-sales personnel for repairing.
The toilet does not flush.	Angle valve is closed.	▶ Open the angle valve.
	The filter is blocked.	▶ Refer to the previous description for cleaning and maintenance.
	There is residual air inside the water pump.	▶ Drain the air from water pump by repeatedly press the middle button of the knob or the water flush key on remote control
	The filter is blocked.	▶ Refer to the previous description for cleaning and maintenance.
The toilet doesn't flush properly.		

Product Technical Parameters

Items		TC513-315
Rated Voltage		120V ~ , 60Hz
Rated Power*		1050W
Max. Instantaneous Power		1350W
Power Cord Length		about 35.4in
Water Supply Pressure		0.1 - 0.75MPa (static pressure)
Water Supply Temperature		41~95°F
Waterproof Level		IPX4
Toilet Flush		≤4.8L
Cleaning Device	Water volume adjustment	4 gears in total
	Water temperature adjustment	4 gears:about 91/95/100°F/off
	Heating method	Instant heating
	Anti-backflow device	Anti-siphon valve
	Safety equipment	Double thermostat + pressure relief valve
Seat Ring Heating	Max Heater power	50W
	Safety equipment	Thermostat + fuse
	Surface temperature	4 gears:about 91/95/100°F/off
Warm Air	Max Heater power	300W
	Safety equipment	Thermostat + fuse
	Warm air temperature	4 gears:about 91/99/109°F/off(Test at an ambient temperature of 73±3.6°F)
Deodorization		Available
Others	Antibacterial material	Seat ring
	Low temperature scald protection	Available
	Prompt for abnormalities	Alarm sound
	Seat sensing	Available
	Lighting control	Available

Rated power: This product is powered on and turned on at an ambient temperature of 73±3.6°F, an inlet water static pressure of 0.18±0.02MPa, and an inlet water temperature of 59±1.8°F.

Adjust the water temperature and seat temperature to higher levels and turn on hip cleaning function and test according to the maximum flow rate (the reference flow rate is about 600ml/min).

Measure the average power of the product working for a cleaning cycle (3 min) continuously and stably.

Product Environmental Information

Part name	Harmful substances					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
PCBA	X	O	O	O	O	O
Plastic parts	O	O	O	O	X	X
The motor	X	O	O	X	O	O
Others	X	O	O	O	O	O

This form is prepared according to the provisions of SJ/T11364

O : Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in CB/T26572

X : Indicates that the content of the hazardous substance in all homogeneous materials of the component exceeds the limit specified by CB/T26572



The number in this label indicates that the environmental protection period of the product in normal use is 10 years

Warranty Card

To Dear Customers:

Thank you for choosing our product! If any problem occurs during use, please simply remove and check the problems pursuant to the user's manual. When you cannot remove such problems, contact your local supplier or call the service hotline.

I. Information:

Customer information	Customer name		
	Address		
	TEL		
Dealer information			
	TEL		
Model		Product series number	
Purchase date	Y M D	Warranty period	One-year free warranty since the purchase date

II. Notes to warranty card:

1. Please complete the warranty card.
2. Warranty cards and invoices are important for the warranty service. If the product failure occurs during warranty period, please show the warranty card and the invoice when the dealer or after-sales service personnel of the Company provide on-site maintenance and repair.
3. The warranty card cannot be reissued, please keep it properly.

III. Rules on free maintenance

During the warranty period, the Company will provide repair free of charge according to the use instructions, precautions for normal use.

IV. Paid maintenance is required in the following circumstances that do not fall within the scope of free maintenance:

1. Out of warranty.
2. The valid invoice and warranty card cannot be provided during the warranty period.
3. Failure or damage caused by transportation, collision after purchase.
4. Product damage during abnormal use, failure and damage during the warranty period caused by human factors or natural disasters, such as fire, earthquake, flood, lightning or environmental pollution, etc.
5. Failure or damage caused by unauthorized disassembly, modification or maintenance due to user's cause or responsibility.
6. Failure or damage caused by violation of maintenance regulations in use, such as improper use of cleaning agent or wiping and maintenance methods not compliant with maintenance requirements.
7. The consumable items (such as sealing rings, etc.) or products have failed or damaged due to sand and impurities.
8. Conduct the secondary transfer according to the customer's requirements.



Maintenance Record

Maintenance Record			
Date	Maintenance Projects	Maintenance Department	Signature

