 
 
 
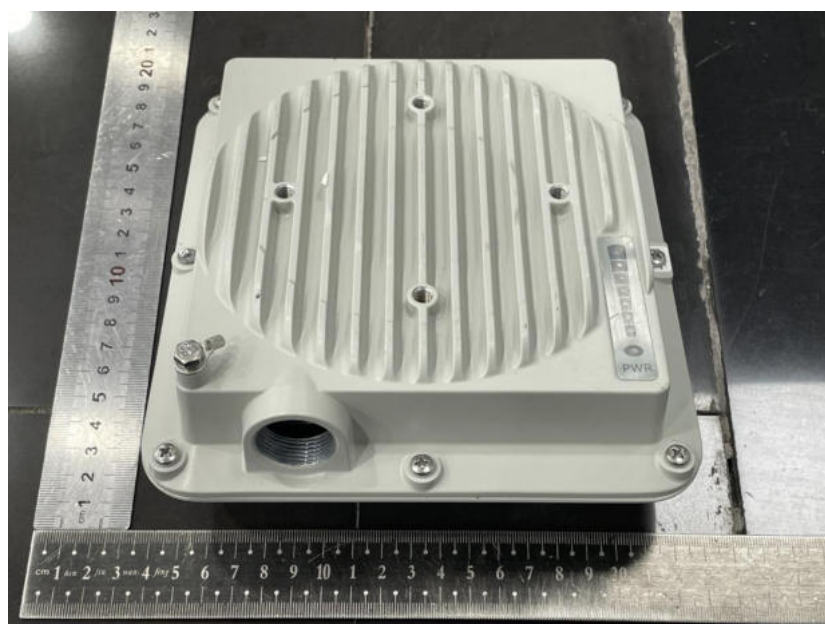 
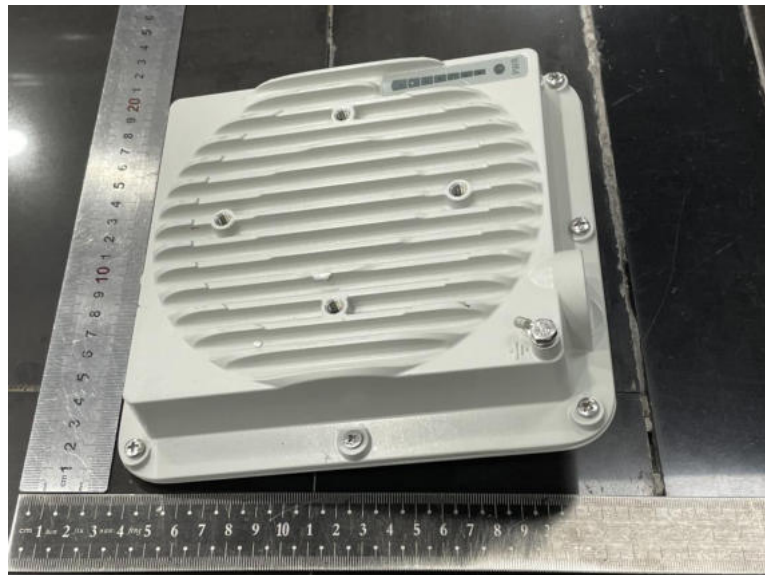 


External view of E5-STE, E6-STE

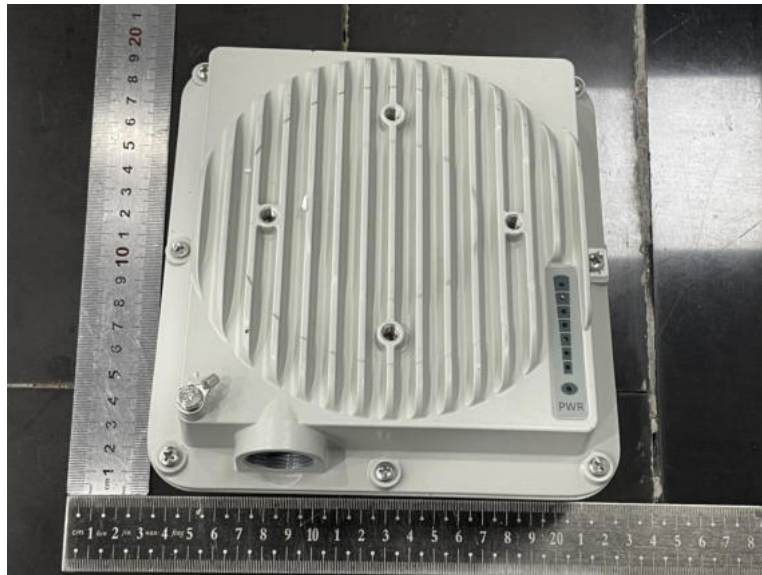

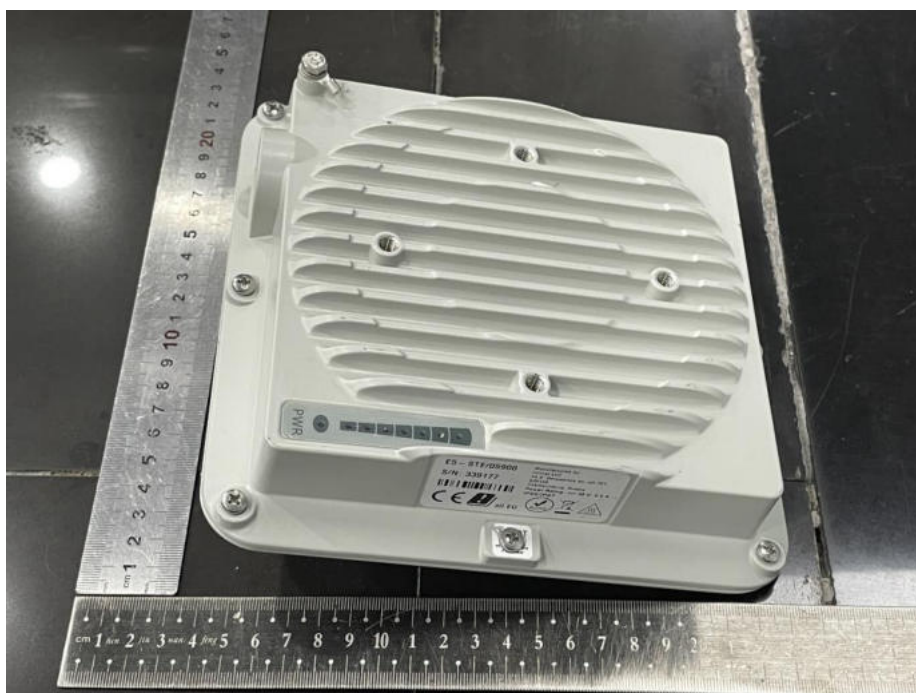


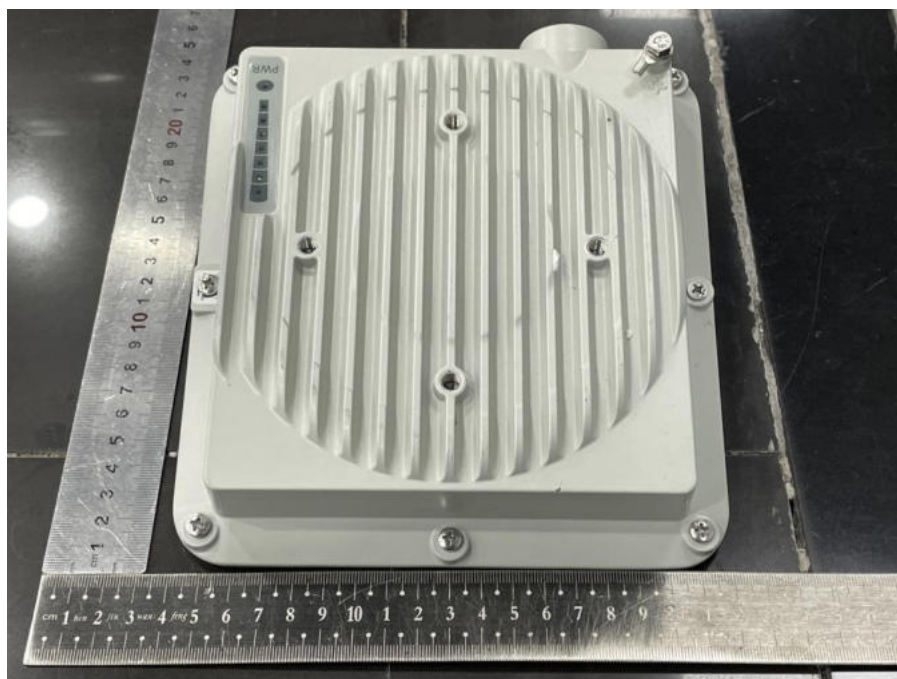



View of sample external antenna






External view of injector (power supply)

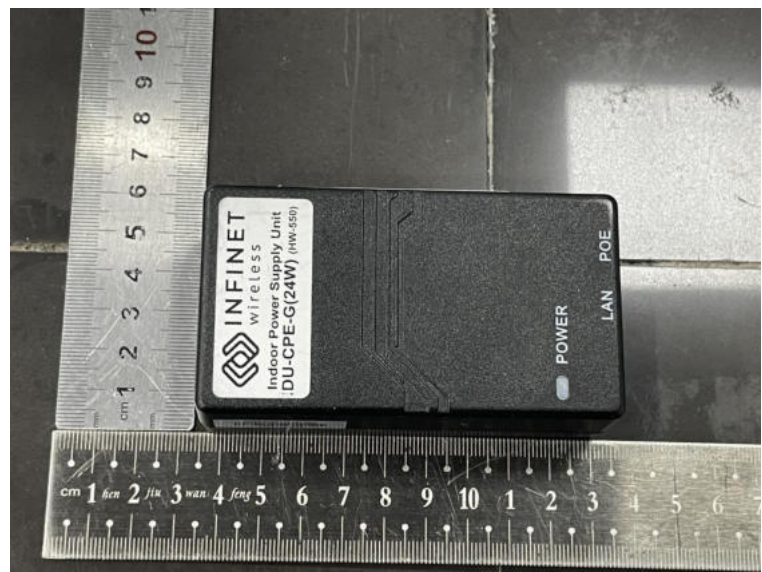

External view of E5-ST18, E6-ST18

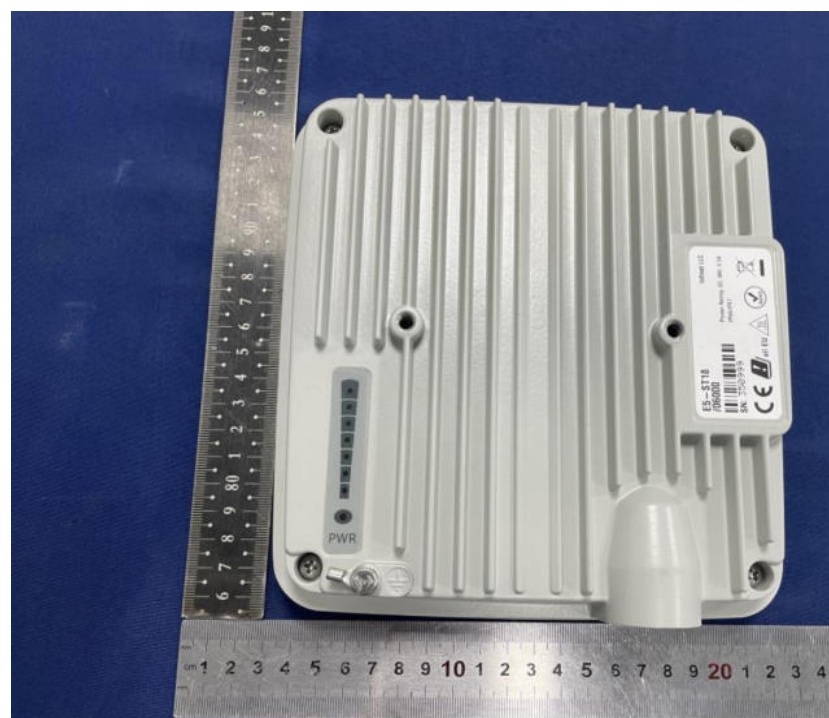
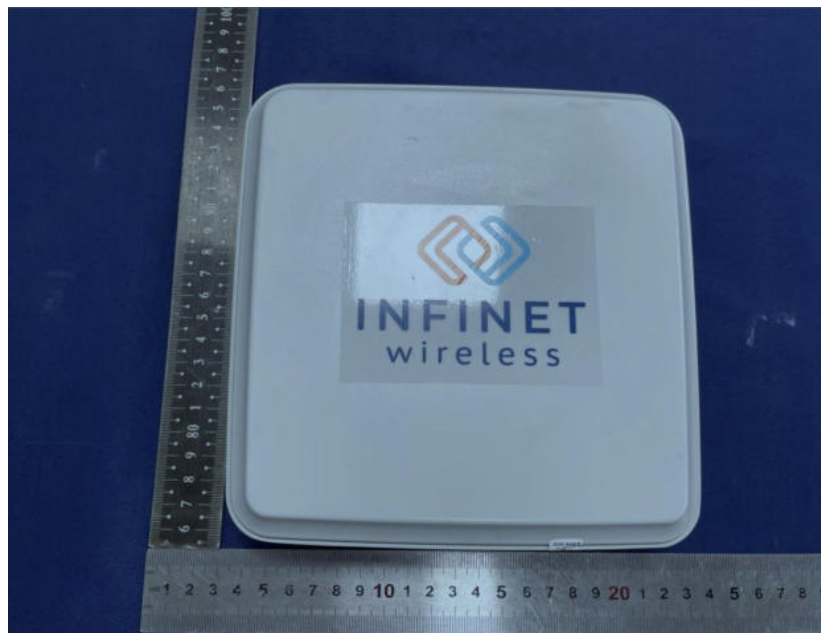


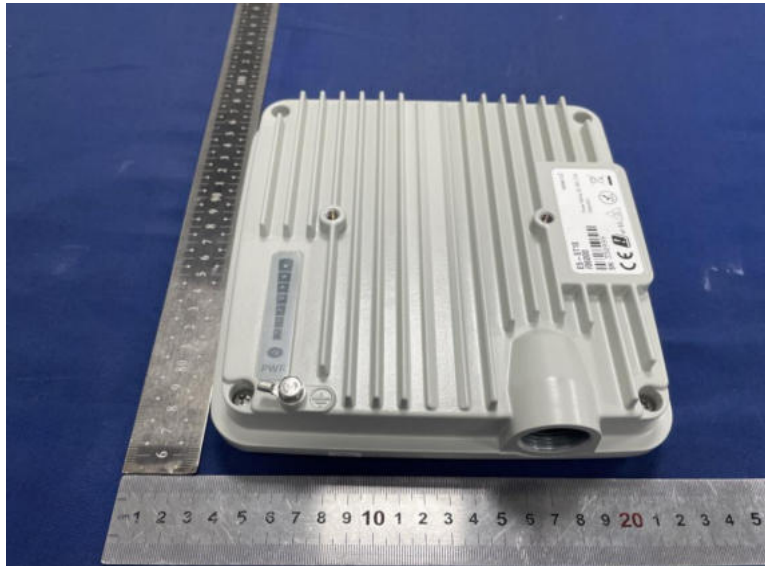
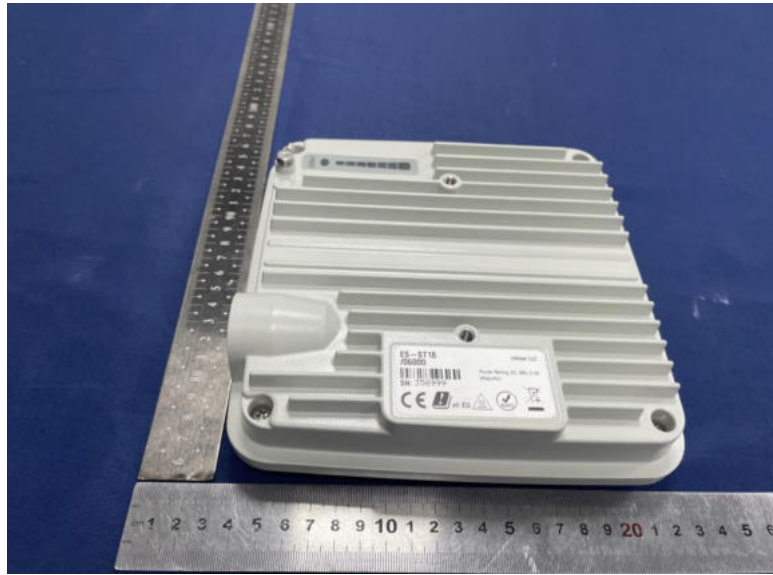


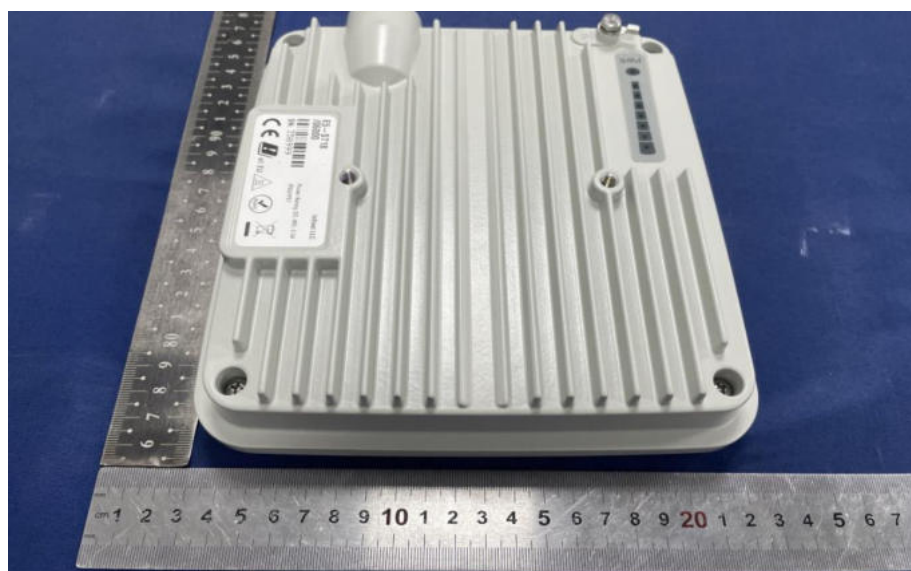



External view of E5-ST28, E6-ST28



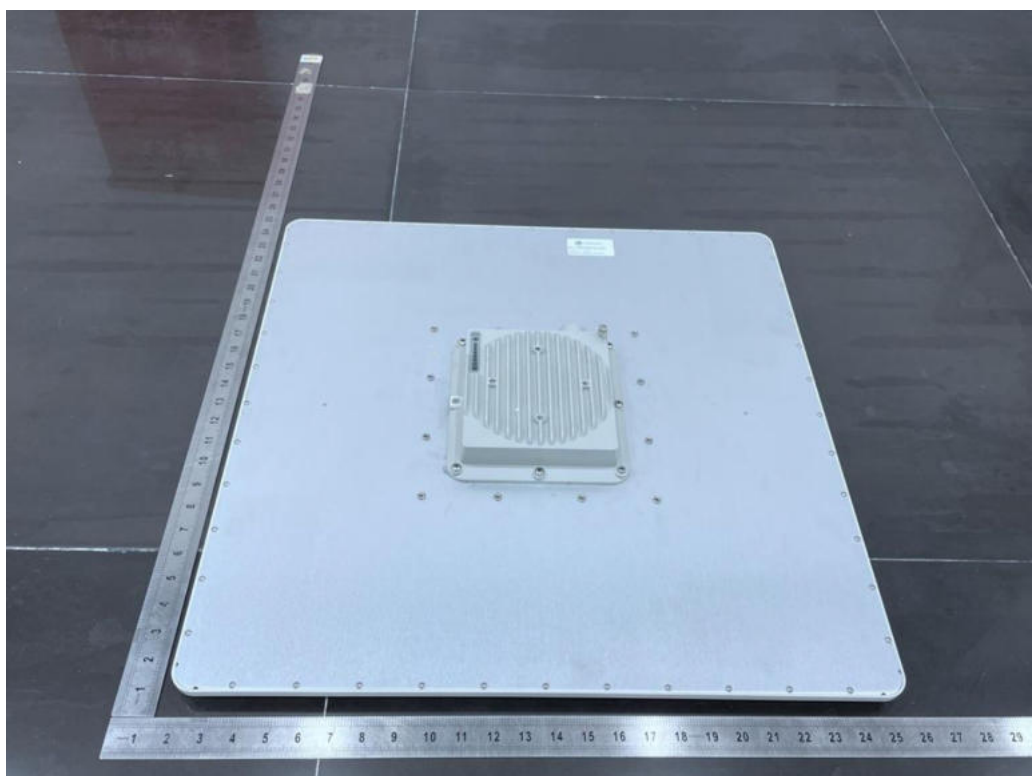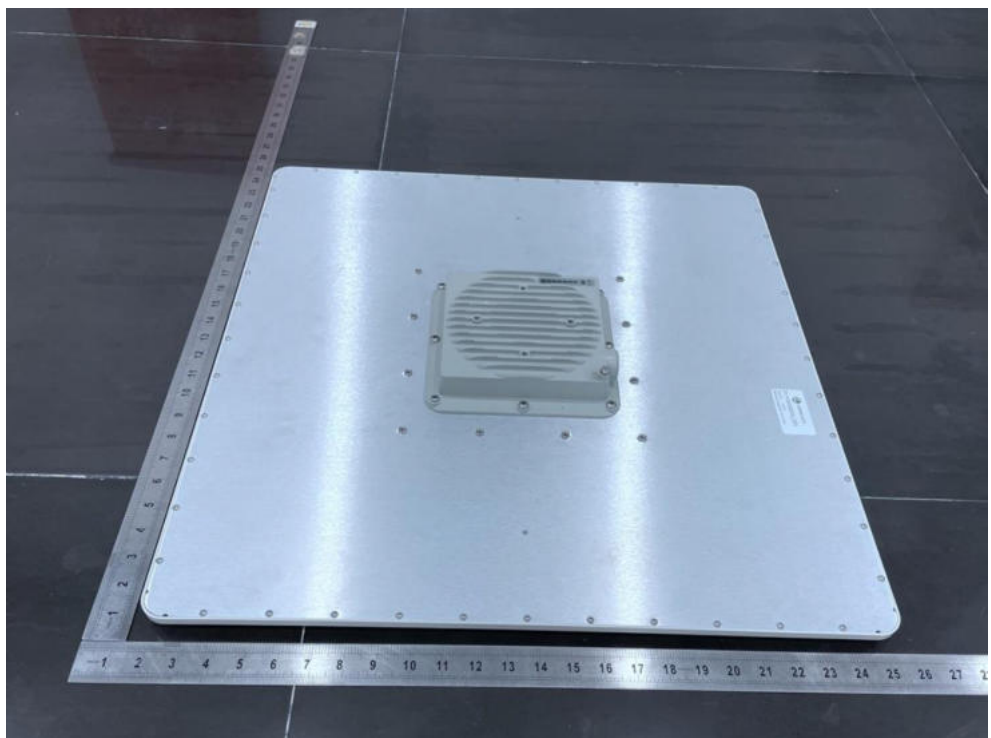


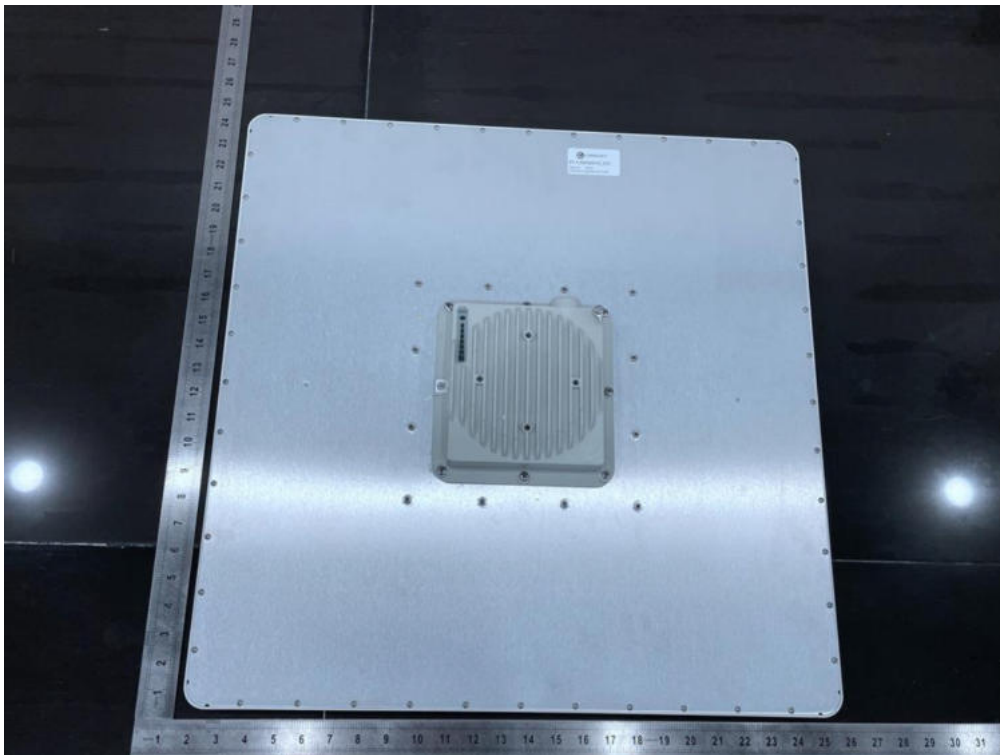
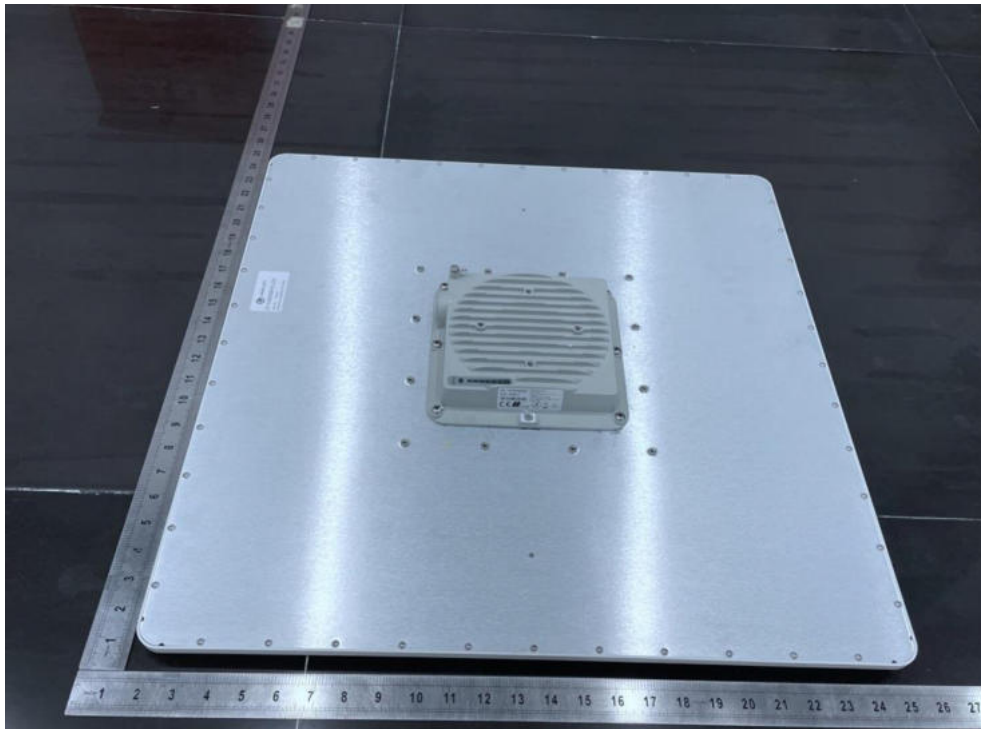



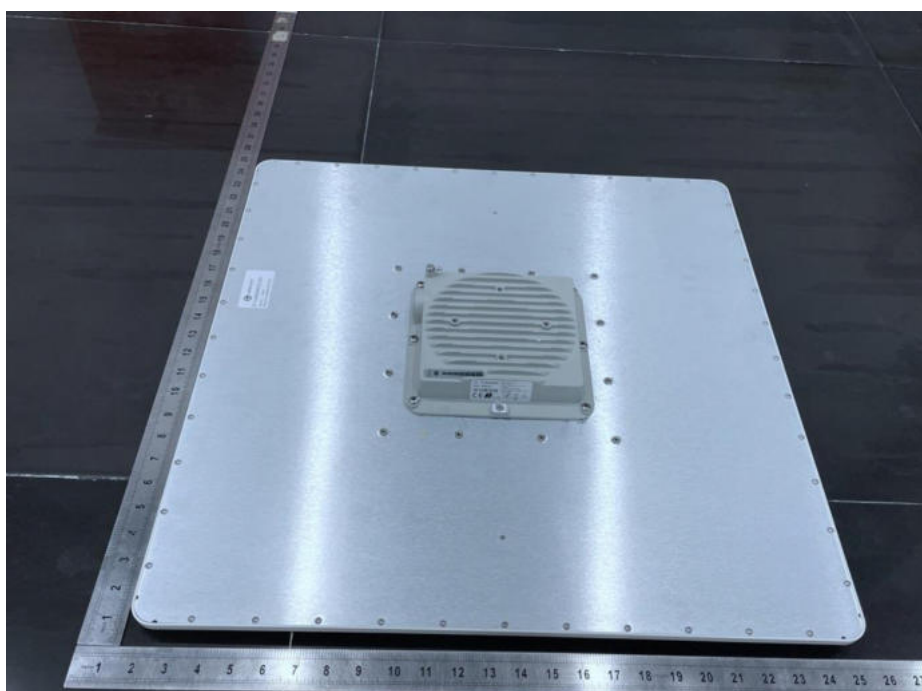


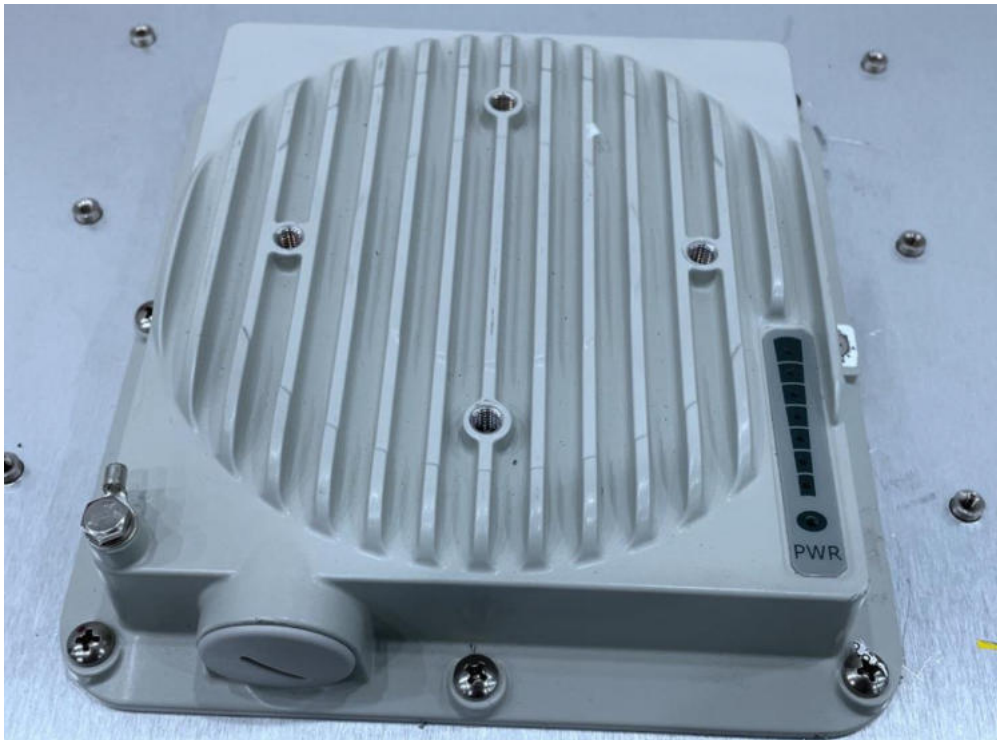



External view of E5-ST25, E6-ST25


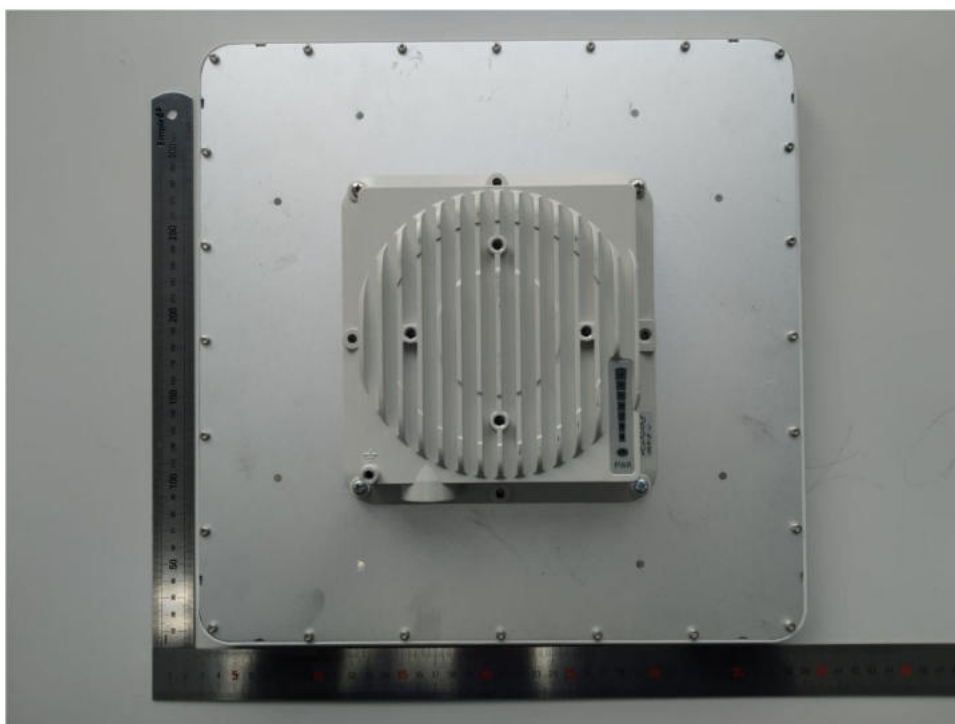


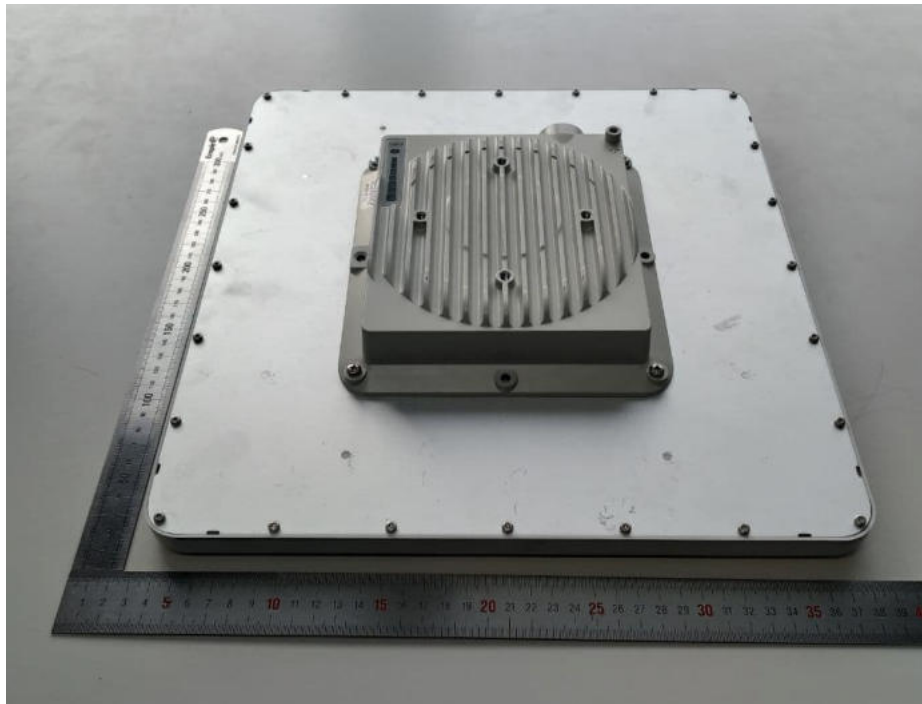
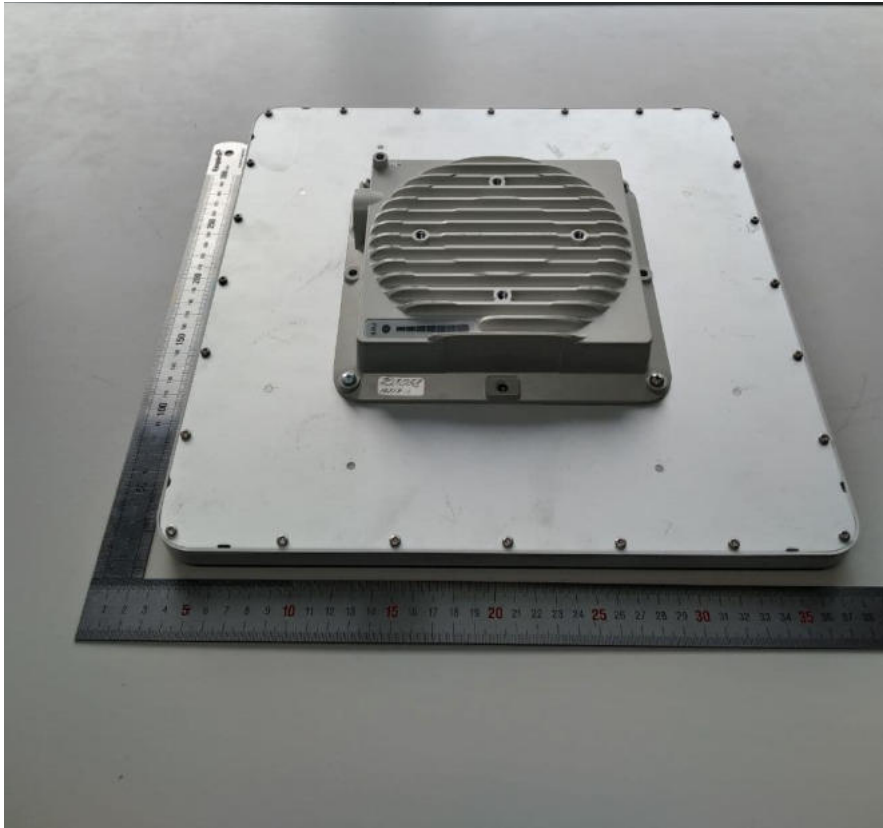


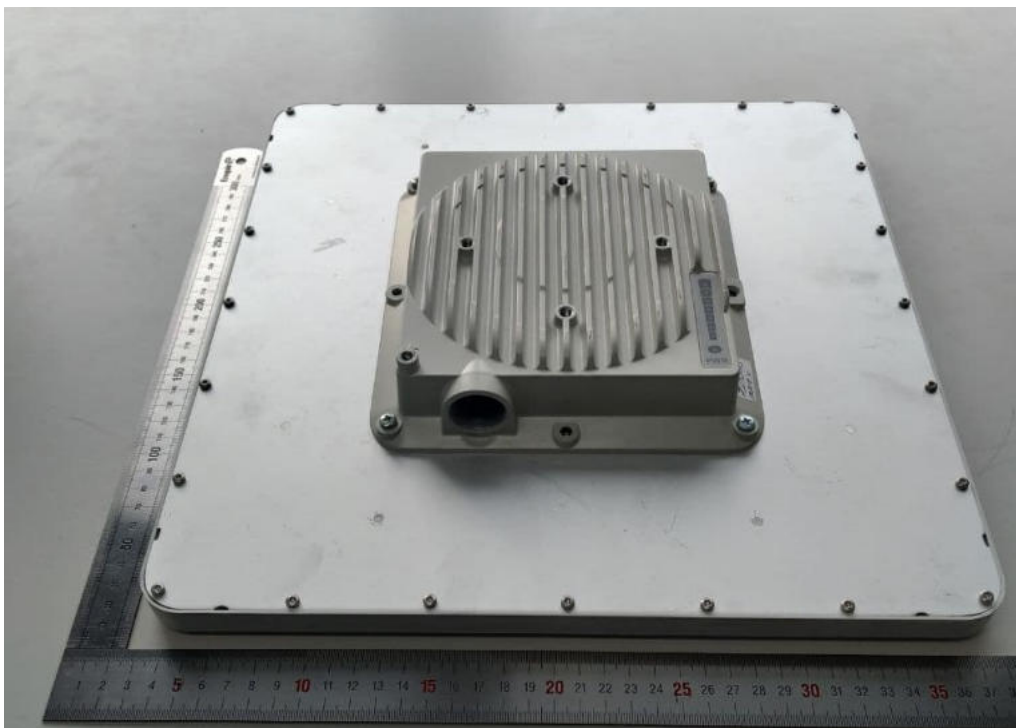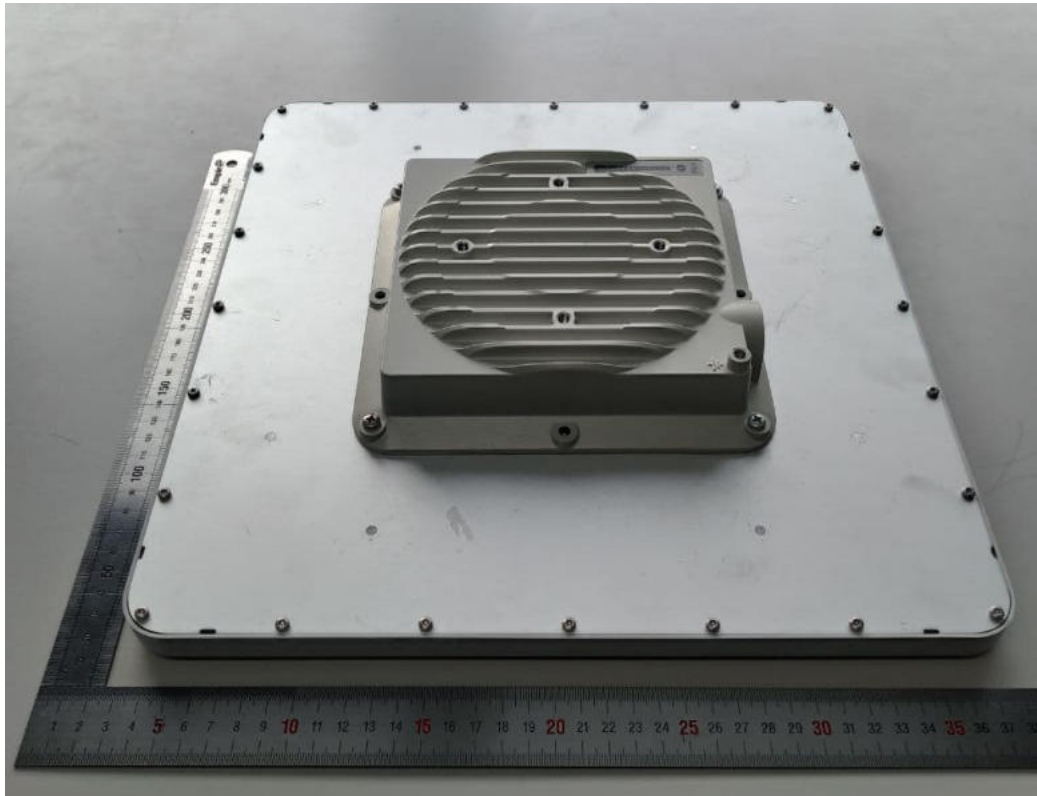

External view of E5-ST23

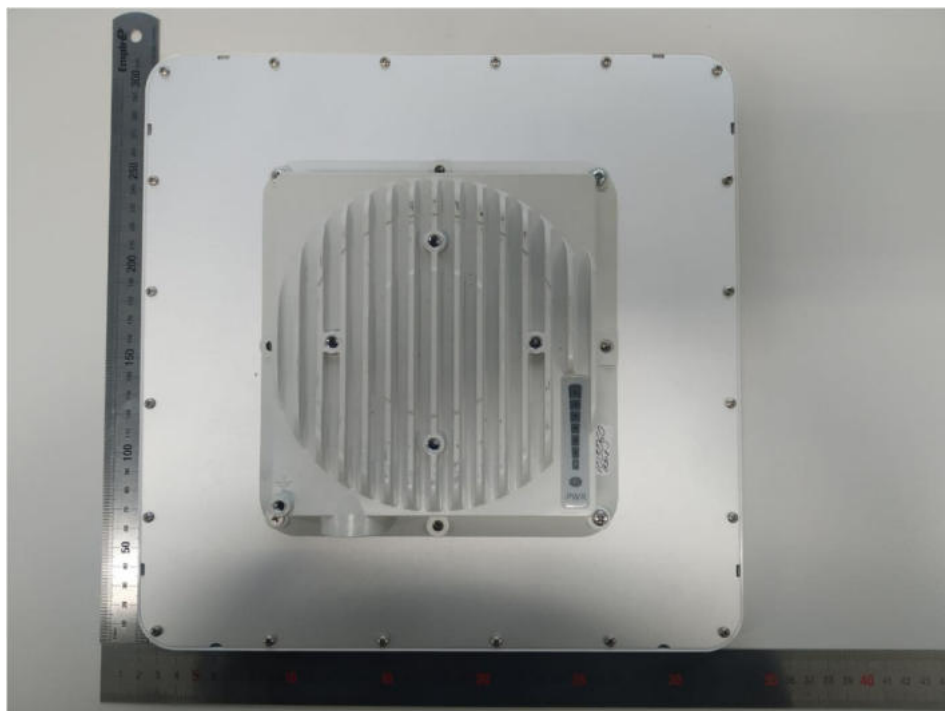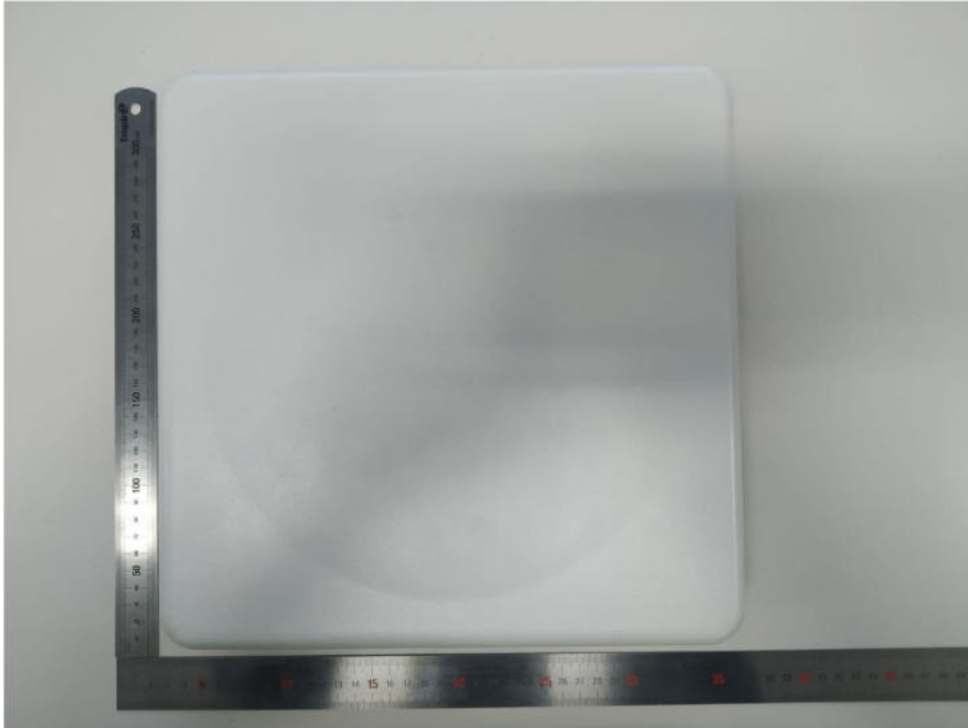

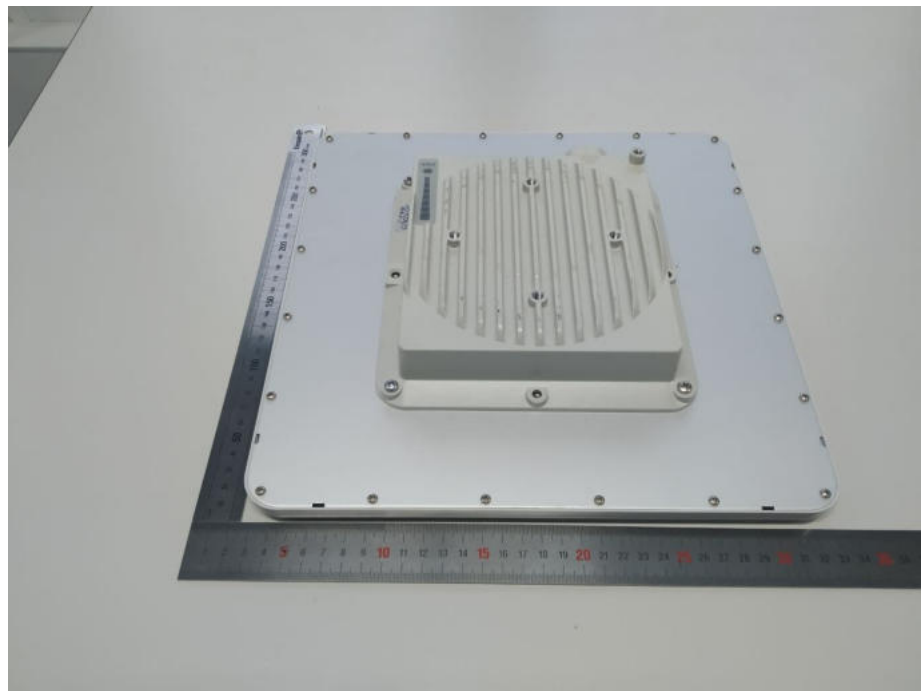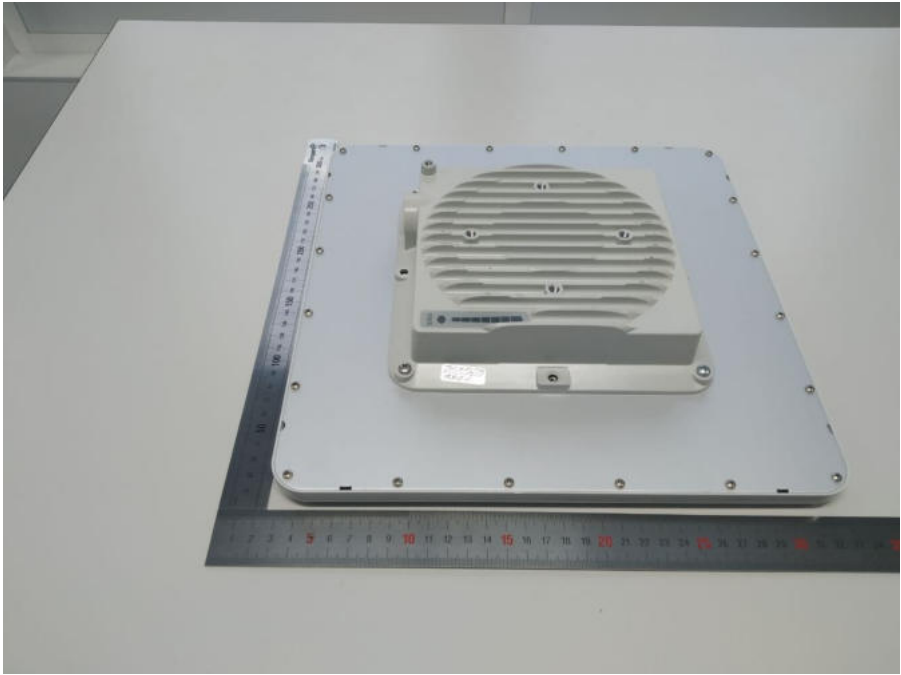

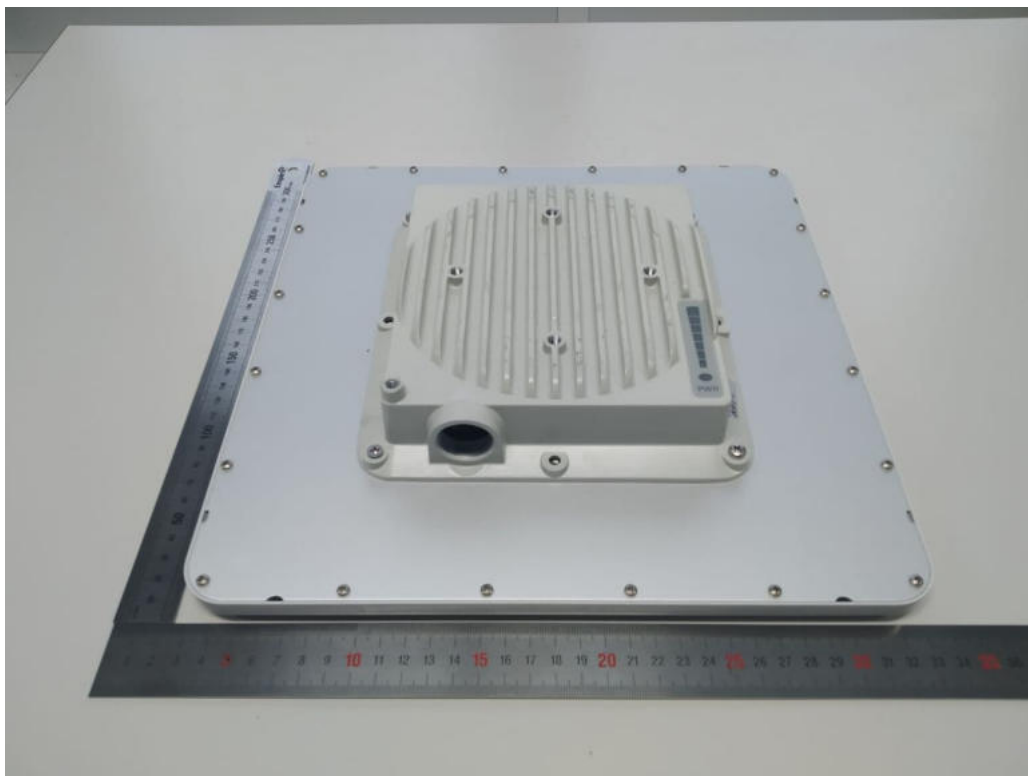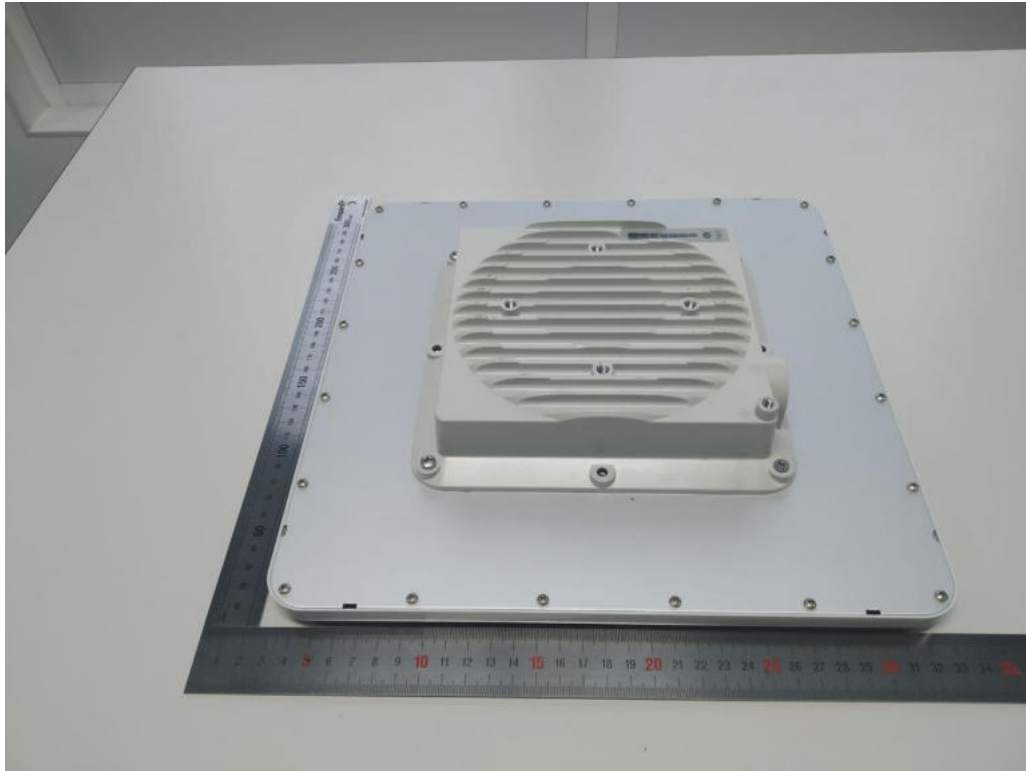

View of integral antenna

