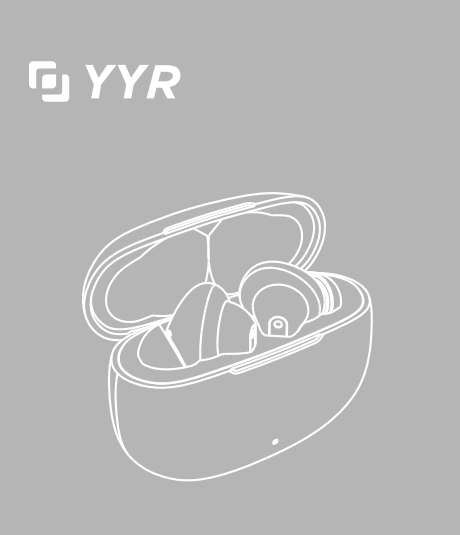 
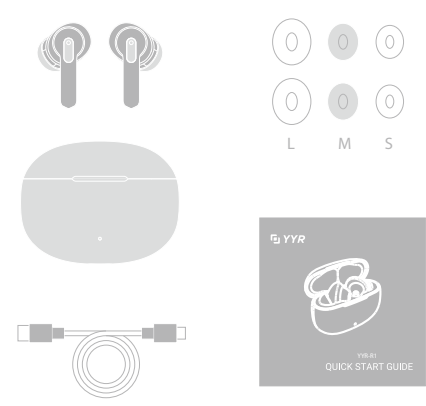 
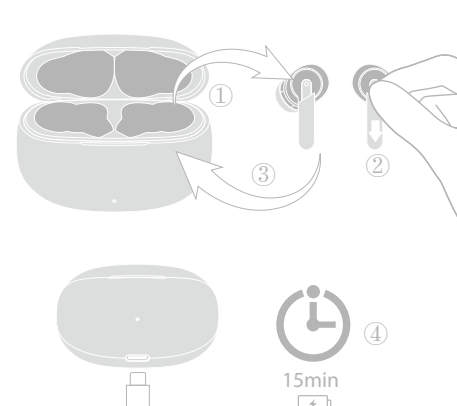 
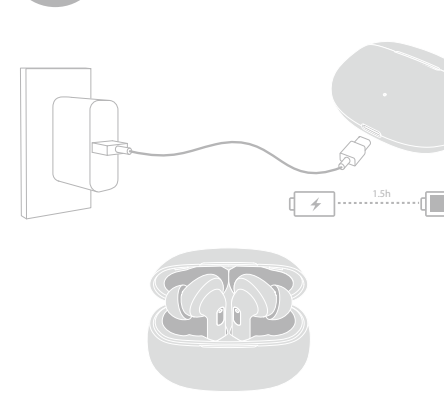 
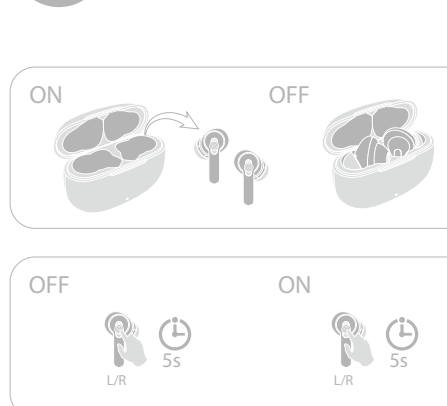 
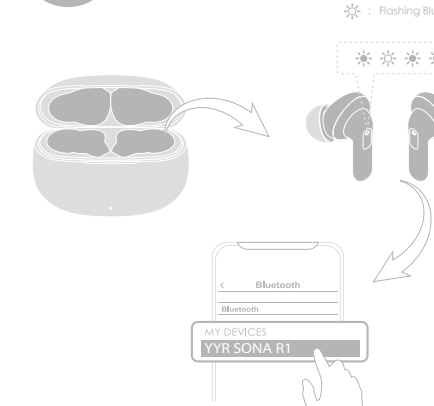 
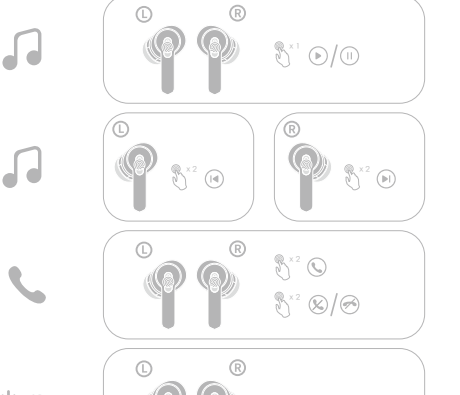 
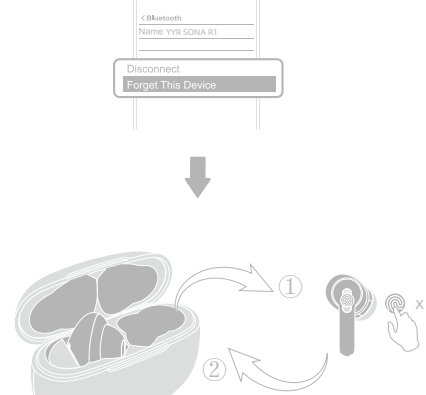 
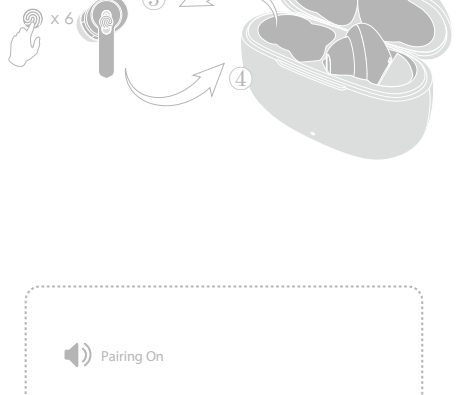 
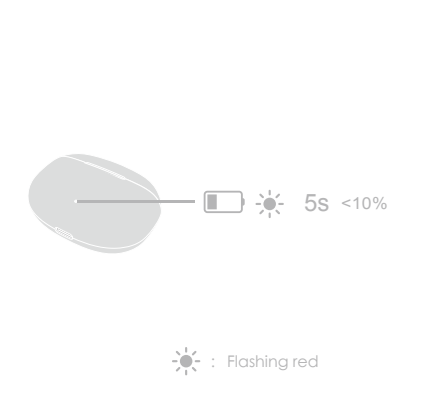 
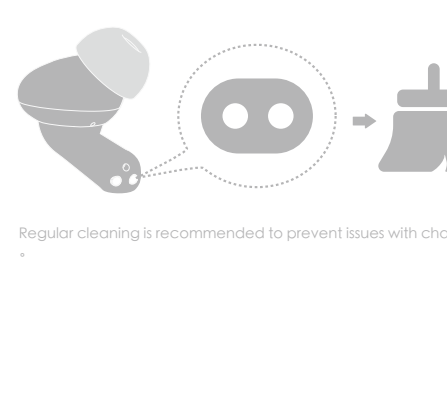 
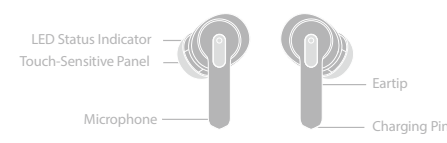 
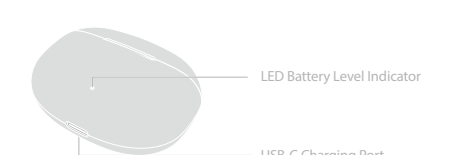 


 R1 QUICK START GUIDE	CONTENTS 	SET BEFORE USE 	CHARGING 	POWER ON/OFF 	PAIRING 
CONTROLS 	RESET 		BATTERY INDICATOR 	CLEAN 	

  R1 USER MANUAL	Thank you for purchasing the YIR R1 True Wireless Earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number. Package Contents True Wireless Earbuds Charging Case Silicone earplugs (S, L, M come attached to the earbuds) USB-A to C Cable User Manual Product Diagram 	 Product Diagram Earbuds <table> <tr><td>Model</td><td>YIR_R1</td></tr> <tr><td>Technology</td><td>HSP, HSP, A2DP, AVRCP, SRC, AAC</td></tr> <tr><td>Bluetooth Version</td><td>5.0</td></tr> <tr><td>Driver [Each channel]</td><td>1 x 10mm speaker driver</td></tr> <tr><td>Sensitivity</td><td>15dB±3dB/1KHz</td></tr> <tr><td>Frequency Range</td><td>20Hz-20KHz</td></tr> <tr><td>Impedance</td><td>32Ω±15%</td></tr> <tr><td>Microphone type</td><td>MEMS (microphone chip)</td></tr> <tr><td>Charging time</td><td>1.5h</td></tr> <tr><td>Playing time</td><td>20h</td></tr> <tr><td>Battery Type</td><td>Li-polymer [2 x 40mAh]</td></tr> <tr><td>Operating Range</td><td>10m</td></tr> <tr><td>Weight</td><td>7g [each]</td></tr> </table>	Model	YIR_R1	Technology	HSP, HSP, A2DP, AVRCP, SRC, AAC	Bluetooth Version	5.0	Driver [Each channel]	1 x 10mm speaker driver	Sensitivity	15dB±3dB/1KHz	Frequency Range	20Hz-20KHz	Impedance	32Ω±15%	Microphone type	MEMS (microphone chip)	Charging time	1.5h	Playing time	20h	Battery Type	Li-polymer [2 x 40mAh]	Operating Range	10m	Weight	7g [each]	Charging Case <table> <tr><td>Charging Input</td><td>DC 5V</td></tr> <tr><td>Charging Time</td><td>1.5 hours</td></tr> <tr><td>Battery Type</td><td>Li-polymer (300mAh)</td></tr> <tr><td>Number of Earbuds Recharges</td><td>3-4</td></tr> <tr><td>Weight</td><td>38g</td></tr> </table> Getting Started Charging Fully charge the charging case before the first use. To charge, connect the case to a USB-C charging or charging port with the included USB-A to C Cable to charge the charging case. When the LED charging indicator on the outside of the case changes from flashing blue to solid blue, the case is fully charged. Charging may take 1.5 hours, then case can offer fully charge to the earbuds 3 times. The earbuds should be stored in the case when not in use. Note - Remove the protective film from the earbuds when using for the first time. - Using an adapter with an output voltage higher than 5V may not charge the battery or damage the device. USB-C Charging Port	Charging Input	DC 5V	Charging Time	1.5 hours	Battery Type	Li-polymer (300mAh)	Number of Earbuds Recharges	3-4	Weight	38g	Turning On / Off <table> <tr> <td>Turn On</td> <td>Open the lid of the charging case and take both earbuds out, the earbuds will automatically power on. To manually power on, tap and hold the touch-sensitive panels for 5 seconds until the LED indicator flashes blue and the voice guidance says "power on".</td> </tr> <tr> <td>Turn Off</td> <td>Return both earbuds to the charging case and close the lid, the earbuds will automatically power off. To manually power off, tap and hold the touch-sensitive panel for 5 seconds until the LED indicator flashes red the voice guidance says "power off". When the earbuds are not worn for about 5 minutes after being removed from the charging case, the earbuds turn off automatically.</td> </tr> </table> Pairing Starting with the earbuds in the case: - Open the lid of charging case and take both earbuds out, they will automatically turn on, indicators on both earbuds will flash blue and alternately, and then enter pairing mode, the slave earbud indicator will be off. - Turn on the pairing function via BT on the device you want to pair with the earbuds. - From the list of available devices, find and select "YIR SONAR R1". After the connection is successful, the master earbud indicator will be off.	Turn On	Open the lid of the charging case and take both earbuds out, the earbuds will automatically power on. To manually power on, tap and hold the touch-sensitive panels for 5 seconds until the LED indicator flashes blue and the voice guidance says "power on".	Turn Off	Return both earbuds to the charging case and close the lid, the earbuds will automatically power off. To manually power off, tap and hold the touch-sensitive panel for 5 seconds until the LED indicator flashes red the voice guidance says "power off". When the earbuds are not worn for about 5 minutes after being removed from the charging case, the earbuds turn off automatically.	Regular Use After Pairing Once the earbuds are successfully paired with your device, they can be switched on and off as follows: - Open the lid of the charging case and take both earbuds out, then both earbuds will turn on and connect with each other automatically. - To turn off, put the earbuds back in the charging case and close the lid. They will begin charging. Using the Left / Right Earbud Starting with the earbuds in the case: - Take the left/right earbud out. - Turn on the pairing function on the device you want to pair with the earbud. - From the list of available devices, find and select "YIR SONAR R1". Note - When you turn on the earbuds, they will be automatically reconnected to the previous paired device or enter pairing mode if no paired device is found. - Either left or right earbud can be used individually once connected to your device when you keep the other one inside the charging case. - The wireless operating range is 10m (33ft). If you exceed this range, the earbuds will lose connection with your paired device. The connection will be re-established if you re-enter the wireless range within 5 minutes. Or the earbuds will be switched off automatically after 5 minutes.
Model	YIR_R1																																												
Technology	HSP, HSP, A2DP, AVRCP, SRC, AAC																																												
Bluetooth Version	5.0																																												
Driver [Each channel]	1 x 10mm speaker driver																																												
Sensitivity	15dB±3dB/1KHz																																												
Frequency Range	20Hz-20KHz																																												
Impedance	32Ω±15%																																												
Microphone type	MEMS (microphone chip)																																												
Charging time	1.5h																																												
Playing time	20h																																												
Battery Type	Li-polymer [2 x 40mAh]																																												
Operating Range	10m																																												
Weight	7g [each]																																												
Charging Input	DC 5V																																												
Charging Time	1.5 hours																																												
Battery Type	Li-polymer (300mAh)																																												
Number of Earbuds Recharges	3-4																																												
Weight	38g																																												
Turn On	Open the lid of the charging case and take both earbuds out, the earbuds will automatically power on. To manually power on, tap and hold the touch-sensitive panels for 5 seconds until the LED indicator flashes blue and the voice guidance says "power on".																																												
Turn Off	Return both earbuds to the charging case and close the lid, the earbuds will automatically power off. To manually power off, tap and hold the touch-sensitive panel for 5 seconds until the LED indicator flashes red the voice guidance says "power off". When the earbuds are not worn for about 5 minutes after being removed from the charging case, the earbuds turn off automatically.																																												
Reset the earbuds - Put the earbuds into the charging case, make sure the charging case is fully charged, and then take out the left and right earbuds. - Quickly tap the touch keys on the left and right earbuds for 6 times, and this will clear the pairing records on the device. - Put them back into the charging case to charge, then take out the earbuds for re-pairing and connecting. - If the reset is unsuccessful, repeat the above steps. Controls & LED Indicators Once paired, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends. <table> <tr> <td>Play or pause music</td> <td>Tap the touch-sensitive panel once on either earbud</td> </tr> <tr> <td>Skip to previous track</td> <td>Long press 2s on the L earbud</td> </tr> <tr> <td>Skip to next track</td> <td>Long press 2s on the R earbud</td> </tr> </table>	Play or pause music	Tap the touch-sensitive panel once on either earbud	Skip to previous track	Long press 2s on the L earbud	Skip to next track	Long press 2s on the R earbud	Taking Calls <table> <tr> <td>Answer a call</td> <td>Triple-tap the touch-sensitive panel on either earbud</td> </tr> <tr> <td>Reject an incoming call or End a call</td> <td>Triple-tap the touch-sensitive panel on either earbud</td> </tr> <tr> <td>Activate Siri or other voice assistants</td> <td>Long-press the touch-sensitive panel on either earbud for 2 seconds</td> </tr> </table> <table> <tr> <td>LED Indicator (for earbuds)</td> <td>Status</td> </tr> <tr> <td>Off (after charging)</td> <td>Earbuds charging</td> </tr> <tr> <td>Flashing red</td> <td>Charging case fully charged</td> </tr> <tr> <td></td> <td>Battery low</td> </tr> </table> <table> <tr> <td>LED Indicator (for case)</td> <td></td> </tr> <tr> <td>Red flashing 5s, then off</td> <td>100% battery remaining</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	Answer a call	Triple-tap the touch-sensitive panel on either earbud	Reject an incoming call or End a call	Triple-tap the touch-sensitive panel on either earbud	Activate Siri or other voice assistants	Long-press the touch-sensitive panel on either earbud for 2 seconds	LED Indicator (for earbuds)	Status	Off (after charging)	Earbuds charging	Flashing red	Charging case fully charged		Battery low	LED Indicator (for case)		Red flashing 5s, then off	100% battery remaining							FAQ The earbuds are on, but not connecting to my device For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the Pairing section of this manual. I've connected the earbuds with my smartphone but can't hear any sound Double-check the volume level on your smartphone and the earbuds. Some smartphones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile. The sound isn't very clear or the caller can't hear my voice clearly Adjust the volume on your smartphone and the earbuds. Try moving closer to your smartphone to rule out the possibility of interference or wireless range-related issues. What's the wireless range of the earbuds? The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles (like reinforced steel walls) between the earbuds and your device.	The earbuds won't turn on Try cleaning the charging case pins, and then charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in "Warranty & Customer Support". I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is probably out of power. Try charging it. Product Care & Use - Keep away from liquids and extreme heat - Don't use the earbuds at high volume for extended periods, as this may cause permanent hearing damage or loss Regular cleaning is recommended to prevent issues with charging. Warranty & Customer Support For questions, support, or warranty claims, please contact your seller directly. Battery Warning This product contains a built-in lithium battery. Do not expose the product to strong sunlight or fire or it might explode. Dispose of the battery according to local regulations. Do not dispose of a domestic waste. Do not remove or replace the product battery unless doing so is specified in the User Manual or in the Quick Start Guide, as you might damage the product.	Safety Rules - Do not disassemble or repair the earphone for any reason as you may damage it or void the warranty. - Avoid contact with liquid to prevent serious damage to the earphone. The manufacturer does not cover water damage. - Avoid temperatures above 75 degrees and below minus 40 degrees. - Keep the indicator away from children and animal's eyes. - Do not use this product during thunderstorms to avoid electric shocks. FCC This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.	If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between Otterlei the radiator your body. Use only the supplied antenna.										
Play or pause music	Tap the touch-sensitive panel once on either earbud																																												
Skip to previous track	Long press 2s on the L earbud																																												
Skip to next track	Long press 2s on the R earbud																																												
Answer a call	Triple-tap the touch-sensitive panel on either earbud																																												
Reject an incoming call or End a call	Triple-tap the touch-sensitive panel on either earbud																																												
Activate Siri or other voice assistants	Long-press the touch-sensitive panel on either earbud for 2 seconds																																												
LED Indicator (for earbuds)	Status																																												
Off (after charging)	Earbuds charging																																												
Flashing red	Charging case fully charged																																												
	Battery low																																												
LED Indicator (for case)																																													
Red flashing 5s, then off	100% battery remaining																																												