


2. Mapping and Cleaning/2.5 Mopping System

Please remove all protection materials on Robot and assemble Charging Station before use.


1 Remove Reservoir

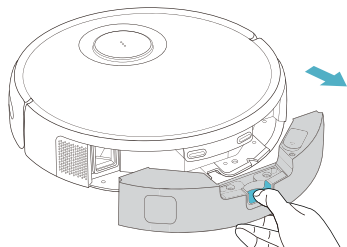


3 Get Water Inlet Cover on



2 Add Water

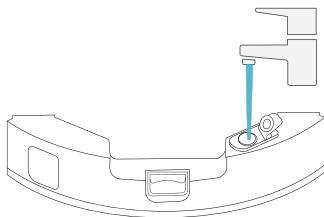

4 Hearing Click Means Successful Installation

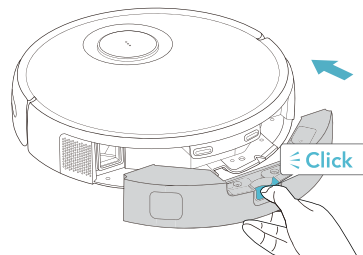


Note:

1. To prolong the service life of the reservoir, it is recommended to use purified water or softened water for the mopping system.
2. If you need to clean the carpet, please uninstall the Mopping Pad Plates first.
3. Empty the reservoir after Robot finishes mopping.


3. Maintenance/3.1 Mopping System

After mopping, please maintain the reservoir to prolong the service life.


1 Remove Reservoir

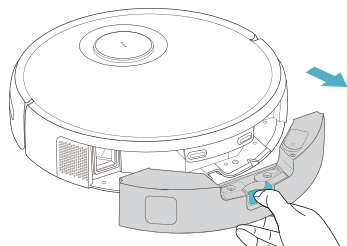

3 Rinse Reservoir

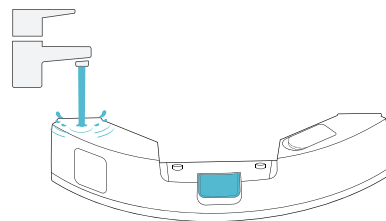


2 Empty Reservoir

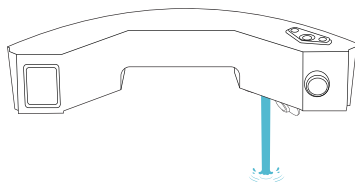


3. Maintenance/3.1 Mopping System

Please rinse and dry out the Washable Mopping Pad after every mopping.


4 Remove Washable Mopping Pad

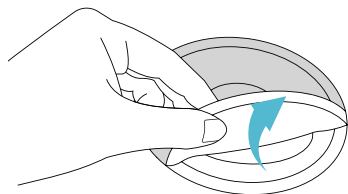

6 Dry out Washable Mopping Pad

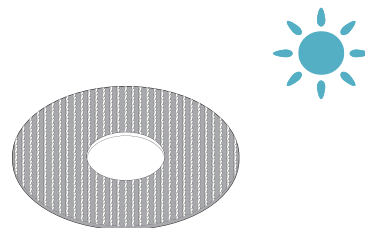


5 Rinse Washable Mopping Pad

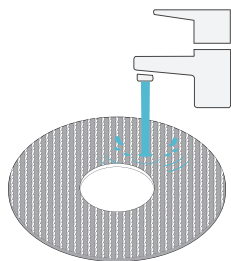


3. Maintenance/3.2 Dust Bin and Filters

Clean Dust Bin Regularly.


- 1 Remove Top Cover and Take out Dust Bin

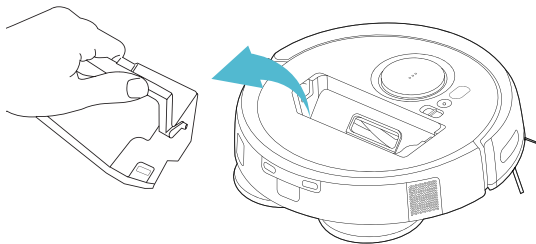


- 3 Remove High Efficiency Filter and Sponge Filter

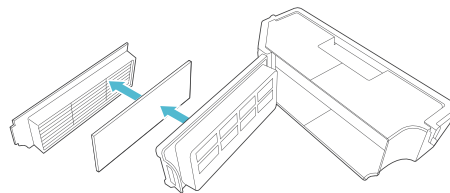

- 2 Open Dust Bin Cover to Empty it

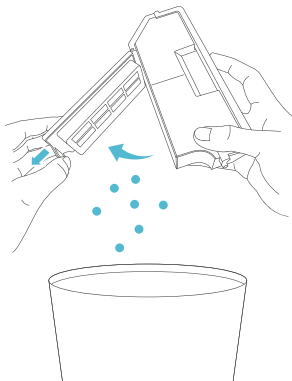


- 4 Clean up Dust with Multi-Function Cleaning Tool

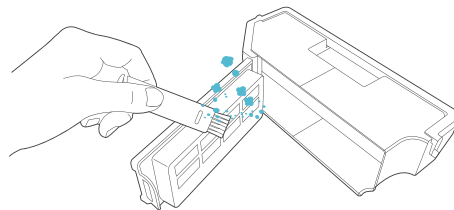


3. Maintenance/3.2 Dust Bin and Filters

Be sure to dry out Dust Bin and Filters for a good performance.

5 Rinse Dust Bin and Filters with Running Water

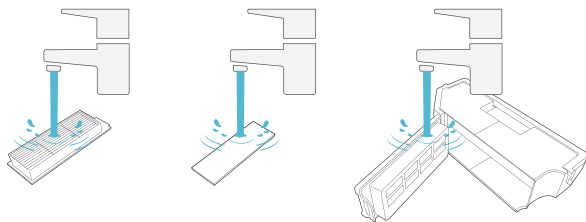

6 Dry out Dust Bin and Sponge Filter

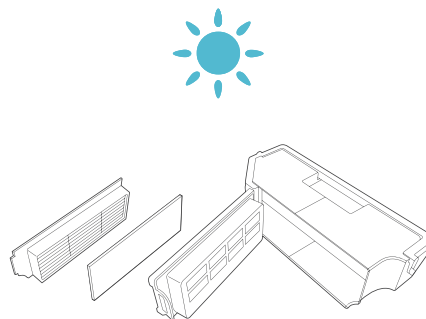


Note:


1. Please rinse the Filters with water as shown above.
2. Do not use finger or brush to clean the Filters.
3. Be sure to dry out the Filters for at least 24 hours after wash.

3. Maintenance/3.3 3D ToF Mapping and Obstacle Avoidance Sensor, Edge Detection Sensors and Charging Contacts


1 Wipe 3D ToF Mapping and Obstacle Avoidance Sensor

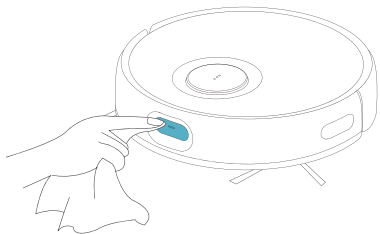

3 Wipe Charging Contacts

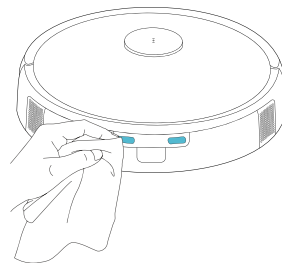


2 Wipe Edge Detection Sensors

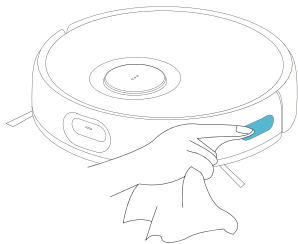


3. Maintenance/3.4 Adaptive Multi-Surface Brush

1 Clean Adaptive Multi-Surface Brush

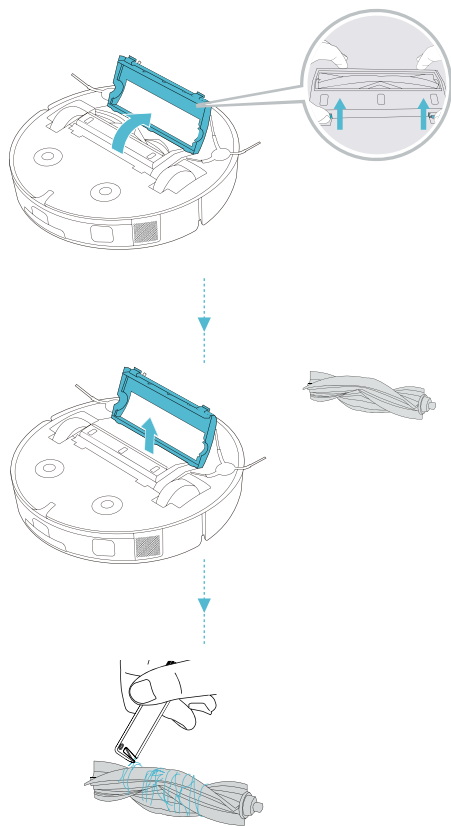


3. Maintenance/3.5 Dual Elastic Edge Brushes, Driving Wheels and Universal Wheel


1 Remove Dual Elastic Edge Brushes

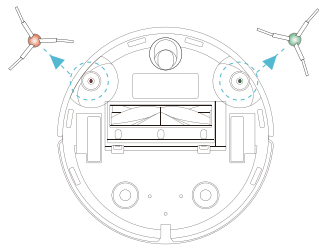


3 Clean Driving Wheels

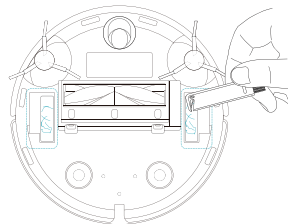

2 Clean Dual Elastic Edge Brushes

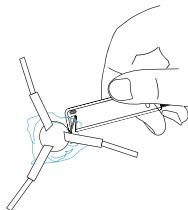

4 Clean Universal Wheel

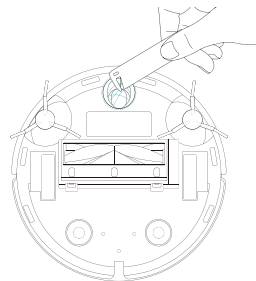


Note:


Before cleaning the Robot, turn the Robot OFF and unplug the Charging Station.

3. Maintenance/3.6 Anti-Drop Sensors and Charging Station

1 Wipe Anti-Drop Sensors

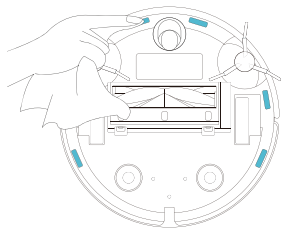

2 Wipe Charging Station

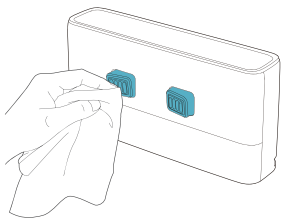

3. Maintenance/3.7 Regular Maintenance

To keep Robot cleaning at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Washable Mopping Pads	After each use	Every 50 washings
Reservoir/Mopping Pad Plates	After each use	/
Dual Elastic Edge Brushes	Once every 2 weeks	Every 3-6 months
Adaptive Multi-Surface Brush	Once per week	Every 6-12 months
Sponge Filter/High Efficiency Filter	Once per week	Every 3-6 months
3D ToF SLAM and Obstacle Avoidance Sensor Universal Wheel Anti-Drop Sensors Bumper Edge Detection Sensors Charging Contacts Charging Station Pins	Once per week	/

Note:

yeedi manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.

4. Indicator Light

Robot

Robot will tell you something is wrong with an indicator light and voice report. More detailed support is available through the yeedi App and online website.

Indicator Light	Scenario
AUTO Button glows a solid WHITE.	The Robot is cleaning.
	The Robot is paused while cleaning.
AUTO Button flashes WHITE.	The Robot is charging.
	The Robot is starting.
	The Robot is relocating.
AUTO Button glows a solid RED.	The Robot has low battery.
AUTO Button flashes RED.	The Robot has a problem.

5. Troubleshooting/5.1 Troubleshooting

No.	Malfunction	Possible Causes	Solutions
1	Robot is not able to connect to the home Wi-Fi network.	Incorrect home Wi-Fi username or password entered.	Enter the correct home Wi-Fi username and password.
		Robot is not within range of your home Wi-Fi signal.	Make sure Robot is within range of your home Wi-Fi signal.
		Network setup started before Robot was ready.	Turn ON Power Switch. Press the RESET Button for 3 seconds. Robot is ready for network setup when it plays a musical tune and its Wi-Fi Indicator light flashes slowly.
2	Robot is not charging.	Robot is not switched ON.	Switch ON Robot.
		Robot has not connected to the Charging Station.	Be sure that the Robot's Charging Contacts have connected to the Charging Station Pins.
		The Power Cord is not connected to the Charging Station.	Make sure the Power Cord is firmly connected to the Charging Station.
		The battery is completely discharged.	Re-activate the battery. Switch ON. Place Robot on the Charging Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.
		Make sure the Charging Station is connected to the power supply.	The Charging Station is not connected to the power supply.

No.	Malfunction	Possible Causes	Solutions
3	Robot cannot return to the Charging Station.	The Charging Station is not correctly placed.	Refer to section 2.2 to correctly place the Charging Station.
		The Charging Station is disconnected or moved.	Please check if the Charging Station is connected to power. Do not move the Charging Station manually.
		The Charging Station is on the carpet.	Place the Charging Station on hard floors.
		Robot is paused for more than 60 minutes.	Avoid pausing Robot for over 60 minutes.
		Robot did not start cleaning from the Charging Station.	Make sure Robot starts cleaning from the Charging Station.
4	Robot returns to the Charging Station before it has finished cleaning.	When the battery gets low, Robot automatically switches to Return to Charger Mode and returns to the Charging Station to recharge itself.	This is normal. No solution necessary.
		Working time varies according to floor surface, room complexity and the Cleaning Mode selected.	This is normal. No solution necessary.
		The cleaning area is not tidy.	Remove small objects from the floor and tidy up the cleaning area before Robot starts cleaning.
5	Robot gets stuck while working and stops.	Robot is tangled with something on the floor (electrical wires, curtains, carpet fringing, etc.).	Robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
6	Robot makes much noise when cleaning.	The brushes are tangled, or the dust bin is stuck.	Clear the debris stuck regularly.

No.	Malfunction	Possible Causes	Solutions
7	The water is not coming out of the Reservoir when Robot is mopping.	The water inlet Filter on the bottom of Reservoir is clogged.	Unscrew the water inlet on the bottom of Reservoir and clean the Filter.
		The Reservoir runs out of water.	Add water into the Reservoir.
		The water outlets on the bottom of Robot are clogged.	Check the water outlets on the bottom and clean.
8	The reservoir drops out of place during cleaning.	The reservoir is not properly installed.	The reservoir is properly installed when it clicks into place.
9	Mopping Pad Plate cannot rotate.	The Mopping Pad Plate is blocked by foreign objects.	Clean the foreign objects.

5. Troubleshooting/5.2 Wi-Fi Connection

Before Wi-Fi setup, make sure Robot, mobile phone, and Wi-Fi network meet the following requirements.

Robot and Mobile Phone Requirements

- Robot is fully charged and the power switch of Robot is turned ON.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

Wi-Fi Network Requirements

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

6. Product Specifications

Model	YDTX11			
Rated Input	20V $\equiv$ 1A			
Docking Station** Model	CH2125		CH2123*	
	Rated Input	100-240V $\sim$ 50-60Hz 0.5A	Rated Input	110-120V $\sim$ 50-60Hz 0.5A(Charging) 6.8A(Self-Emptying)
	Rated Output	20V $\equiv$ 1A	Rated Output	20V $\equiv$ 1A

Note:

1. Output power of the Wi-Fi module is less than 100mW.
2. Technical and design specifications may be changed for continuous product improvement.
3. * CH2123 is an Self-Empty Station sold separately that automatically empties your Robot's dustbin.
4. **Charging Station.

Explore more accessories at <https://www.yeedi.com>.

Table des matières

1. Contenu de l’emballage.....	39
2. Cartographie et nettoyage	45
3. Entretien	48
4. Voyant d’état	57
5. Dépannage	58
6. Caractéristiques de produit	62

INSTRUCTIONS IMPORTANTES DE SÉCURITÉ

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL. CONSERVER CES INSTRUCTIONS

Pour une utilisation domestique seulement
Lors de l'utilisation d'un appareil électrique, les précautions de base suivantes doivent être suivies.

AVERTISSEMENT : Lire tous les avertissements et instructions de sécurité. Ne pas suivre les avertissements et les instructions peut entraîner une décharge électrique, un incendie ou des blessures graves.

1. L'appareil ne doit pas être utilisé comme un jouet. Une attention particulière est nécessaire lorsqu'il est utilisé par des enfants ou près d'eux.
2. Rangez la zone à nettoyer. Retirez les cordons d'alimentation et les petits objets situés sur le plancher qui pourraient s'enchevêtrer dans l'appareil. Glissez les franges sous le tapis, dégagez le plancher et relevez les bouts des rideaux et des nappes.
3. En cas de présence d'un point de chute dans la zone de nettoyage à cause d'une marche ou d'un escalier, vous devriez utiliser

l'appareil afin de vous assurer qu'il est en mesure de détecter la marche sans tomber. Il pourrait être nécessaire de placer une barrière physique au bord du point de chute pour empêcher l'unité de tomber. Assurez-vous que la barrière ne représente pas un risque de trébuchement.

4. Utilisez l'appareil seulement de la manière décrite dans ce manuel. Utilisez seulement les accessoires recommandés ou vendus par le fabricant.
5. Veuillez vous assurer que la tension d'alimentation de la prise correspond à la tension d'alimentation indiquée sur la station de charge.
6. Ne manipulez pas la fiche électrique ou l'appareil avec des mains humides.
7. Les batteries non rechargeables sont interdites.
8. N'utilisez pas l'appareil si le bac à poussière ou les filtres ne sont pas en place.
9. N'utilisez pas l'aspirateur dans une pièce avec des chandelles allumées ou des objets fragiles sur le plancher à nettoyer.
10. N'utilisez pas l'appareil et ne l'entrezposez pas dans un environnement à température extrêmement chaude ou froide (inférieure à -5 °C/23 °F ou supérieure à 40 °C/104 °F). Veuillez charger le Robot à une température supérieure à 0 °C/32 °F et en dessous de

40 °C/104 °F.

11. Les vêtements amples, les cheveux, les doigts et toutes les autres parties du corps doivent être tenus à l'écart de toute ouverture et de toute pièce mobile.
12. N'utilisez pas l'appareil dans une pièce où dort un nourrisson ou un enfant.
13. Pour une utilisation INTÉRIEURE SEULEMENT. N'utilisez pas l'appareil à l'extérieur ou à des fins commerciales ou industrielles. N'utilisez pas l'appareil sur une surface humide ou mouillée.
14. Évitez que l'appareil ne ramasse de gros objets, comme des pierres, de gros morceaux de papier ou tout autre objet pouvant boucher l'appareil.
15. N'utilisez pas l'appareil pour ramasser des produits inflammables ou combustibles comme de l'essence, de l'encre d'imprimante ou de copieur, ou encore dans un endroit où ces produits peuvent être présents.
16. N'utilisez pas l'appareil pour ramasser des objets qui sont en combustion ou qui émettent de la fumée comme des cigarettes, des allumettes, des cendres chaudes ou tout autre objet pouvant causer un incendie.
17. Ne placez pas d'objets dans les ouvertures. N'utilisez pas l'appareil avec une ouverture bouchée; gardez les ouvertures exemptes de poussière, de peluche, de cheveux et de tout

autre objet pouvant réduire la circulation d'air.

18. Veillez à ne pas endommager le cordon d'alimentation. Ne tirez pas sur le cordon d'alimentation de l'appareil ou sur celui de la station de charge et ne transportez pas l'appareil ou la station de charge en les tenant par le cordon d'alimentation, n'utilisez pas le cordon d'alimentation comme une poignée, ne fermez pas de porte sur le cordon d'alimentation et ne tirez pas le cordon d'alimentation autour de rebords ou de coins coupants. Ne faites pas passer l'appareil sur le cordon d'alimentation. Gardez le cordon d'alimentation éloigné de toute surface chaude. Ne tirez pas sur le cordon pour débrancher l'appareil, tirez plutôt sur la fiche électrique.
19. Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant ou par un agent de service à la clientèle pour éviter tout danger.
20. N'utilisez pas la station de charge si elle est endommagée.
21. N'utilisez pas les appareils avec une fiche électrique endommagée ou un cordon d'alimentation endommagé. N'utilisez ni l'appareil ni la station de charge s'ils ne fonctionnent pas normalement, s'ils ont été échappés, endommagés, laissés à l'extérieur ou s'ils sont entrés en contact avec un liquide.