 


A13-E40 Venetian Blinds Motor Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only.

H12288 A/1

P Product introduction




Front



Side

Remote control
FD33105

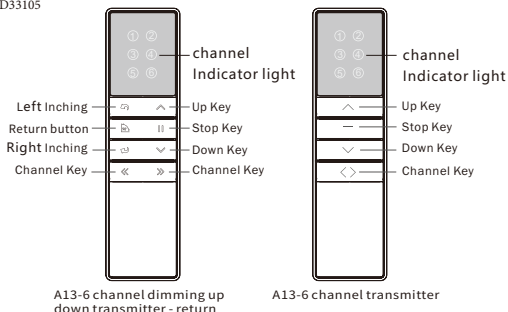


A13-6 channel dimming up
down transmitter - return

A13-6 channel transmitter


T Transmitter operating instructions

(*Take A13-6 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

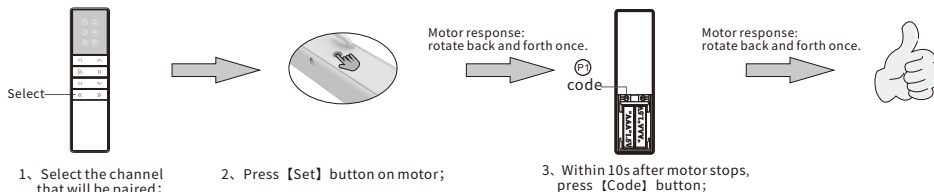

Clear pairing : Clear all pairing on the motor:

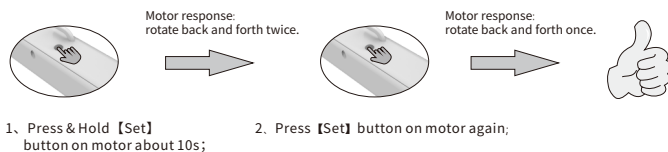


Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

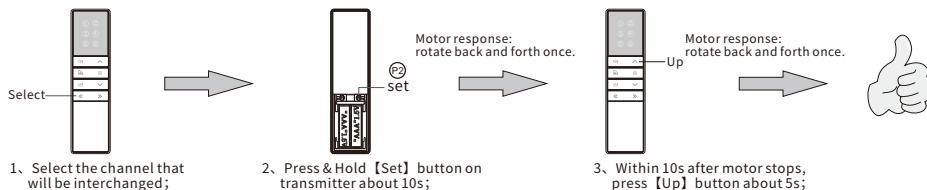


Speed setting: two-speed can be adjusted, the first speed is 23r/min, the second speed is 28r/min, the first speed is defaulted before leaving the factory


3E/4E interchange : Only suitable for 12V short motor, The factory default is 4E mode, and the repeated operation is to switch between 3E/4E:

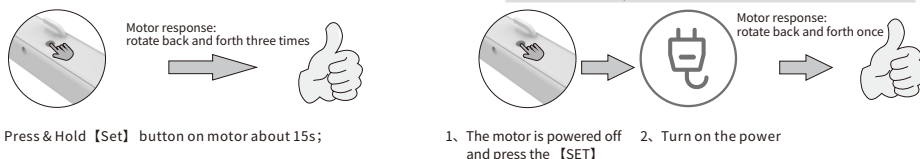


Copy: Add a new channel to control motor. (No need to touch motor):

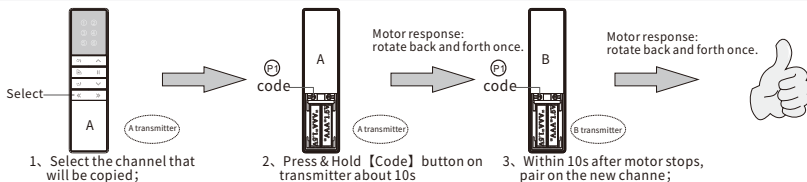


Reset direction: Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

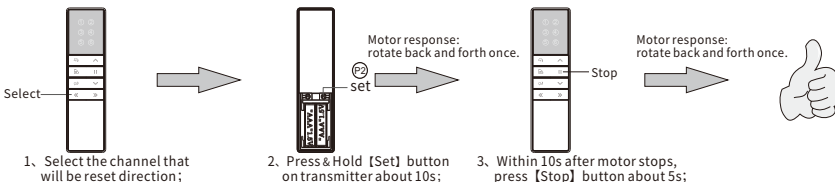

Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

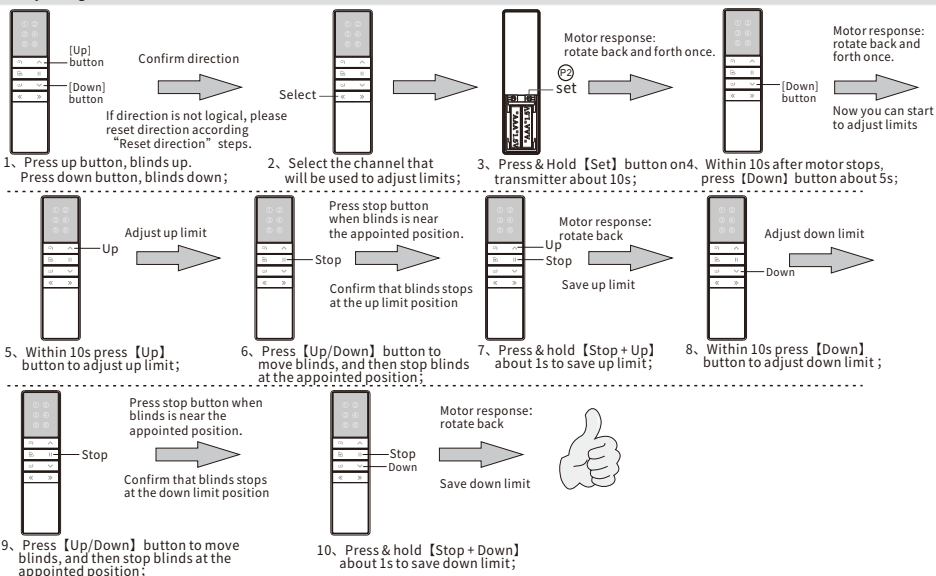

Adjust the third limit: Repeat the operation once to eliminate the third limit:

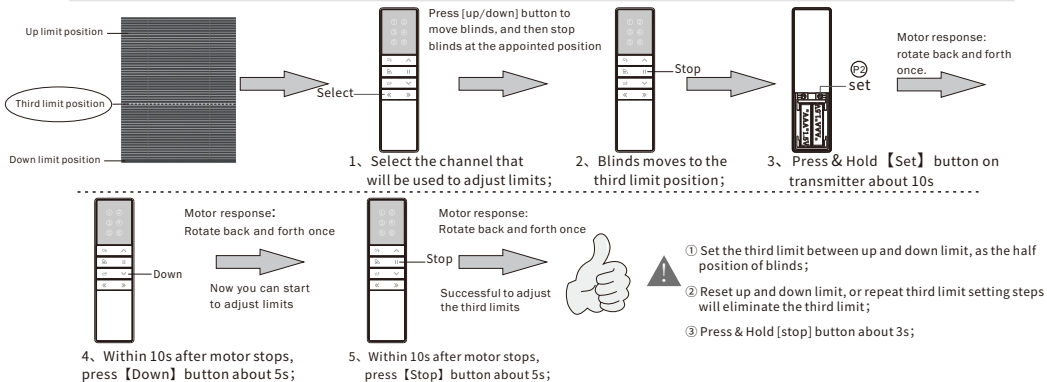

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Tubular Motor:

To maintain compliance with FCC's RF Exposue guidelines, This equipment should be installd and operated wih minimum distance between 20cm the radiator your body:Use only the supplied antenna.

Remote control:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.