


Tubular Motor NTY Bluetooth Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12248 A/0

E Electric roller blind draft (If the accessory with "*" that mean could be OEM)

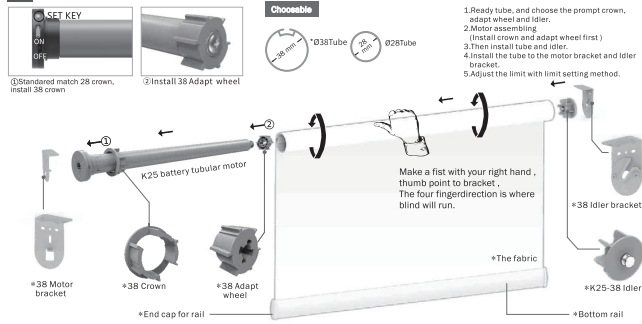


Note: This product does not support hand-pull function; Also use a dedicated transmitter with a "P" icon or an L-tag. Fully charge the product when not in use, and then recharge it every 12 months.


T Transmitter operating instructions

(*Take A13 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

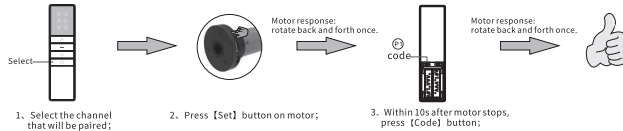

 
Clear pairing: Clear all pairing on the motor:




Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

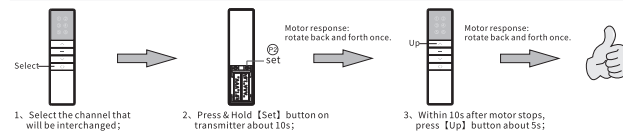


Copy: Add a new channel to control motor. (No need to touch motor):

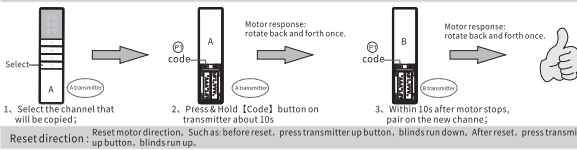


Reset direction: Reset motor direction. Such as before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

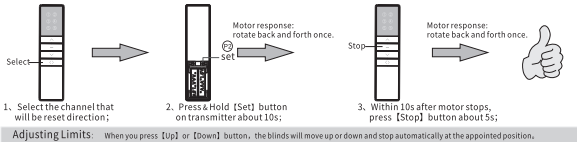


Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

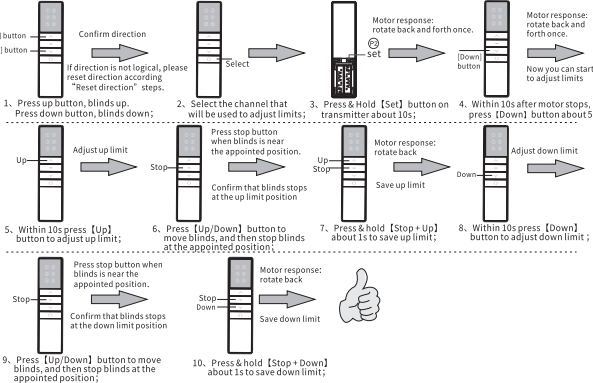


Adjust the third limit: Repeat the operation once to eliminate the third limit:

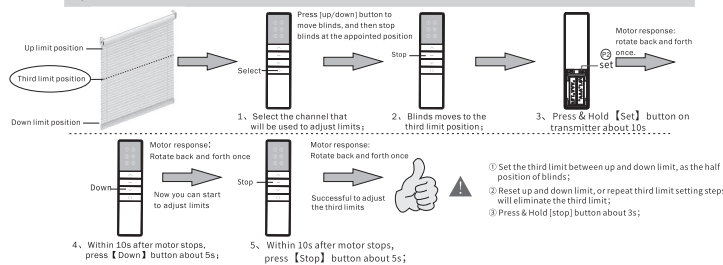

Reset Wi-Fi:

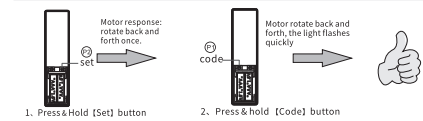

Configure network method: Before operation, make sure the Bluetooth and network of the mobile phone are turned on.

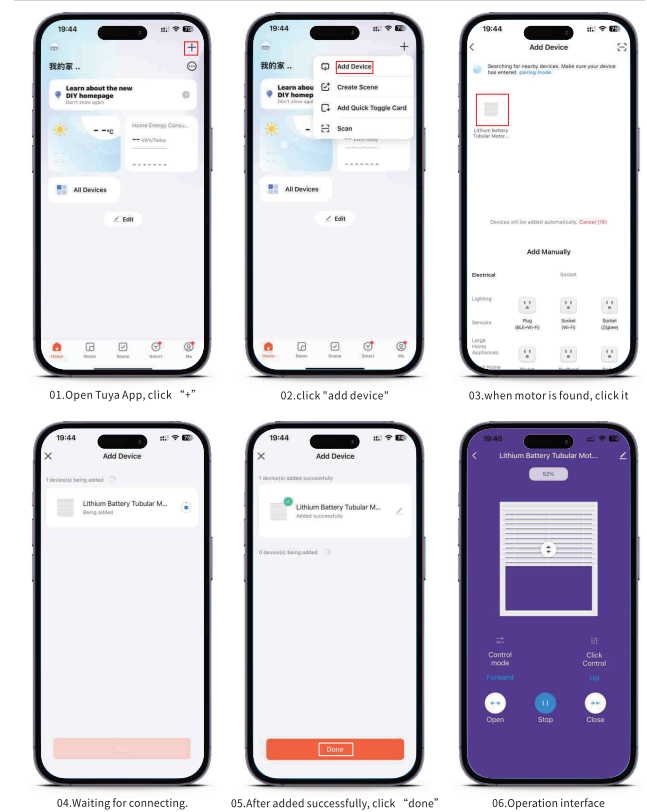

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Tubular Motor:

To maintain compliance with FCC's RF Exposue guidelines, This equipment should be installd and operated wih minimum distance between 20cm the radiator your body:Use only the supplied antenna.

Remote control:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.