

1 블루투스 연결하기

1. 사용전, 이어폰 충전단자의 보호필름을 떼고, 충전 크래들에 이어폰을 넣으세요. 이어폰의 적색 LED가 점등되면서 자동으로 충전이 됩니다.
2. 충전 크래들에서 이어폰을 꺼내세요. "전원이 켜졌습니다"라는 안내음이 나오고, 이어폰의 파란색 LED가 3번 깜빡입니다.
3. 양쪽 이어폰의 페어링(동기화)이 되면, 왼쪽 이어폰은 파란색과 적색 LED가 번갈아 깜빡이고 오른쪽 이어폰은 파란색 LED만 깜빡입니다.
4. 스마트폰의 블루투스 기능을 활성화 시키고, 장치명 "HEIMDEX TSX 5.2"를 찾아서 등록하면 "블루투스가 연결되었습니다."라는 안내음성과 함께 스마트폰과 연결됩니다.
5. 이어폰 사용중 갑자기 왼쪽 이어폰으로만 연결이 되고, 양쪽 이어폰 연결이 안될 때는 우선, 오른쪽 이어폰만 크래들에 넣었다 빼세요. 그럼 다시 양쪽으로 연결이 됩니다.


양쪽으로 연결이 안 될때는 다음과 같이 초기화 하세요.

1. 휴대용 블루투스 목록에서 "HEIMDEX TSX 5.2"를 삭제한다.
 2. 충전 케이스에서 양쪽 이어폰을 꺼낸다.
 3. 양쪽 이어폰의 전원 버튼을 약 6초간 길게 터치하여 전원을 끈다. (전원 OFF)
 4. 양쪽 이어폰 전원 버튼을 동시에 약 10초간 길게 터치한다. (전원이 켜지고, 약 10초 후 적색 LED가 3번 깜빡이며 전원이 꺼지면 이어폰 초기화 완료.)
 5. 충전 케이스에 이어폰을 다시 넣었다가 빼서 페어링한다.
 6. 자동으로 양쪽 이어폰이 동기화 되고, 휴대용 블루투스 목록에서 "HEIMDEX TSX 5.2"를 등록하고 사용합니다.
- ※ 유튜브에서 "TSX 5.2 초기화"를 검색하면 확인 가능합니다.


2 자동 전원 ON/OFF (자동 페어링)



 Type 1 : 수동으로 전원 ON

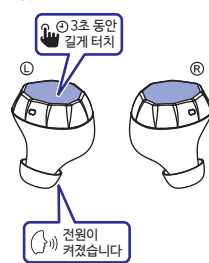


Type 2 : 크래들에서 이어폰을 꺼내면 자동으로 전원이 켜지고 페어링이 됩니다.

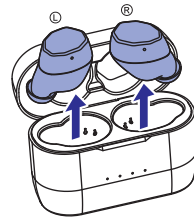 


① 휴대용 블루투스 목록에서 "HEIMDEX TSX 5.2"를 등록하고 사용하세요.



 Type 1 : 수동으로 전원 OFF

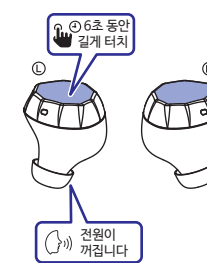

Type 2 : 크래들에 이어폰을 넣으면 자동으로 전원이 꺼집니다.

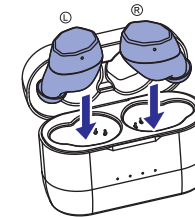 

Type 3 : 스마트폰과 블루투스 연결을 끊으면 3분 후에 자동으로 이어폰 전원이 꺼집니다.

충전 시 주의사항

5V 1A 이하 충전기 사용을 권장하며, 일반 스마트폰 5V 2A 충전기와 고속충전용 충전기 9V 1.67A / 5V 2A도 사용이 가능합니다. (단, 9V 이상 단독 급속충전용 충전기로 충전 시 배터리 과열로 인해 제품고장의 원인이 되니 사용하시면 안됩니다.)

※ 차량용 충전기 절대 사용불가

3 터치식 버튼 기능

L

2 sec
2초간 터치

모드변경 (일반모드 ↔ 주변음 허용모드)

x1
1회 터치



x1
1회 터치



x4
4회 터치



2 sec
2초간 터치



x2
2회 터치



x5
5회 터치



x3
3회 터치



R

2 sec
2초간 터치

모드변경 (일반모드 ↔ 주변음 허용모드)

x1
1회 터치



x1
1회 터치



x4
4회 터치



2 sec
2초간 터치



x2
2회 터치



x5
5회 터치



x3
3회 터치





FCC ID : 2AZR5-TSXDIAPOT


4 충전하기

이어폰 충전하기

  이어폰에 배터리가 거의 없으면, 경고 안내음성이 나오고 적색 LED가 10초 마다 깜빡거립니다.

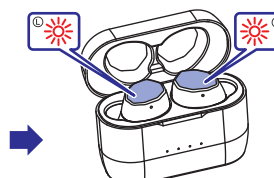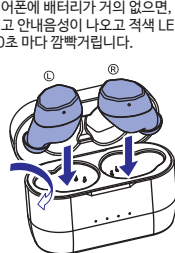

 이어폰을 충전 크래들에 넣으면 자동으로 전원이 꺼지면서 충전을 시작합니다.

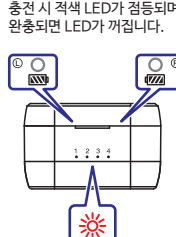

충전 시 적색 LED가 점등되며, 완충되면 LED가 꺼집니다.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency

 
energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

1

First time to use Bluetooth pairing

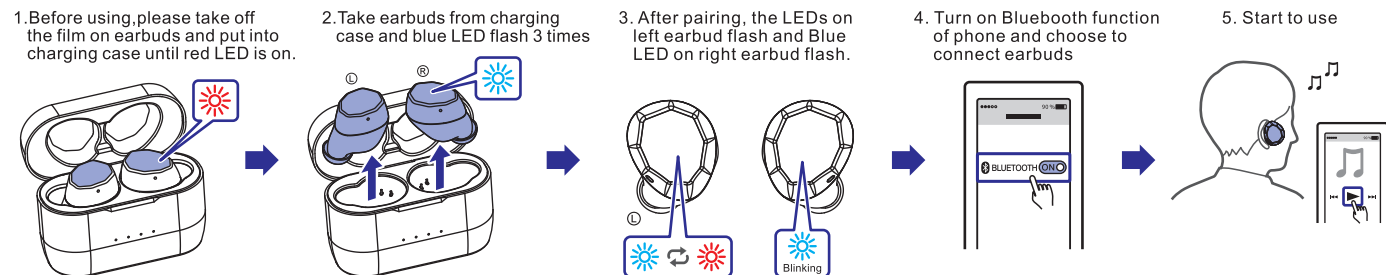

■ FACTORY RESET

 
If you can't connect both earbuds, initialize the earbuds as follows.

1. Delete "HEIMDEX TSX 5.2" from the cellphone's Bluetooth list.
2. Take both earbuds out of the charging case.
3. Power off by touching and holding the power button of both earbuds for about 6 seconds.
4. Touch and hold both earbud power buttons at the same time for about 10 seconds. The red LED blinks 3 times and the power off. (Earphone factory reset is successful)
5. Put both earbuds back to cradle and take them out and pair them again.
6. Register and use "HEIMDEX TSX 5.2" in the mobile phone's bluetooth list.

※ Search for "TSX 5.2 Factory reset" on YouTube.


2

Auto Power on/off (Auto Bluetooth pairing from 2nd time)

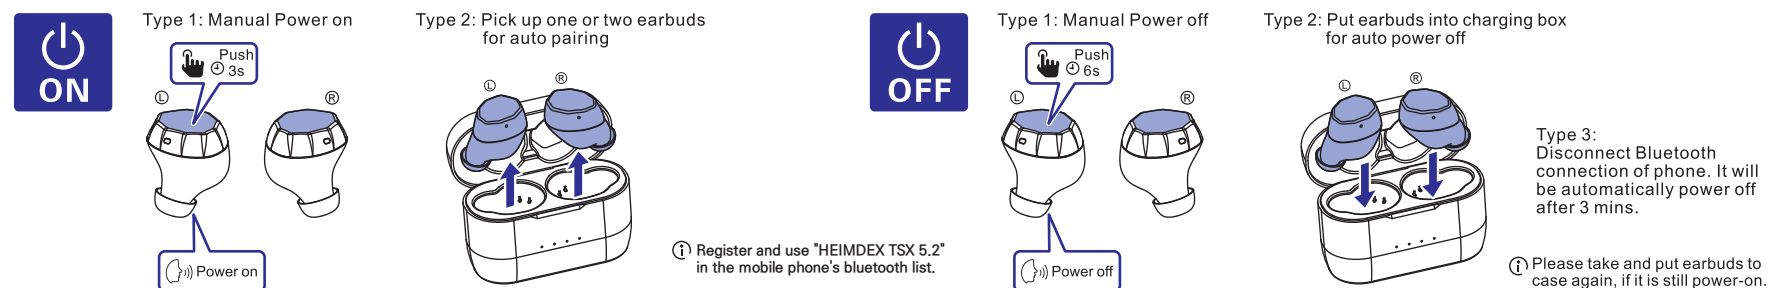

3

 Touch Control

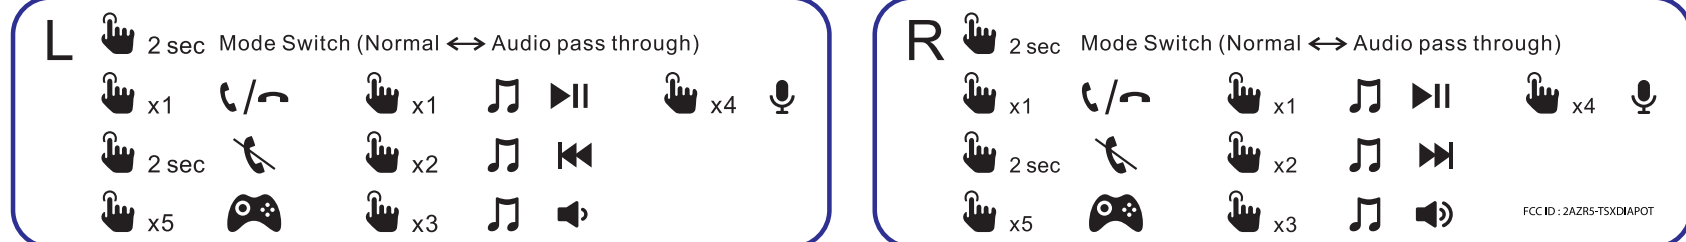


① Wear earbuds correctly

4

Charging


Earbuds charging

 When low battery, there is an indication voice from earbuds Besides, the LEDs have red flashing every 10 seconds.

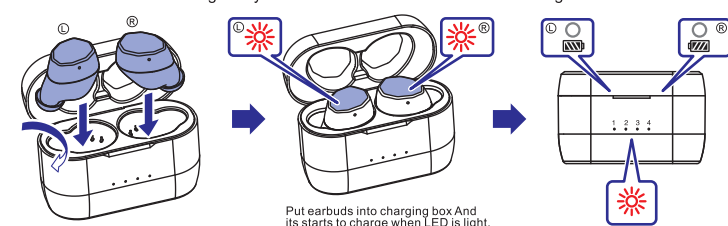

● ● ● ●	4 LEDs On(75~100%)
● ● ● ○	1~3 LEDs On(50~75%)
● ● ○ ○	1~2 LEDs On(25~50%)
● ○ ○ ○	1st LED on (3~25%)
● ○ ○ ○	1st LED blink (<3%)

 Box charging

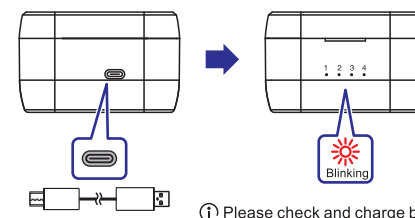

■ CAUTION ON CHARGE

5V 1A or less charger is recommended.
5V 2A Charger & 9V 1.67A/ 5V 2A Mixed charger is available.
(However, Fast chargers can cause product failure.)
※ Never use fast charger for vehicle

● ○ ○ ○	1st LED Blink (<25%)
● ● ○ ○	2nd LED Blink (25~50%)
● ● ● ○	3rd LED Blink (50~75%)
● ● ● ●	4th LED Blink (75~100%)
● ● ● ●	All Blink (100%)

① Please check and charge battery frequently, to get a better performance of battery.