

SECURITY CAMERA Q4

 
Quick Start Guide



www.arcctlvlife.com

support@arcctlvlife.com

Product overview

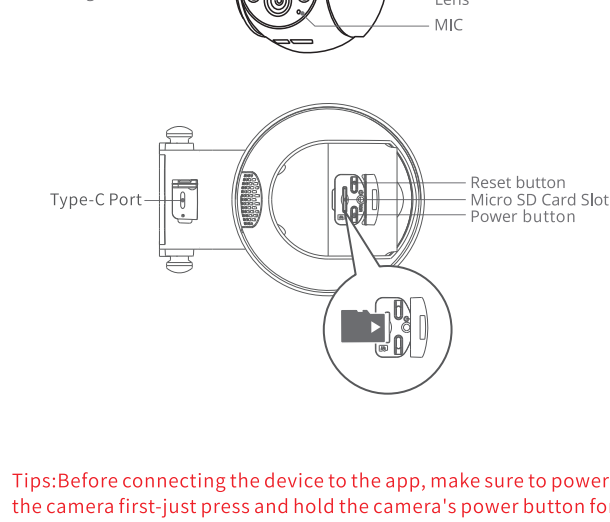


Tips: Before connecting the device to the app, make sure to power on the camera first-just press and hold the camera's power button for 3 to 5 seconds.


01

2. Download the ARCCTV APP

 Download “ARCCTV” from Google Play /App Store or Scan the following QR Code onto your Mobile Phone.

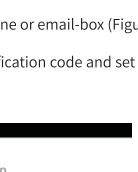

Android

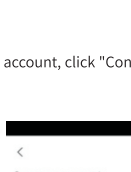 


iOS

3. Register an account

1. Open the “ARCCTV” APP to register an account. Go to the login interface then click “Register” (Figure 1)

2. Register with your phone number or email address, click “Confirm”, a verification code will be sent to your phone or email-box (Figure 2)

 
3. Input the verification code and set a password for the app account, click "Confirm" to complete (Figure 3)

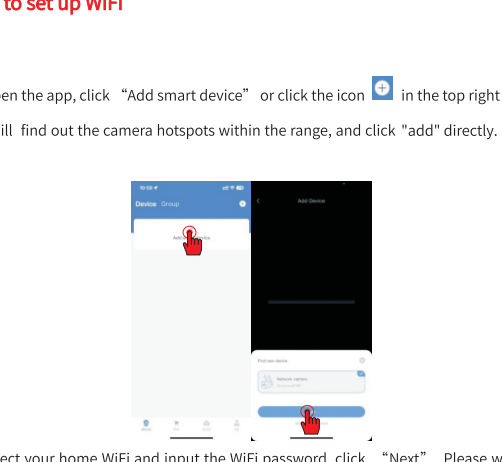

02


4. How to set up WiFi

 Step 1: Open the app, click “Add smart device” or click the icon in the top right corner, then the APP will find out the camera hotspots within the range, and click "add" directly.

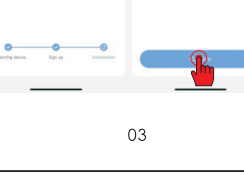

Step 2: Select your home WiFi and input the WiFi password, click “Next”. Please wait until you hear a voice message “Wireless Connection Successfully”, it means that your camera has connected to your home WiFi successfully. Name your camera and click “Confirm”.

 Step 3: Enter the device list interface and click the play button to enjoy the camera screen.

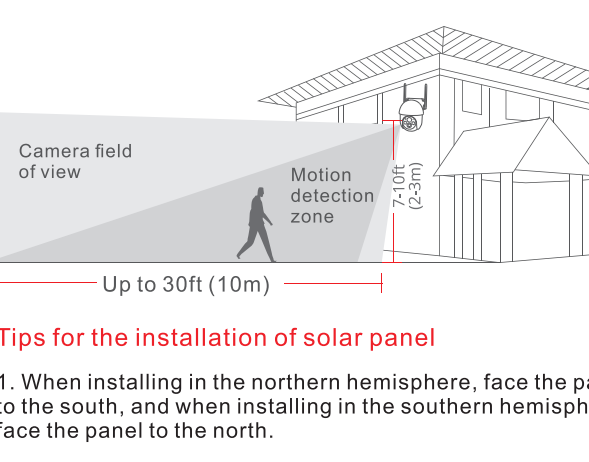

03

 
Mount the camera

Select height and location

Hang the camera 7 -10 ft (2-3m) above the ground. This height maximizes the detection range of the motion sensor of the camera. Avoid placing the camera under direct sunlight.

Tips for the installation of solar panel

1. When installing in the northern hemisphere, face the panel to the south, and when installing in the southern hemisphere, face the panel to the north.
2. Take care to install the solar panel so that the sun is not blocked by any items such as leaves, trees branches, etc.

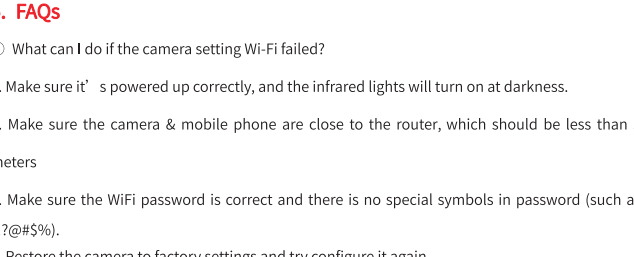

04

5. FAQs

① What can I do if the camera setting Wi-Fi failed?

1. Make sure it's powered up correctly, and the infrared lights will turn on at darkness.
2. Make sure the camera & mobile phone are close to the router, which should be less than 5 meters
3. Make sure the WiFi password is correct and there is no special symbols in password (such as *!@#%\$%).
4. Restore the camera to factory settings and try configure it again.

05

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Contact us

www.arcctlvlife.com

support@arcctlvlife.com