 


S350 Manual


HTS1.0

Please read all instructions before use for the best performance of this product . Save these instructions for future reference .

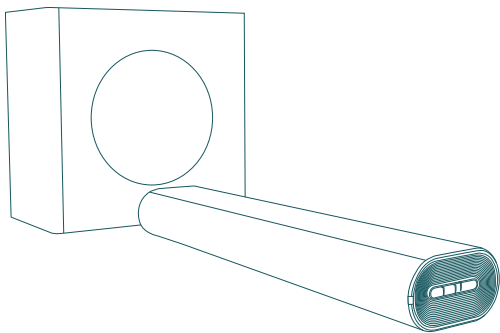


Please read all instructions before use for the best performance of this product. Save these instructions for future reference.

 
Box Contents

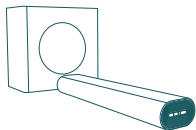

Sound Bar

 

Remote Control

 


Quick Start



Mount Screws and
Wall Mount Brackets




 3.5mm to 3.5mm
audio cable



Power Adapter

 LED Indicators and Button Introduction



LED Indicators

Standby
(Red)

Bluetooth
(Blue)

 
ARC
(Cyan)

Optical
(White)

AUX
(Yellow)


USB
(Purple)

Right side of Sound Bar

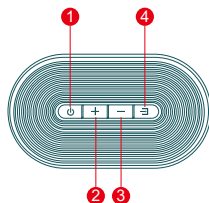

- ❶ 短按开关机，长按断开蓝牙
- ❷ 短按增大音量，长按切换上一首歌曲
AUX模式：长按和短按均可增大音量
- ❸ 短按降低音量，长按切换下一首歌曲
AUX模式：长按和短按均可降低音量
- ❹ 短按切换输入模式：BT/AUX/OPT/ARC/USB
长按进入多连模式，再长按退出多连模式

 Remote Control

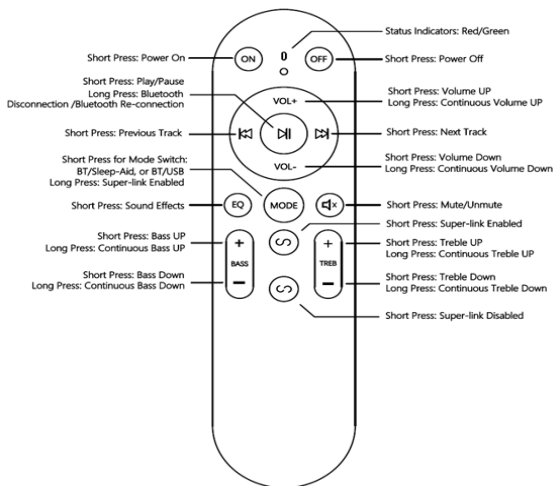

Short Press: Power On



Short Press: Power Off

VOL+

Short Press: Volume Up, Long Press: Continuous Volume Up

VOL-

Short Press: Volume Down, Long Press: Continuous Volume Down



Short Press: Previous Track^{4,5}

^{4,5}



Short Press: Next Track^{4,5}

^{4,5}



Short Press: Play/Pause; ^{4,5}

Long Press: Bluetooth Disconnection /Bluetooth Re-connection^{4,5}

^{4,5}



Short Press: Sound Effects^{4,5}

^{4,5}



Short Press for Mode Switch: BT/Sleep-Aid, or BT/USB ^{4,5}

Long Press: Super-link Enabled^{4,5}

^{4,5}

^{4,5}



Short Press: Mute/Unmute^{4,5}

^{4,5}



Short Press: Bass UP, Long Press: Continuous Bass UP^{4,5}

^{4,5}



Short Press: Bass Down, Long Press: Continuous Bass Down^{4,5}

^{4,5}



Short Press: Super-link Enabled^{4,5}

^{4,5}



Short Press: Super-link Disabled^{4,5}



Short Press: Treble UP, Long Press: Continuous Treble UP↵

↵

 


Short Press: Treble Down, Long Press: Continuous Treble Down↵

0

○ Status Indicators: Red/Green↵


Connection Diagram

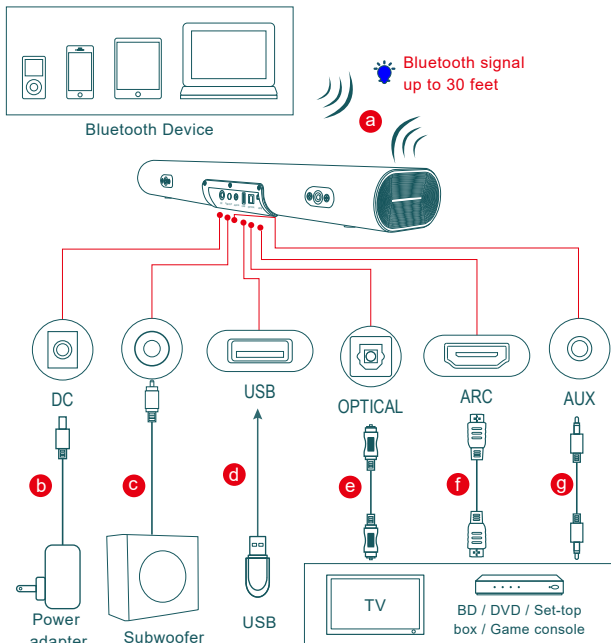

- a** Bluetooth
- b** Power Adapter (supplied)
- c** Audio cables (supplied)
- d** USB (not supplied)
- e** Digital Optical cable (not supplied)
- f** High speed ARC cable (not supplied)
- g** 3.5mm to 3.5mm audio cable (supplied)


Power on Your Subwoofer

 Connect the subwoofer cable into Sound Bar SUB OUT port as shown:

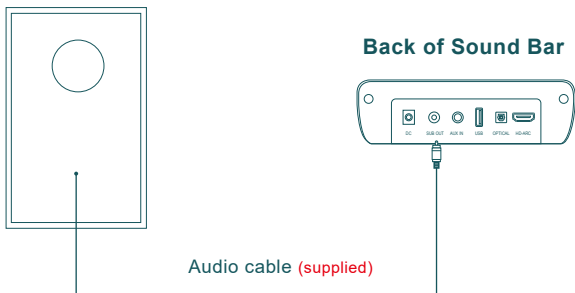

Back of Subwoofer

 Connecting with a TV

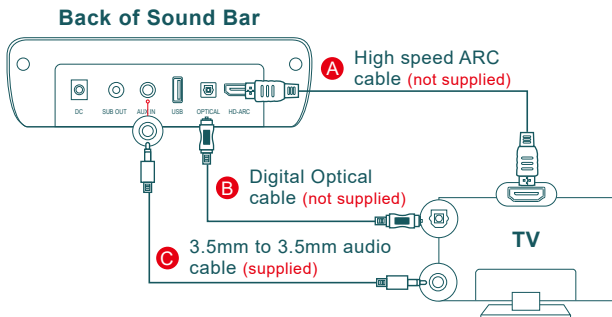

- A** Method 1. Connecting using an High speed ARC cable. Select ARC mode and set the TV's audio output to "PCM".
(More information on PCM page)
- B** Method 2. Connecting using an Optical cable. Select Optical mode and set the TV's audio output to "PCM".
(More information on PCM page)
- C** Method 3. Connecting using a 3.5mm to 3.5mm audio cable. Select AUX mode.

Setting "PCM" on your TV

When all cables are connected properly, and LED indicator lights properly, if there is no sound from tv or Sound Bar, please setting your tv as below:

 
1. Press "Menu" on the TV's remote control.
2. Press the arrow keys on the remote to scroll to "Audio Settings."
3. Press "OK" on the remote control.
4. Scroll to "Advanced Audio" and press "OK". Some televisions may not have an "Advanced Audio" menu and may list various audio settings instead.
5. Scroll to "Audio Output Mode" or "Digital Audio Output Mode" and press "OK".
6. Scroll until "PCM" is displayed as the current audio output.
7. Press "OK" to save the settings.

Connecting a Bluetooth Device




- a. Press the "BT" button on the remote or press the "≡" button on the right side of Sound Bar, the LED indicator blinks blue.
- b. Turn on Bluetooth on the Bluetooth device.
- c. Select "S350" and connect it. When your Bluetooth device is connected, the LED indicator blinks blue slowly.
- d. Play music files from the device, connected via Bluetooth, through the Sound Bar.

Installing the Wall Mount



1. Use the drilling tool to make 2 holes in the wall, making sure the hole size is as shown. Leave at least 3 inches between the soundbar and the TV.

 2. Thread the screws through the brackets and tighten each. Securely screw into the support screw holes.



3. Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a screwdriver.

4. Plug in power cable and audio cable before install the Sound Bar on the wall.
Install the Sound Bar by hanging on the brackets on the wall.



Install the Sound Bar

Specifications

Power output:	60W
Noise sound level:	≥85dB
Input sensitivity:	AUX: 650±50mV
Frequency response:	40HZ-20KHZ
Mid-tweeter:	44mm X 80mm
Woofer:	5.25 inch

Troubleshooting

If you have a problem with your Sound Bar, there is quick simple solution, first make sure:

- The cables between Sound Bar and input devices are securely connected, the power adapter is also connected to a working power source.
- The adapter LED indicator is lighting, and the LED indicator is lighting in the middle of Sound bar.

No sound or crackling noise

- Check if all cables are connected properly.
- Press Mute on the remote to ensure the Sound Bar is not muted.
- Press Volume+ on the remote or the right side of your Sound Bar.
- Make sure you have selected the right input source on your remote, and the LED is lighting accordingly.
- If using Bluetooth, check if the sound on your device is under minimum volume.
- If using Optical, check if your device (TV/Cable Box/Projector/etc.) audio output set to PCM or turn the Dolby/dts off.
- When using cable connection, make sure your device has audio output port (not input).

Remote isn't working

- Check if the battery is installed properly with power.
- Check if the signal of the receiver is covered by something.
- Contact your retailer for assistance.

I hear buzzing or humming

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the Sound Bar.

Bluetooth can't be connected

- Check if the Sound Bar is connected with the third Bluetooth device.
- Be sure that there are no solid obstructions between the Sound Bar and source device.(within 30 feet)
- Reboot the Bluetooth and connect again.

Hear echo when watching TV

- Setting your TV audio to External Speaker.
- Mute the TV speaker.

Have other questions?

- Please contact with your retailer for assistance.

Thanks for reading!

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.