

Instruction Manual

TABLE OF CONTENTS

ENGLISH

USER MANUAL - - - - -	1
TRACKPAD GESTURES FOR PIXEL TABLET - - - - -	3
TROUBLESHOOTING - - - - -	4
SPECIFICATIONS - - - - -	5
COMPLIANCE - - - - -	5

DEUTSCH

BENUTZERHANDBUCH - - - - -	6
TRACKPAD-GESTURES FÜR PIXEL TABLET - - - - -	8
FEHLERBEHEBUNG - - - - -	9
TECHNISCHE DATEN - - - - -	9

Technical Support:

 1-833-879-6277  support@dexnorcase.com



Pairing Mode

Press and hold  simultaneously for 3 seconds to enter into the pairing state. Bluetooth will exit the pairing state if no connection is made within 3 minutes.

Bluetooth Connection

 
Go to Tablet's Settings > Connected devices > Pair new device. Find "Dexnor Keyboard" under "Available devices" and connect it.

Bluetooth Re-connection

After a successful pairing, the keyboard will automatically pair with your Tablet in 5 seconds the next time.

Charging Indicator

Low Battery:  
In Charging:  
Fully Charged:  


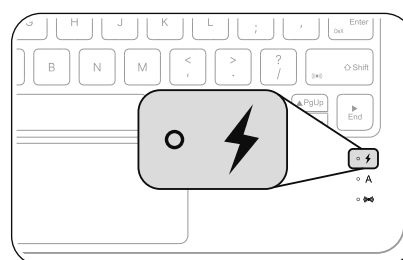


Basic Keyboard Settings

Go to **Tablet's Settings > System > Keyboard > Physical keyboard**

Trackpad Settings

  On your Tablet, Go to **Settings > System > Mouse**

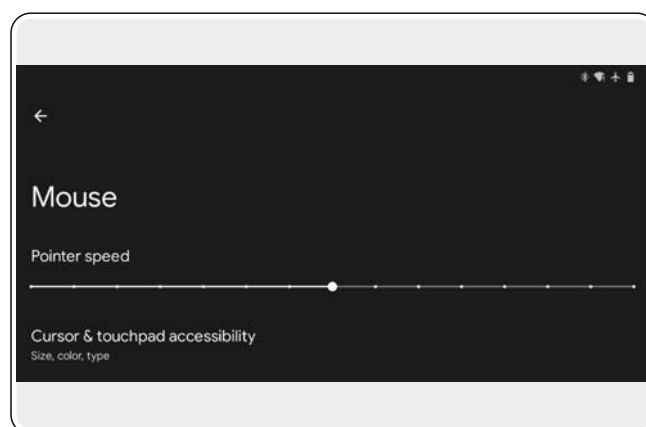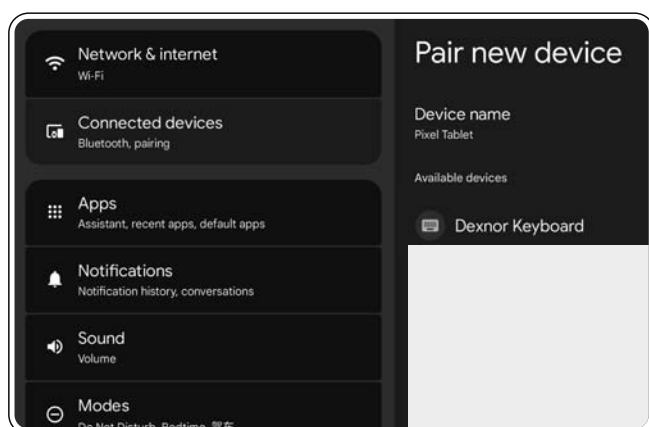


A Full Row of Shortcut Keys for Easy Media Control


	Press it with the Fn Key: Go to home screen		Press it with the Fn Key: Search		Press it with the Fn Key: Brightness -
	Press it with the Fn Key: Brightness +		Press it with the Fn Key: Take a Screenshot		Press it with the Fn Key: Previous Track
	Press it with the Fn Key: Play/Pause		Press it with the Fn Key: Next Track		Press it with the Fn Key: Mute
	Press it with the Fn Key: Volume -		Press it with the Fn Key: Volume +		Press it with the Fn Key: Lock the Screen
	Press it with the Fn Key: Adjust Brightness in Cycles (Low-Medium-High-Off)		Single Press: Caps Lock		Click: Switch Language Press it for 1s: System Menu
	Press and hold 3s: Enter Bluetooth Pairing Mode.		Press it 2 seconds: Power Switch		Single Press: Esc key
	Press It with the Fn Key: Disable/Enable the Trackpad				

Fn + Red-marked Keys: Get corresponding Red-marked symbols or functions;
Shift + Blue-marked Keys: Get corresponding Blue-marked symbols;
Alt Gr + Green-marked Keys: Get corresponding Green-marked symbols;

 US English Layout

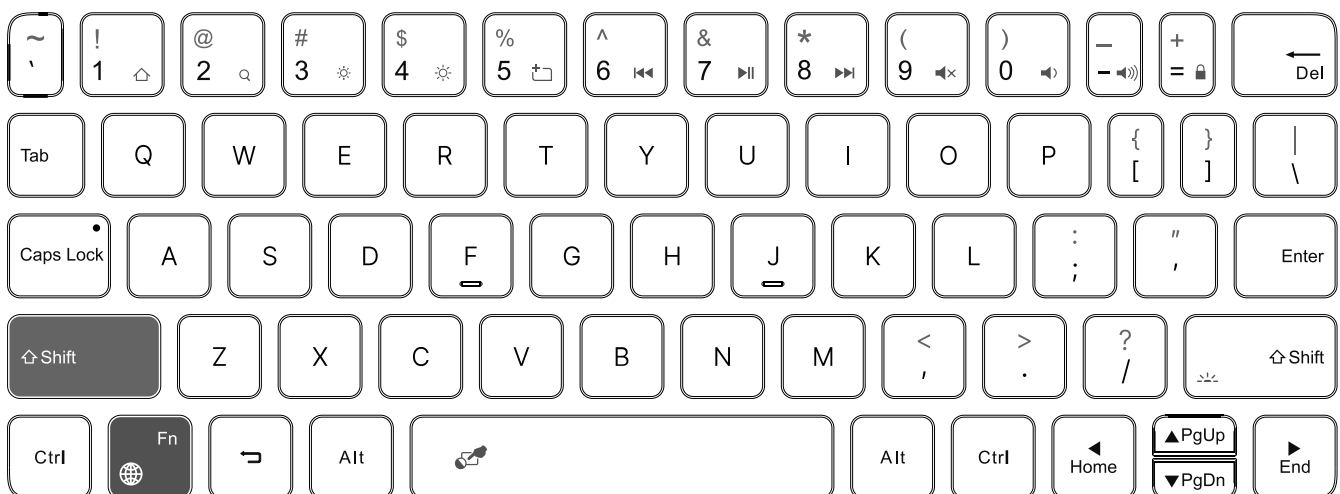

UK English Layout

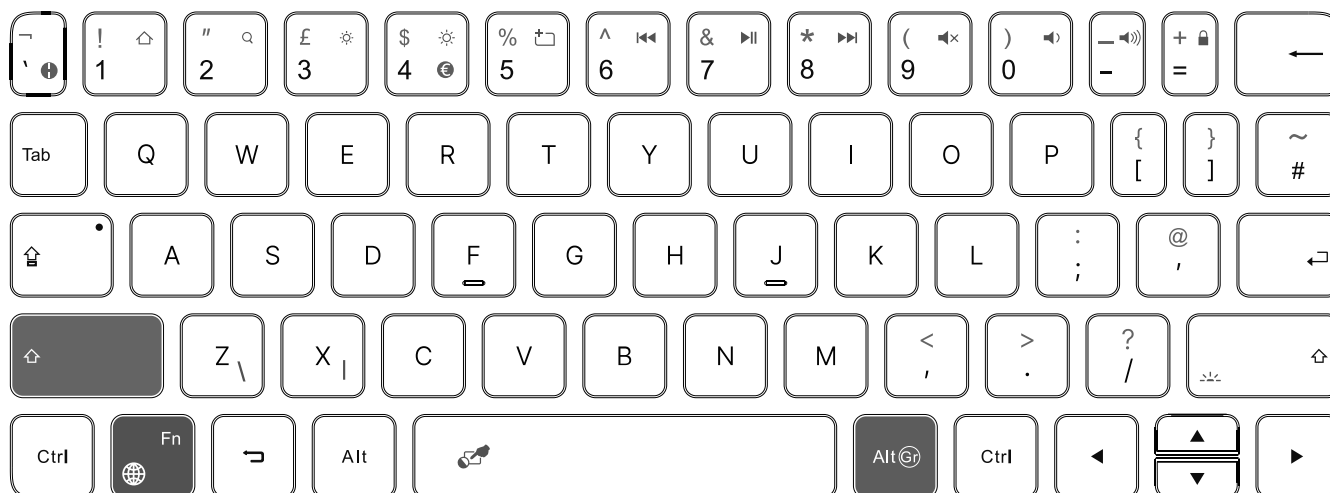 


TRACKPAD GESTURES FOR Google Pixel Tablet


EN



 
Connect your tablet to a 5 GHz Wi-Fi network.
Touchpad will not function under 2.4 GHz.

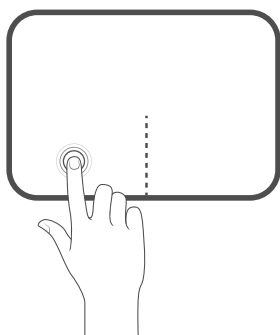

 
Press the left side to perform the left-button function.

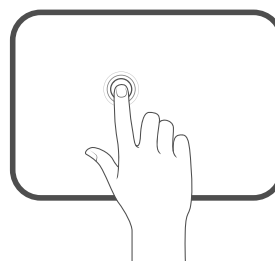

 
Tap with one finger to click.
Tap with two fingers to right-click.

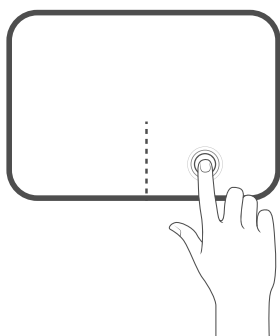


Tap with two fingers to right-click.

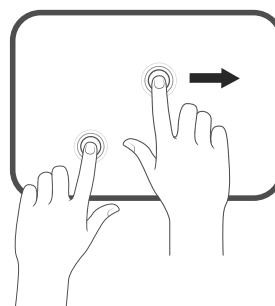 

 
Move the cursor onto one App icon, press and hold the left button, then drag the App.

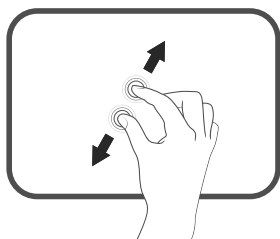

 
Pinch or stretch out with two fingers to zoom in or out.

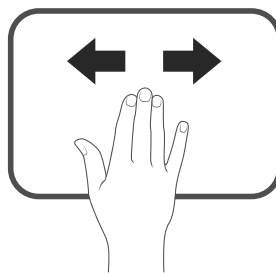

 
Swipe left or right with three fingers to show "Recents". Hold on the selected app and release to enter it.

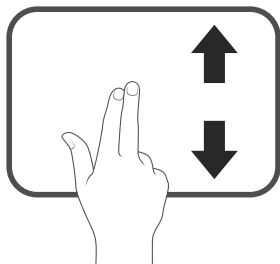

 
Slide up or down with two fingers to scroll.

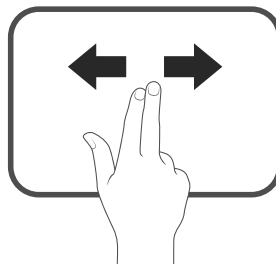

 Swipe left or right with two fingers to switch between pages of the home screen.

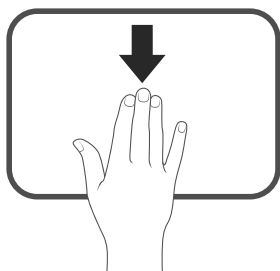

 Swipe down with three fingers to show the home screen.

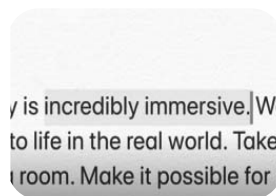

Left Button + Cursor:
Select Text.

TROUBLESHOOTING

EN

If the keyboard doesn't work, please check:

1. If it's powered on, if not, switch it on.
2. If its battery has run out, if yes, charge it immediately.
3. If Bluetooth connection fails, turn off the keyboard and restart it after 10 seconds, and the keyboard will reconnect to your device automatically. If the problem still exists, go to **Tablet Settings>Connected devices>Dexnor Keyboard>Unpair**. Then reconnect the keyboard according to the previous connection steps.
4. If Bluetooth connection still fails, press  and  for 2 seconds to restore factory settings. Then reconnect the keyboard.
5. Or you can restart your Tablet and then check if the keyboard can work normally.

Friendly Reminder

1. The Tablet cannot be used vertically on the keyboard case. It can only be positioned horizontally.
2. The keyboard is built with a rechargeable polymer battery. If you're not going to use the keyboard for a long time, we suggest turning it off to avoid power drain and extend its battery life.

SPECIFICATIONS

EN

1. Bluetooth Version: Bluetooth 3.0
2. Bluetooth Range: 10 meters
3. Standby Time: ≥ 720 h
4. Charging Time: ≤ 3.5 h
5. Continuous Working Time with the Brightest White Backlight: > 8 h
6. Continuous Working Time Without Backlight: ≥ 200 h
7. Auto-sleep Time of the Backlight: 45 s
8. Auto-sleep Time of the Keyboard: 30 min (Bluetooth will disconnect during deep sleep mode. Press any key to wake it up.)
9. Lithium Battery Capacity: 650 mAh
10. Package Content: 1* Keyboard Case, 1* USB-C Cable, 1* Quick-start Guide, 1* User Manual

WARNING:

A rechargeable Li-ion battery contained in the equipment. Do not disassemble, puncture, crush, heat, or burn it.

COMPLIANCE

EN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

Kopplungsmodus

Halten Sie  gleichzeitig 3 Sekunden lang gedrückt, um den Kopplungsmodus zu aktivieren. Wenn innerhalb von 3 Minuten keine Verbindung hergestellt wird, verlässt Bluetooth den Kopplungsmodus.

Bluetooth-Verbindung

 
Wechseln Sie auf dem Tablet zu „Einstellungen > Verbundene Geräte > Bluetooth > Neues Gerät koppeln“, um die Funktion zu aktivieren. Suchen Sie unter „Verfügbare Geräte“ nach „Dexnor Keyboard“ und verbinden Sie die Tastatur.

Erneute Bluetooth-Verbindung

Nach der erfolgreichen Kopplung wird die Tastatur beim nächsten Mal innerhalb von 5 Sekunden automatisch mit Ihrem Tablet gekoppelt.

Ladeanzeigen

Schwacher Akku:  
 Ladevorgang läuft:  
 Vollständig geladen:  


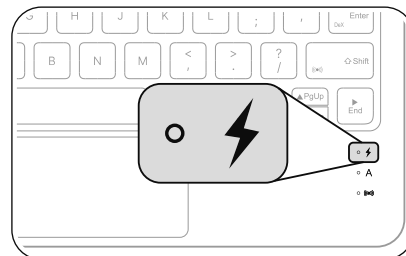


Grundlegende Tastatureinstellungen


Wechseln Sie am Tablet zu „Einstellungen > System > Tastatur > Physische Tastatur“.

Trackpad-Einstellungen

  Wechseln Sie am Tablet, zu Einstellungen > System > Maus

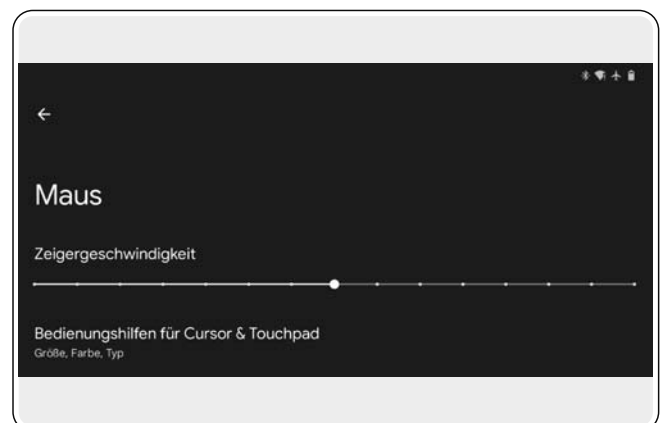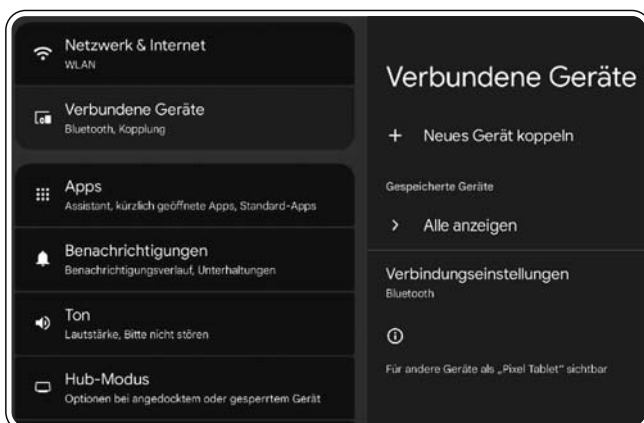

 Eine ganze Reihe von Tastenkombinationen für eine einfache Mediensteuerung

	Zusammen mit der Taste Fn drücken: zum Startbildschirm wechseln		Zusammen mit der Taste Fn drücken: Suche		Zusammen mit der Taste Fn drücken: Helligkeit –
	Zusammen mit der Taste Fn drücken: Helligkeit +		Zusammen mit der Taste Fn drücken: Screenshot aufnehmen Zusammen mit der Taste Fn		Zusammen mit der Taste Fn drücken: Vorheriger Titel
	Zusammen mit der Taste Fn drücken: Wiedergabe/Pause		Zusammen mit der Taste Fn drücken: Nächster Titel		Zusammen mit der Taste Fn drücken: Stummschalten
	Zusammen mit der Taste Fn drücken: Lautstärke –		Zusammen mit der Taste Fn drücken: Lautstärke +		Zusammen mit der Taste Fn drücken: Bildschirm sperren
	Zusammen mit der Taste Fn drücken: Helligkeit stufenweise anpassen (Niedrig – Mittel – Hoch – Aus)		Einmal drücken: Feststelltaste		Klicken Sie: Sprache Wechseln 1s lang drücken: Systemmenü
	2 Sekunden lang drücken: Bluetooth-Kopplungsmodus aktivieren		2 Sekunden drücken: Netzschalter		Einmal drücken : Esc-Taste
		Zusammen mit der Taste Fn drücken: Trackpad aktivieren/deaktivieren			

Fn + Rot markierte Tasten: Ruft die entsprechenden rot markierten Symbole oder Funktionenauf;

Shift + Blau markierte Tasten: Ruft die entsprechenden blau markierten Symbole auf;

Alt Gr + Grün markierte Tasten: Entsprechende grün markierte Symbole abrufen;

 


TRACKPAD-GESTEN FÜR DAS GOOGLE PIXEL TABLET


DE




Verbinden Sie Ihr Tablet mit einem 5-GHz-WLAN.
Das Touchpad funktioniert nicht im 2,4-GHz-Netz.

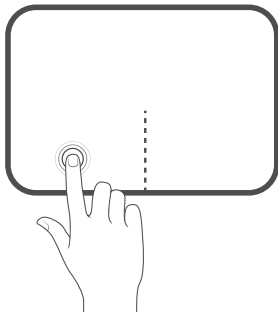

 
Drücken Sie die linke Seite, um die Funktion der linken Taste auszuführen.

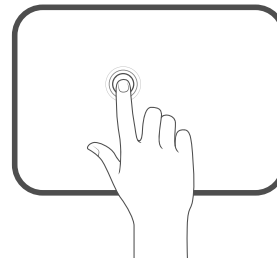

 
Das Tippen mit einem Finger entspricht einem Klick.
Das Tippen mit zwei Fingern entspricht einem Rechtsklick.

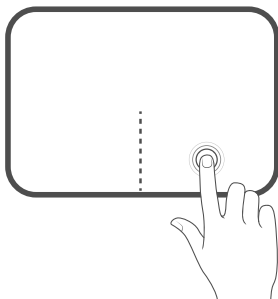


Mit zwei Fingern tippen: Rechtsklick

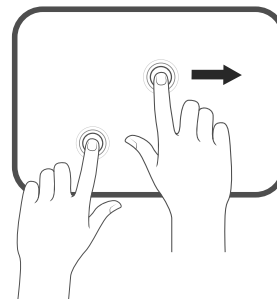 

 
Bewegen Sie den Cursor auf ein App-Symbol, halten Sie die linke Taste gedrückt und ziehen Sie dann die App.

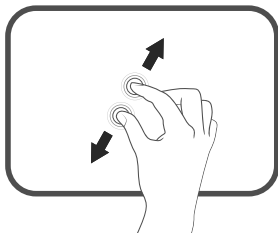

 
Drücken Sie zum Vergrößern oder Verkleinern zwei Finger zusammen bzw. ziehen Sie sie auseinander. (Verfügbar für Browser, Texteditor und andere Software.)

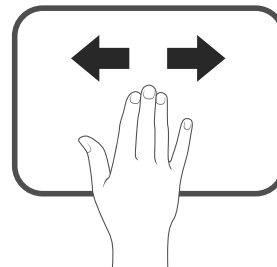

 
Mit drei Fingern nach links oder rechts Wischen: „Zuletzt verwendet“ anzeigen. Auf der ausgewählten App halten und loslassen, um sie zu öffnen.

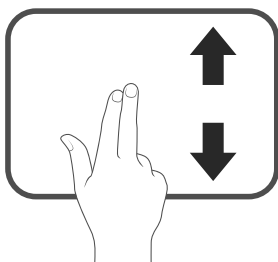

 
Streichen Sie mit zwei Fingern nach oben oder unten, um zu scrollen.

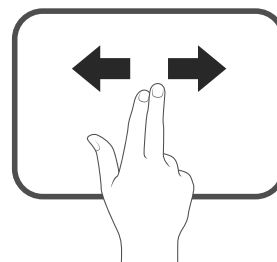

 Wischen Sie mit zwei Fingern nach links oder rechts, um zwischen den Seiten des Startbildschirms zu wechseln.

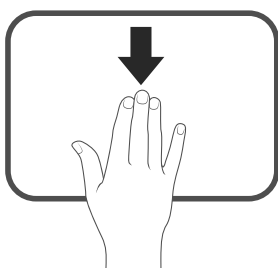

 Wischen Sie mit drei Fingern nach unten, um den Startbildschirm anzuzeigen.

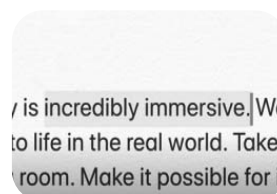

Linke Taste + Cursor: Text markieren.

Wenn die Tastatur nicht funktioniert, überprüfen Sie bitte Folgendes:

1. Ist die Tastatur eingeschaltet? Wenn nicht, schalten Sie sie ein.
2. Ist der Akku leer? Wenn ja, laden Sie ihn sofort auf.
3. Wenn die Bluetooth-Verbindung fehlschlägt, schalten Sie die Tastatur aus und starten Sie sie nach 10 Sekunden neu. Die Tastatur verbindet sich dann automatisch wieder mit dem Gerät. Wenn das Problem weiterhin besteht, wechseln Sie am Tablet zu „Einstellungen > Verbundene Geräte > Bluetooth > Neues Gerät koppeln“ und löschen Sie „Dexnor Keyboard“. Verbinden Sie dann die Tastatur erneut, wie in den vorherigen Schritten beschrieben.
4. Wenn die Bluetooth-Verbindung immer noch fehlschlägt, drücken Sie 2 Sekunden lang  und , um die Werkseinstellungen wiederherzustellen. Verbinden Sie dann die Tastatur erneut.
5. Alternativ können Sie Ihr Tablet neu starten und dann überprüfen, ob die Tastatur normal funktioniert.

Zur Erinnerung

1. Das Tablet kann nicht vertikal auf dem Tastaturgehäuse verwendet werden. Es kann nur waagrecht aufgestellt werden.
2. Die Tastatur ist mit einem wiederaufladbaren Polymer-Akku ausgestattet. Wenn Sie die Tastatur längere Zeit nicht benutzen, empfehlen wir Ihnen, sie auszuschalten, um Stromverbrauch zu vermeiden und die Lebensdauer der Batterie zu verlängern.

TECHNISCHE DATEN

1. Bluetooth-Version: Bluetooth 3.0
2. Bluetooth-Reichweite: 10 Meter
3. Standby-Zeit: $\geq$ 720 Stunden
4. Aufladezeit: 3.5 Stunden
5. Kontinuierliche Betriebszeit mit der hellsten weißen Hintergrundbeleuchtung: > 8 Stunden
6. Ununterbrochene Betriebszeit ohne Hintergrundbeleuchtung: > 200 Stunden
7. Automatische Einschlafzeit der Hintergrundbeleuchtung: 45 Sekunden
8. Automatische Einschlafzeit der Tastatur: 30 Minuten (Die Bluetooth-Verbindung wird im Tiefschlafmodus unterbrochen. Drücken Sie eine beliebige Taste, um es aufzuwecken).
9. Kapazität der Lithium-Batterie: 650 mAh
10. Paketinhalt: 1* Tastatur, 1* USB-C-Kabel, 1* Kurzanleitung, 1* Benutzerhandbuch

WARNUNG:

Das Gerät enthält einen wiederaufladbaren Li-Ionen-Akku. Er darf nicht zerlegt, durchstochen, zerquetscht, erhitzt oder verbrannt werden.



Scan the QR code to check
the installation video



V1.0 SKU-3000741