

USE ROTATION:

- Press and hold button  for 3 seconds to power Rotation ON.
- Press the button  to quickly swap between Rotation Speeds.
- Press and hold button  for 3 seconds to power Rotation OFF.

USE VIBRATION:

- Press and hold button  for 3 seconds to power Vibration ON.
- Press the button  to quickly swap between Vibration Patterns.
- Press and hold button  for 3 seconds to power Vibration OFF.

REMOTE USE:

- Toy must be turned ON for remote to connect.
- Press  button on remote to power ON.
- Press the **1** button to quickly swap between Rotation Speeds.
- Press and HOLD the **1** button to quickly pause Rotation.
- Press the **2** button to quickly swap between Vibration Patterns.
- Press and HOLD the **2** button to quickly pause Vibration.
- Press and hold  for 3 seconds to power OFF.

Clean and Care:

For longevity, we recommend a water-based lubricant. Wash after each use with warm water and toy cleaner. Dry before storing in a cool, dry location. Keep out of direct sunlight and separated from other toys.

Charging:

There is a small pinhole on the side of the base. Push the charging pin into the base, then connect to a USB port or adaptor. Power light will flash while charging and stays lit once fully charged. Remove from charger once fully charged.

Product specifications:

Materials:Silicone,ABS Plastic

Charging Time:Approx.2 Hours

Run Time: Approx.1 Hour

Functions: 3 Rotations +7 vibe Patterns

Battery Type: Lithium Ion

Remote Battery: 2AAA Batteries

Model:PAS-FC-03260

Sample Description:Remote for ROBO RAMMER /Plunger BLACK Roller



This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.