

SW427 Remote Control Instructions

1. Product Overview

Product Name: Remote Control

Product Model No.: SW427

FCC ID: 2BA76SW42MNT020

2. Environment requirement


Operation temperature: $+10^{\circ}\text{C} \sim +40^{\circ}\text{C}$.

Storage temperature: $-10^{\circ}\text{C} \sim 65^{\circ}\text{C}$.

Operating Humidity: 10%~80%RH, non-condensing.

Storage Humidity: 10%~85%RH, non-condensing.

3. Directions for Operation

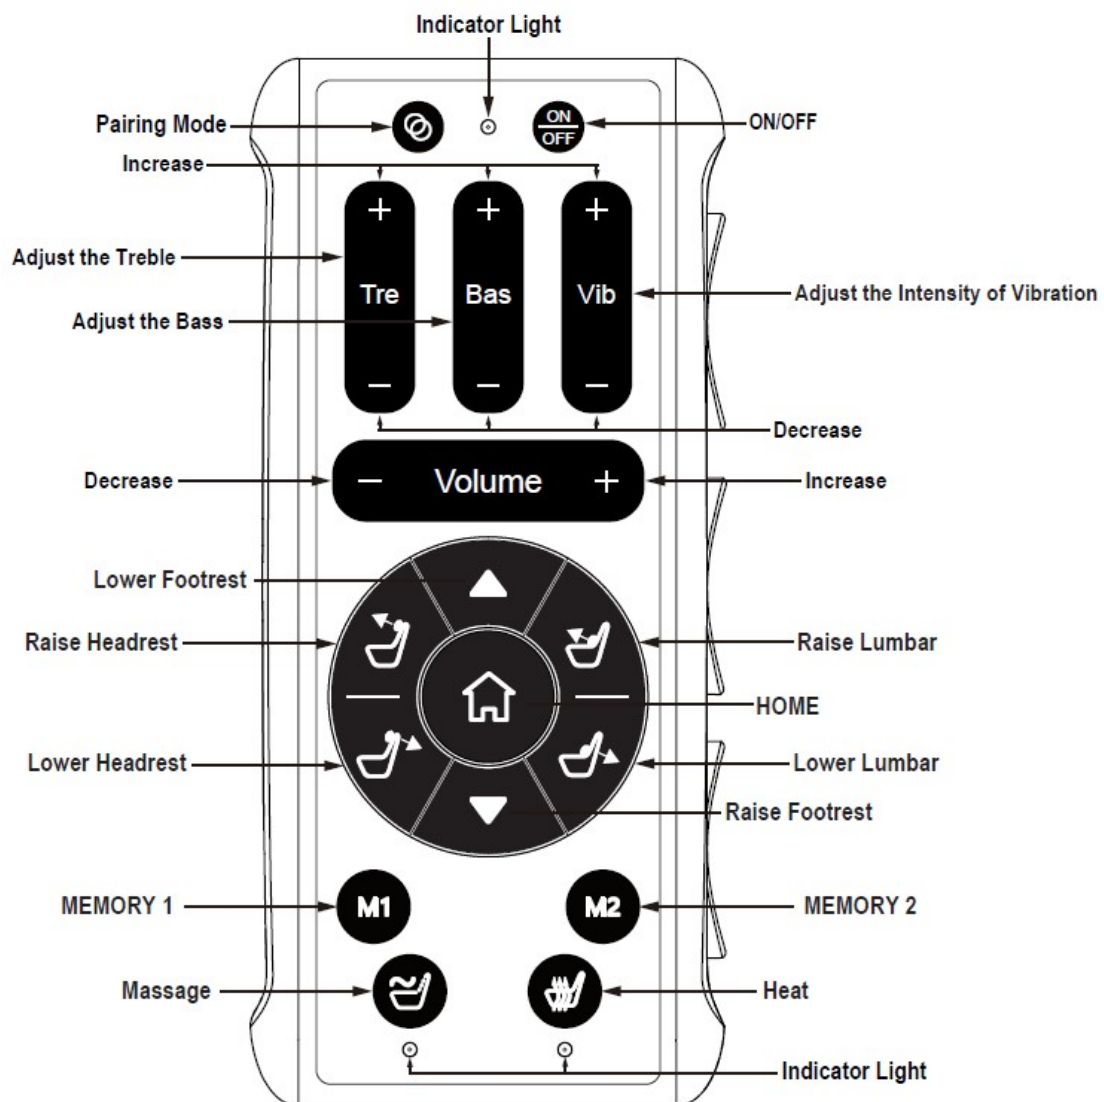

HOW TO PAIR THE RECLINER WITH THE REMOTE CONTROL

First, turn off the power to the recliner; then press and hold the RECL function's ON/OFF button

of the RECL function on the remote control until the indicator light dims, indicating that the remote control has entered the pairing state, and then reconnect the recliner to the power, when the recliner emits a connection prompt (sound), it means that the recliner and the remote control are successfully paired.

HOW TO CONNECT WIRELESSLY

When using the sound system, first turn on the power of the recliner, press and hold the Pairing Mode button of the remote control for 3-5 seconds, when the blue signal light starts to flash, it means that the remote control has entered the pairing mode, and then use the mobile phone to search for the wireless connection named "MOTO Immersive Audio", click to pair, and the sound of "connected" will be emitted after connection; To stop pairing, you can disconnect your phone, and the voice prompt will say "Disconnected".

Alternatively, press and hold the Pairing Mode button again for 3–5 seconds to disconnect the currently connected device and re-enter pairing mode. Then short press the Pairing Mode button to stop pairing.

CONNECTING TO AND DISCONNECTING FROM BROADCAST MODE

Double-click the Pairing Mode button to enter the broadcast mode, the recliner will emit a voice prompt of

"Broadcast mode", indicating that the broadcast mode has been entered, at this time, the blue signal light will turn red, if you enter the broadcast mode when connecting to the wireless connection, the signal light will turn pink; If you want to exit broadcast mode, double-click the Pairing Mode button again and hear the "Broadcast off" prompt.

HOW TO ADJUST THE VOLUME, TREBLE, BASS, VIBRATION

The Volume, Bass, Treble, and Vibration controls each offer 10 levels of adjustment. To use them: press the relevant button to activate, push up to increase Treble/Bass, and push down to decrease them.

HOW TO CLOSE ALL

Press and hold the OFF button for 3-5 seconds, and you'll hear the voice prompt "Power off".

HOW TO USE AIR MASSAGE

Press the Air Massage button to activate the air massage function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off). Activating the lumbar adjustment function will stop the air massage if it is in operation.

Massage working time: 20 minutes.

HOW TO USE HEATING

Press the Heat button to activate heat function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off).

Heat working time: 30 minutes.

HOW TO USE MEMORY FUNCTION

Press and hold Memory 1 button and Memory 2 button for 3 seconds. The buzzer on the remote will keep ringing to indicate that the hand control is in "set" mode. Press and hold the desired memory button to set the memory position. The buzzer will beep twice from control box.

To go to a preset Memory 1/Memory 2 position, press and hold the desired memory button M1/M2.

HOW TO PAIR THE NEW REMOTE

Disconnect the power supply, then Press and hold the "Lower Headrest" button and "Raise Headrest" buttons for 5 seconds, the buzzer in the remote will beep twice. Connect the power,

the buzzer in control box will ring three times, and then the remote will ring one time. The pairing is finished.

4. Matters needing attention:

- 4.1 The function will only work normally in proper working power conditions.
- 4.2 Remote Control needs DC 3.7-3.85V powered by li-ion batteries.
- 4.3 The control box is needed for proper control.
- 4.4 If problems are identified, they must be treated by professional personnel.

5. Additional attention for user:

5.1 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

5.2 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5.3 For Intentional and unintentional radiators the manual shall caution the user and manufacturer that changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.