 


Pioneer

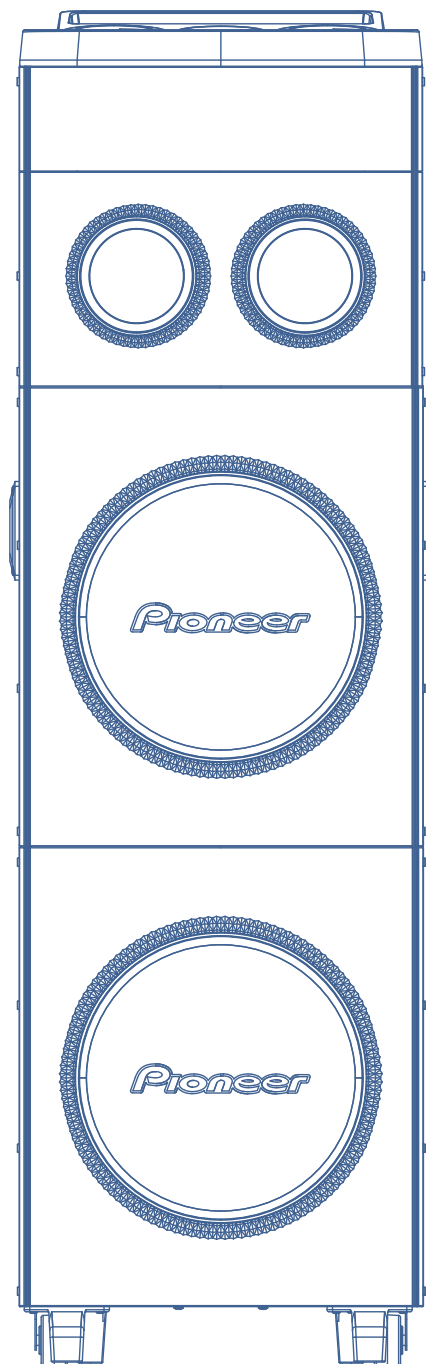

PS1226LD

BLUETOOTH V5.4

■ PRODUCT SPECIFICATIONS

Model: PS1226LD

Max music output power: 500W

AC input: AC100-240V~50/60Hz

Battery: 12V/7AH

Speaker frequency: 50Hz-15KHz

Bluetooth version: 5.4

Bluetooth range: Up to 33ft

Operating Temperature: Operating ambient temperature: -15-35°C

This product specifications and design are subject to change without notice!

 
PACKAGE LIST:

1. Party Speaker X1
2. Wireless Microphone x1 (Including AA Batteries X2)
3. User Manual X1
4. AC CableX1 (6.56 ft)

■ Overview


Designed for powerful sound and vibrant entertainment, this portable speaker delivers 500W max output power with Dynamic Bass Boost to keep the beats pumping. Create the perfect party atmosphere with editable LED display by KONTROL app, allowing personalized content like text, animations, and emojis to be shown, and take center stage with included wireless microphone and wired microphone inputs. In addition, the KONTROL app can be used to control the sound & lighting settings and LED display of PS1226LD. Whether you stream via Bluetooth 5.4, plug in through USB or AUX, or switch to FM radio, your music options are limitless.

■ Control Panel

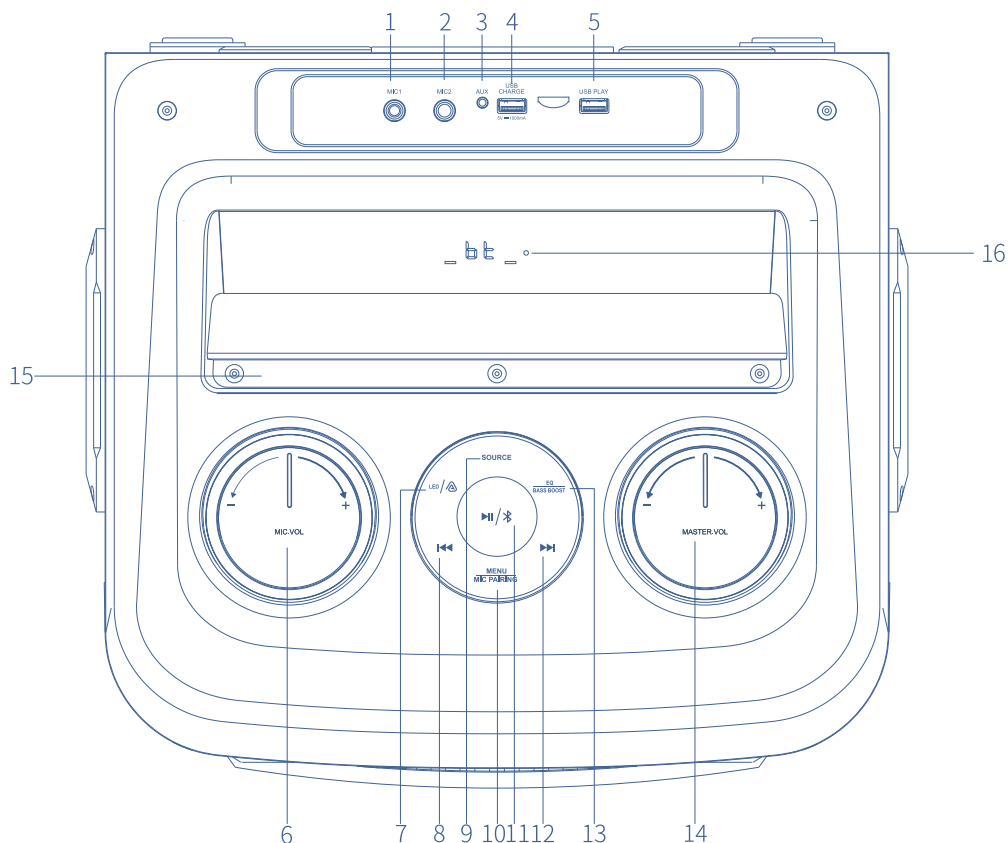

1. MIC1: 6.35 mm Microphone jack
2. MIC2: 6.35 mm Microphone jack
3. AUX: 3.5 mm input jack
4. USB CHARGER output: Max.1A output to charge your device
5. USB PLAY: USB storage device playback input (supports MP3 file format for high-quality audio playback)
6. MIC.VOL: Microphone volume adjustment
7. LED/△ : Short press to switch the lighting effect LED 1 - 15; Long press to enter Auracast mode; Double-click to cycle through dot-matrix display lighting effect
8. ⏮ : For Bluetooth and USB playback, short press to switch to previous track
In FM mode, short press to switch to the previous preset station, long press to manually search upward
9. SOURCE: Short press to switch to different mode
10. : Short press to access the Treble Gain, Midrange Gain, Bass Gain, and Microphone Reverb Gain menu; Long press to pair the wireless microphone
11. ⏸ : For Bluetooth and USB playback, short press to play/pause, long press to disconnect/connected Bluetooth device. In FM mode, long press to auto scan the FM station
12. ⏭ : For Bluetooth and USB playback, short press to switch to next track. In FM mode, short press to switch to the next preset station, long press to manually search downward
13. : Short press to switch the EQ preset ; Long press to turn on/off the heavy bass effect
14. MASTER.VOL: volume control
15. Device Slot: Rest your tablet or smartphone here

 16. Microphone indicator light
17. Segment LED
18. Bluetooth® source icon
19. Auracast transmit icon
20. Auracast receive icon
21. USB audio source icon
22. FM Radio icon
23. Battery icon

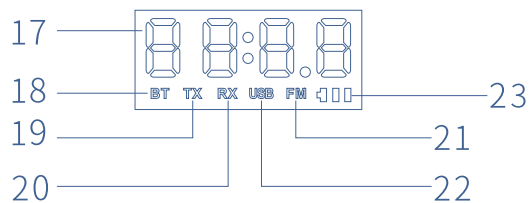

■ WIRELESS MICROPHONE PAIRING (MIC):



Microphone FCC ID: 2BAA5-PSWMIC-04

 


Unscrew the battery cover to insert or remove AA batteries.

1. Long press the POWER button on the wireless microphone for 2 seconds.
2. Double-click the POWER button to enter pairing mode; the white LED will flash.
3. Long press the MENU/MIC PAIRING button on the speaker for 5 seconds to pair the wireless microphone; the white LED will flash.
4. After a successful connection, the white LEDs on both the main unit and the speaker will become solid white.
5. The wireless microphone and speaker have been successfully connected and can now be used.

Power on

Plug one end of the power cord into the power port of the speaker and the other end into an AC wall outlet. Press the power button to power on the speaker.

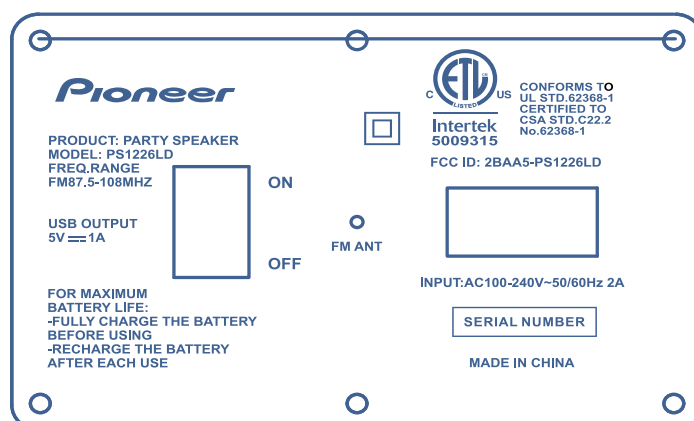

■ Bluetooth Pairing

Pairing & playing Audio

1. Press the SOURCE button to select Bluetooth mode.
2. Using the controls on your Bluetooth device, scan for and select Pioneer PS1226LD in your Bluetooth settings to pair. If your device requests a password, enter the default password 0000. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
3. Use the controls on the connected device to select and begin playing audio. Audio played through the connected Bluetooth Device will now be heard through the speaker. Use the controls on the speaker or the connected device to play, pause and adjust volume.

■ AUX IN

Requires a 3.5mm audio cable (not included)

1. Connect a 3.5mm audio cable to the PS1226LD AUX input jack and the audio output/headphone jack on an audio device.
2. Press the SOURCE button on the PS1226LD to switch to the AUX input.
3. Use the controls on the connected device to select and play audio.

■ EQ SETTING

The users can select the preset equalization modes by EQ button on the control panel.

■ LIGHTING MODE:

Short press the LED /  button to cycle through the 15 available light modes. The LED display will indicate mode number: "L01, L02, L03 .. OFF."

Light modes included:

RAINBOW -> SPIN -> SWIRL -> DANCE -> FOLLOW -> SPARK -> DISCO -> CYCLE -> NEON -> RED -> GREEN -> BLUE -> AMBER -> PURPLE -> TEAL -> OFF

NOTE: Only the following modes work with the FM Radio audio sources: RED -> GREEN -> BLUE -> AMBER -> PURPLE -> TEAL -> OFF

■ MIC INPUT

1. Connect the wired microphone to the MIC jack located on the top control panel of your speaker.

2. Adjust the volume level using the MIC VOL knob.

Attention: Wired microphone is not included with the product.

■ FM RADIO

1. Press the SOURCE button on control panel to switch to FM Radio mode.
2. Long Press ►► on control panel to scan and save radio stations automatically.
3. Press the ◀◀/▶▶ to switch the frequency manually.

■ USB INPUT

1. Load an USB storage device into the appropriate port.
2. The speaker will automatically switch the input.
3. Use the controls on the PS1226LD to control playback.

■ HOW TO CONNECT AURACAST™

How to find the TX and RX

TX Mode Setup:

- * Connect your smart device to a Bluetooth unit
- * Press the Auracast button on the unit to activate Transmitter (TX) mode.

RX Mode Setup:

- * Power on a second Bluetooth unit without pairing it to any smart device.
- * Press the Auracast button on the unit to activate Receiver (RX) mode and scan for available broadcasts.

 
Please note that when a secondary speaker (RX) is powered off, it will default back to its original factory setting. Auracast will need to be enabled again each time you power the speakers back on. Therefore, it is recommended to leave the second speaker on, otherwise you will have to reconnect it.

TX/ RX Range text

The receiving distance range between TX and RX is 10 meters, and the distance between the Bluetooth phone and TX speaker is 5 meters. To optimize Auracast mode, extend the tripod to improve the signal and enhance sound quality and stability.

■ KONTROL APP

1. The app can be used to control the sound & lighting settings and LED display of PS1226LD. The LED display allows users to customize content, colors, and dynamic styles via KONTROL APP.

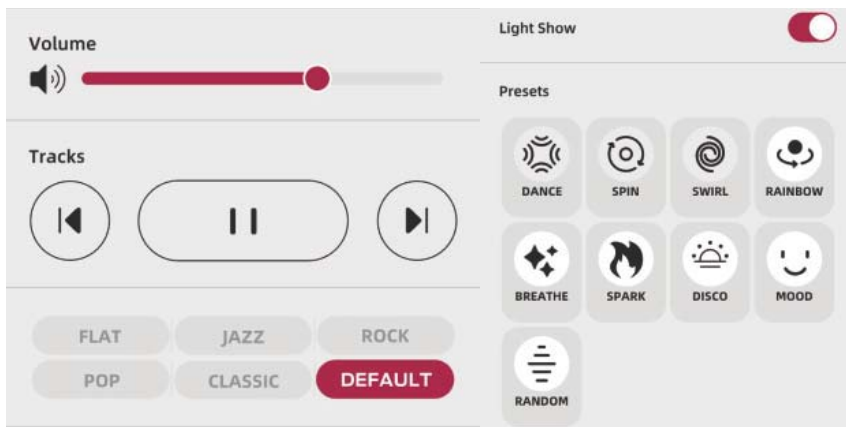

2. Download the KONTROL APP to manage Bluetooth & Auracast connections, select LED light modes, adjust Bass and Treble, and more!

Available on both Apple App Store & Google Play

Scan the QR code below to download the KONTROL APP!



iOS



Android

■ CAUTION

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

PRECAUTIONS BEFORE USE

■ ATTENTION

1. Do not use this device near water.
2. Clean only with a slightly damp cloth.
3. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") of free space around the entire device.
4. Install in accordance with the supplied user manual.
5. Do not step on or pinch the power cable. Be very careful, particularly near the cable, as this may damage it. Do not place heavy items on the power cable

Do not allow children to play with the power cable, as they can seriously injure themselves.

6. Unplug this device during lightning storms or when unused for a long period.

7. Keep the device away from heat sources such as radiators, heaters, stoves, candles, other heat-generating products, or naked flames.

8. Avoid using the device near strong magnetic fields.

9. Electrostatic discharge can disturb normal usage of this device. If this occurs, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.

10. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.

11. Do not use in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools.

12. Do not use this device when condensation may occur.

13. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the AC cable plug from the main power source socket immediately.

14. This device must operate on a power source as specified on the specification label and page 1 of this manual. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.

15. When using the speaker with extension cords, do not plug in other devices that may cause overloading of the extension cord.

16. Keep away from rodents. Rodents may bite power cords.

17. Always hold the AC cable plug when removing it from the main power source socket. Do not pull the power cord. This can cause a short circuit.

18. Avoid placing the device on any surfaces that may be subject to vibrations or shocks.

19. To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids. To remove severe stains, you may use a damp cloth with diluted detergent.

20. The manufacturer is not responsible for damage or data loss caused by malfunction, misuse, modification of the device or battery replacement.

21. For USB playback, the USB storage device must be plugged directly into the PS1226LD. Do not use a USB extension cable because it can cause interference, resulting in data failure.

22. Do not expose the product to dripping or splashing. Make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
23. The PS1226LD and its battery should not be exposed to excessive heat such as sunshine, fire, or similar heat sources.
24. Attention should be paid to the environmental aspects of battery disposal.
25. The product should not be exposed to extremely cold or hot environments.
26. The rating label is located on the back panel of the PS1226LD.
27. Children ages 0–12 should operate this product only with adult assistance.
28. This product is intended for non-professional use only and not for commercial or industrial use.
29. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by the warranty.
30. Never remove or open the case of this product.
31. Never place this product on other electrical equipment.
32. Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust, or vibration.
33. Do not allow children access to plastic bags.
34. This product should only be serviced by the manufacturer. Service is required if the product has been damaged or fails in any way.
35. Do not use a damaged AC cable or plug the AC cable into a loose or damaged main power source socket. Doing so may result in fire or electric shock.
36. Prolonged exposure to loud sounds from this product may lead to temporary or permanent hearing loss.

■ INSTALLATION

- * Unpack all parts and remove protective material.
- * Do not connect this product to the main power source socket before confirming that the power source matches the specification label and page 1 of this manual.

■ TROUBLESHOOTING

Problems	Solutions
Bluetooth pairing cannot be completed	Another mobile device may already be connected, or Bluetooth on the previous device may not be turned off. When pairing, this device will automatically search for and connect to an available Bluetooth device. First, turn off Bluetooth on the connected device. Then the next Bluetooth device can be found and paired normally.
Volume of playback via Bluetooth is small	After connections with mobile devices, volume of Bluetooth device is not up but at the default output level. Turn on the mobile device output. Output volume of Bluetooth device is low itself.
Connection distance via Bluetooth is short	Obstruction exists between mobile devices and Bluetooth device. Remove obstructions.
Bluetooth connection plays normally, sometimes with broken sound	Obstruction exists between mobile devices and Bluetooth device. Remove obstructions. Too far away from Bluetooth device to connected mobile devices, beyond the connection range. Shorten the distance between the Bluetooth device and mobile devices.
Silent play after connection via Bluetooth	After connections with mobile devices, Bluetooth device audio is off. Turn on the mobile's output volume.

■ FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

2.4G Wireless Microphone-04

PSWMIC04

The device can be used in portable exposure condition without restriction.

■ LIMITED WARRANTY

This Pioneer branded "Product", marketed as new, in the original carton to the original purchaser ("Product"), is warranted by JSP, LLC against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year for labor and one (1) year for parts.

This Limited Warranty is conditioned upon proper use of the Product by you, the purchaser. This limited Warranty does not apply to store-display products and products sold as a "marked down", "Special" in "as is" condition, "close outs", "liquidation and clearance sales, open box", products missing accessories, or not fault found. Proof of purchase in the form of Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the Limited Warranty period. The Bill of sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtain Limited Warranty Service.

This Limited Warranty begins on the original date of purchase and is valid only on Products purchased through our authorized dealers and used in the United States, Canada and Puerto Rico, by the original purchaser. To receive warranty service, the purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the Limited Warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer. Product freight must be prepaid by you, the original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products. If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This Limited Warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product and shall not apply to the following, including, but not limited to:

Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations,

repairs external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems, incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY, THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES OUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

This product is manufactured, distributed, serviced and warranted exclusively by E & S International, Inc., either directly or through JSP, LLC. 7801 Hayvenhurst Ave, Van Nuys CA 91406.

The Bluetooth® and Auracast™ word marks logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Acoustmax International Co., Ltd. is under license. Other trademarks and trade names are those of their respective owner.

Apple, the Apple logo, and App Store are trademarks of Apple Inc, registered in the U.S. and other countries and regions.

Google Play and the Google Play logo are trademarks of Google LLC.

PIONEER is a registered trademark of Pioneer Corporation, and is used under license.

Battery usage ambient temperature, storage ambient temperature, and altitude:

Operating Temperature Range: 32F° - 104F°

Operating Humidity Range: 40~90% RH

Storage Temperature Range: -13F° to 158F°

Altitude not higher than 5000m (air pressure not less than 80kPa)

The power plug is used as the disconnect device so the disconnect device shall remain readily operable.

For Customer Service email us at service@pioneeraudiousa.com

技术要求

- 1.名称：PT91219AD说明书
 - 2.尺寸：143*210MM
 - 3.材质：105g铜板纸，正反面印刷，骑马钉
 - 4.颜色：四色+1专色
(专色色号：PANTONE 201C )
 - 5.数量：1台/说明书
- 禁止包装含矿物油

Technical Requirements

1. Name: PS1226LD User Manual
 2. Dimensions: 148 x 210 mm
 3. Material: 105g coated paper, printed on both sides, saddle stitched
 4. Color: Four colors for cover + one spot color, black for inside pages
(Spot color: PANTONE 201C )
 5. Quantity: 1 unit/manual
- Packaging containing mineral oil is prohibited