



MODEL NO. RPJ602

2 IN 1 BLUETOOTH KARAOKE & 480P HOME THEATER

INSTRUCTION MANUAL



Important Safety Instructions

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier) that product heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD. RCA, the RCA logo and the two dogs (Nipper and Chipper) logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at www.rca-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.


Ideal for dark viewing environments for optimal performance. Please note: Projector brightness is measured in ANSI lumens. Your viewing environment is the deciding factor on how many lumens your projector needs.

Remove & Close The Lens Cover

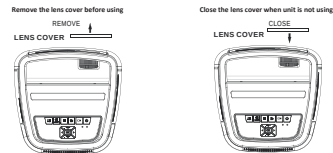

Placing of Your Projector

 Your projector can be installed in two different configurations (see picture below):

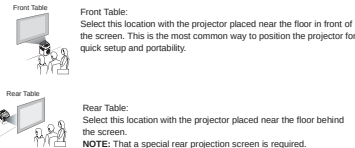

To Reduce Image Distortion

- Move the projector as close to the center of the screen as possible.
- The light beam from the projector should be perpendicular to the screen for a rectangular or square image.



Distance Between the Projector and Screen

Measure the distance between the projector and where you want to position the screen. This is the projection distance for reference.


Distance	Screen Size
1.16m	36inch
1.40m	45inch
1.51m	50inch
1.85m	60inch
2.2m	72inch
3.04m	100inch
3.67m	120inch
4.46m	150inch

Adjust The Focus And Keystone

Follow below picture to adjust the focus and trapezoidal screen.

Adjust the focus by turning the knob while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.

 Keystone image is created when the projector lens is projected from above or below the center of the screen. Keystone correction restores the distorted image to a rectangular or square shape.

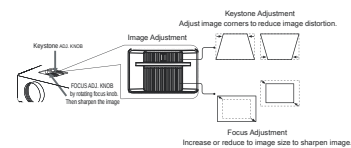

Additional Warnings and Precautions

1. Do not look directly into the projector light.
2. Don't touch the project lens
3. Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. WARNING: Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. WARNING: Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

FCC Warning

 
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

In The Box

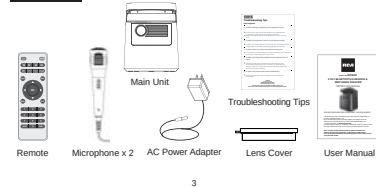

Controls of Projector

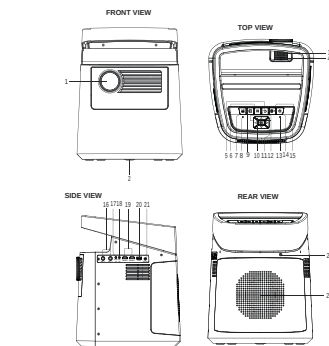 

1. LENS
2. ANGEL ADJ. Knob
3. FOCUS ADJ. Knob
4. TRAPEZOIDAL ADJ. Knob
5. RETURN Button
6. MENU Button
7. MUTE/PAIR Button
8. BT Indicator
9. SOURCE Button / LIGHT ON Button
10. A/V Buttons
11. IR Sensor
12. BT Pair Button
13. POWER Indicator
14. On Button
15. PROJECTOR Button
16. MIC1 and MIC2 IN Jack
17. AUDIO IN Jack
18. AV IN Jack
19. HDMI 1 and HDMI2 Port
20. USB Port
21. DC IN Jack
22. IR Sensor
23. SPEAKER

Table of Contents


Important Safety Instructions	P1
Additional Warnings and Precautions	P2
FCC Warning	P3
In The Box	P4
Table of Contents	P4
Remove & Close The Lens Cover	P5
Placing of Your Projector	P5
To Reduce Image Distortion	P5
Distance Between the Projector and Screen	P6
Adjust the Focus and Keystone	P6
Controls of Remote	P7
Install / Remove Batteries of Remote	P8
Controls of Projector	P8
Install Power Adapter	P9
Main Button Operation	P9
Connect HDMI Show The Image On Projector Screen	P10
Connect AV Show The Image On Projector Screen	P10
Connect Audio Input (Aux In / Line In)	P11
Install USB Device	P11
Using USB Playback (Media Player)	P12
Using Bluetooth Playback	P13
Using Microphone	P13
Using Echo	P14
Using Projector Menu 1	P14
Using Projector Menu 2	P15
Using Projector Menu 3	P15
Specifications	P16
Warranty Card	P17

Install Power Adapter

Follow below picture to connect power adapter. Plug the included AC adapter body into the standard AC power outlet to power the unit. Connect small end to DC IN jack of main unit. The unit is power on standby mode, the indicator is lighted red. After that, to turn on the unit, press button once on unit panel or by the remote. The indicator is lighted green.

WARNING:

 Before connecting to the power supply, ensure that the supply corresponds to the information on the rating label at the back of the apparatus.



Main Button Operation

- On - Press the button to turn on unit, press again to standby mode.
- SOURCE - Press the button to select input source.
- MENU - Press the button to enter projector menu.
- Navigation Buttons - Press the buttons to navigate and select screen item of menu.
- EXIT - Press the button to return to previous status or exit the menu.
- Fast Search Buttons - Press the buttons to fast search forward and rewind on USB.
- Navigation Buttons - Press the buttons to search next or previous file on USB.
- VOL+ / VOL- - Press the buttons to select the sound level.
- On - Press the button to play/pause the playback of file on USB.
- FLIP - Press the button to rotate / mirror projector screen
- PROJ - Press the button to On / Off the projector screen.
- PAIR - Press and hold the button to Pair or Unpair the bluetooth connection.
- LIGHT - Press the button to On / Off the light effect from remote, press and hold this button to on/off the light effect from unit.
- MUTE - Press to mute the audio. Press again to resume.

