

SoundExtreme Pulse[®]
28 inch Powersports
Amplified Soundbar

Pulse



Model: SEI-PLS2801

User Guide

Introduction

Features

The SoundExtreme Pulse (referred to as Pulse) includes the following features.

Speaker with Big Sound

- 500 watt peak power.
- 8 Marine-grade speakers: 2 tweeters, 4 mid-ranges, 2 woofers.

Multi-Audio Source Inputs and Output

- Bluetooth streaming.
 - Bluetooth 5.1 long range and reliable connection to your phone.
 - Dual simultaneous connections – switch playback between two phones.
 - Built-in speakerphone function.
- FM radio (no AM radio).
- Aux-In with integrated noise cancellation and input gain adjustment (via SoundExtreme app).
- Aux-Out.

Backlit Buttons

- When any button is pressed, the backlights will turn on to illuminate them for night use.

Built-in EcoCast Wireless Audio

- Wirelessly stream your radio's Bluetooth music, FM radio and Aux-In audio to EcoCast-enabled speakers. Supports up to 100 wireless connections between any mix of EcoCast-enabled ECOXGEAR and SoundExtreme soundbars, subwoofers, radios, and party speakers.

Introduction

- Play audio streams wirelessly received from an EcoCast Transmitting speaker. No wires!

Built-in LEDCast 4-Zone LED Controller

- 2 Zones for internal LED lights.
- 2 Zones for external, LEDCast-enabled LED strips, rocker lights, and whips (sold separately).

Integrated Addressable RGB LED Lights

- Addressable RGB LED backlights on all the 8 speakers
- Dual-function rear facing light bar with both RGB party lights, and utility (white) light with 3 brightness settings

Embedded Dome Light

- Dome light with dedicated button for 3 level brightness control.

Includes SoundExtreme RF Universal Remote Control

- Control the core audio and lighting functions remotely anywhere near and around your vehicle

Smartphone SoundExtreme App

The free SoundExtreme Smartphone App allows user to set up speaker's LED lighting control and configure speaker audio functions.

- Create dozens of LED color patterns, speed, brightness, music sync, and LED chasing.
- Create and save lighting Scenes by programming each of your device's and zone's LEDs to a specific color and mode, such as Christmas, 4th of July, Halloween, nighttime, and party scenes for a 1 button access later.
- Select your Dome Light's brightness (high, mid, and low) and set a timer to automatically turn the light off at a desired time.
- Configure the speaker Bluetooth function, Aux In, tune speaker's FM station and save 6 of your favorites to presets.

Introduction

5V USB Charge Out

- A 5V, 2.1A USB charge output for charging your phone.

Mounting Options

- V-Groove Mounts and integrated mounting rail with threaded mounting holes for multiple mounting configuration options.
- Check out www.soundextreme.com for additional mounting bracket options.

Important

- Please read the User Guide before installation and use.

Power Supply and Soundbar Power State

- Your Pulse soundbar requires a 12V DC voltage power input. If your vehicle battery power output is not 12V (e.g., 24V, 36V, or 48V), you will need a voltage converter with 12V output (e.g., a 48V-to-12V converter). Connecting the Pulse directly to higher voltages will cause damage to the soundbar and VOID THE PRODUCT WARRANTY.
- Please use the included 12 AWG cable with the 25A Fuse to connect your Pulse to your power supply. The wiring harness for the previous generation of ECOXGEAR soundbars was a 14 AWG cable with 15A Fuse—this harness is NOT compatible with the Pulse speaker.
- If you connect the Pulse's power input to a DC-DC downconverter controlled by the vehicle's ignition switch or directly to a 12V battery via a rocker switch, you can just turn the ignition switch or the rocker switch on or off to turn Pulse on or off.
 - If you press the Power Button on the speaker or on the Remote Control to turn off the soundbar, then turn the ignition switch or rocker switch off, the next time you turn the switch on, the soundbar will not be on. You will have to press the Power Button to turn it back on.
 - So, when the soundbar is on, if you turn off the soundbar by turning off the switch, you will be able to turn it back on by turning the switch without having to press the Power Button.

Aux-In Audio

- If you connect your Head Unit's pre-amplified audio output to the Pulse's Aux-In jack, and play audio from the Head Unit, the playback control is on the Head Unit. Though, you can adjust

Introduction

the Aux-In signal input gain by pressing the Volume Up or Down Buttons on your Pulse.

 
- If the Pulse's sound output is too low or there is no sound when you play music on the Head Unit, check if the Pulse audio source is set to Aux-In mode, or if the Aux-In input signal gain is set too low.

LED Lighting Control

- The Pulse has an integrated LED lighting controller with two outputs (Zones). Each Zone can support multiple types of SoundExtreme LEDCast-enabled products. But it is NOT compatible with other manufactures' LED strips or LED whips. Do NOT make modifications to the LED connectors or try to connect the LED outputs to other brand LEDs. It may cause permanent damage to the product and void the warranty.
- LED lights are known to create interference (noise) on some FM radio frequencies (stations). When you tune or seek a station, it is recommended that you turn the LED Party Lights off.


CAUTION: After taking the product out of the polyethylene bag, be sure to dispose of the polyethylene bag out of the reach of children. Children may play with the bag, which could result in the child's suffocation.

Pulse Layout

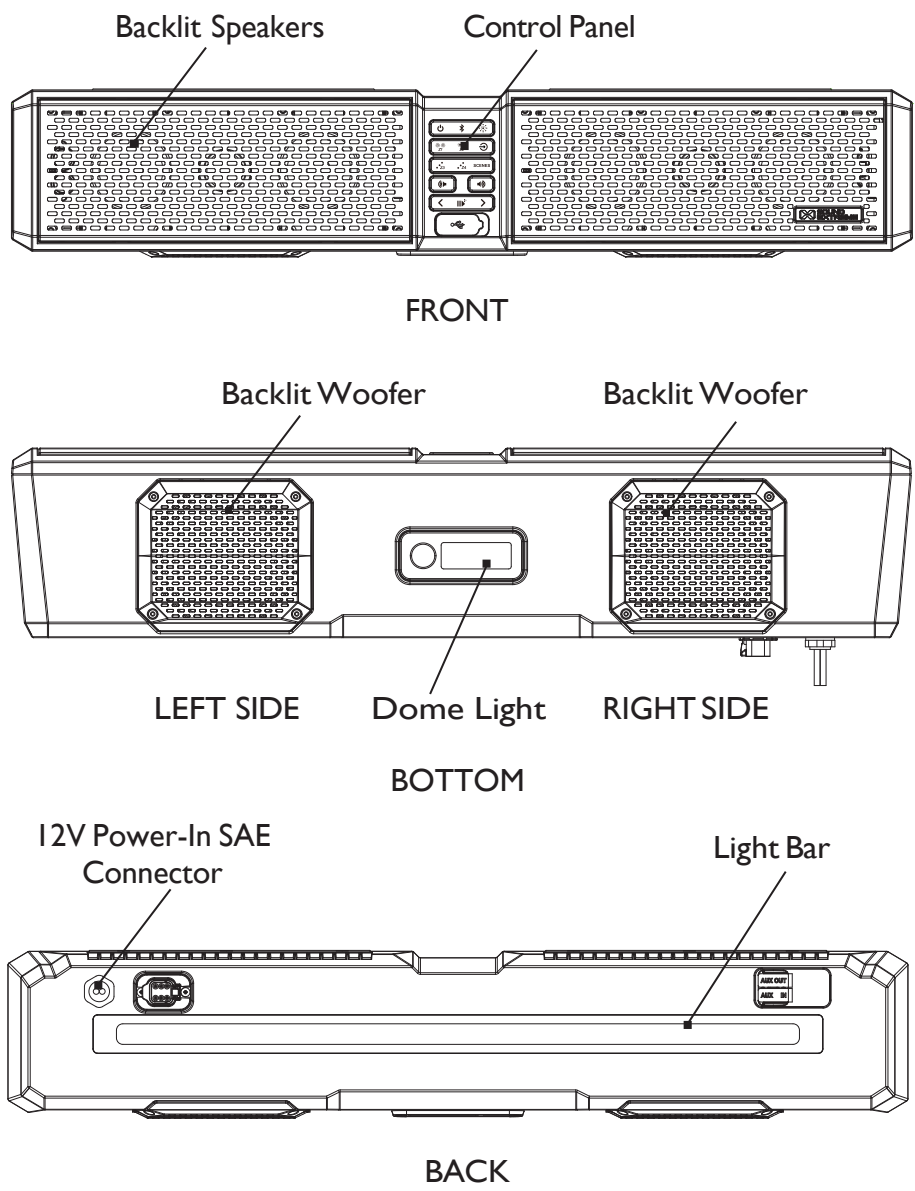

SE Pulse

 Inputs, Outputs, and Jacks

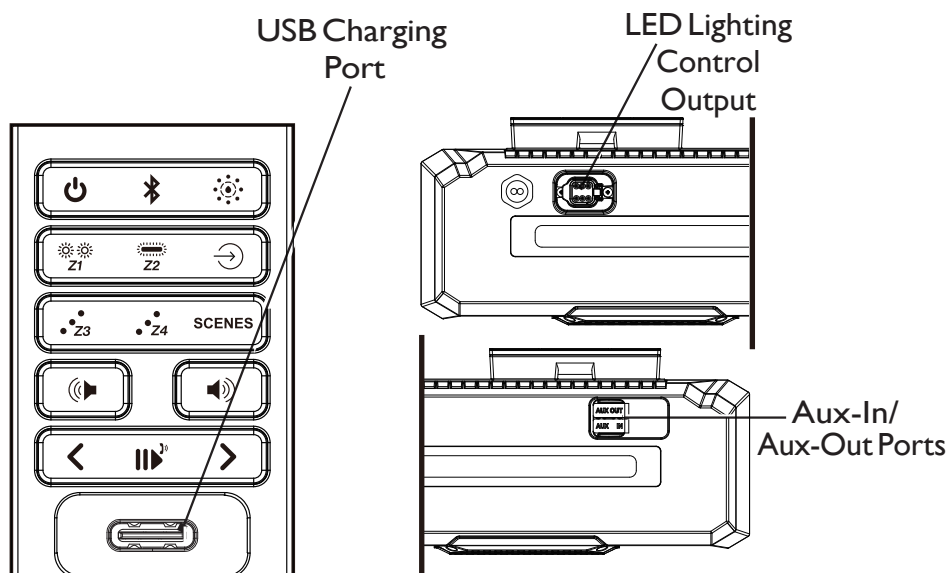

Do NOT use these connections if the connections are wet.

Power Input: SAE connector. +12VDC input only. 25A maximum.

Aux-In: 3.5mm audio jack. This input can be used to connect an Head Unit, additional soundbar, or a phone earphone output, etc.

Aux-Out: 3.5mm audio jack. This output can be used to connect to an additional soundbar, radio, amplifier, or to any audio system with an Aux-In connection.

LED Lighting Control Output: 6-pin Deutsch Jack. This jack supports one or two LED Zones.

USB Charging Port: Type C jack. This output can be used to charge your smartphone or other devices. USB charging only functions when the speaker's power is turned on. USB port rating is 5V, 2.1A.

IMPORTANT: Maintaining Waterproofness

When not in use, if the caps on the USB Charging Port, Aux-In, Aux-Out, or the Deutsch Jack are not properly closed, the unit is NOT watertight. To close them properly, push firmly to be sure the caps fit flat along their edges.

Speaker LEDs, Light Bar, Utility Light, Dome Light and LED Light Control Outputs

The Pulse soundbar has an integrated LEDCast lighting controller to support the built-in addressable LED Party Lights and Utility Light on the soundbar, a dome light and two external LEDCast enabled LED products. The LED Party Lights driven by the integrated controller provide millions of Color Modes: solid colors, fading, jumping, chasing, speed, and variable brightness.

- There are RGB LED Party Lights behind the 4 mid-range Speakers on the front, the 2 Woofers on the bottom, and rear-facing LED Light Bar.
- Additionally, the rear-facing Light Bar can also be used as a white Utility Light, which provides 3 levels of brightness: high, mid, and low.

Note: The RGB LED Light Bar and Utility Light are co-located on the same Light Bar on the back; as such, the Light Bar cannot function as a white Utility Light and RGB LED Party Lights at the same time. Refer to Light Bar: Utility Light and Zone 2 RGB LED Party Lights for more details.

- The Pulse supports two external LEDCast-enabled LED products, each has a maximum 5A DC output. Refer to LED Lighting Control to External LEDs and LED Lighting Zones, Modes, and Scenes for more details.

SE Pulse

Buttons and LED Status Indicators

I. Backlit Button Status Indicators: The backlit light colors on Power Button (1), Bluetooth Button (2) and Audio Source Button (6) shine different colors for different status.

i. **Power Button (1)**

- Solid Green: Power On
- No Light: Power Off or Standby

ii. **Bluetooth Button (2)**

- Flashing Blue: Bluetooth Pairing
- Solid Blue: Bluetooth Connected

iii. **Audio Source Button (6)**

 
- Solid Blue: Speaker Mode (EcoCast is turned off)
- Flashing Red: EcoCast Transmitting Mode – Pairing Ready
- Solid Red: EcoCast Transmitting Mode
- Flashing Green: EcoCast Receiving Mode – Pairing Ready
- Solid Green: EcoCast Receiving Mode – Paired with EcoCast Transmitting speaker
- Solid Yellow: FM Mode
- Solid Purple: Aux-In

I. **Power Button (1)**

- Short-press to turn the soundbar On / put into Standby.
- **Press and hold** for 3 seconds to turn all 4 LED Zones On / Off.

2. **Bluetooth Button (2)**

- When in Bluetooth Mode, if the Bluetooth LED Indicator is not flashing Blue, press this button to enter Bluetooth Pairing.

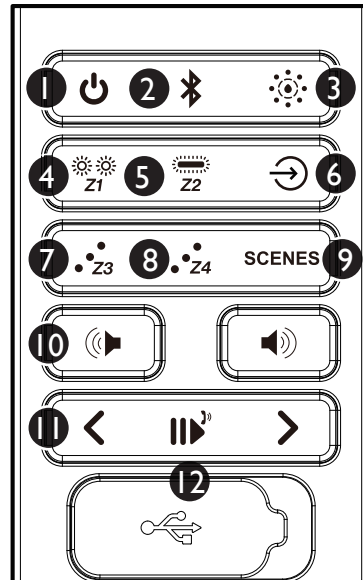

If your device is connected (solid Blue LED), press the button to disconnect and reenable pairing.

Press and hold this button for 5 seconds to clear all pairing memory.

3. **EcoCast Button (3)**

- Press button to enable EcoCast pairing
- **Press and hold** for 5 seconds to clear the EcoCast pairing memory.

4. **Z1 Button (4): Zone 1 – LED Party Lights on Backlit Speakers**

- Short-press to turn on the LED Party Lights behind the speakers.
- When the lights are on, short-press to cycle through each of the 45 LED Button Modes. There are a total of 44 LED Lighting Modes supported by the Control Panel. (The SoundExtreme app can support many more Color Modes.) The 45th LED Button Mode is Off Mode. Therefore, a short-press on the 44th Mode will turn the lights off, and another short-press will cycle back to the first LED Lighting Mode again.
- When the lights are on, press and hold to turn off.

5. **Z2 Button (5): Zone 2 – Light Bar**

Short-press to turn on the LED Light Bar on the back of the soundbar. When the lights are on, short-press to cycle through each of the 45 LED Button Modes.

When the lights are on, press and hold to turn off.

6. **Audio Source Button (6):** Press button to cycle through the following Audio Source Modes – Bluetooth, EcoCast Transmitting, EcoCast Receiving, FM, and Aux-In.

7. **Z3 Button (7): Zone 3 – LED Lighting Control Output**

Short-press to turn on the Zone 3 external LEDCast-enabled product. When the lights are on, short-press to cycle through each of the 45 LED Button Modes.

When the lights are on, press and hold to turn off.

SE Pulse

8. **Z4 Button: Zone 4** – LED Lighting Control Output

- Short-press to turn on the Zone 4 external LEDCast-enabled product. When the lights are on, short-press to cycle through each of the 45 LED Button Modes.
- When the lights are on, **press and hold** to turn off.

9. **Scenes Button:**

- Short-press to cycle through all the 5 Scenes. (Scenes can only be programmed in the SoundExtreme smartphone app).
- **Press and hold** to turn On and turn Off the rear-facing Utility Light.

10. **Volume Control Buttons:**

- Press to adjust the speakers' volume.
- **Press and hold** to adjust the volume continually.

11. **Track Buttons:**

- In Bluetooth Mode, press buttons to play the previous / next track.
- In FM Mode
 - Short press either button to tune to a radio station.
 - To “seek” (jump to the next available station), **press and hold** either Button for a few seconds until it starts to seek a station.

12. **Play / Pause / Answer / EcoTalk Button**

- Press to play / pause a track or answer / end a mobile call from a paired Bluetooth phone.
- EcoTalk: **Press and hold** to activate your Voice Assistant (Siri or Hey Google).

Dome Light Button

 
- Short-press to turn on. Each consecutive short-press will cycle through the three Dome Light brightness levels (high, mid, low) and then turn the Dome Light off.
- **PRESS AND HOLD** to turn the Dome Light off .

Installation and Wiring

If your Pulse comes with your vehicle, make sure you follow your vehicle's user guide or vendor's instructions for the soundbar installation.

If you purchase an Pulse for your vehicle, you will need to mount the soundbar to your vehicle and connect it to a 12V power supply.

Mounting Your Soundbar

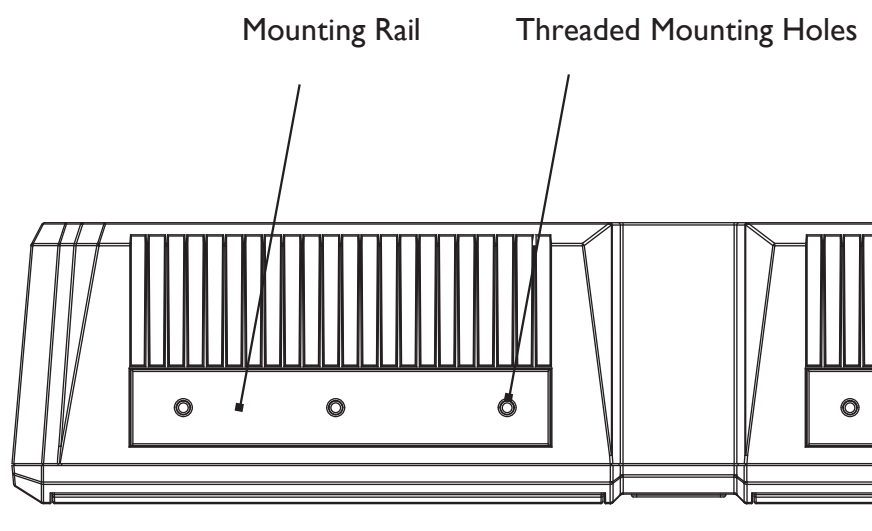


The PULSE's integrated mounting rail has threaded mounting holes. You can follow the steps below to mount the PULSE to a vehicle's crossbar with the included V-Mounting Brackets. Check out other mounting accessories at www.soundextreme.com.

- I. Take out the 2 sets V-Groove Mounting accessories from the PULSE package. Each set has (1pc) V-Groove Mount Assembly, (2 pcs) $\frac{1}{4}$ -20 SHCS $\frac{5}{8}$ " long bolts, and (2 pcs) $\frac{1}{4}$ -20 washers.

Installation and Wiring

 2. At both ends of soundbar mounting rail, place one V-Groove Mount Assembly on the rail, screw two bolts and washers into the threaded mounting holes on the rail. Tighten securely.
3. There are 2 sets of worm clamps with different size and 2 rubber sleeves in the package. Choose the right size of worm clamps for your installation.
4. Attach the soundbar underneath the vehicle's crossbar. Wrap the worm clamp band's free end around the crossbar and push through the square groove channel between the mount and the soundbar.
5. Attach the rubber sleeve to the worm clamp bend, then insert the band's free end into the worm drive housing to engage the bend. Use a screwdriver to turn the worm gear clockwise, applying gradual pressure until secure.

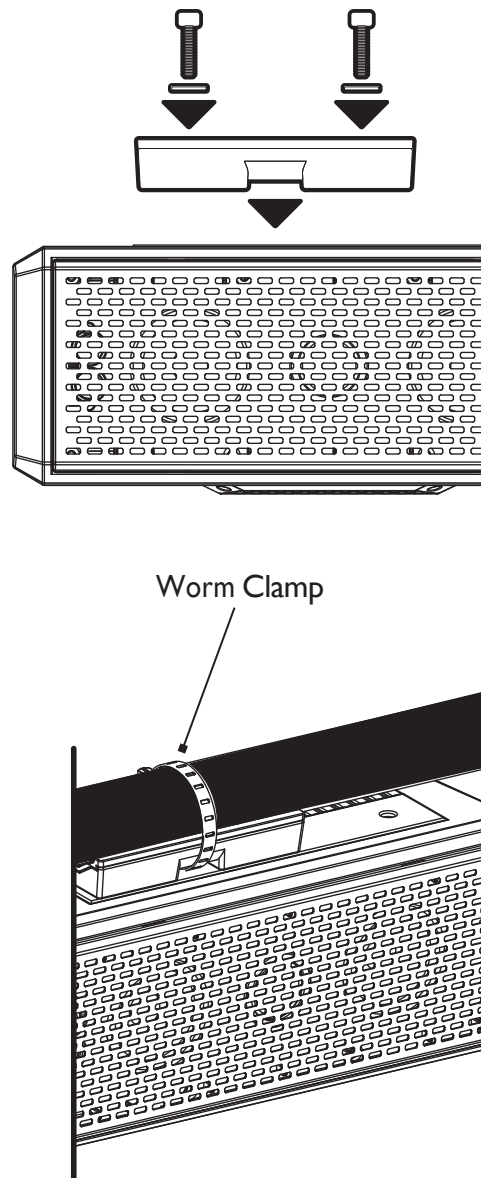

Installation and Wiring

Connecting to 12V DC Power Supply

The Pulse does NOT have an internal battery. It MUST be connected to an external 12V DC power supply to function. When you install the Pulse to a battery or a voltage regulator on a golf cart, a boat, a quad bike, a UTV, or another vehicle, you need to make sure that your vehicle battery or battery pack terminal voltage is 12VDC. If the battery terminal voltage is not 12V, you will need a DC-DC converter with a 12V output and 25A capacity. Connecting the Pulse to a non-12VDC power source will lead to a malfunction or damage to the speaker.

WARNING: Even when powered off, the Pulse will continue to draw minimal power from your battery. To prevent draining your battery when your Pulse or powersports vehicle are not in use for more than 48 hours, unplug the Pulse from the battery or add a 25A toggle switch. (Toggle switch sold separately.)

Installation: 12V Power-In SAE Connector

 


- I. Attach the 8ft Power Cable to the 12V Power-In SAE Connector.

Use Caution: Do NOT connect to 12V Battery if the Power-In SAE Connector is wet. Contact may cause electric shock and injury if wet.

Installation and Wiring


2. Remove the 25 Amp Blade Fuse from the Fuse Holder.
Use Caution: Do NOT remove Fuse if the Fuse Holder is wet. An improperly fitted cap may cause electric shock and injury if wet.
3. To close properly, push firmly to be sure the cap snaps into place.

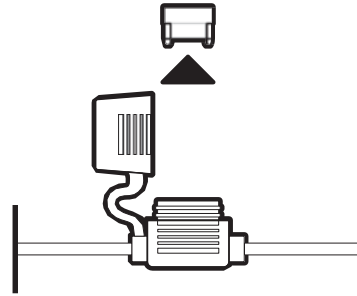


4. Next follow either the **Gas Vehicle** or **Electric Vehicle** Installation instructions.

Installation: Gas Vehicle

 
1. Loosen the bolts on the battery terminals.
Use Caution: Do NOT attempt to loosen bolts if battery is wet. Contact may cause electric shock and injury if wet.
2. Connect the BLACK wire to the BLACK, negative terminal, then the RED wire to the RED, positive terminal. Unit will not work correctly and may be damaged if wires are not correctly attached.
3. Tighten the bolts on the battery terminals until the connectors are held firmly in place.

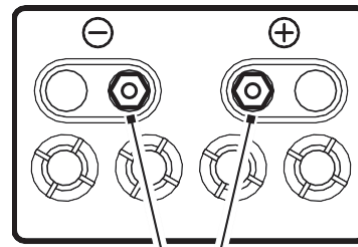

Loosen Bolts

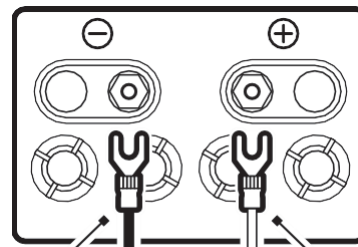 

Black Cable Red Cable

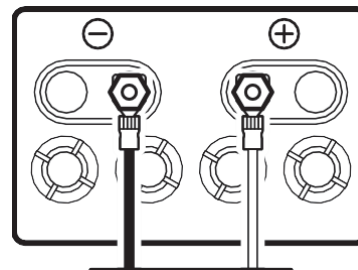 

Tighten Bolts

Installation and Wiring

4. Return the 25 Amp Blade Fuse into the Fuse Holder and close the cap.

 
 
 
Tip: Use zip ties to gather any excess wires, and secure them so that they are not dangling, loosely.

Installation: Electric Vehicle

1. Switch your vehicle to Tow mode, if available.
2. Wire the BLACK wire to the GROUND on output of the DC-DC converter.
3. Wire the RED wire to the POSITIVE (+) post on the output of the DC-DC converter. Unit will not work correctly and may be damaged if wires are not correctly attached.
4. Return the 25 Amp Blade Fuse into the Fuse Holder and close the cap.

Use Caution: Do NOT connect to DC-DC converter if the 8ft Power Cable or the Power-In SAE Connector are wet. Contact may cause electric shock and injury if wet.

Tip: Use zip ties to gather any excess wires, and secure them so that they are not dangling, loosely.

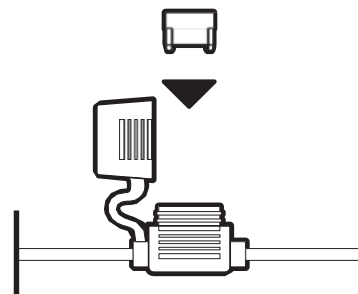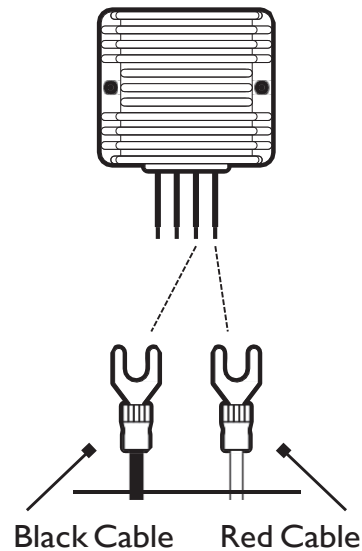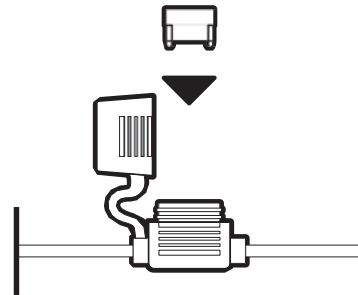


Installation and Wiring

LED External LEDs to Pulse Lighting Control Outputs



If you purchase an LEDCast-enabled LED product and want to connect it to the Pulse, use the included Deutsch LED Cable to make the connection. The Cable has a Deutsch female connector on one end, and two 3-pin, round, female connectors on the other end.

 1. Remove the rubber cap on the speaker's DeutscConnector Jack.
IMPORTANT: Please keep it stored safely for later use. When you remove the Deutsch Cable from your Pulse, you **MUST** use the included rubber cap to cover the Deutsch Jack. Failing to do this may result in potential water or moisture penetration into the jack connector pins, cause damage to the speaker, and **VOID THE PRODUCT WARRANTY**.
2. Plug in the Deutsch LED Cable into the Jack.

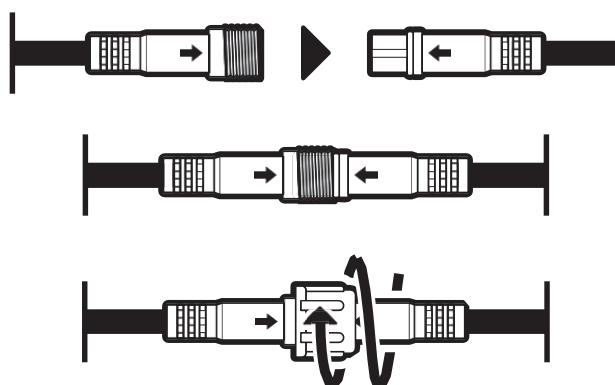

3. Connect the 3-pin female connector on the Deutsch LED Cable to the 3-pin male connector on an LEDCast-enabled product. Align the arrow on both connectors, push in and screw the nut cap on the female connector.

Installation and Wiring

Aux-In Audio Connection

1. Gently pull out the rubber cap from the Aux-In Jack.
2. Plug in a 3.5mm audio cable (not included) into the audio output on the an audio source, e.g. vehicle Head Unit.
3. Plug in the other end of the 3.5mm audio cable into the Pulse soundbar's Aux-In Jack.

Aux-Out Audio Connection

1. Gently pull out the rubber cover from the Aux-Out Jack.
2. Plug in a 3.5mm audio cable (not included) into the audio input on the external audio device.
3. Plug in the other end of the 3.5mm audio cable into the Pulse soundbar's Aux-Out Jack.

Audio Functions

Connecting and Playing Bluetooth Audio

1. Press the Power Button briefly to turn the speaker on.
2. Short-press the Audio Mode Button to cycle through the Audio Source Modes until you hear, “Speaker Mode,” announced.
3. On your phone’s Bluetooth settings, select ‘SoundEx-Pulse’ to pair. If you don’t see the speaker name, turn your phone’s Bluetooth off and back on again to refresh the list, or short-press the Bluetooth Button on the speaker to enable Bluetooth Pairing again.
4. Wait for a few seconds. Once the pairing and connection are complete, the speaker will announce, “Your phone is connected,” and the Bluetooth LED Status Indicator will light up solid Blue.
5. Once connected, select and play your desired audio. You can now use the Play / Pause Button, Volume Control Button, or Track Button to control your audio.

Dual Simultaneous Connections and Switching Media Player Between Two Phones

Your Pulse is capable of maintaining simultaneous connections with two smartphones, which allows you and your family or friends to share music on the soundbar by switching the music playback between your phone and your family member or friend’s phone. Follow the steps outlined below to switch back and forth between two phones.

1. Connect your phone to the Pulse.
2. Short-press the Bluetooth Button on the Pulse, it will disconnect your phone and enable Bluetooth pairing. Connect another phone to the Pulse.
3. Short-press the Power Button on the Pulse. The speaker will turn off. Then short-press the button again to turn the speaker on.
4. Your Pulse will automatically reconnect to both phones.

Audio Functions

5. Play a selected music track on your phone. Your Pulse will play your music.
6. On the other phone, select a music track to play. Your Pulse will play the music from the other phone. The media player on your phone will pause or stop.
7. If you want to switch back to your phone, press the Play button on your phone's media player, your Pulse will play the music on your phone. The media player on the other phone will pause or stop.

Listening to FM Radio

Recommendation: Turn the LED Party Lights off when searching for a radio station. LED lights can create interference with some FM radio frequencies.

Station Tuning

- Short-press the Audio Source Button to cycle through to FM Mode, the speaker will announce, "FM Mode."
- Short-press < or > to tune in a radio station.
Press and hold < or > to seek a strong station.
- Short-press the ((▶ or ◀)) Button to adjust the volume.

EcoCast – Stream Music Between Multiple Speakers



The Pulse has EcoCast built-in, which allows the soundbar to broadcast (transmit) or receive wireless audio streams to or from other EcoCast-enabled products.

Audio Functions

EcoCast Streaming: Two Modes

Use the Audio Source Button to set the speaker into EcoCast Transmitting Mode or EcoCast Receiving Mode:

1. **EcoCast Transmitting Mode:** When set in this Mode, the EcoCast Transmitting speaker broadcasts audio to multiple wireless connected EcoCast-enabled speakers.

 
The Transmitting speaker's audio streaming can be the music played from your phone (via Bluetooth), FM Radio, or Aux-In Audio.

2. **EcoCast Receiving Mode:** When set in this Mode, the soundbar will receive audio from an EcoCast Transmitting speaker, soundbar, or radio.

Notes:

- When set to Speaker Mode, the Amplified Speaker turns the EcoCast capability off.
- When you have two or more soundbars or other ECOXGEAR or SoundExtreme speakers bearing the EcoCast symbol, you can build a broadcast system by initiating EcoCast Transmitting Mode in one soundbar and broadcasting your music to one or more EcoCast-enabled speakers in EcoCast Receiving Mode.

EcoCast: First Two Speakers




Follow the steps below to pair two Pulse speakers:

1. Follow the Connecting and Playing Bluetooth Audio instructions to connect one soundbar (Speaker A) to your Bluetooth device. After your device is connected to Speaker A, you can play your desired audio.

Audio Functions

2. Press the Audio Source Button to put **Speaker A** into EcoCast Transmitting Mode. The Mode LED Status Indicator will flash Red, and the speaker will announce, "EcoCast transmitting."
3. Turn on the other soundbar (**Speaker B**) and press the Audio Source Button to cycle through to and initiate EcoCast Receiving Mode. The Mode LED Status Indicator will flash Green, and the speaker will announce, "EcoCast receiving."
4. Once the connection between the soundbars is successful, **Speaker B** will announce, "Connection successful," and start playing audio.

 EcoCast: Additional Receiving Speakers

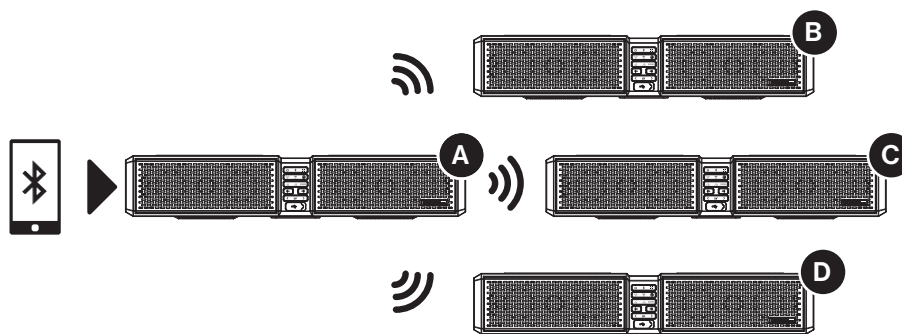

1. Turn on the additional EcoCast-enabled speakers (**Speaker C** and **Speaker D**) and press the Audio **Mode** Button to cycle through to and initiate EcoCast Receiving Mode. The Mode LED Status Indicator will flash Green, and the speaker will announce, "EcoCast receiving."
2. On **Speaker A** (the speaker with the Mode LED Status Indicator shining solid Red), **PRESS AND HOLD** the EcoCast Button for 3 seconds. The Mode LED Status Indicator will flash Red / White.
3. Once the connection between the speakers is successful, **Speaker C** (and **Speaker D**) will announce, "Connection successful," and start playing audio.

Audio Functions

Notes:

- If all the speakers are turned off, then turned on, the speaker(s) in EcoCast Receiving Mode (**Speakers B, C, and D**) will automatically re-connect to the speaker in EcoCast Transmitting Mode (**Speaker A**). If they do not automatically re-connected, please follow the above steps to reconnect.
- The EcoCast functionality has a maximum range of 30 feet between speakers.
- While connecting the speakers, make sure that they are within a few feet of each other.

EcoCast: Streaming Your FM Radio Station or Aux-In Audio to Multiple Speakers



The Pulse soundbar (**Speaker FM**) also has the capability to stream FM radio stations or Aux-In Audio to other EcoCast-enabled speakers in Receiving Mode.

When playing an FM radio station or Aux-In Audio, the Pulse automatically enables EcoCast Transmitting. To receive FM streaming via EcoCast, follow the steps below:

1. Turn on another EcoCast-enabled speaker (**Speaker E**), press the Audio Source Button to cycle through to EcoCast Receiving Mode. The Mode LED Status Indicator will flash Green, and Speaker E will announce, "EcoCast receiving."
2. On Speaker FM, **PRESS AND HOLD** the EcoCast Button for 3 seconds. The Mode LED Status Indicator will flash Red and White.
3. Once the connection between the speakers is successful, Speaker E will announce, "Connection successful," and start playing audio.

Audio Functions

Play Audio Streams From Another EcoCast-Enabled Speaker



If there is an EcoCast-enabled speaker in EcoCast Transmitting Mode nearby, you can set your Pulse soundbar (**Speaker A**) to EcoCast Receiving Mode and play audio streams from the EcoCast Transmitting speaker (**Speaker T**):

1. Turn on **Speaker A**, press the Audio Source Button to cycle through to EcoCast Receiving Mode. The Mode LED Status Indicator will flash Green, and the speaker will announce, “EcoCast receiving.”
2. **On Speaker T, PRESS AND HOLD** the EcoCast Button for 3 seconds. The LED Status Indicator will flash Red.
Note: If **Speaker T** is not a Pulse soundbar, it may require a different button operation to enter EcoCast Transmitting (Pairing Ready) Mode. Please refer to **Speaker T's** User Guide.
3. Once the connection between the speakers is successful, **Speaker A** will announce, “Connection successful,” and start playing audio.

Note: A speaker in EcoCast Receiving Mode will play at the same volume level (Volume Sync) as received in the audio streams from the EcoCast Transmitting speaker. You can press + or – on the EcoCast Receiving speaker to adjust the volume for the EcoCast Receiving speaker only. However, as soon as the EcoCast Transmitting speaker has a playback change (e.g., track change or a volume change), the EcoCast Receiving speaker will once again Volume Sync with the Transmitting speaker.

Lighting Control Concepts

LED Lighting Zones, Modes, and Scenes

In addition to the buttons on its Control Panel, the Pulse soundbar can also be controlled by the included SoundExtreme Universal Remote Control and the SoundExtreme Smartphone App. Below are some terms and definitions to help you better understand the Remote Control and the SoundExtreme App.

Zone

A Zone corresponds to all the LED lights that are connected directly to one physical connection on an LED Lighting Controller output, either integrated in the Pulse or in an ExtremeController (sold separately). When you change a Zone status (on / off, Mode, etc.), the LEDs connected to that Zone will change accordingly. You can control one Zone or multiple Zones at a time.

The integrated LED Lighting Controller on the Pulse soundbar supports 4 Zones:

- Zone 1 – The RGB LED Party Lights behind the speakers on the front and sides of the soundbar.
- Zone 2 – The LED Light Bar on the back of the soundbar.
- Zone 3 and Zone 4 – Each Zone supports externally connected LEDCast-enabled products.

Mode

There are 3 LED Mode categories, totaling in 44 Modes supported by the RF Remote. The SoundExtreme app can support many more Color Modes.

- I. Color Mode: Each Color Mode lights up the LEDs in a solid color. There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can create a custom color by utilizing the SoundExtreme Smartphone App.

Lighting Control Concepts

2. Party Mode: There are 20 preset Party Modes accessible via the Remote Control and SoundExtreme Smartphone App. The app allows you to customize each of the 20 Party Modes, allowing for nearly unlimited color, cascading, and LED chasing options.
3. Music Mode: There are 16 Music Modes accessible via the Remote Control and SoundExtreme Smartphone App.

Scene

A Scene is programmed via the SoundExtreme Smartphone App. You can customize each Zone into a Scene (a preset). Setting the Scenes on the app allows a 1-button press to bring up your desired custom settings for all of the LED products connected to the LED Lighting Controller.

The Pulse soundbar has 5 Scene settings. They are user customizable and programmable. The default Scene settings are:

- Scene 1: Patriot 1 (Red, White, and Blue)
- Scene 2: Flowing colors
- Scene 3: Zoom
- Scene 4: Fading colors
- Scene 5: Christmas (Red, Green, and White)

Control Panel: Lighting Control Buttons

There are 5 buttons on the Pulse Control Panel that are used to operate the LED Party Lights in the 4 Zones and the Utility Light on the back of the soundbar. Refer to the following table for an overview of the Lighting Control Buttons functionality.

Lighting Control Concepts

BUTTON	ACTION	FUNCTION
  	Short-Press	· To cycle through the 44 LED Modes in each Zone. · If off, to turn on each Zone.
	Press and Hold (for 3 seconds)	When on, to turn the corresponding Zone off.
	Short-Press	· If Party Lights are on, to cycle through the 44 LED Modes in Zone 2. · If off, to turn on Zone 2. · If Utility Light is on, to cycle through the 3 Brightness Levels.
	Press and Hold (for 3 seconds)	When Zone 2 (Light Bar Party Lights) is on, to turn Zone 2 off.
SCENES	Short-Press	To cycle through the 5 defined Scenes for all Zones.
	Press and Hold (for 3 seconds)	To turn on / off the rear-facing Utility Light.

Lighting Control Concepts

NOTES

- There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
- When turned on, each Zone will enter the last LED status it was in before powering off.
- Once a 44-Mode cycle is completed, the next short-press will turn the lights off. Turning lights back on will restart the cycle.

- There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
- When turned on, Zone 2 will enter the last LED status it was in before powering off.
- Once a 44-Mode cycle is completed, the next short-press will turn the lights off. Turning lights back on will restart the cycle.
- When the Utility Light is on, each short-press will cycle through 3 Brightness Levels: high, mid, and low.

- The Party Lights in all 4 Zones will light up as defined by Scene 1. Each following short-press will cycle through the next 4 Scenes.

- If the Party Lights in Zone 2 are on, turning on the Utility Light will automatically turn the Party Lights in Zone 2 off.

 
Lighting Control Concepts

Light Bar: Utility Light and Zone 2 RGB LED Party Lights

The Utility Light (White) and the Zone 2 Party Lights are co-located on the same Light Bar on the back of the Pulse soundbar. To avoid the lighting interferences between the Utility Light and Party Lights, the button functions are designed to prevent the Utility Light and Party Lights from being turned on at the same time.

- Short-press the Zone 2 Button to turn the Party Lights on.
 - If the Party Lights in Zone 2 are on, turning on the Utility Light will automatically turn the Party Lights in Zone 2 off.
- **Press and hold** the Scenes Button to turn the Utility Light on / off.
 - When the Utility Light is on, the Pulse will NOT allow the Zone 2 Party Lights to turn on. You **MUST** turn the Utility Light off before you turn the Zone 2 Party Lights on.
 - When the utility light is on, you can short-press the Z2 Button to change the Brightness Level: high, mid, low.

RF Remote Control

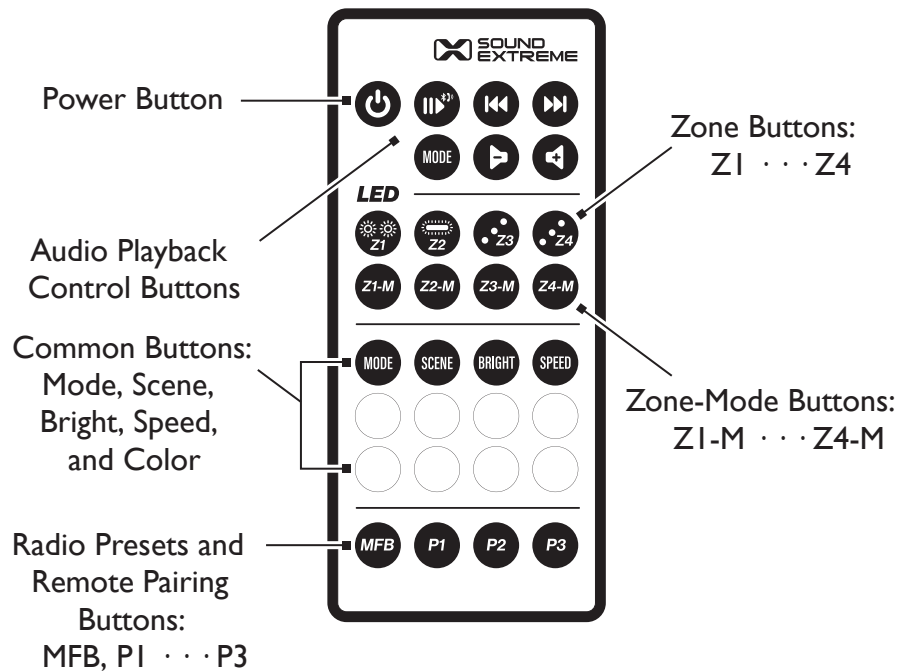

The Pulse soundbar comes with a SoundExtreme Universal Remote Control.

Basic Functions

1. Power, MODE, and all the Audio Playback Control Buttons on the Remote Control have the same functions as their corresponding buttons on the Control Panel.

Note: There are two MODE Buttons on the Remote Control. The MODE Button at the top is for Audio Source Mode. The MODE Button in the middle is for LED Party Light Mode.

2. LED Lighting Control Buttons: There are 20 buttons on the RF Remote Control that are used to operate the LED Party Lights in the 4 Zones and the Utility Light on the back of the soundbar. The Zone Buttons (Z1...Z4) and Zone-Mode Buttons (Z1-M... Z4-M) affect individual Zones. The Common Buttons (LED Mode,

RF Remote Control

Scene, Bright, Speed, and 8 Color Buttons) affect all 4 Zones at once.

3. MFB, P1, P2, and P3 Buttons:

When the soundbar is in FM mode, P1, P2, and P3 Buttons serve as 3 Preset Buttons:

- i. **PRESS AND HOLD** a Preset Button for 2 seconds to save the current station to the corresponding Preset.
- ii. Short-press a Preset Button to tune to the saved station corresponding to that Preset Button.

In combination with the MFB Button, the P1, P2 or P3 Buttons will let you to pair one Remote Control with up to 3 speakers / soundbars or to select an individual product to control.

Remote Control Pairing and Speaker Selection

The SoundExtreme Universal Remote Control can pair with and save up to 3 soundbars in its memory as P1, P2, and P3 speakers. The included Remote Control comes paired with the Pulse soundbar as the P1 speaker. You can use it out-of-the-box to control the speaker after it is powered on.

If the speaker does not react when you press a button on the Remote Control, check if the battery isolator (clear plastic strip) on the Remote battery compartment is removed (pulled out) completely. Then, follow the steps below.

 
Remote Control Pairing

1. When the soundbar is on, **PRESS AND HOLD** the < and > Buttons on the speaker at the same time for 3 seconds. The soundbar's LED Party Lights will flash Green, indicating the speaker is ready to pair with a remote.
2. **PRESS AND HOLD** the MFB Button for 3 seconds, then press P1 (P2, or P3) to save the pairing soundbar as the P1

RF Remote Control

(P2, or P3) speaker. Once paired, the soundbar's LED Party Lights will rapidly flash Green 3 times.

Select a Soundbar to Control

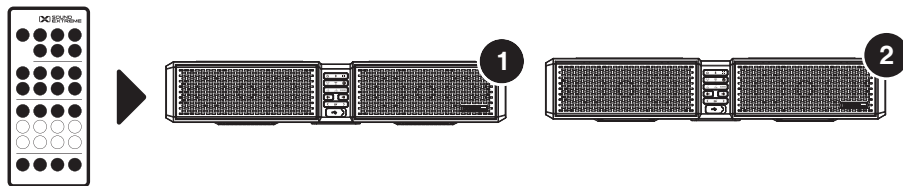

Assuming your Remote Control has paired with **Soundbar 1** and **2** as P1 and P2 soundbars, **Soundbar 1** is currently controlled by the Remote Control. If you want to use the Remote Control to control **Soundbar 2**, follow the steps below.

1. **PRESS AND HOLD** the MFB Button for 3 seconds, **Soundbar 1's** Party Lights will flash Blue, indicating your remote is in the process of speaker selection.
2. While **Soundbar 1** is flashing Blue, press P2. The Party Lights on **Soundbar 2** will flash Blue 3 times and produce a prompt double-beep tone, indicating **Soundbar 2** is selected.
3. Press a button on the Remote Control. **Soundbar 2** will produce the corresponding action, while **Soundbar 1** will have no response.

Soundbar Party Lights and Utility Light Control

When the Pulse soundbar is on, you can use the Remote Control to change the Party Lights and Utility Light.

Zone 1 to Zone 4: Party Lights – Lighting Mode Control

1. **PRESS AND HOLD** the Power Button to turn on / off all the Party Lights.
2. Press the Z1, Z2, Z3, or Z4 Button. The Party Lights will briefly light up Green in ascending order and then shine solid Orange or a random color pattern.

RF Remote Control

3. Now you can change the LED Lighting Mode by short-pressing one of the Zone-Mode Buttons (Z1-M, Z2-M, Z3-M, or Z4-M) to cycle through the three LED Mode categories for only the corresponding Zone.

Note: There are 44 distinct LED Modes. Instead of using a Zone-Mode Button to cycle through to a desired LED Mode, you can also use the SoundExtreme Smartphone App to find a specific LED Mode.

Common Buttons: Modifying All 4 Zones

You can change the LED Lighting Mode in all 4 Zones with one of the following button presses:

- Short-press the LED Mode Button. Each short-press will cycle through all 44 LED Modes.
- Short-press the Scene Button to cycle through the 5 Scenes.
- Short-press the Bright Button to cycle through 5 levels of brightness.
- Short-press the Speed Button to cycle through 5 levels of speed. The lighting patterns, as defined by the selected LED Lighting Mode, will progress more quickly with each short-press.
- Short-press one of the 8 Color Buttons to light the LEDs in the corresponding color

Refer to the **Remote Functions Overview** chart for more details.

Utility Light Control

The Utility Light can be controlled by the Scene Button and the Z2-M Button.

1. **PRESS AND HOLD** the Scene Button to turn on the Utility Light.
2. When the Utility Light is on, short-press the Z2-M Button to cycle through 3 Brightness Levels: High, Mid, and Low

3. **PRESS AND HOLD** the Scene Button to turn off the Utility Light.

Advanced Functions

Cycle to Previous Mode

As previously indicated, you can cycle through the 44 distinct LED Modes in all 4 Zones or in individual Zones. You can also cycle back to the previous LED Mode:

- To cycle back to the previous LED Mode for ALL 4 Zones, double-click the LED Mode Button.
- To cycle back to the previous LED Mode in a single Zone, double-click one of the Zone-Mode Buttons (Z1-M, Z2-M, Z3-M, or Z4-M).

Common Buttons: Modifying a Single Zone

As previously indicated, a short-press of any of the Common Buttons or will change the LED lighting effect in all 4 Zones. You can also change the LED lighting effect in only 1 Zone at a time:

1. To activate the Zone you want to change, **PRESS AND HOLD** the Zone Button. For example, **PRESS AND HOLD** the Z1 Button for 3 seconds. The LEDs in Zone 1 will flash Green twice, indicating that Zone 1 is selected.
2. You can now **PRESS AND HOLD** any of the 8 Color Buttons, the Bright Button, or the Speed Button for 2 seconds (instead of a short-press) to modify the LEDs in the selected Zone.
3. To change another Zone, e.g. Zone 3, **PRESS AND HOLD** the Z3 Button. The LEDs on Zone 3 will flash Green twice, indicating that Zone 3 is selected. Follow step 2 to modify the LEDs in Zone 3.

Note: Any time you short-press a Common Button on the Remote, it will change the LEDs in all 4 Zones.

Remote Functions Overview

BUTTON	ACTION	FUNCTION
	Press and Hold (for 3 seconds)	Turn on / off the LEDs in all Zones.
	Short-Press	Turn on / put the soundbar into Standby Mode.
	Short-Press	To play / pause audio.
	Short-Press	· In Bluetooth Mode: To skip to the previous or the next track. · In FM Mode: To tune in a station.
	Press and Hold (for 3 seconds)	In FM Mode: To seek a strong station.
	Short-Press	To Change Audio Source Modes.
	Press and Hold (for 3 seconds)	To enable EcoCast pairing.
	Short-Press	To increase or decrease the speaker's volume.
	Press and Hold Both (for 3 seconds)	To adjust the volume continually.

Remote Functions Overview

NOTES

 
- When turned on, each of the LEDs will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.

- When in Standby Mode, the speaker consumes minimal power.

- There are 5 Audio Source Modes – Bluetooth, EcoCast Transmitting, EcoCast Receiving, FM, and Aux-In.

- The speakers will emit a tone to indicate when maximum or minimum volume setting is reached.

Remote Functions Overview

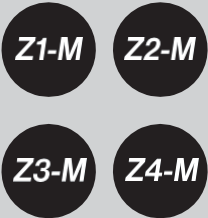BUTTON	ACTION	FUNCTION
	Short-Press	To turn on / off each Zone.
	Press and Hold (for 3 seconds)	To select a single Zone.
	Short-Press	· To cycle through the three LED Mode categories for the selected Zone. · Z2-M Only: If Utility Light is on, to cycle through the 3 Brightness Levels (high, mid, low).
	Double-Click	To cycle back to the previous LED Mode for the selected Zone.
	Short-Press	To cycle through the three LED Mode categories for all Zones.
	Double-Click	To cycle back to the previous LED Mode for all Zones.
	Short-Press	To cycle through the 5 defined Scenes for all Zones.
	Press and Hold (for 3 seconds)	To Turn on / off the rear-facing Utility Light.

Remote Functions Overview

NOTES

- When turned on, LEDs in Zone 1 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
- The LEDs in the selected Zone will rapidly flash Green twice. You can now Press and Hold one of the Common Buttons to change the Brightness, Speed, or Color for the selected Zone.
- There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.

- There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.

- If the Party Lights in Zone 2 are on, turning on the Utility Light will automatically turn the Party Lights in Zone 2 off.

Remote Functions Overview

BUTTON	ACTION	FUNCTION
	Short-Press	To cycle through 5 levels of Brightness / Speed for all Zones.
	Press and Hold (for 2 seconds)	To cycle through 5 levels of Brightness / Speed for the selected Zone.
	Short-Press	To select the corresponding Color for all Zones.
	Press and Hold (for 2 seconds)	To select the corresponding Color for the selected Zone.
	Press and Hold (for 3 seconds)	To select a speaker to control.
	Press and Hold (for 2 seconds)	When in FM Mode: To save the current station to the P1 Button.
	Short-Press	When in FM Mode: To tune to the station saved to the P1 Button
	Press and Hold (for 2 seconds)	When in FM Mode: To save the current station to the P2 Button.
	Short-Press	When in FM Mode: To tune to the station saved to the P2 Button
	Press and Hold (for 2 seconds)	When in FM Mode: To save the current station to the P3 Button.
	Short-Press	When in FM Mode: To tune to the station saved to the P3 Button

Remote Functions Overview

NOTES

- You must first Press and Hold the corresponding Zone Button to select a Zone before using this feature.

- There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can also use the SoundExtreme Smartphone App create a custom color.

- You must first Press and Hold the corresponding Zone Button to select a Zone before using this feature.

- Refer to Remote Control Pairing and Speaker Selection for more details.

- Refer to Remote Control Pairing and Speaker Selection for more details.

- Refer to Remote Control Pairing and Speaker Selection for more details.

- Refer to Remote Control Pairing and Speaker Selection for more details.

SoundExtreme App

The Pulse comes with a free download SoundExtreme Smartphone App. The App will help you to set up your Pulse's LED lighting control and audio functions.

Download and Install

Bluetooth Low Energy: The SoundExtreme Smartphone App relies on a BLE (Bluetooth Low Energy) connection between your phone and the Defender. Make sure you turn on Bluetooth on your smartphone

For iPhones, download the app from the following URL:

<https://apps.apple.com/us/app/soundextreme/id1670708941>

For Android phones, download the app from the following URL:

<https://play.google.com/store/apps/details?id=com.cchip.ecoxgear>

Alternatively, use the following QR Codes to download the SoundEx-treme Smartphone App.



iOS



Android

App Overview

The SoundExtreme App has two major features for user to set up speaker's LED lighting control and configure speaker audio functions.

 
The App is password protected so others cannot gain access and control your Pulse. The default password is 0000.

SoundExtreme App

The App home screen is for managing devices and grouping multiple devices for LED lighting control.

Manage Device

On the Device screen, you can swipe a paired/connected device to the left and delete it, or click the + icon to go to the device scan and connection screen, select your device, connect to it.

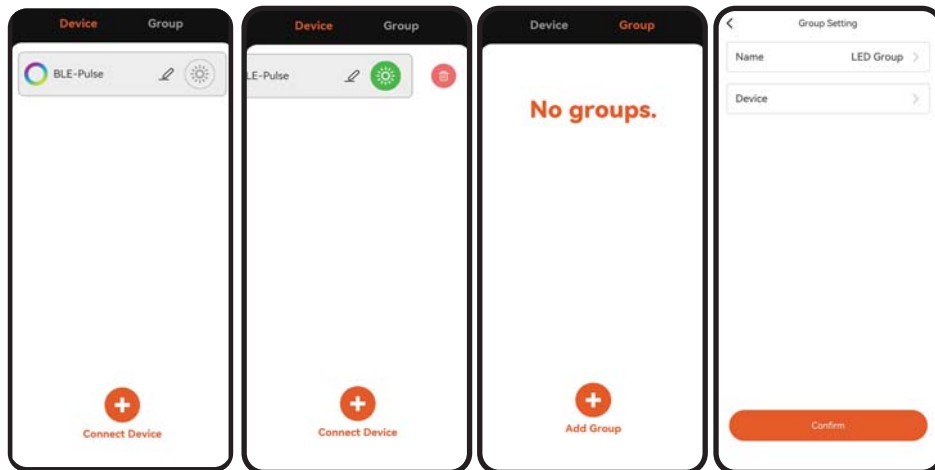


Set Up a Group for LED Lighting Control

On the Group screen, you can create and set up a group of devices (multiple speakers, or other ECOXGEAR or SoundExtreme products with LEDCast built-in). This will allow all the LED lights connected to different devices to be controlled by the SoundExtreme Smartphone App at the same time.

SoundExtreme App

App Audio Configurations and LED Lighting Control Functions

 Once you select one connected device, it has 3 function screens for you to manage device connection, configure audio and set up LED lighting modes.

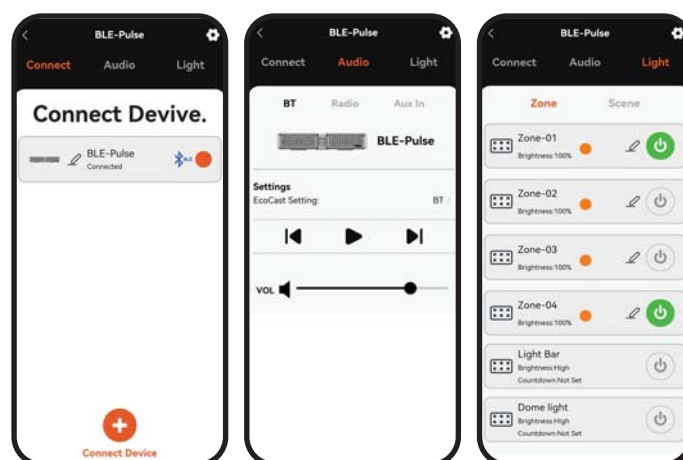

Connect Screen – Manage device connection

A click on the + icon, it will bring you to the device scan and connection screen. You can select your device and connect to it.

Audio Screen – Configure Speaker Audio Functions

The Audio Screen has features for users to configure the speaker Bluetooth functions, tune an FM radio station, set up Aux In signal input level and gain.

- Bluetooth – Select Bluetooth streaming mode - speaker mode, EcoCast Transmitting or EcoCast Receiving.
- Radio – tune speaker's FM radio on the App! No need to touch the speaker buttons. You can also save your favorite to one of the 6 presets.
- Aux In – set up Aux In signal voltage level (high or low) and input gain. Enable or disable EcoCast for the Aux In audio.

Light Screen – Set Up LED Lighting Modes

 
 
 
- The LED Lighting Control Function Screen has features for users to select LED brightness, colors, patterns, and speed of the LED party mode, create custom patterns and advanced features.
- Name Your Zones: You can change and customize the name of your Zones, such as: Rear speakers, Soundbar, subwoofer, cabin lights, under glows, roof lights, whips etc.
- Set Up Modes: Use the app to set up the LED Mode for each of the Zones on your speaker. You can also change the Brightness and Speed.
- Create and save lighting Scenes: A Scene is a preprogrammed light show that you can save for later quick-access. You can program each of your device's and zone's LEDs to a specific color and action for quick access. Such as create Christmas, 4th of July, Halloween, nighttime, and party scenes for a 1 button access later. We have created 5 default Scenes that are fully customizable and programmable.

SoundExtreme App

Connect Your Pulse to the SoundExtreme App

Initial App Connection


1. Launch the SoundExtreme App on your smartphone or other BLE-enabled device.
2. On the SoundExtreme App homepage, tap Connect Device
3. If your Defender is powered on, it will show up as "BLE-Pulse" on the app's Connect Device screen. Tap the device name on the screen. A check mark will appear on the right. Tap the Connect button
4. A dialog window will popup asking you to enter a password. The Pulse default password is 0000.
5. After correct password is entered, the screen will show the Pulse is connected to the App.

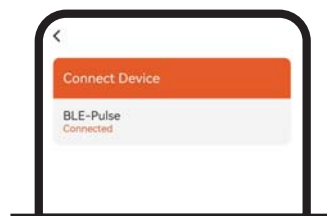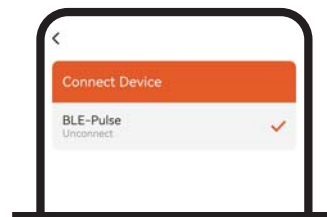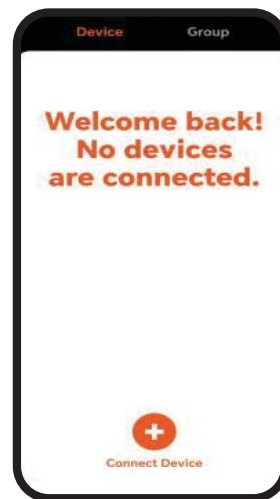

SoundExtreme App

SoundExtreme App LED Control Functions

 
1. On the Device screen, select your Pulse. It will take you to the Light function Scene screen. There are 5 predefined Scenes on the Pulse. You can turn on one of the 5 Scenes to light up the LEDs.
2. For button at the right for Scene 1. The Party Lights will light up Red, White, and Blue, which is the LED Lighting Mode defined for Scene 1 – Patriot 1.

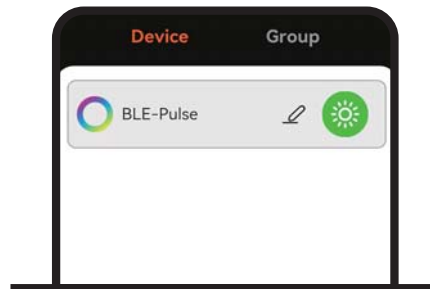

SoundExtreme App



Set Up Zones

 1. Tap Zone on the Light function screen, the app will bring you to the Zone screen.
2. On the Zone screen, Tap Zone 1 and you will go to the Zone LED Mode Settings screen. There are 3 tabs: Color, Party, and Music, which allow you to select a solid Color, a Party Mode, or a Music Mode.

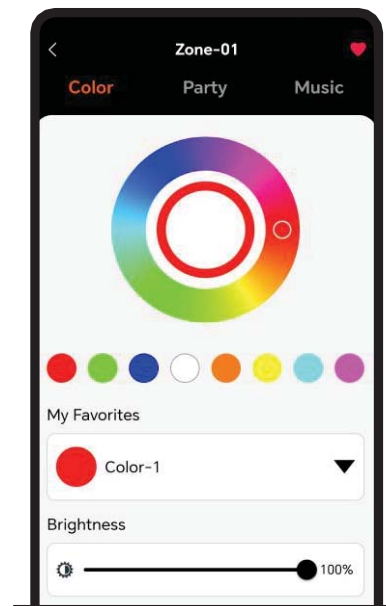

SoundExtreme App

  
- When you choose a Mode, the LEDs connected to the Zone you selected will light up accordingly, giving you a preview.
 - If you tap the Save button on the screen, the app will save your setting for the selected Zone.
 - If you tap the Cancel button or exit the LED Mode Settings screen, your Mode selection will not be saved and LEDs connected to that Zone will display the previously selected LED Mode.
2. After you set up the Modes for each of the Zones, the Pulse setup is complete.

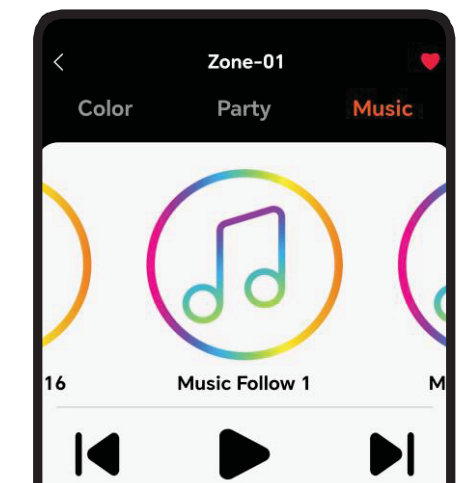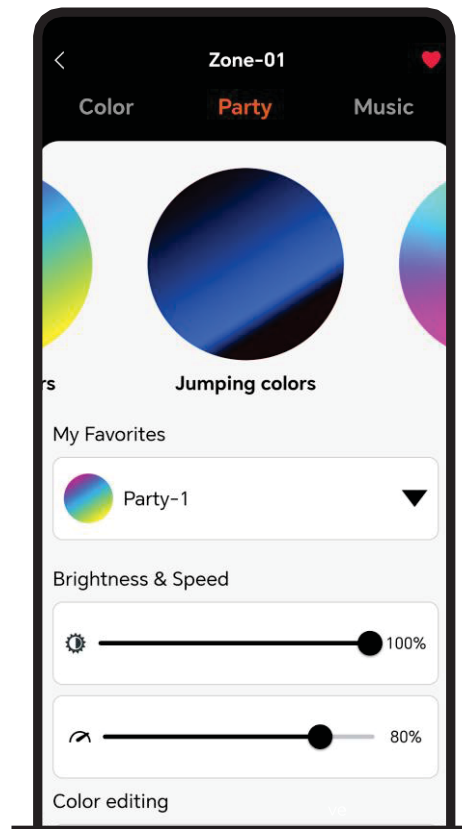

SoundExtreme App

Set Up Scenes

 1. On the Device screen, select your Fulse (BLE-Pulse) and the app will bring you to the Fulse function screen. Tap Light, the App will show **Scene** screen with 5 predefined scenes on your Pulse.
2. You can change a Scene's LED settings by selecting any of the 5 Scenes. When you select the Scene, you will go to the LED Mode Setting screen. You can use the same procedure as in the **Set Up Zones** section to set up each Zone and save the Scene's new LED settings.
3. After you set up LED Modes for the Zone, the setup is complete for the selected Scene.


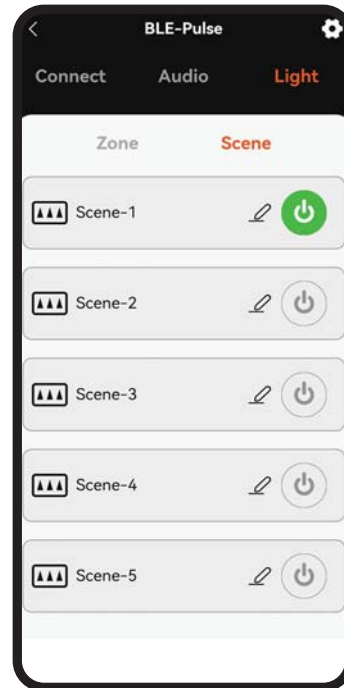


SoundExtreme App

Dome Light Control

You can control the Pulse's DomeLight with the following steps:

  1. On the Device screen, select your Pulse (BLE-Pulse), and the app will bring you to the Zone screen.
2. On the Zone screen, tap Dome Light and you will go to the Dome Light Settings screen.
3. There are 3 Brightness Levels (High, Mid, and Low) on the slide bar for you to choose from.
4. You can also set a countdown timer for the Dome Light by tapping Count Down. Set up a time on the countdown timer from the popup window. Once the countdown is over, the app will turn off the Dome Light

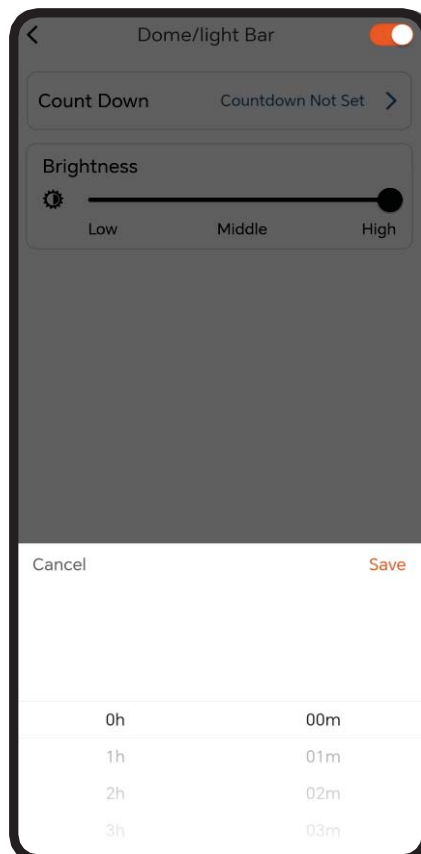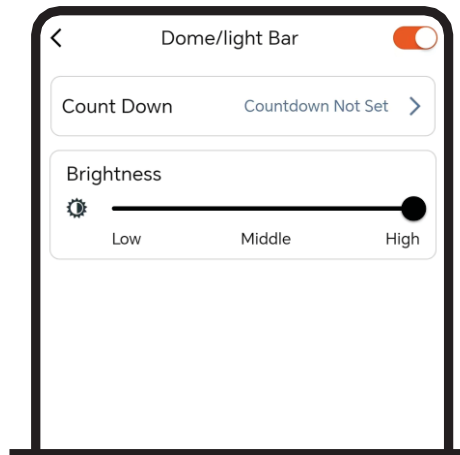

SoundExtreme App

 
Change Password

To add extra security, you can change the default password of 0000 to your desired 4-digit numeric password. Please note that the password is stored in your Pulse, not the SoundExtreme App. So, after you change the password, please make a note in case you forget your password.

The password won't be reset by reinstalling the app or changing to another smartphone. The only way to reset your password is to conduct a factory reset on your Pulse speaker.

Follow the steps below to change your password:

1. Select the Menu Icon ☰ at the top-right corner of the screen.
2. Select  Device Password from the menu.

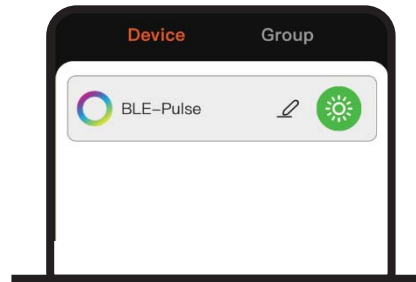

SoundExtreme App

3. Once at the Device Password screen, select the device that you want to change the password to.
4. Enter the current password, the new password, and re-enter the new password. Then tap the Confirm button.
5. If the change is successfully saved, the app will display a confirmation message.

This is a one-time event. You do not have to enter in your password every time you launch the app, as your app will remember your password.

The screenshot shows the 'Device password' screen in the SoundExtreme App. At the top, there is a back arrow and the title 'Device password'. Below this, there is a list of devices with 'BLE-Pulse' selected. Underneath the device list, there are four input fields for passwords: 'Current password', 'New password', and 'Reenter new password', each with a 'password' label. A note below the input fields states '* The password is 4 digits'. At the bottom of the screen is an orange 'Save' button.

SoundExtreme App

 
Audio Function Configurations

The SoundExtreme App can act as a remote control to set up the audio functions for your Pulse soundbar.

Bluetooth Function Configuration

When the App is on the BT screen, you can set up the following Bluetooth related functions.

1. EcoCast Setting – pull-down list of 3 Bluetooth mode settings: BT (Speaker) mode, TX (EcoCast transmitting) and RX (EcoCast Receiving)
2. EcoCast Pairing button – when the speaker is in EcoCast Transmitting or EcoCast Receiving mode, press this button for the speaker to start EcoCast pairing.
3. Playback Control buttons – when the phone has a Bluetooth connection with the and plays a music, the 3 buttons are for skip to last track, play/pause and skip to next control
4. Speaker Volume – the slide bar is to increase or decrease speaker music playback volume.

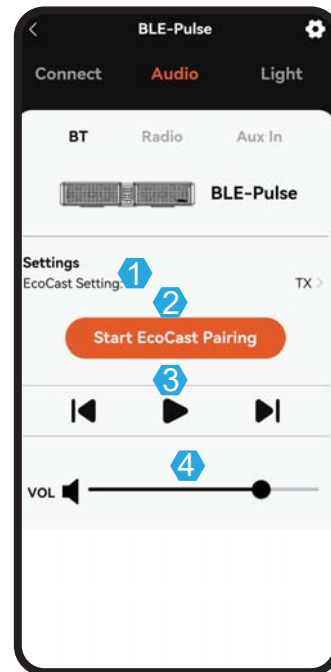


SoundExtreme App

FM Radio Tuning

When the App is on the Radio screen, you can set up the following functions.

 1. EcoCast Setting – pull-down list of selecting Enable or disable EcoCast streaming the FM radio audio to other EcoCast Receiving speakers.
2. EcoCast Pairing button – when the EcoCast is enabled, press this button for the speaker to start EcoCast pairing.
3. Graphic FM radio station tuner – slide left or right to tune a station
4. Tune up or down FM radio step by step.
5. 6 FM Presets - Store up to 6 of your favorite FM radio stations and quickly tune to a preset radio station.

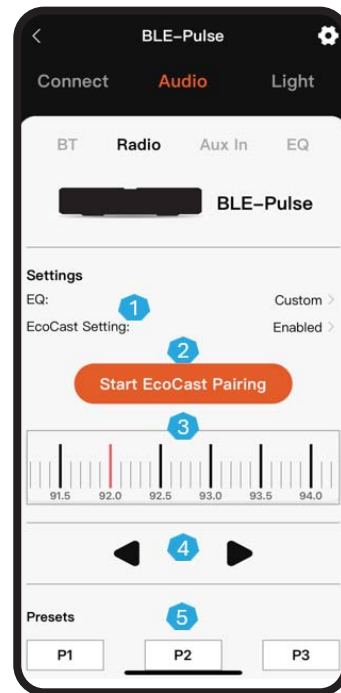


SoundExtreme App

Aux In Function Configuration

When the App is on Aux In screen, the speaker is in the Aux In mode, you can set up the following for the Aux In audio signal processing.

 1. EcoCast Setting – pull-down list of selecting Enable or disable EcoCast streaming the FM radio audio to other EcoCast Receiving speakers.
2. EcoCast Pairing button – when the EcoCast is enabled, press this button for the speaker to start EcoCast pairing.
3. Aux In signal level selection, depending your audio source signal voltage output,
 - Low: audio source signal range (500mV – 3V).
 - High: audio source signal range (3V – 14.5V).
4. Aux In signal input gain – the slide bar is to increase or decrease input gain for the Aux In signal. Note the speaker sounds output depends on both the input gain and the audio source playback volume.

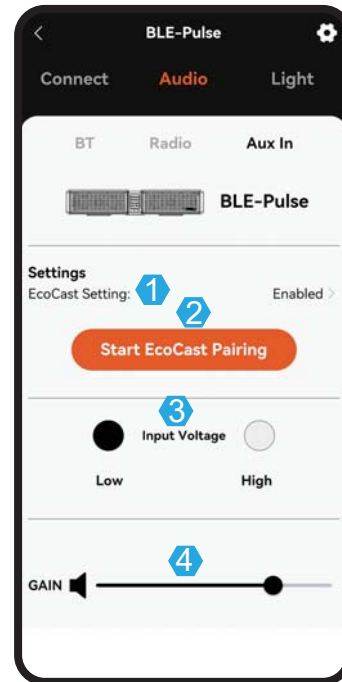

Factory Reset

If you forget the password, you will need to do a Factory Reset on the Defender so that the password is reset to its default value: 0000.

 
While the Pulse is turned on, press **PRESS AND HOLD** the V-, V+, and EcoCast Buttons on the Control Panel at the same time for 3 seconds. The Pulse will produce a prompt triple-beep tone, to show that the reset is successful.

Note: Besides the password reset, a Factory Reset will also configure the Pulse to the following factory settings:


- Zone 1 is set to Scene 1 – Patriot 1 with 100% Brightness and the Speed is set to 80%.
- All 5 customer configurable Scenes are set to the factory default Scenes.
- All the EcoCast and Bluetooth pairing records are erased.
- The Speaker Volume is set to 75%.

Specifications

Unit Dimensions

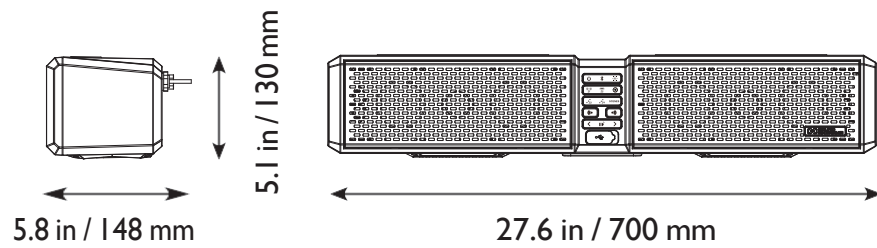

Unit + Mount Dimensions

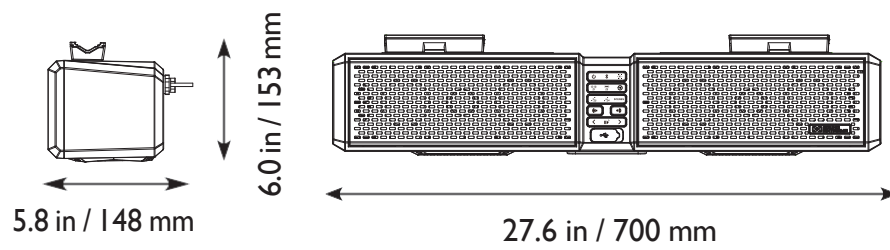 

Specifications

Unit Weight

13.5 lbs

Unit + Mounts Weight

14.3 lbs

Bluetooth Compliance

Bluetooth V 5.1

Bluetooth Frequency Band

2.402~2.480GHz ISM Spectrum

Modulation

GFSK, $\pi/4$ -DQPSK, 8DPSK

Bluetooth Range

Up to 100 ft / 30m

Tweeter (2x)

1.5" (38 mm) tweeter

Woofer (2x)

4" (102 mm) woofer

Mid-Range Speaker (4x)

2.25" (57 mm) speaker

Audio Output Power

500W (peak)

Power Supply

Input Voltage: 12VDC, 25A
(requires connection to external
DC battery for power)

USB Output

5V, 2.1A

EcoCast Range

30 ft / 9.1 m between Casting
speaker and Receiving speakers

Radio Frequency Range

US: FM 87.5 - 107.9 MHz

RF Remote Operating Frequency

433 MHz

Power Cable In-Line Blade Fuse

25A, 32V

Storage Temperature

-40°F to 122°F / -40°C to 50°C

Operating Temperature

23°F to 95°F / -5°C to 35°C

Waterproof / Dust Rating

IP66

Important Legal Information

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1.) This device may not cause harmful interference, and
- 2.) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator to your body.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC STATEMENT:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1.) This device may not cause interference, and
- 2.) This device must accept any interference, including interference that may cause undesired operation of the device.

PRODUCT USE AND PROTECTION:

Read and follow all instructions. Use only as intended.

The SoundExtreme unit is intended to be used indoors or outdoors and in land or water environments. The unit has been tested to IP66 waterproofing standards, which means the unit can be exposed to dust and water, but should NOT be submerged underwater.

To prevent fire or shock, do NOT attempt to power this unit if it is wet or you suspect water has entered the unit. In this situation, please return the unit to SoundExtreme for a free assessment. If we have found that the unit has carried water, we will repair or replace the unit free of charge.

SAFETY ADVISORY & WARNING:

Read and follow all instructions. Use only as intended.

CAUTION: Do NOT open to repair. A qualified technician must carry out repair work.

ATTENTION: Do NOT connect to a SoundExtreme product with LEDCast technology while the unit is wet. Make sure all connections are dry BEFORE connecting to a power source. Failure to do so may result in electrical damage to the unit and may void the warranty.

 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

ATTENTION: Do NOT dispose of in a landfill. Contact SoundExtreme at www.gracesupport.com or a certified recycling agent to dispose of the unit.

SAFETY:

This product has a limited life span of use and should be replaced when it shows obvious signs of wear.

Do not modify or remove any original component parts of the speaker. Doing so could cause damage to the unit, allowing water to ingress. A unit with water ingress should not be charged due to potential risk of fire or shock.

Please exercise care and good judgment when using your SoundExtreme unit.

You should always

- 1.) Return the unit to SoundExtreme if you suspect water ingress into the unit or if the unit has experienced a severe impact that may have affected the integrity of the unit to take on water.

Important Legal Information

You should never

- 1.) Never power your SoundExtreme unit if you suspect water has entered the device. Powering a device with water inside could be potentially hazardous and cause fire or a spark.
- 2.) Never use your SoundExtreme unit if you have dropped it or thrown it against a hard surface which may have destroyed the integrity of the housing. In the event of a severe impact to your unit, please return the unit to SoundExtreme to review for potential damage.
- 3.) Never attempt to fix, repair your SoundExtreme unit. Please send it back to SoundExtreme for any assessments and repairs.

CARE, MAINTENANCE & PRECAUTIONS:

- 1.) Do NOT apply excessive force to any surfaces of the unit.
- 2.) Do NOT use or store the unit in places with high temperature.
- 3.) AVOID prolonged exposure to ultraviolet radiation (UV sunlight) and strong magnetic fields.

LIMITED MANUFACTURER'S WARRANTY:

The Pulse is covered by a 2-years limited warranty that covers defects in workmanship and / or materials for a period of 1 year from original purchase date. This warranty does not apply to any products which have been abused, neglected, modified or used for a purpose other than the one for which they were manufactured. Please refer to the above care and maintenance instructions for suggested care details. The warranty is valid only for the original owner who purchases the unit from an authorized dealer. Transfers do not qualify for warranty protection. SoundExtreme reserves the right to replace any out-of-stock or discontinued product with a comparable product. Discontinued products may not be available for warranty replacement. Any contents are NOT covered by the limited manufacturer's warranty. Warranty terms may be revised without notification at the discretion of the manufacturer. Please visit www.soundextreme.us for additional product & warranty information.

The remote control supplied with

1. Warning ! "Do not ingest battery, Chemical Burn Hazard
 2. This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 3. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
4. Do not ingest battery, Chemical Burn Hazard, This product contains a button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Cet appareil est conforme avec Industrie Canada RSS exemptes de licence standard(s).

Son fonctionnement est soumis aux deux conditions suivantes:

- (1) cet appareil ne peut pas provoquer d'interférences, et
- (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003.

 
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps

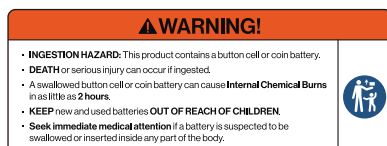

What's in the Box



 
SoundExtreme Speaker



SoundExtreme
User Guide




RF Remote
Control



8ft Power Cable



 
6-pin Deutsch to 2
3-pin LED Connectors

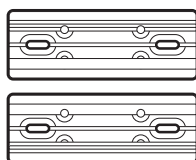

(2x) V-Groove
Mounts



 (4x) Worm Clamps
- 1/2" Width



(2x) Rubber
Sleeves



(4x) 1/4-20 SHCS
Bolt- 5/8" long



(4x) 1/4-20
Washer (S)



Allen Wrench
for 1/4-20