

Warranty Card

Related information (filled in by the user)

User Name		Common phone numbers	
Mailing Address			
Product Model		Product Number	
Purchase store		Purchase Date	
service center		Invoice Number	

Maintenance Record

Repair Date			
fault content			
Processing Details			
Name of maintenance unit	Repair unit phone number		
Repairer's signature			

 
Service Commitment
If there is any malfunction with the product, please contact our local distributor for service
Contact the online store or customer service center.
According to the national "New Three Guarantees Law", enjoy three guarantees servicesThe entire machine comes with a 180 day warranty.
If one of the following situations occurs, they do not enjoy the three guarantee service, but can pay for repairs:
1. Damage caused by improper use, maintenance, and storage by consumers
2. Damage caused by disassembly by non warranty repairers
3. Without warranty card and valid invoice
4. If the warranty card does not match the repaired product model or has been altered
5. Damage caused by force majeure
The starting date of the warranty period is based on the date of product receipt.

For products that have exceeded the warranty period or are not within the scope of free warranty, our repair center is still dedicated to serving you.

All content in this document has been carefully checked. If there are any printing errors, omissions, or misunderstandings in the content, please feel free to contact usOur company provides consultation.Note: If there are any technical improvements to the product, they will be included in the new manual without further notice. Product appearance and colorIf there are any changes, the actual product shall prevail.

User Manual

Ultrasonic humidifier

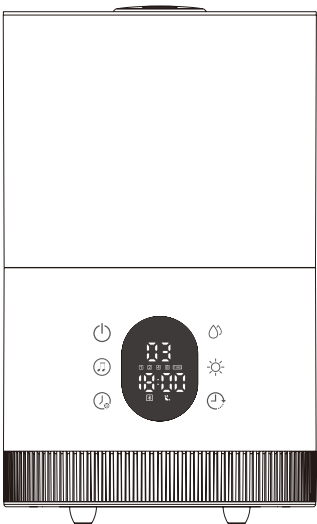


Please read this manual carefully before use and keep it properly


Product Introduction

attention
All illustrations in this manual are for explanatory purposes only. In case of any inconsistency between the appearance, function, and actual product,Refer to the actual product.

Component Name

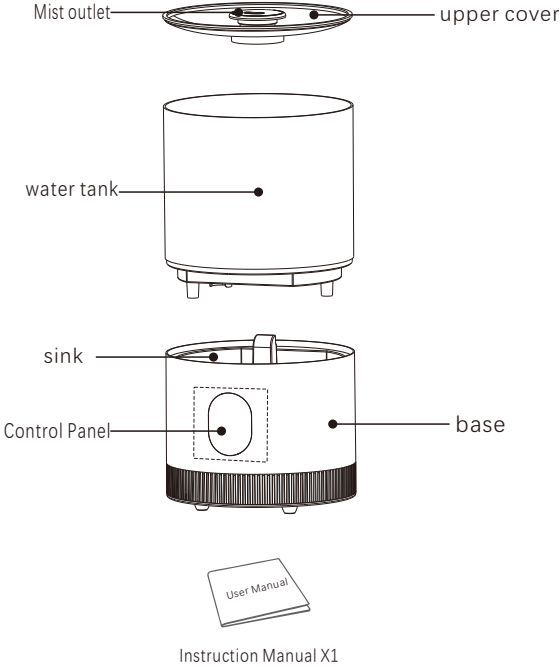

Control Panel

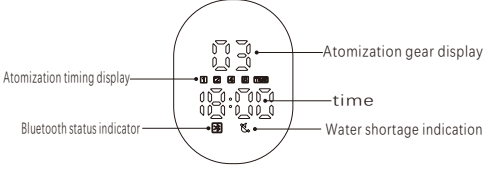


button	Functional Description
Spray switch	After connecting the power supply, the machine can be operated to turn on and off the fog. Short press in normal fog on state to enter fog off standby mode.
Bluetooth switch	When powered on, touch and short press once to turn on the Bluetooth speaker (Bluetooth device name: humidifier-H130A)Touch and short press again to turn off the Bluetooth speaker
Time Settings	1. Touch short press to adjust display brightness in 2 levels (default 24 settings) 2. Touch and hold for 2 seconds to enter the time setting. The current hour will flash. At this time, short press the timer button to gradually adjust the hour. 3. Short press the time setting button again to switch the minute display flashing state. At this time, short press the timer button to gradually adjust the minutes. 4. Press the time setting button again to save the time (or if there is no button operation within 10 seconds, it will automatically exit and save the time). 5. The clock has a mobile time calibration function, which automatically performs time calibration when the phone is successfully connected to Bluetooth. Some phones require permission from the mobile end to synchronize calibration, but the HarmonyOS system currently does not support this function
Mist volume adjustment	When turned on, set the humidification mist output to three levels: small, medium, and large mist output.
Light button	When powered on, touch and short press to turn on the ambient lighting,Short press to switch lighting modes
Timer button	When turned on, the humidifier can be set to turn off at 1H, 2H, 4H, and 8H atomization timing.The corresponding display on the screen lights up, indicating successful timing.

Instructions for Use


- attention**
- Before adding water, please make sure to unplug the power plug;
 - The height of adding water shall not exceed the highest water level line;
 - Please be careful not to pour water into the mist outlet when adding water;
 - When adding water, do not carry the transparent part at the top of the water tank by hand;
 - Do not add additives, drugs, pure essential oils, etc. to water,

Add water (three methods)

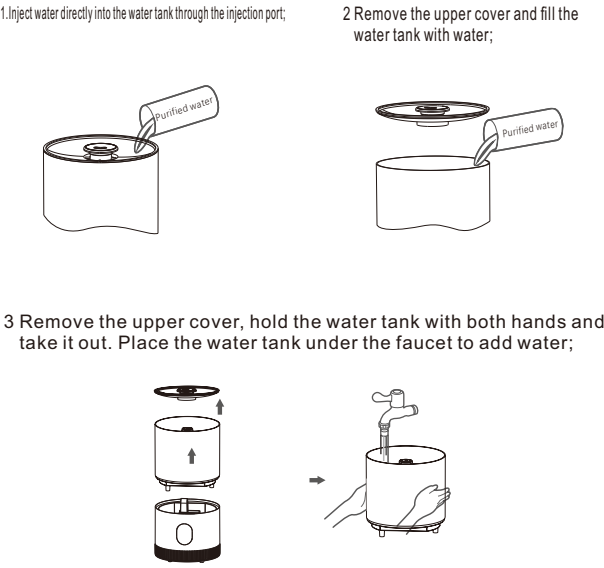


Water tank installation

If the third method of adding water is used,When installing back onto the base, make sure to have the logo on the water tankOne side faces the same side as the control panel.

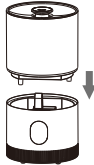

Fog direction adjustment

The direction of the fog outlet can rotate 360 degrees,It can be adjusted according to one's own needs,Make the fog come out in the direction you need.

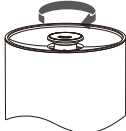

Cleaning and maintenance

- attention**
- Before cleaning, please make sure to unplug the power plug.Humidifiers must be regularly cleaned of scale and debris in the water tank, and it is recommended to clean it every 2-3 weeks.


Water tank cleaning

You can directly wipe it with a clean, soft, and damp cloth.



Cleaning of sink and atomizer

Add descaling agent or clean with water to clean
Rinse thoroughly afterwards.

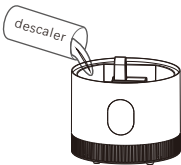

Product Parameters

- attention**
- The following are the design parameters of HYTC-H130A, and the measured parameters are subject to the product:Depending on the temperature and humidity inside the room, adding an appropriate amount will change accordingly.

model	HYTC-H130A
rated voltage (V~)	220
rated frequency (Hz)	50
rated power (W)	25
Rated humidification capacity (mL/h)	210
noise dB (A)	38
Humidification efficiency level	C
Water tank capacity (L)	3
Net weight (kg)	1.1

Service Guide

Fault handling

- attention**
- After the following treatment, if the humidifier still cannot work properly, please contact the customer service center or local authoritiesContact the repair point.

Fault phenomenon	Possible causes	treatment method
Humidifier not working	The power plug is not properly plugged in	Plug in the power plug properly
	There is no more water in the water tank	Add water to the water tank
	The water tank is not placed in place	Secure the water tank in place
The blown gas has a strange odor	Dirty water or prolonged storage time	Replace with clean water or clean the water tankAnd the sink
The humidification effect is not obvious	The air inlet filter is blocked by dust	Clean the filter screen
Abnormal noise appears	The machine is not placed securely, tilted or unstable	Placed on a solid tabletop or Use on flat surfaces
The water tank has water, but it shows a shortageWater state, humidifier lengthTime does not work	The machine tilts excessively at a certain angle, causingThe water level on the base cover is determined as the water levelToo low, the machine automatically shuts down with protection	Place the machine on a flat and sturdy surfacePlace and maintain stability
The display screen is flashing " " " "	Water shortage in the water tank	Add water to the water tank

Safety Warning

Safety precautions

- Connect the power supply and do not plug or unplug the power plug with wet hands to avoid electric shock;
 - Do not forcefully turn on the water tank when there is no water in it;
 - Do not add highly corrosive additives to the water tank;
 - Do not put or place any items or pets into the water tank;
 - Do not add water at the mist outlet;
 - When the humidifier is working, do not touch the water or components in the sink;
 - Do not block the fog outlet. Please keep it unobstructed above the fog outlet;
 - Do not replace the power cord without authorization, or connect the power cord midway or use it in parallel with other electrical appliances;
 - Do not place this device near water sources;
 - Unauthorized disassembly, modification, and repair of internal components are prohibited;
 - Do not climb or sit on this machine;
 - Do not store flammable and explosive materials around humidifiers, and do not place them near heat sources;
 - Do not directly rinse the humidifier with water;
 - Do not turn off the humidifier by directly unplugging the power plug.
- attention** Matters that may cause minor injuries or property damage
- Please use purified water for humidification;
 - Do not use damaged or aged power cords; It is prohibited to replace the power cord without authorization. If the power cord is damaged,
 - To avoid danger, it must be replaced by professionals from the manufacturer, their maintenance department, or similar departments.
 - Power must be cut off during thunderstorm weather;
 - When abnormal phenomena occur (such as burnt smell), the operation must be stopped and the power must be cut off.
 - When not in use for a long time, please unplug the power plug and clean the water tank thoroughly;
 - This product has aromatherapy function. If not used for a long time, the water tank that has been used with essential oils should be washed clean first
 - Add new aromatherapy solution;
 - To prevent bacterial growth, please regularly replace the water in the water tank and sink;
 - When moving the machine, please unplug the power plug first and keep the water tank stable to prevent water from overflowing;
 - If there is water in the water tank and the product tilts, be sure to immediately unplug the power plug and send it for maintenance;
 - This product is suitable for use in environments with temperatures ranging from -10 ° C to 80 ° C and relative humidity ranging from 30% to 95% RH
 - (Please use purified water with a water temperature below 40 ° C)

Environmental Protection List

Component Name	hazardous substance				
	lead (Pb)	mercury (Cd)	hexavalent chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ether (PBDE)
Shell component	○	○	○	○	○
Power cord components	X	○	○	○	○
fan assembly	○	○	○	○	○
circuit board assembly	X	○	X	○	○

Note: The fan component is not suitable for natural evaporative humidifiers

This table is prepared in accordance with the provisions of SJ/T 11364

○: Indicates that the content of the hazardous substance in all homogeneous materials of the component is within the GB/T 26572 standardThe specified limit requirement is as follows.
X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds GB/T 26572The prescribed limit requirements. However, with the current technological conditions, it is necessary to make the product components completely free of impuritiesIt is extremely difficult to have the above-mentioned harmful substances, and with the advancement of technology, the design will gradually be improved.

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.