

Smart lock manual

Version: TinyLock

Intelligent lock (five in one) operation manual		
1.STORAGE CAPACITY		
ITEM	CAPACITY	AUTHORITY
Administrator	1	Management equipment
Temporary	255	Temporary
Temporary		Temporary
Temporary		Temporary
Temporary		Temporary

2-INTRODUCE

2.1- INITIAL INFORMATION

- Key (1): After keylock key.
- Key (2): Administrator key or emergency key.
- To open the door with a password, have to touch the keypad or fingerprint head to activate the door light (fingerprint is working effect), and then press the (B) key to enter the password.
- To open the door with cardholders is no need to activate the lock light, just select the card directly.
- To open the door with fingerprint there is no need to activate the lock light (door fingerprint directly).
- If the notification is successful, the lock is unlocked by voice broadcast, the green light is on, and it flashes every 1 second. It will be automatically locked after a few seconds.
- If the notification fails, the lock light flashes 3 times, the fingerprint head lights up in red, and the voice prompts for operation fail.

- The volume will not be muted in the administrator menu mode. The volume is set to high by default. It will be executed after exiting the administrator after the voice setting is completed.
- If the voice is turned off, the lock light will be used as a reminder when you press the lock key.
- Press (1) B key if the voice is turned off, there will be voice prompts to enter the menu.

3.5- LANGUAGE SELECTION

