


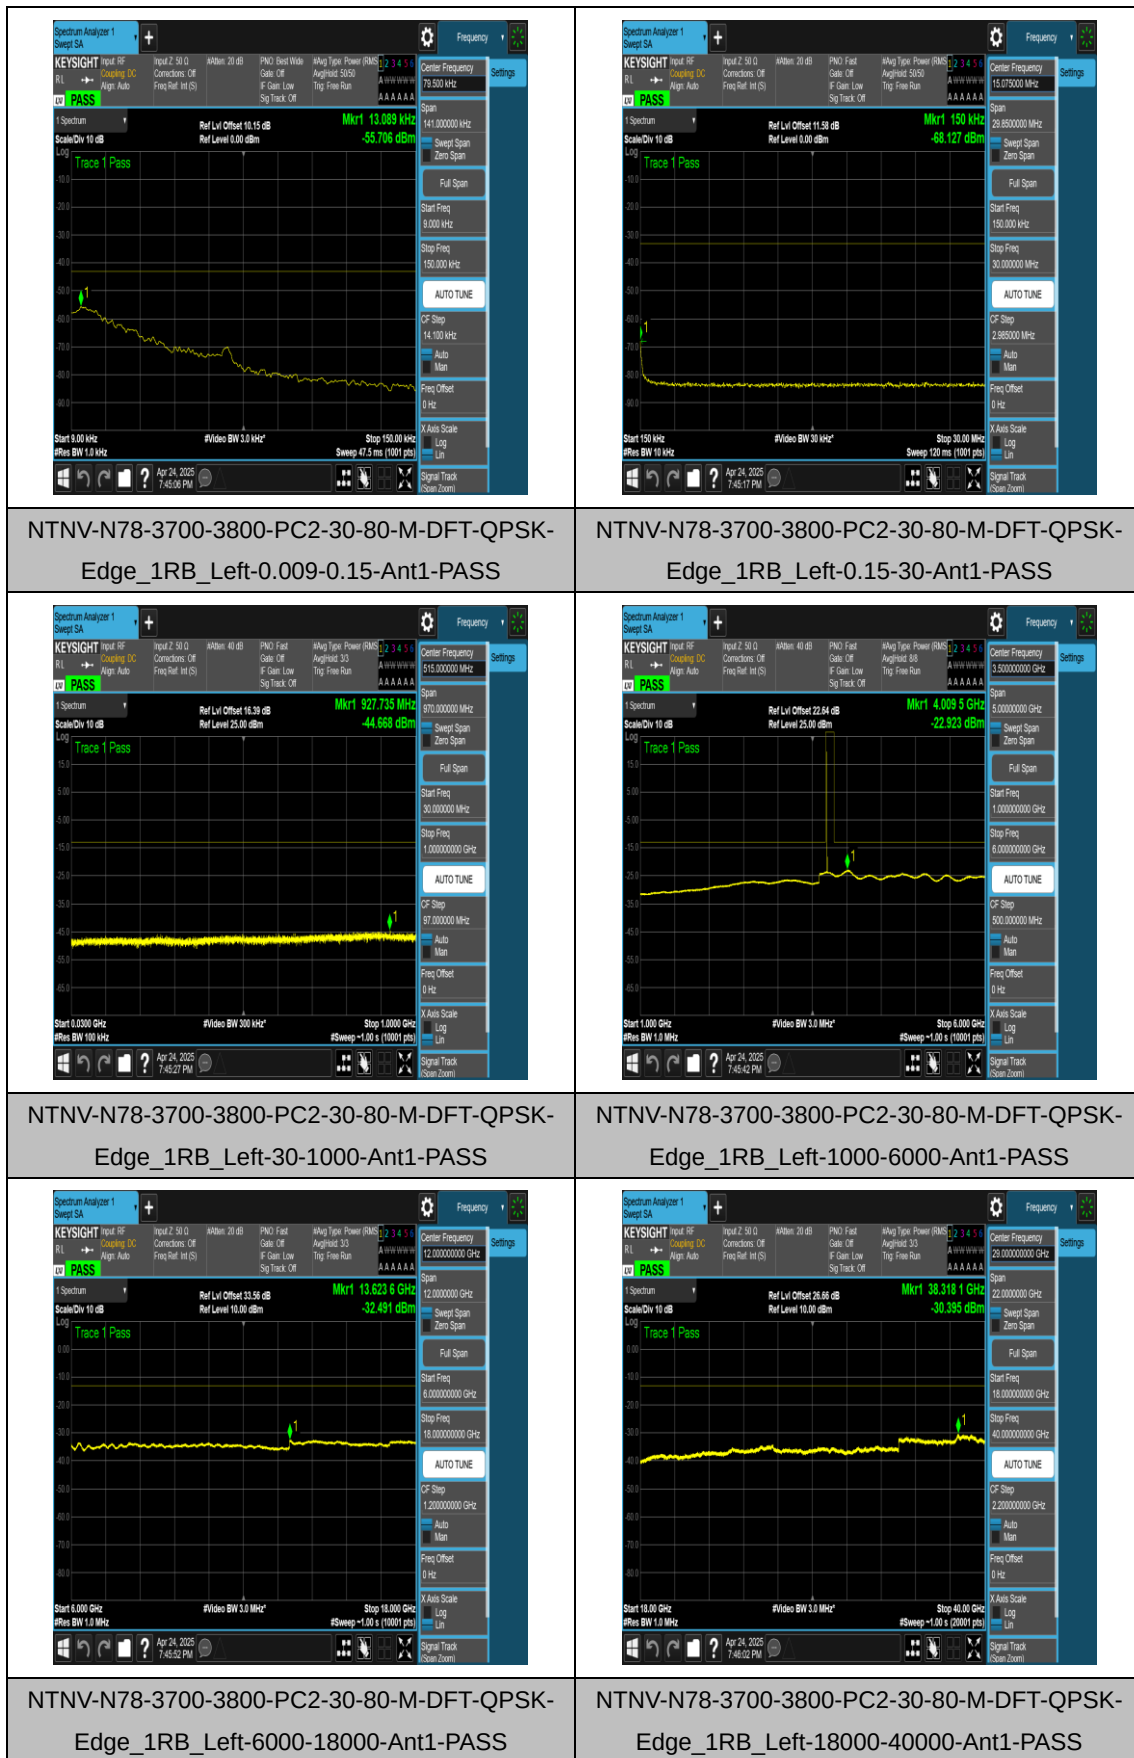

NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-0.009-0.15-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-0.15-30-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-30-1000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-1000-6000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-M-DFT-QPSK-  
Edge\_1RB\_Left-18000-40000-Ant1-PASS

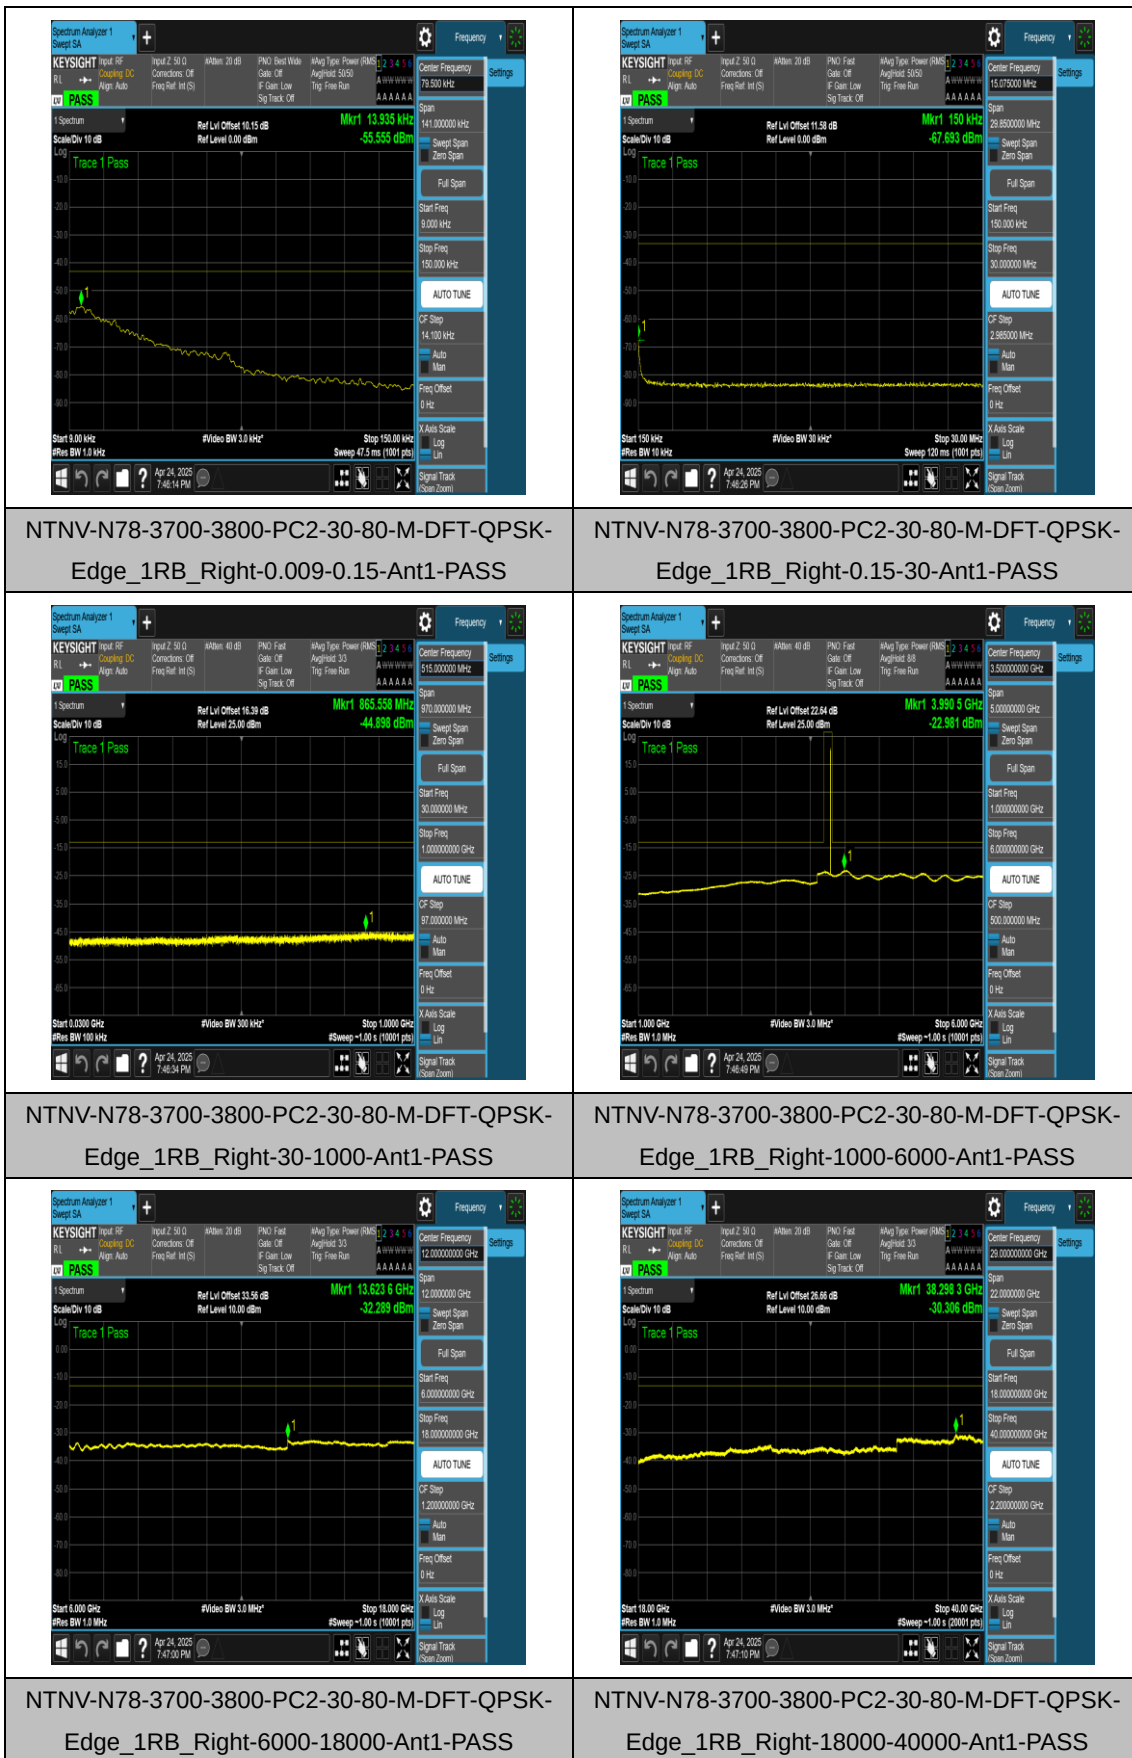

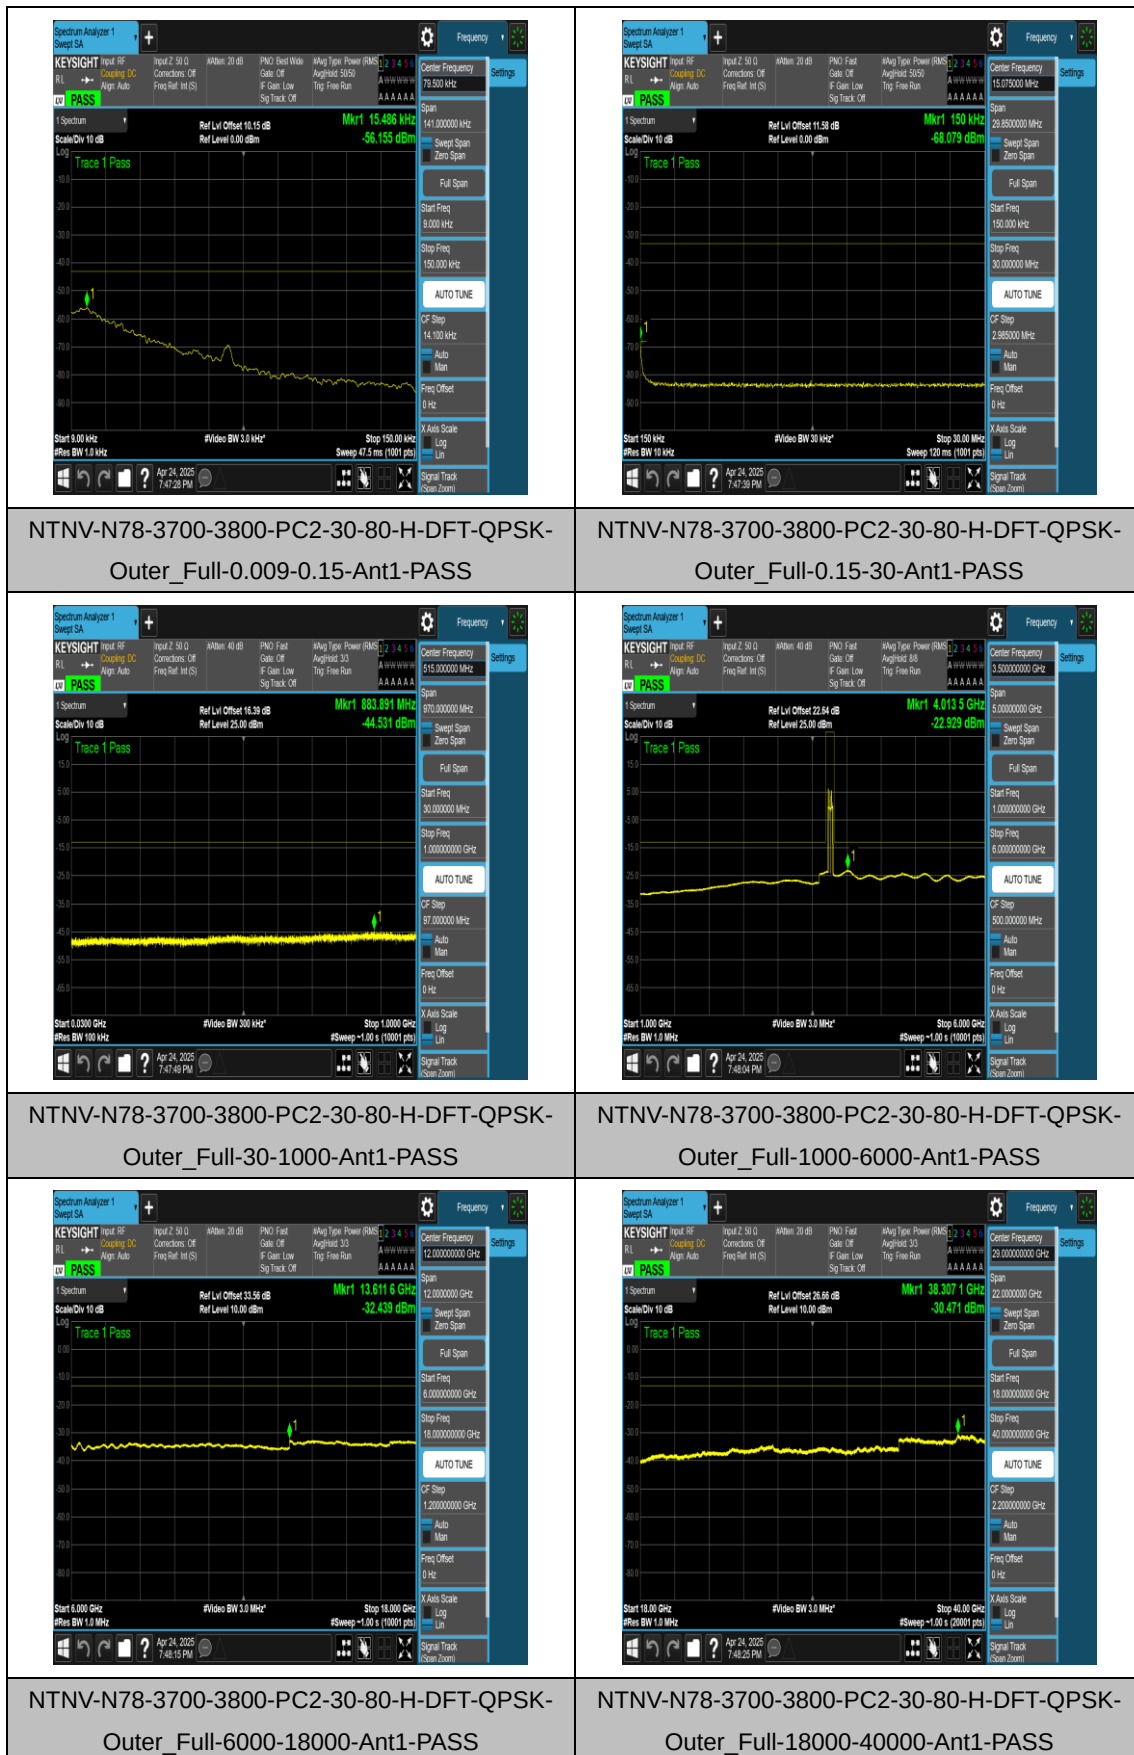

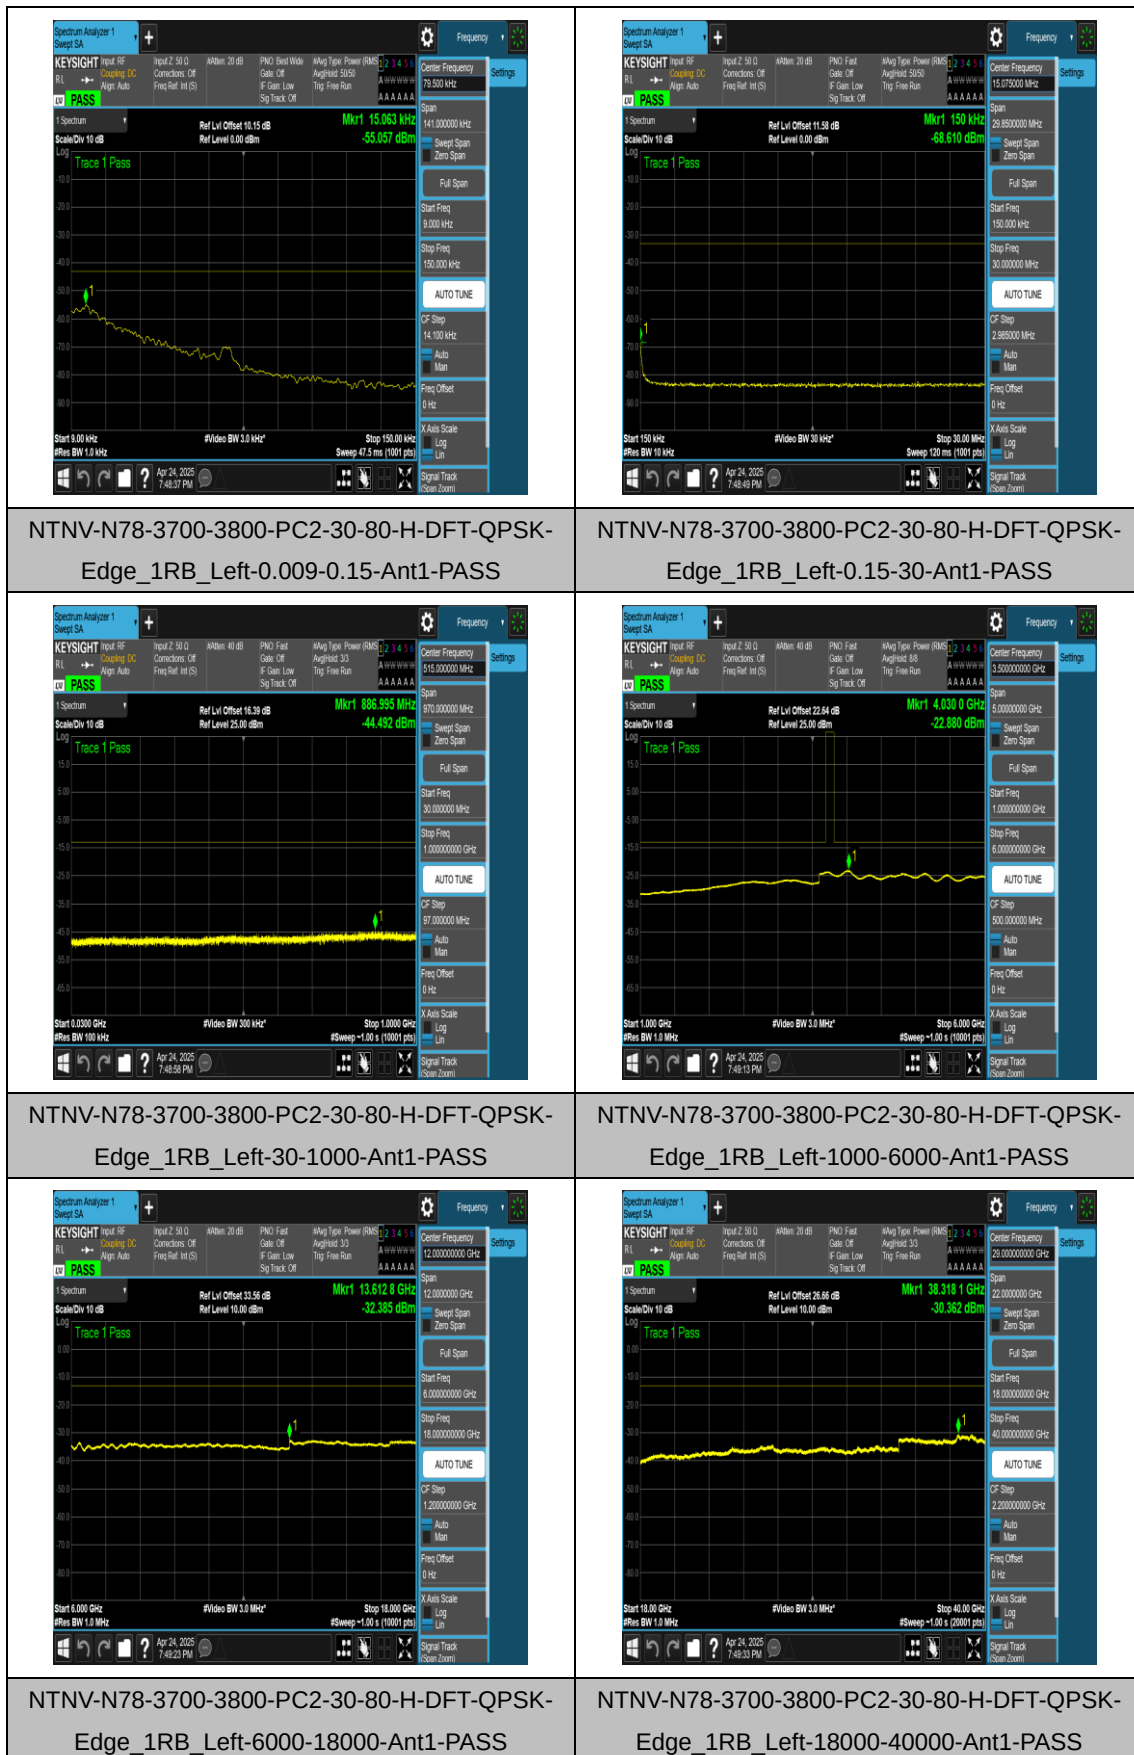

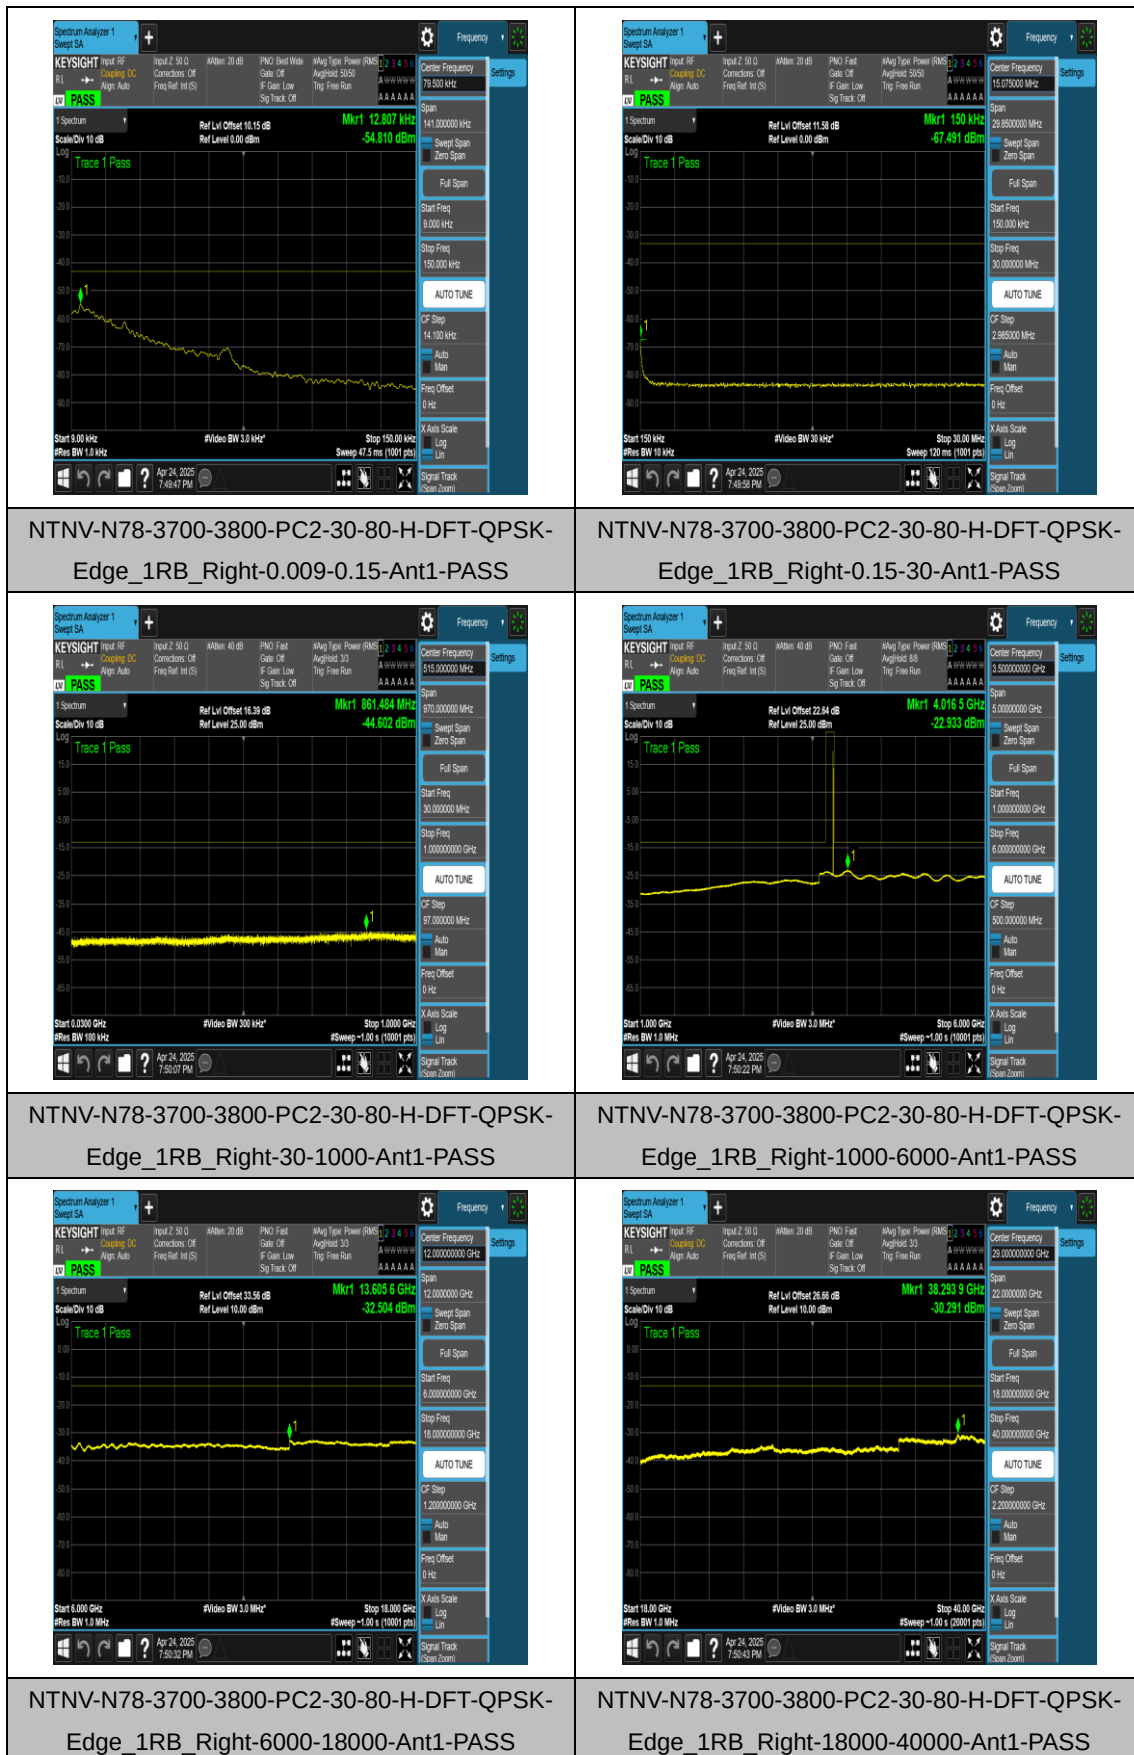

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-0.009-0.15-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-0.15-30-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-30-1000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-  
Edge\_1RB\_Right-18000-40000-Ant1-PASS

