



NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-0.009-0.15-Ant1-PASS	NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-0.15-30-Ant1-PASS
NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-30-1000-Ant1-PASS	NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-1000-6000-Ant1-PASS
NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-6000-18000-Ant1-PASS	NTNV-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-18000-40000-Ant1-PASS





