



NTNV-N78-3450-3550-PC2-30-10-M-DFT-16QAM
-Inner Full-PASS



NTNV-N78-3450-3550-PC2-30-10-M-DFT-16QAM
-Edge 1RB Right-PASS

NTNV-N78-3450-3550-PC2-30-10-H-DFT-QPSK-I
Inner Full-PASS



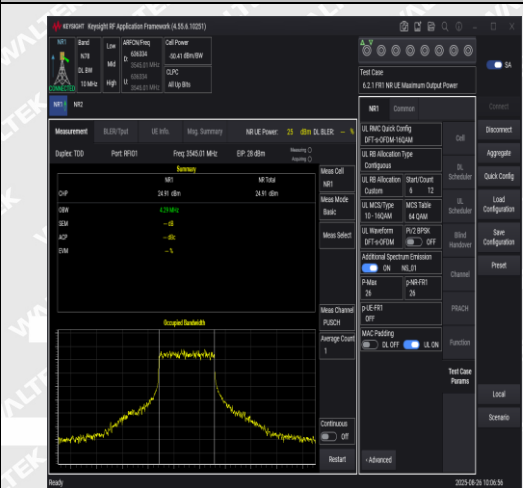
NTNV-78-3450-3550-PC2-30-10-H-DFT-QPSK-
Edge_1RB_Left-PASS



NTNV-78-3450-3550-PC2-30-10-H-DFT-QPSK-
Edge_1RB_Right-PASS



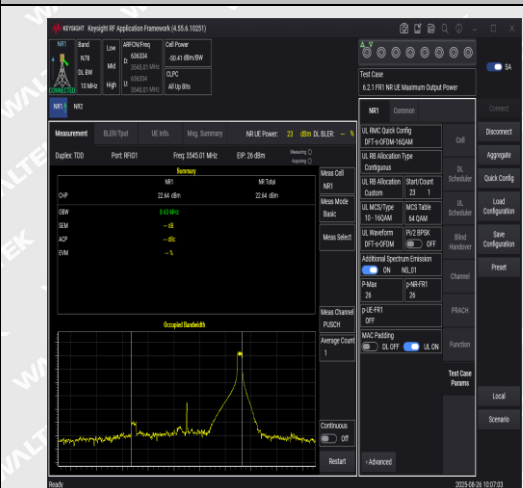
NTNV-78-3450-3550-PC2-30-10-H-DFT-16QAM-
Outer_Full-PASS



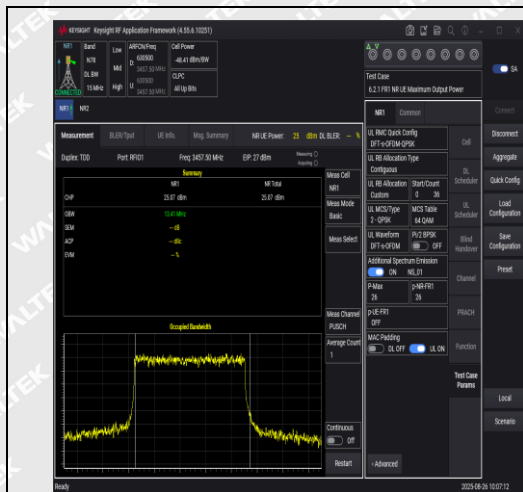
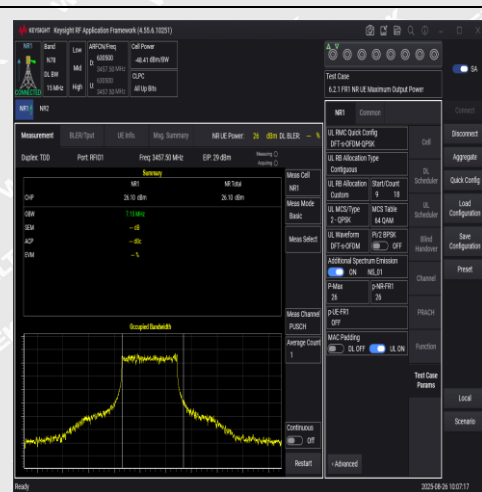
NTNV-78-3450-3550-PC2-30-10-H-DFT-16QAM-
Inner_Full-PASS

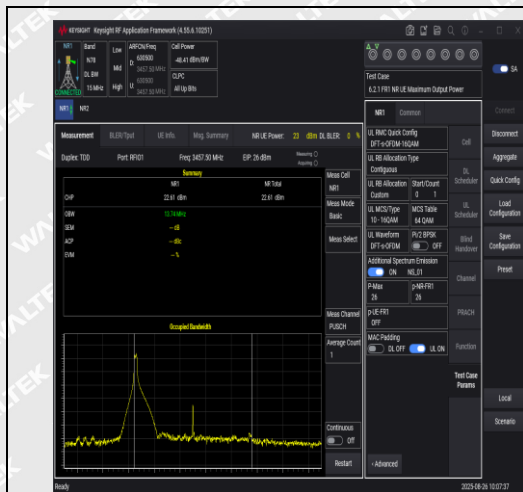


NTNV-78-3450-3550-PC2-30-10-H-DFT-16QAM-
Edge_1RB_Left-PASS



NTNV-78-3450-3550-PC2-30-10-H-DFT-16QAM-
Edge_1RB_Right-PASS

NTNV-N78-3450-3550-PC2-30-15-L-DFT-QPSK-O
uter_Full-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-QPSK-I
inner_Full-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-QPSK-E
edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-QPSK-E
edge_1RB_Right-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-16QAM-
Outer_Full-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-16QAM-
Inner_Full-PASS

NTNV-N78-3450-3550-PC2-30-15-L-DFT-16QAM-
Edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-15-L-DFT-16QAM-
Edge_1RB_Right-PASSNTNV-N78-3450-3550-PC2-30-15-M-DFT-QPSK-
Outer_Full-PASSNTNV-N78-3450-3550-PC2-30-15-M-DFT-QPSK-I
nner_Full-PASSNTNV-N78-3450-3550-PC2-30-15-M-DFT-QPSK-
Edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-15-M-DFT-QPSK-
Edge_1RB_Right-PASS