
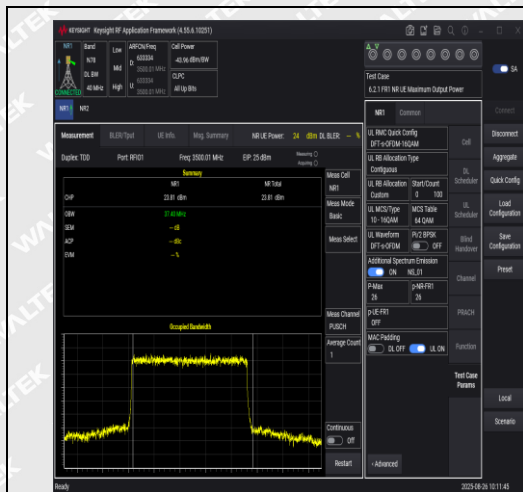
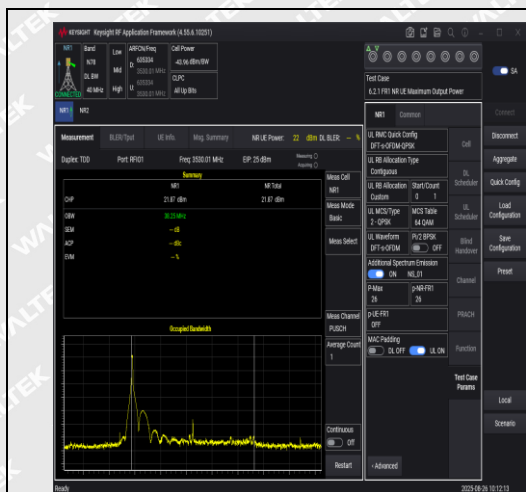


NTNV-N78-3450-3550-PC2-30-40-M-DFT-16QAM
-Outer_Full-PASSNTNV-N78-3450-3550-PC2-30-40-M-DFT-16QAM
-Inner_Full-PASSNTNV-N78-3450-3550-PC2-30-40-M-DFT-16QAM
-Edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-40-M-DFT-16QAM
-Edge_1RB_Right-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-QPSK-
Outer_Full-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-QPSK-I
nner_Full-PASS

NTNV-N78-3450-3550-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-16QAM-
Outer_Full-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-16QAM-
Inner_Full-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-16QAM-
Edge_1RB_Left-PASSNTNV-N78-3450-3550-PC2-30-40-H-DFT-16QAM-
Edge_1RB_Right-PASS

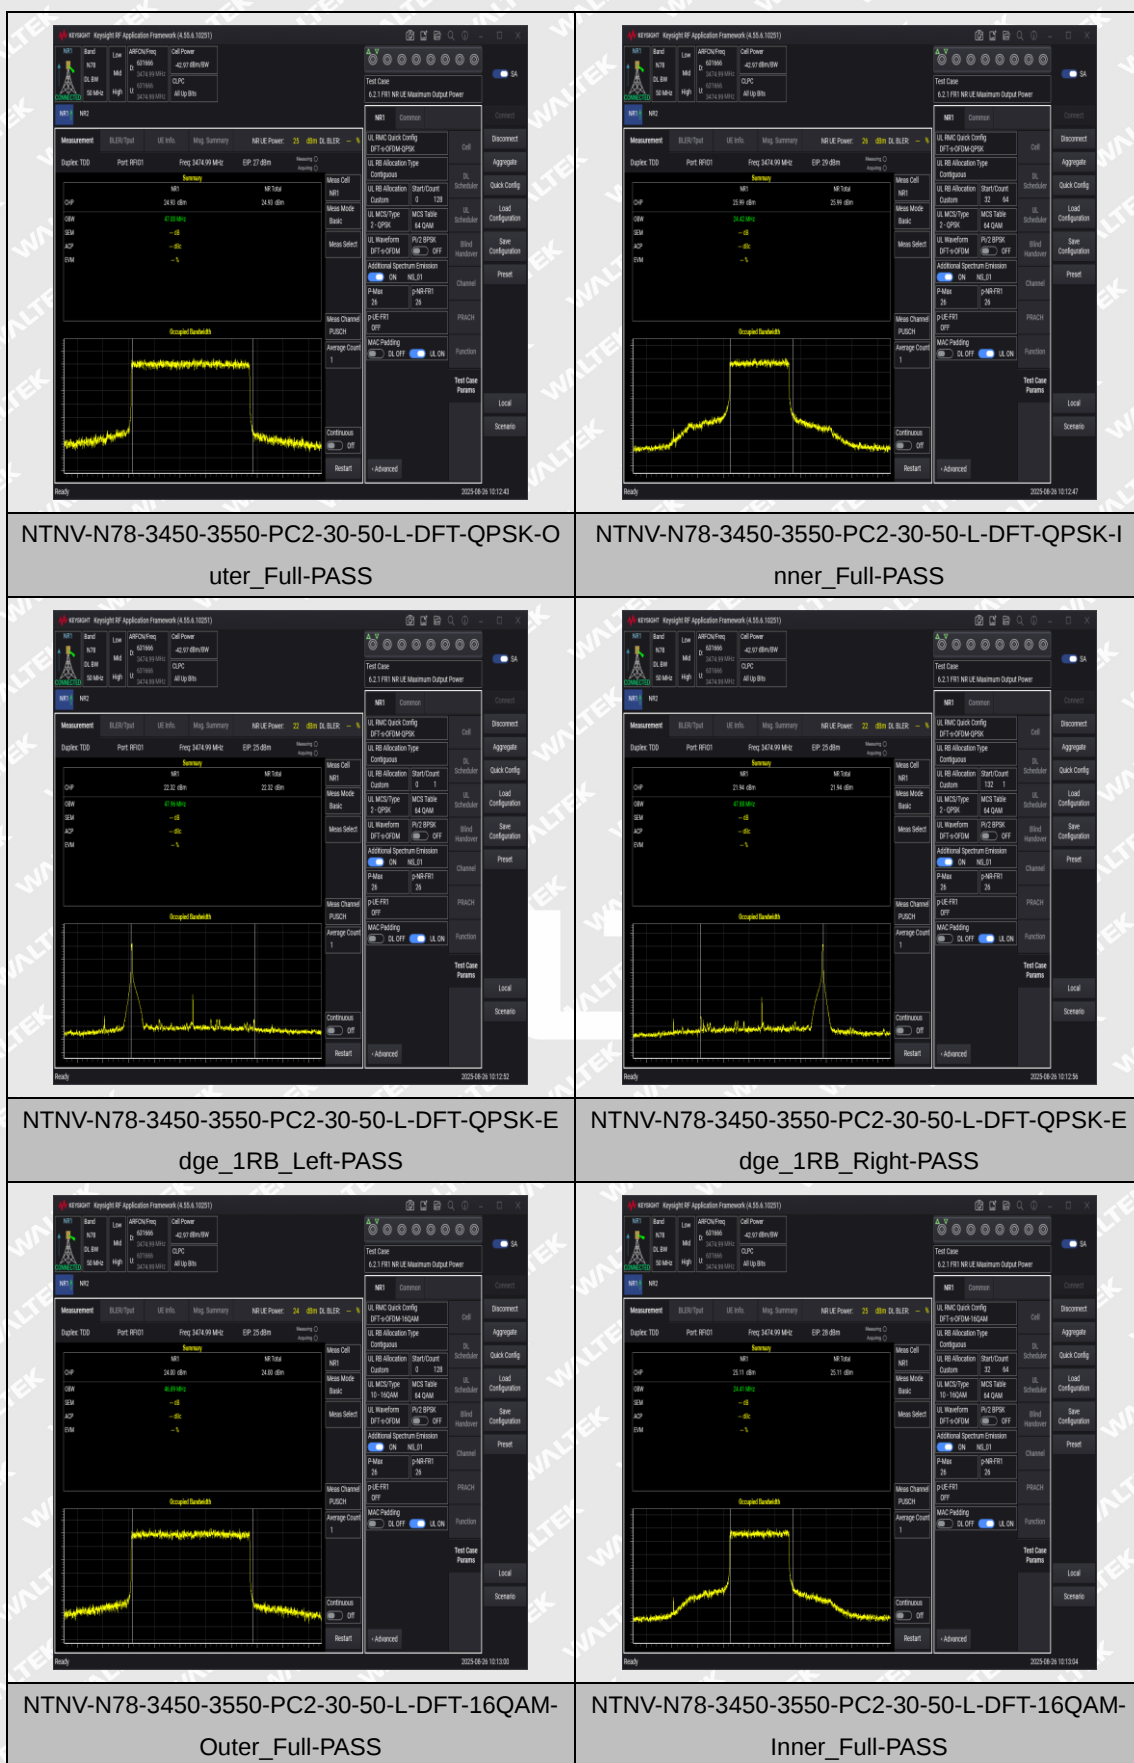

NTNV-N78-3450-3550-PC2-30-50-L-DFT-16QAM-
Edge 1RB Right-PASSNTNV-N78-3450-3550-PC2-30-50-M-DFT-QPSK-I
nner Full-PASS

NTNV-N78-3450-3550-PC2-30-50-M-DFT-QPSK-
Edge 1RB Right-PASS