


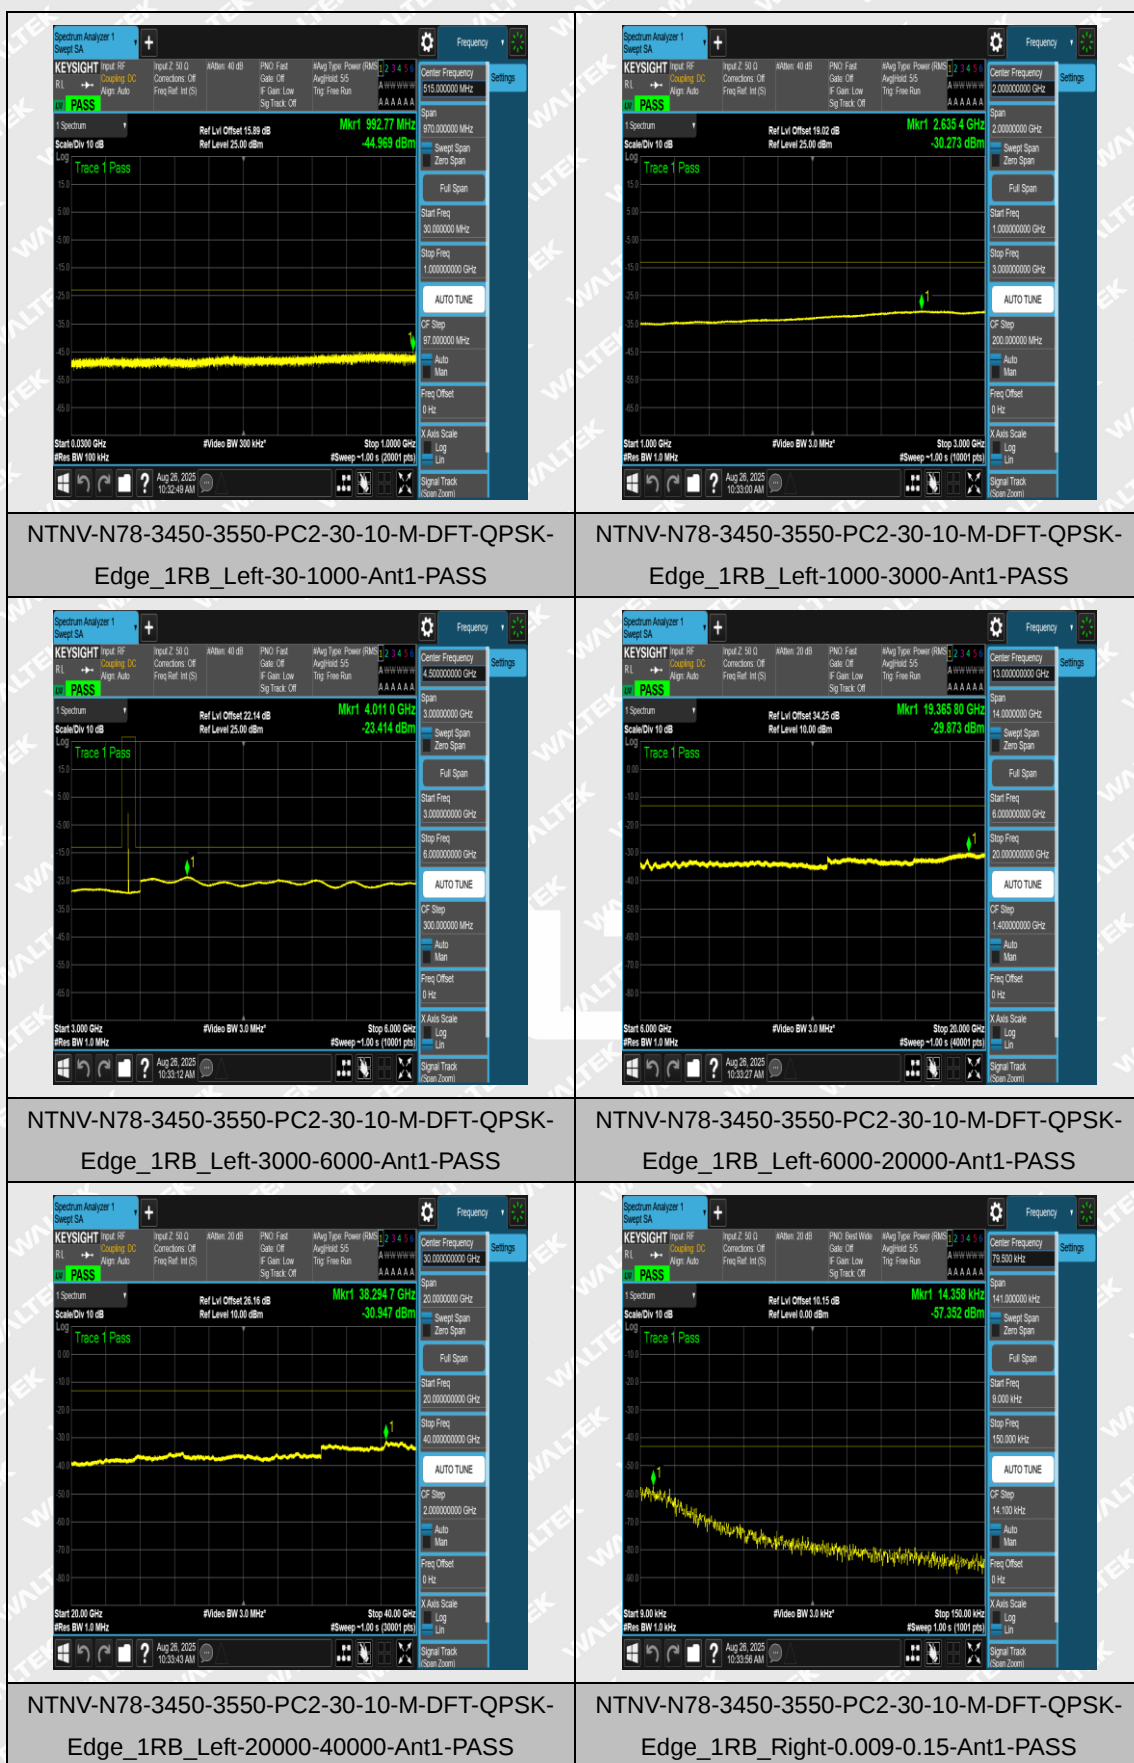



NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-0.15-30-Ant1-PASS	NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-30-1000-Ant1-PASS
NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-1000-3000-Ant1-PASS	NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-3000-6000-Ant1-PASS
NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-6000-20000-Ant1-PASS	NTNV-N78-3450-3550-PC2-30-10-M-DFT-QPSK- Edge_1RB_Right-20000-40000-Ant1-PASS

