



CANAL TOYS PHOTO CREATOR - INSTANT PRINTER KIT #CLK069 - USA_1 MANUAL

PRINT 4C

SIZE:
200 x 132 mm

FRONT

BACK

sticker_creator INSTANT PRINTER KIT

User Manual

Contents



1 INSTANT PRINTER



1 USB-C CABLE



6 MARKERS



5 STICKER ROLLS



1 STICKER SHEET



1 SHEET OF GEM STICKERS

TECHNICAL PARAMETERS

Maximum Power	4.5W
USB input supply	USB DC 5V 1A/2A connected to a SELV (Safe Extra Low Voltage) source.
Frequency band	2402MHz-2480MHz
TinyPrint App Operating systems	iOS 12.2 or above Android 7.0 or above

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Conforms to ASTM D-4236
- Contents contain colorants that may stain certain surfaces.
- Do not eat or ingest contents. Do not put near eyes or mouth.
- Wash hands after use.
- In case of adverse reaction stop using the item.
- Not for children under 8 years of age.
- Adult supervision required.
- Adult assistance required for assembly.
- Remove all packaging before giving to a child.
- Styles and colors of contents may vary from the pictures.
- Read instructions before use.
- Please retain this information for future reference.

Shutterstock.com / Dean Drobot / Khosro / Pressmaster / Johnstocker / Roman Samborskiy / Freepik.com / Prostock-studio


MADE IN CHINA
8600
#CLK069
USA_1

MANUFACTURED FOR
AND DISTRIBUTED BY:
CANAL TOYS USA, LTD.
1700 WEST PARK DRIVE
WESTBOROUGH, MA 01581
USA
Questions or Comments Email:
CustomerService@canaltoys.com
©Canal Toys*



FCC ID: 2BAOZ-CLK069

 1. FEATURES

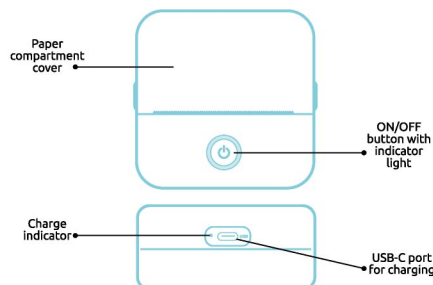

Indicator status:

LED color	Status and solution
Green	Normal use
Red	• The device is out of paper. Please replace the paper roll inside. • The device is overheating. Please wait for 30 seconds before trying again. • The cover is open. Please close it and try again.
Red and green flashing	The battery is running low. Please charge your device to keep using it.

2. RECHARGING BATTERY

Built-in battery, rechargeable and non-replaceable.


Note: recharging the battery must be done by an adult.

Connect the printer to a computer (or a 5V power converter) with the provided USB-C cable to recharge the battery. Insert the USB-C cable (small plug) into the USB-C port of the printer, below the device.

Connect the other end of the cable (large plug) to the computer's USB port (or a 5V power converter). When connected, the LED light next to the USB-C port will turn blue to indicate charging.

When the device is fully charged, the indicator light turns off. You can then unplug the USB-C cable from the computer.


3. PAPER INSTALLATION

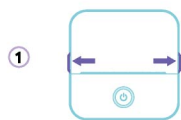

Pull to open the paper compartment cover by pressing inward and up at the same time on the sides of the printer.



Load paper roll as shown. Attention: Photo paper must be loaded according to the schematic direction! Leave a 5cm long piece of paper out of the compartment. The sticker paper rolls have a white backing. Insert the roll the proper way and only remove the white backing paper after printing and cutting your sticker.

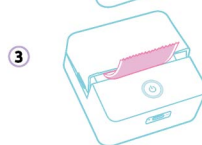


Close the paper compartment cover.

This printer can be used with both sticker paper and non-sticker thermal paper refill rolls (sold separately).

4. START USING YOUR INSTANT PRINTER

Before first use, please make sure to fully charge your instant printer as indicated in step 2.

1. Once the device is fully charged, please press the power button for 3 seconds. The ON/OFF button should be green. If it isn't, please refer to the "Indicator Status" table on reverse to identify the issue.

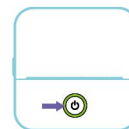

2. Download the "Tiny Print" App by scanning the QR code on the first page with your phone's camera or by searching for "Tiny Print" in your App downloading platform (look for this app logo).



3. Install and open the "Tiny Print" app on your phone. Go to your phone settings to ensure enabled for wireless connection and sharing. In the "Tiny Print" app go to the bottom tab "My" and then to "My device" and click on the printer device to be paired with the printer. If you do not see the device, press the "Refresh" button on the top and try again.

4. Double click on the ON/OFF button to launch a printing test and make sure your paper is correctly inserted.

Note: Apps not included. These apps are not affiliated with this product. All app names are trademarks of their respective owners. This product is not endorsed or sponsored by the owners of the apps. Always check with a parent/guardian before downloading or purchasing any app and in-app features.

The app is required to operate the printer. See the minimum system requirements below. The app is not developed or managed by Canal Toys. Please review the developer's privacy practices and compatibility information before installing.

Important: Please note that the APP layout is subject to future updates. Icons, features and layouts may be modified.

5. "TINY PRINT" APP FEATURES

The "Tiny Print" app has many features to discover! You can print pictures, images, labels, to do lists and even generate new images through AI (Artificial Intelligence) technology!

Below you'll find all the details on how to use the different features of the app.

For several of these features (marked with an "**"), please note that you'll need to have access to the internet. Before starting, please make sure to be connected via mobile data or WiFi.

Print Tab

	Photo Printing	Take pictures or use an existing picture and print it! Press the icon to use a picture already saved in your phone gallery. Press the icon to light-up your phone flash. When your picture is ready, select it and press "Print". You can change the settings of the printing if needed, please refer to the "Print Preview" Settings part of this manual.
	Graphic Editing	Combine pictures and text to create your own compositions! You can add text and change its size and alignment. Once your creation is ready, press "Print" to enter the "Print preview" page and print your creation.
	Text Extraction*	Select or take a picture of text, it will instantly transcript the text from the picture!
	Document Print	Print your documents instantly! Follow the steps detailed in the app to print documents saved on your phone.
	Print Web Pages*	Print internet pages directly with your printer! Use the search engine or enter the internet page directly in the address bar to access the page and print it!
	Banner Print	Create your own banners! Enter your text, format it and print!

Materials

In the tab "Materials", select "Graphic Library" and you will find a library of artworks to print. There are many categories and sub-categories to choose from. Select the image you want, and press "Print". You can then decorate your picture if you'd like with the markers and stickers.



Toolbox

In this tab, different tools are available to create artwork! Select the type of creation you want and add text or entries as desired. You can then print.



	Cartoonish Portraits*	Add a fun style to your pictures! You can either transform an existing picture in your gallery or take a new picture. Once you have chosen your picture, select the style you want to apply to it: Anime, 3D Hand drawn, Sketch or Illustration. It will transform your pictures instantly! To print, select the transformed photo and follow the in app prompts.
	Line Art*	Transform your picture into line art and create a nice drawing pattern! You can either transform an existing picture in your gallery or take a new one. Once you have selected your picture, it will transform it into a line art drawing! To print, select the transformed photo and follow the in app prompts.
	Text to Image*	Create brand new images thanks to the Artificial Intelligence (AI) generator! Type a sentence describing what you want to generate. The more detailed your text is, the more accurate your picture will be. You can select the images style you want below the text space (Cartoon, Illustration...) Once you are done, press on "Generate Now". The AI will take a few moments to process your request and create a brand new picture!

My Tab

In the last tab "My" of the app, you have several options:

► **My device:**

This entry allows you to pair the phone with your device, by clicking on the device name.

If you don't see the device, press the "Refresh" button on top.

► **History:**

This option allows you to find all your previous printings. Click on the image to check it and print again if needed.

You can remove a picture by clicking on the bin icon next to it.



Print Preview Settings

In all modes, when you press on the button "Print", you will enter a "Print Preview" page.

This page will show you what you are going to print, and offers the possibility to adjust your printing.

► **Print type:** Select Image or Text. It will adapt the printing quality to what you want to print.

► **Print depth:** Press "-" or "+" to adjust the printing contrast you want for your print.

► **Quantity to print:** Press "-" or "+" to adjust the quantity you want to print.

