




Use the screws in the package to secure the printed Mounting Bracket to the back of the Panda Bamboo Feeder (pay attention to the orientation).

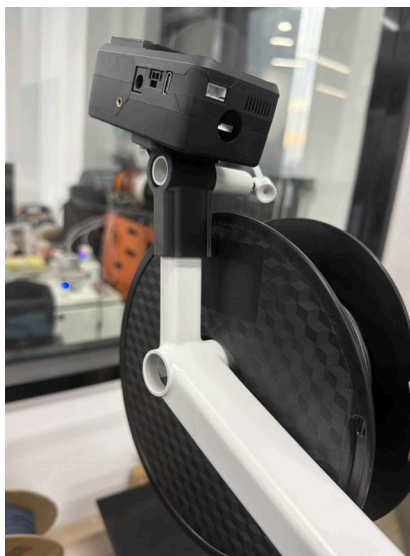

As shown in the diagram, snap it into the top end of the filament spool holder.



If you are only using the Panda Bamboo Feeder as a buffer, or if you plan to use filament directly from this filament spool holder, you will need to replace the PTFE tube at the Panda Bamboo Feeder filament inlet with a slightly longer one to prevent filament tangling.

The PTFE tube should not be too long or too short. It should form a natural, smooth curve.



Custom DIY Mounting

[Refer to here](#) to download the reference models for external dimensions and design your own custom mounting brackets for other printer models.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.