

■ 6.5 Meals

Plan family meals by entering meals manually, choosing saved recipes, or generating meal plans with AI Planner. Save reusable recipes, manage meal types, and turn recipe ingredients into shopping-list Notes.




■ 6.6 Notes

Share reminders, shopping lists, todo lists, and quick messages with your family. Create, edit, delete, and customize Notes that sync across supported linked devices.




■ 6.7 Photos

Share family photos and videos on the home display. Upload and manage media with the Zical App, organize photos into albums, mark favorites, hide selected photos, and enjoy built-in artwork from Art Gallery.

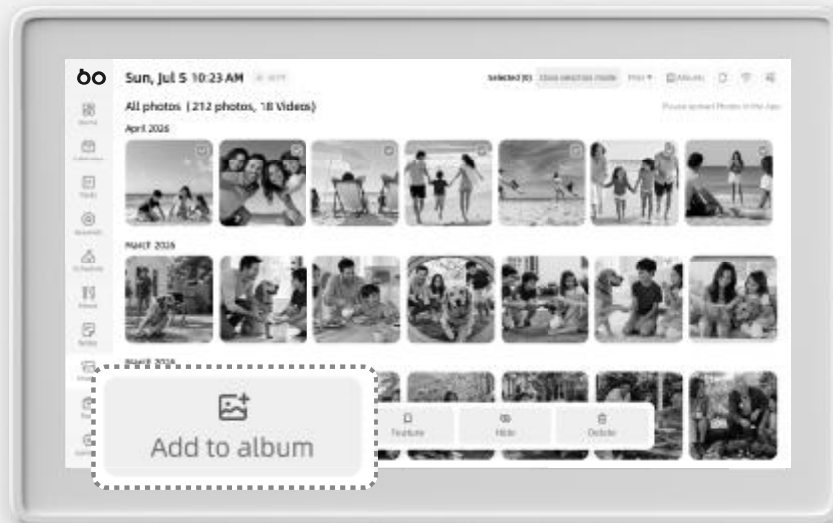 

■ 6.8 Schedule

 
Organize classes, lessons, and afterschool activities in one place. Add schedules for different family Members and view them by day or week.

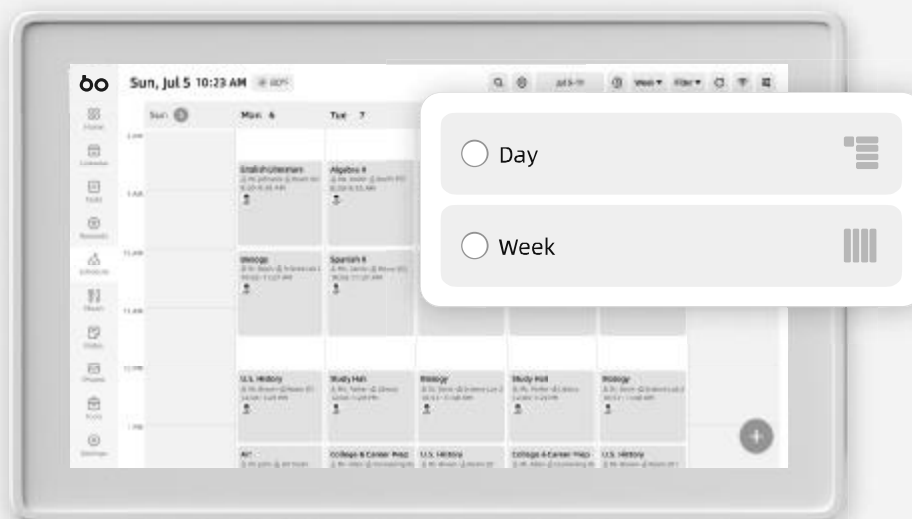

■ 6.9 AI Assistant (Subscription Required)

***AI assistant and related functions require subscription.**

 
Use AI Assistant with voice or text to help manage your family's schedule. **AI can create, find, edit, or delete events, tasks, courses, and notes.** A default Member can be selected so new items are automatically assigned when no Member is specified.

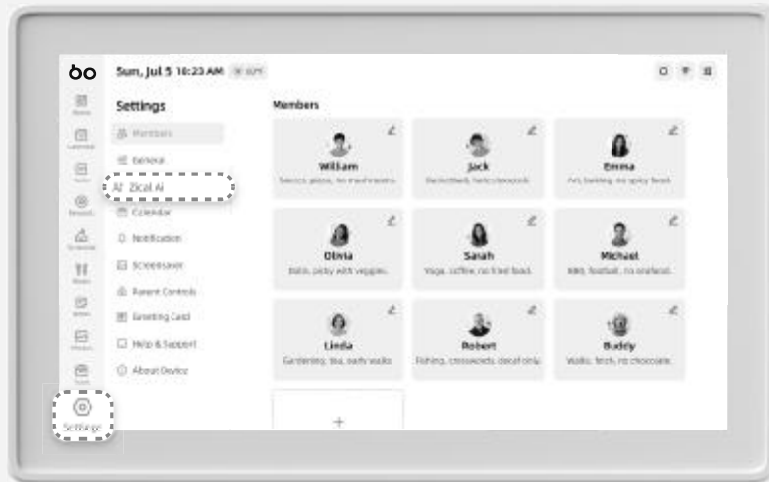

■ 6.10 AI Recipe Creation (Subscription Required)

***AI recipe creation and related functions require subscription.**

 AI Assistant can also create recipes from supported food or recipe images and links by identifying the recipe name, ingredients, and preparation steps.

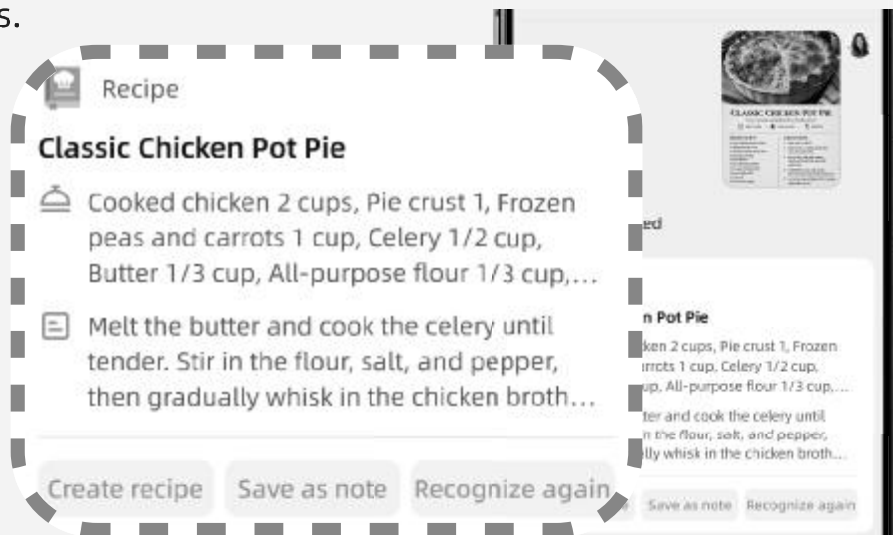

■ 6.11 Other Features

 
Timer

Use countdown timers for cooking, homework, routines, and other everyday activities. Timers can be started, paused, and resumed.




Special Days

Keep track of birthdays, anniversaries, vacations, and other important family moments. Special Days can repeat and important dates can be kept at the top of the list.

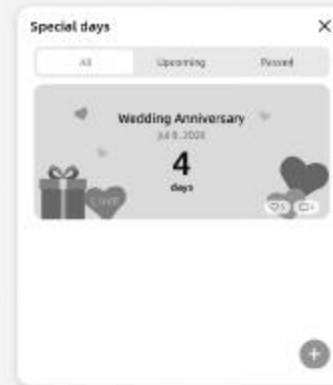

Greeting Cards

 Send digital greeting cards and personal messages to your family's home display using the Zical App. Cards can be sent immediately or scheduled for later.

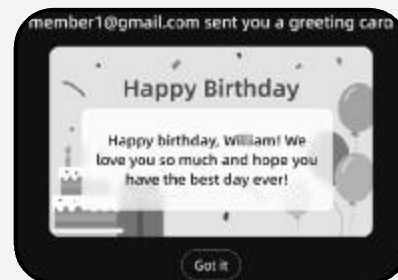

Likes & Comments

Stay connected with your family by liking and commenting on shared events, tasks, photos, and other supported content.



Parent PIN

Protect selected settings and family content from unwanted changes with a 4digit Parent PIN. Choose which features require PIN verification and change or reset the PIN when needed.



07

Device Settings

Customize how your home display looks, connects, and works for your family.

 
7.1 Screensaver

Clock/date or photo slideshow




7.2 Sleep

Set automatic sleep/wake times

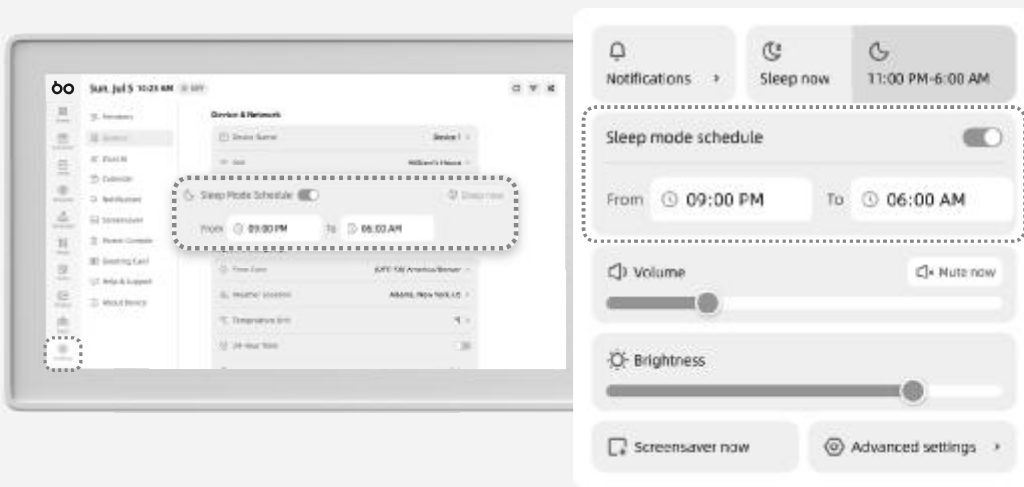


■ 7.3 Theme

 Change standard, seasonal or holiday themes

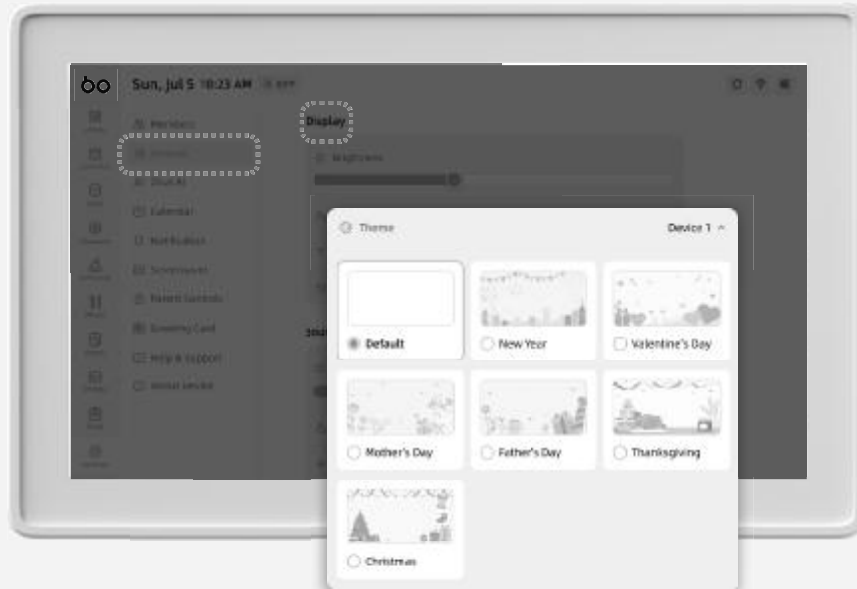


■ 7.4 Wi-Fi

 Connect or change your network

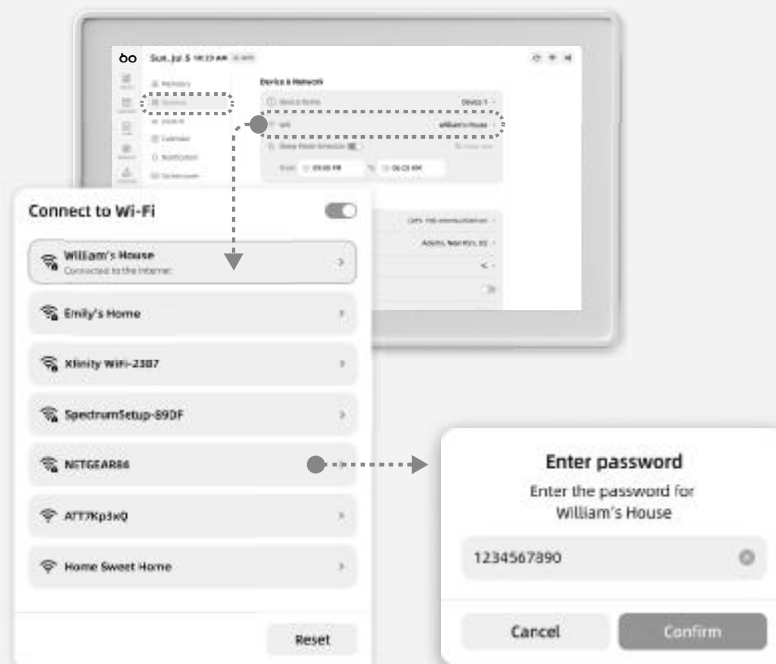


■ 7.5 Reminders

 Choose sound/voice, popup and reminder times

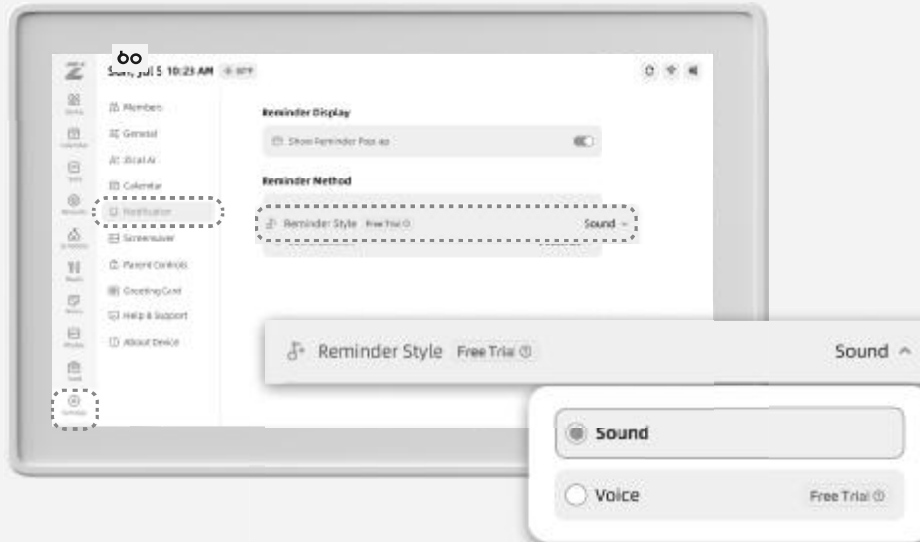

■ 7.6 Display

 
Portrait/landscape and zoom

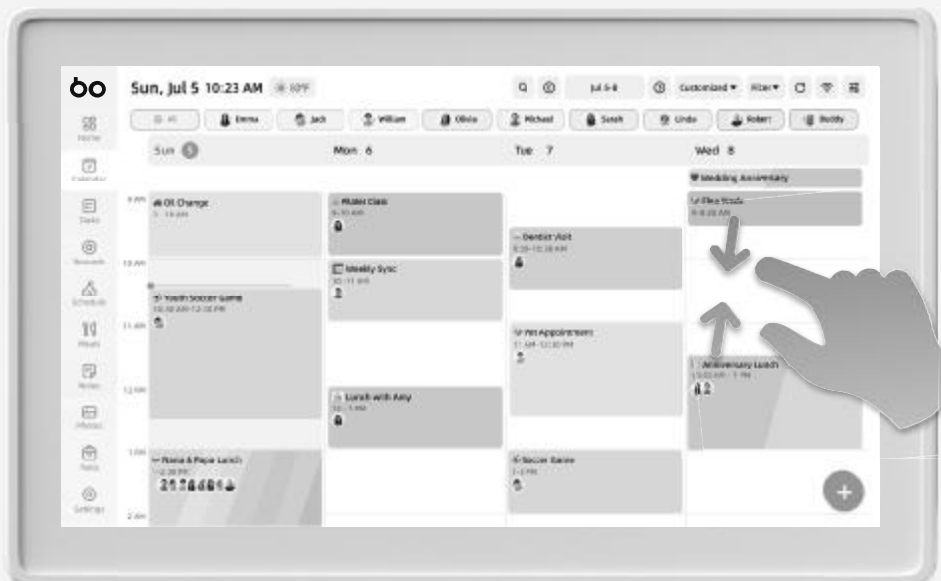

Zoom Out View


■ 7.7 Calendar

 Week start day and weekend display

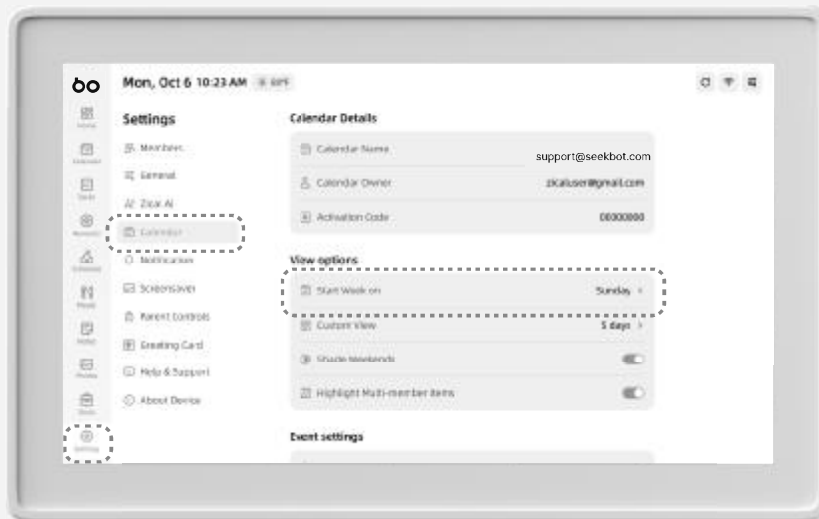

■ 7.8 System

 Restart, reset, update and refresh

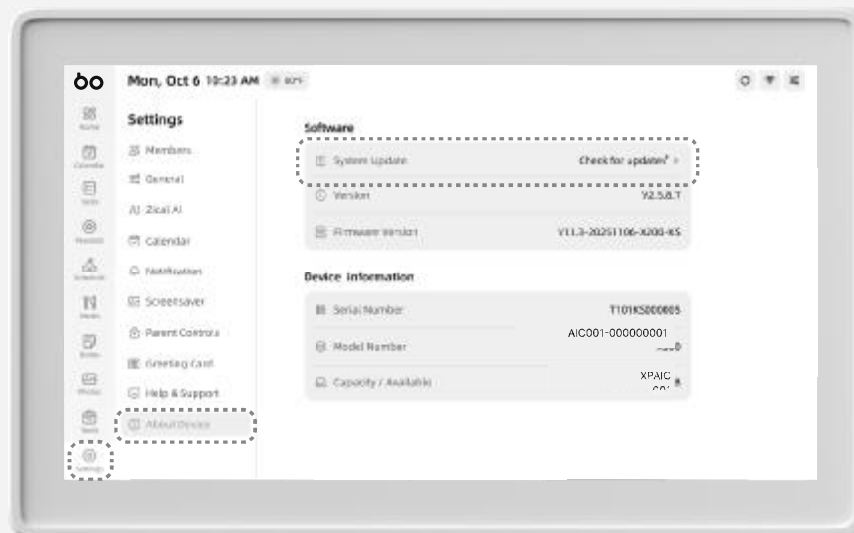

08

Troubleshooting

Find solutions to common power, display, Wi-Fi, activation, account, location, and reminder issues.

■ 8.1 Device and Display Problems

Use the following steps when the home display **does not power on, freezes, or stops responding**.

8.1.1 Display Does Not Power On

- 1 **Check the power adapter and outlet.**
Make sure the adapter is firmly connected to the display and outlet.
Test the outlet with another device.
- 2 **Check the DC power port.**
Make sure the connector is fully inserted and does not appear damaged or loose.
- 3 **Use the supplied or approved power adapter.**
Do not use another adapter unless its voltage, current, polarity, and connector match the requirements for your display model.
- 4 **Contact Support.**
If the display still does not power on, contact the seller or SeekBot Support. Include the device model, serial number, and a clear photo of the power connection.

8.1.2 Display Is Frozen or Not Responding

 
- 1 **Restart the display.**
Disconnect the display from power, wait a few minutes, then reconnect it.
- 2 **Contact Support.**
If the problem continues after restarting, contact SeekBot Support and **include a photo or video showing the issue**. If possible, **also include a clear photo of the serial number (SN) label** on the back of the display.

■ 8.2 Photo and Video Upload Problems

8.2.1 Nothing Happens When I Tap the Upload (+) Button

The Zical App may not have permission to access the photos and videos on your phone.

Open the **side navigation** and go to **Settings > General > System Permissions > Camera**. When your phone's system settings open, make sure the Zical App is allowed to access your photos and videos. Then return to the Zical App and **try uploading again**.

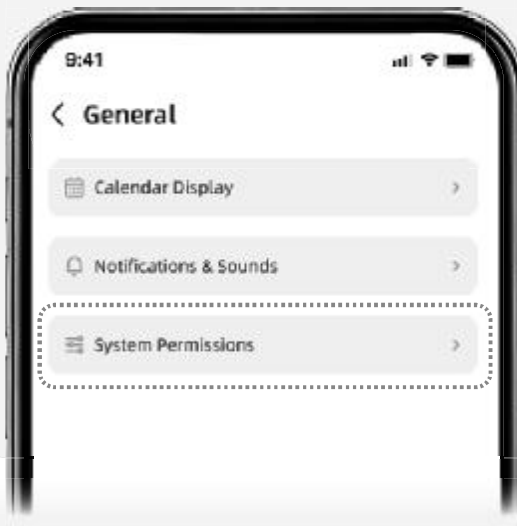

8.2.2 Some Photos or Videos Cannot Be Selected

The Zical App supports only **certain photo and video formats**. Files in unsupported formats cannot be selected or uploaded.

The **supported photo and video formats** are shown below.

Platform	Image Formats	Video Formats
Android	JPEG	MP4
	JPG	3GP
	PNG	HEVC
	WEBP	MOV
iOS	JPEG	MP4
	JPG	3GP
	PNG	HEVC
	HEIC	MOV
		M4V

■ 8.3 Wi-Fi and Network Problems

Use the following steps when the home display cannot connect to Wi-Fi or when you need to check whether a public network is supported.

8.3.1 Unable to Connect to Wi-Fi

1 Reset the saved network.

On the Wi-Fi selection screen, tap **“Reset”** at the bottom, then try connecting again.

2 Test a mobile hotspot.

Try connecting the display to a mobile hotspot to determine whether the issue is related to your home network or the display.

3 If the hotspot works, check your home network.

Confirm the Wi-Fi password, signal strength, security mode, and any network restrictions.

4 **If the hotspot does not work, restart the devices.**

Restart the display and router or hotspot. Wait until they have fully restarted, then try again.

5 **Contact Support.**

If the issue continues, contact SeekBot Support. Include photos of the Wi-Fi screen, any error message, and the device serial number (SN).

① *Note: During activation, the SN appears at the bottom of the screen. After activation, go to **Settings > About Device > Device Information > Serial Number**. You can also take a clear photo of the SN label on the back of the display.*

8.3.2 Can I Connect to Public Wi-Fi?

The display may connect to a public Wi-Fi network if no additional sign-in steps are required.

Networks that require a browser page, acceptance of terms, a room number, a text-message code, or other authentication may not be supported. Use another Wi-Fi network or a mobile hotspot instead.

■ 8.4 Activation and Calendar Linking Problems

Use the following steps when an activation code does not work or the display is linked to the wrong Zical calendar.

8.4.1 Activation Code Is Invalid or Expired

1 **Check the activation code.**

Make sure all **eight digits** were entered correctly and that the code belongs to the Zical calendar you want to display.

2 **Get the current activation code.**

In the Zical App, switch to the intended calendar, open the side navigation, and tap **“Activation”**. Find the current **8-digit activation** code and enter it again on the display.

8.4.2 Display Is Linked to the Wrong Calendar

1 Check the Zical Account and calendar.

In the Zical App, confirm that you are signed in to the correct Account and have selected the calendar you want to show. If needed, sign out and sign in again with the correct email address.

2 Get the correct activation code.

Open the side navigation and tap “**Activation**” to find the **8-digit activation code** for the selected calendar.

3 Reset and reactivate the display.

On the display, go to **Settings > General > Reset Device**. Complete the setup process again and enter the activation code for the correct calendar.

■ 8.5 Sync and Content Display Problems

1 Check the selected calendar.

In the Zical App, open the calendar list and confirm that the selected calendar matches the calendar linked to the display.

2 Check the network and refresh the display.

Make sure both the Zical App and home display can access the internet. Allow time for synchronization, then tap the Refresh button in the upper-right corner of the affected page.

3 Check the filters.

Make sure a Member, calendar, task, or other active filter is not hiding the content.

4 Contact Support.

If the content still does not appear, contact SeekBot Support. Include the content type, title, date, screenshots from the App and display, and the device serial number (SN).

■ 8.6 Account and Sign-In Problems

8.6.1 Password Reset Email Does Not Arrive

1 **Check the Email Address.**

Make sure you entered **the email address** registered to your Zical Account.

2 **Check Other Folders.**

Look in your Spam, Junk, Promotions, and other filtered folders.

3 **Request Another Email.**

Wait a few minutes, then request a new password **reset** email.

4 **Contact Support.**

If you still do not receive the email, contact SeekBot Support and provide the email address registered to your Account.

ⓘ *Note: Never share your **password or verification code** with anyone.*

8.6.2 Unable to Sign In

1 **Check the Email Address.**

Enter the **email address** exactly as it was registered to your Zical Account, including the same capitalization.

2 **Check the Password.**

Make sure **the password is entered correctly**. If your device fills it in automatically, delete the saved password and enter it again.

3 **Reset the Password.**

Tap **“Forgot Password”** and follow the instructions to reset your password.

4 **Contact Support.**

If you still cannot sign in, contact SeekBot Support and provide your registered email address and a screenshot of any error message.

■ 8.7 Time Zone and Weather Location Problems

8.7.1 Time Zone Is Not Listed

Not every city is listed. Search for your time zone directly or select any listed city in the same time zone.

If the correct time zone is still unavailable, contact SeekBot Support and provide your city, state or province, country, and postal code.

8.7.2 Weather Location Is Not Listed

If your location is not listed, select the closest supported city to view nearby weather conditions.

To request that a location be added, contact SeekBot Support and provide the city, state or province, country, and postal code.

■ 8.8 Reminder and Sound Problems

8.8.1 Phone Does Not Receive Reminder Notifications

1 Check the Item's Reminder Settings.

Open the **event, task, or course** and confirm that a reminder is enabled and the reminder time is correct.

2 Check the Phone's System Notification Permission.

In the Zical App, open the **side navigation** and go to **"Settings" > "General" > "System Permissions" > "Notification Settings"**. Make sure the phone's system notification permission is turned on for the Zical App.

3 Check the Notification Settings in the Zical App.

Go to **"Settings" > "General" > "Notifications & Sounds"**, Make sure the applicable notification and sound options are turned on.

4 Contact Support.

If the issue continues, contact SeekBot Support and provide your phone model, operating system version, Zical App version, an example item, the expected reminder time, your time zone, and screenshots of the relevant settings.

8.8.2 Home Display Does Not Receive Reminders

1 Check the Item's Reminder Settings.

Open the event, task, or course and confirm that a reminder is enabled and the reminder time is correct.

2 Check the Home Display's Reminder Settings.

Go to **"Settings" > "Notification" > "Reminder Display"** and make sure **"Show Reminder Popup"** is turned on.

3 Check the Date, Time, and Network Connection.

Make sure the home display is connected to the internet and that its date, time, and time zone are correct.

4 Check the Sound Settings.

Make sure the volume is turned up and the home display is not muted or in Sleep Mode.

5 Restart the Home Display.

Disconnect the display from power, wait a few minutes, and reconnect it.

6 Contact Support.

If the issue continues, contact SeekBot Support and provide the item type and title, assigned Member, expected reminder time, time zone, device model and serial number, software version, and screenshots of the relevant settings.

8.9 Still Need Help?

Scan the QR code for the Complete Digital User Guide, video tutorials, and additional troubleshooting.



Complete Digital User Guide



YouTube Video Tutorials

8.10 FCC Warning Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

SPECIFICATIONS

SeekBot Calendar 15.6"


Model: XPAIC001

Input: DC12V/3A

Net Weight: 1,234 g $\pm$ 2 g

Operating Temperature: -10°C to 50°C

 FCC ID: 2BAYW-XPAIC001

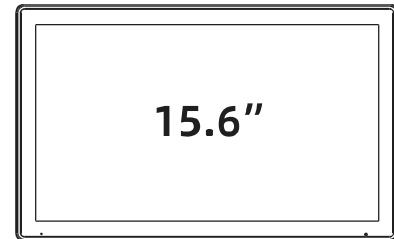

SeekBot Calendar 21.5"


Model: XPAIC002

Input: DC12V/3A

Net Weight: 2,990 g $\pm$ 10 g

Operating Temperature: -10°C to 50°C

 FCC ID: 2BAYW-XPAIC002

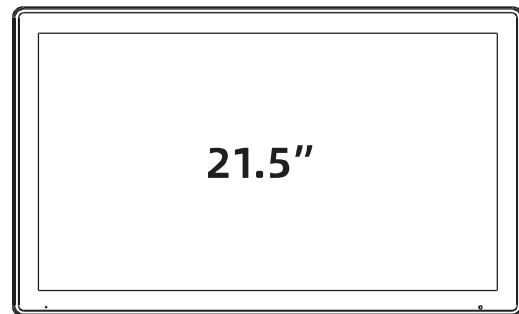

SAFETY WARNINGS

- * Use only the supplied power adapter.
- * Use the product with the correct power supply as specified on the product label.
- * Keep the product away from water, moisture, and heat sources.
- * Do not use the product if the power cord, plug, or adapter is damaged.
- * Do not open, modify, or repair the product yourself.
- * Warranty period: 1 year, users who dismantle the machine without authorization are not covered by warranty.
- * Unplug the product before cleaning.
- * Stop using and unplug the product immediately if you notice smoke, burning smell, sparks, unusual heat, or other abnormal conditions.

SEEK BOT

Find the Rhythm of Home

Support	support@seekbot.com
Manufacturer	ZhenShi Information Technology (Shanghai) Co., Ltd.
Address	RM 4015, Building 2, No.588, Zixing Road, Minhang District, Shanghai, China
Exporter	ZhenShi Information Technology (Shenzhen) Co., Ltd.
Address	Room 230, 232, 233, Building 7, Vanke Spark, Nankeng Community, Bantian Subdistrict, Longgang District, Shenzhen, Guangdong Province, China



RoHS
Made in China

