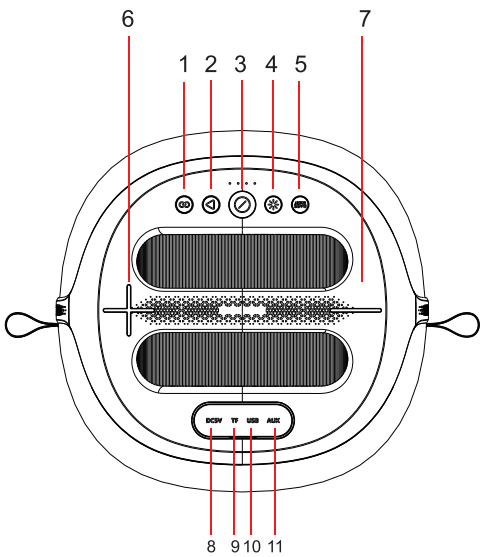 
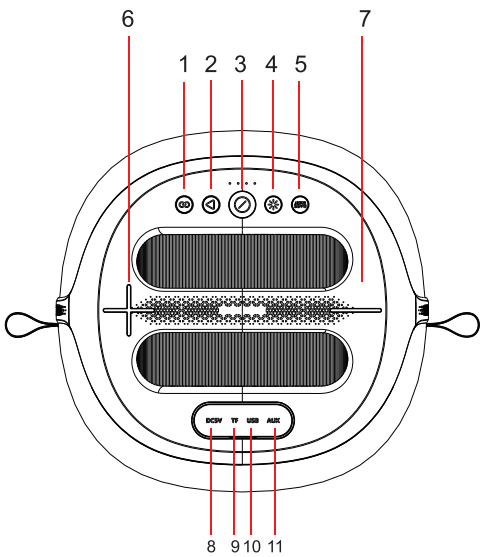 
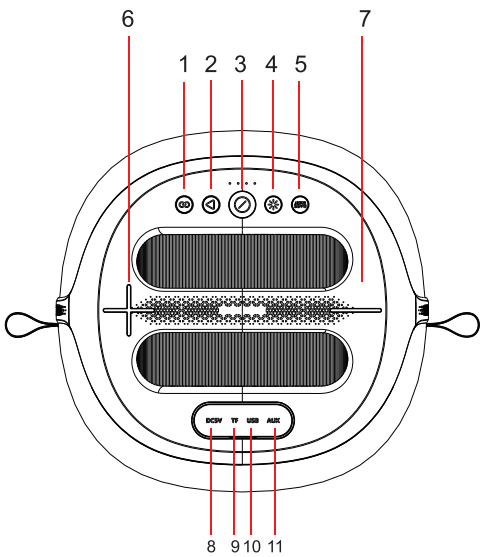 


1	2	3	4	5	6							
A												
B												
C	<table><tr><td colspan="2"> Speaker  Speaker </td><td> Speaker Speaker-Electro BeatMaster 240X  Speaker button indication section view </td><td> Speaker Speaker-Electro BeatMaster 240X Button instruction: 1. Series key Click: Series/Exit Series Long press: Switch functions, 2. Play/pause button Click: Play/PauseLong press: Exit/reconnect to Bluetooth connection 3. On/Off button Long press the power on/off button for about 3 seconds per time 4. Light button Click: Switch Light ModeLong press: switch on/off lights 5. EQ key Click: Switch music mode (indoor mode/outdoor mode/karaoke mode) 6. Button "+" Click: Increase volume Press: Next track 7. Button "-" Click: Volume decrease long press: Previous track 8. Type-C jack Charging cable interface, when inserting Type-C charging cable, defaults to device charging 9. TF socket When inserting a TF card, default to TF card playback mode 10. USB jack When inserting a USB drive, it defaults to USB playback mode 11. AUX jack Standard Φ 3.5mm headphone jack, defaults to AUX playback mode when inserted </td><td> Speaker Speaker-Electro BeatMaster 240X Directions for use: 1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device, search for speaker , connect and pair, connect After success, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off: 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Automatically shut down after detecting low battery prompt three times, 4. Mode switching 4.1. It enters wireless mode by default when power on. Mode switching sequence: Wireless mode - TF card mode - USB mode - AUX mode 4.2. Mode: Post-insertion priority. 5. TWS operating instructions Open any two speakers at the same time, click one of the TWS serial keys,When you hear the beep to enter TWS search, when TWS connection is successful,The connection prompt sounds, the host indicator flashes, and the copilot lights up. 6. Play indicator Wireless search status: white light flashing fast, about 0.5 seconds/time; Wireless pairing status: White light is always on Playback status: White light flashes slowly for about 1 second/time; 7. Charging indicator light Charging with 4 flowing lights flashing from left to right 25% battery, the first one is always on, and the second one is flashing 50% battery level, 1st to 2nd constantly on, 3 flashing 75% battery, 1st -2nd -3rd constantly on, 4 flashing 100% battery level, 1st -2nd -3rd -4th constantly on </td><td> Speaker Speaker-Electro BeatMaster 240X 8. Volume Turn on the default speaker volume at 70%. 9. Charging and using: This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different. 10. If there is no working state, it will automatically shut down after 15 minutes. Troubleshooting: 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When there is an abnormal situation with the machine, you can use a slender round rod to press the reset button to reset it </td><td> Speaker-Electro BeatMaster 240X Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ _____ _____ Note: The product warranty is 6 months </td></tr></table>					Speaker  Speaker		Speaker Speaker-Electro BeatMaster 240X  Speaker button indication section view	Speaker Speaker-Electro BeatMaster 240X Button instruction: 1. Series key Click: Series/Exit Series Long press: Switch functions, 2. Play/pause button Click: Play/PauseLong press: Exit/reconnect to Bluetooth connection 3. On/Off button Long press the power on/off button for about 3 seconds per time 4. Light button Click: Switch Light ModeLong press: switch on/off lights 5. EQ key Click: Switch music mode (indoor mode/outdoor mode/karaoke mode) 6. Button "+" Click: Increase volume Press: Next track 7. Button "-" Click: Volume decrease long press: Previous track 8. Type-C jack Charging cable interface, when inserting Type-C charging cable, defaults to device charging 9. TF socket When inserting a TF card, default to TF card playback mode 10. USB jack When inserting a USB drive, it defaults to USB playback mode 11. AUX jack Standard Φ 3.5mm headphone jack, defaults to AUX playback mode when inserted	Speaker Speaker-Electro BeatMaster 240X Directions for use: 1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device, search for speaker , connect and pair, connect After success, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off: 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Automatically shut down after detecting low battery prompt three times, 4. Mode switching 4.1. It enters wireless mode by default when power on. Mode switching sequence: Wireless mode - TF card mode - USB mode - AUX mode 4.2. Mode: Post-insertion priority. 5. TWS operating instructions Open any two speakers at the same time, click one of the TWS serial keys,When you hear the beep to enter TWS search, when TWS connection is successful,The connection prompt sounds, the host indicator flashes, and the copilot lights up. 6. Play indicator Wireless search status: white light flashing fast, about 0.5 seconds/time; Wireless pairing status: White light is always on Playback status: White light flashes slowly for about 1 second/time; 7. Charging indicator light Charging with 4 flowing lights flashing from left to right 25% battery, the first one is always on, and the second one is flashing 50% battery level, 1st to 2nd constantly on, 3 flashing 75% battery, 1st -2nd -3rd constantly on, 4 flashing 100% battery level, 1st -2nd -3rd -4th constantly on	Speaker Speaker-Electro BeatMaster 240X 8. Volume Turn on the default speaker volume at 70%. 9. Charging and using: This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different. 10. If there is no working state, it will automatically shut down after 15 minutes. Troubleshooting: 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When there is an abnormal situation with the machine, you can use a slender round rod to press the reset button to reset it	Speaker-Electro BeatMaster 240X Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ _____ _____ Note: The product warranty is 6 months
Speaker  Speaker		Speaker Speaker-Electro BeatMaster 240X  Speaker button indication section view	Speaker Speaker-Electro BeatMaster 240X Button instruction: 1. Series key Click: Series/Exit Series Long press: Switch functions, 2. Play/pause button Click: Play/PauseLong press: Exit/reconnect to Bluetooth connection 3. On/Off button Long press the power on/off button for about 3 seconds per time 4. Light button Click: Switch Light ModeLong press: switch on/off lights 5. EQ key Click: Switch music mode (indoor mode/outdoor mode/karaoke mode) 6. Button "+" Click: Increase volume Press: Next track 7. Button "-" Click: Volume decrease long press: Previous track 8. Type-C jack Charging cable interface, when inserting Type-C charging cable, defaults to device charging 9. TF socket When inserting a TF card, default to TF card playback mode 10. USB jack When inserting a USB drive, it defaults to USB playback mode 11. AUX jack Standard Φ 3.5mm headphone jack, defaults to AUX playback mode when inserted	Speaker Speaker-Electro BeatMaster 240X Directions for use: 1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device, search for speaker , connect and pair, connect After success, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off: 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Automatically shut down after detecting low battery prompt three times, 4. Mode switching 4.1. It enters wireless mode by default when power on. Mode switching sequence: Wireless mode - TF card mode - USB mode - AUX mode 4.2. Mode: Post-insertion priority. 5. TWS operating instructions Open any two speakers at the same time, click one of the TWS serial keys,When you hear the beep to enter TWS search, when TWS connection is successful,The connection prompt sounds, the host indicator flashes, and the copilot lights up. 6. Play indicator Wireless search status: white light flashing fast, about 0.5 seconds/time; Wireless pairing status: White light is always on Playback status: White light flashes slowly for about 1 second/time; 7. Charging indicator light Charging with 4 flowing lights flashing from left to right 25% battery, the first one is always on, and the second one is flashing 50% battery level, 1st to 2nd constantly on, 3 flashing 75% battery, 1st -2nd -3rd constantly on, 4 flashing 100% battery level, 1st -2nd -3rd -4th constantly on	Speaker Speaker-Electro BeatMaster 240X 8. Volume Turn on the default speaker volume at 70%. 9. Charging and using: This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different. 10. If there is no working state, it will automatically shut down after 15 minutes. Troubleshooting: 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When there is an abnormal situation with the machine, you can use a slender round rod to press the reset button to reset it	Speaker-Electro BeatMaster 240X Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ _____ _____ Note: The product warranty is 6 months						
D												
1	2	3	4	5	6							

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.