

尺寸：7x10cm

EW
ELECTRO
Touch Tone Pro



User's Manual

Product Specification

- Chipset: AB5636F
- BT Version: 6.0
- Battery Capacity: 40mAh
- Charging Case Battery: 470mAh
- Play Time: ANC OFF: 7Hrs(100% Volume)
- Play Time: ANC ON: 6Hrs(100% Volume)
- Driver: 10mm
- Effective Distance: 10M
- Earphone Charging Time: 1.5Hrs
- Charging Case Charging Time: 2Hrs

Paring

Auto Pairing

Pull out both earphones from the charging case, and then the earphones will automatically turn on, sync together and enter pairing mode.

Open up Bluetooth setting on your smart device and scan for Electro Touch Tone Pro.

Operation

1.) Power on/off .

- 1.) Take the earphones out of the charging case, automatically turn on;
Put the earphones back to the charging case, automatically turn off;
- 2.) Long press 3 seconds to turn on
Long press 5 seconds to turn off.

2.) Play/Pause music.

When listening to music.
Tap left/right earphones once to play or pause the music.

3.) ANC Mode

Long press the right headset : switch ANC mode
When taking the earphones out of the charging case, it is regular Bluetooth mode.
After the noise cancellation is turned on, the adaptive noise cancellation technology can detect the current ear canal structure and wearing status, and intelligently match the best parameters in multiple sets of noise cancellation parameters, so that your ears can get a unique noise cancellation effect.

4.) Previous /Next Song

When listening to music.
Quick tap the left earphones three times to go to previous song.
Quick tap the right earphones three times to go to next song.

5.) Answer/Hang up

When there is an incoming call.
Tap left or right earphones once to answer the call.
Tap left or right earphones again to end the call.

6.) Reject

When there is an incoming call.
Long press left/right earphones to Reject call.

7.) Voice assistant

Long press the left earphones 2s to activate voice assistant.

Charging Base Fuction

Turn on the charging base using the button at the top. Swipe the touchscreen to discover all its functions.
To use the base's functions, the headphones must be removed from the base and connected via Bluetooth to your mobile phone.

Here's an example of the most important functions:

Close the charging case before charging.

1.) Music control

- 1.) Use the controls to skip tracks or pause playback.
- 2.) Adjust the volume via the speaker button at the bottom of the music interface.
- 3.) Lyrics will be displayed in sync with the music.

2.) ANC (Noise Cancellation)

- Here you can select ANC (Noise Cancellation).
Note: Environmental sound processing requires the headphones to be connected to the receiver(device) before selection can be made.

3. daptive Equalizer (EQ)

- You can select 7 different sound effects by swiping the screen.
Note: The earphones must be connected to the compartment to enable selection.
You can turn the equaliser function on or off using the switch located in the top-right corner.



4. Remote Photography

- You can take photos from your phone by tapping this icon with the camera on.
The earphones can only be selected after being connected to the charging case.



5. Searching for earphones

The earphones can only be selected after being connected to the compartment:
1. You can search for the left ear (L) and right ear (R).
2. After selecting L or R, the search response interface will appear (with an icon reminder to use this function when the headphones are not being worn). This feature is designed to avoid discomfort.



6. Control Interface Style

There are three control modes: Default (sliding left and right), Kaleidoscope, and Gear.



5. Searching for earphones

Click to turn on the flashlight. It cycles through four colours:
First click: White. Second click: Red
Third click: Yellow Fourth click: Green
Swipe from left to right to exit the loop.



Charging Function

Fully charge the case and earphones before using for the first time.

1: Charging the charging case

There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source (Input DC 5V 1A) to charge your case.

2: Earphone charging

When the earphone is low battery, it will prompt "battery low" and it will power off when the earphones completely out of battery.

(a) Put the earphones into the charging case and close the case. The charging case will automatically charge the earphones. During charging, the progress will be displayed in the upper right corner of the case, and 100% will be displayed when fully charged.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to device will void the user's authority to operate the device.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

FCC ID: 2BB37-ELLCTTP-001