 





User Manual

—Product Description—

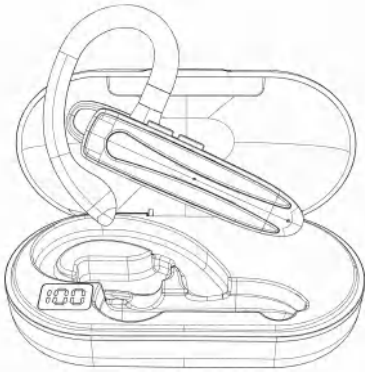


EW Wear 1 Wireless Mono Headset

 
Product Schematic Diagram

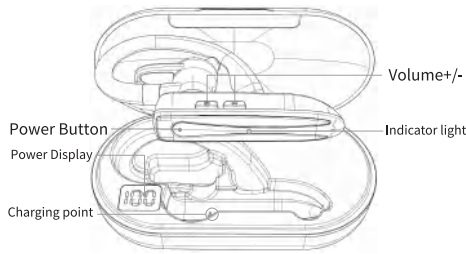


Multi-function Button

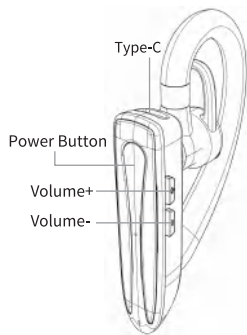 

Pairing Diagram

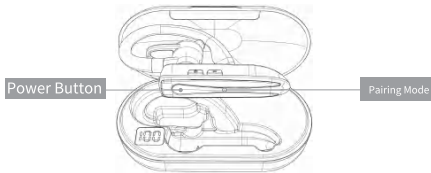 


 Ensure the earphones are off.
Press and hold the multifunction button for about 3 seconds until the blue light flashes once, then the red and blue lights will flash alternately (pairing mode). Wait for the connection.

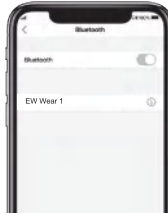

Enable the Bluetooth function on your phone (or other Bluetooth device) and search for nearby devices. Select "EW Wear 1" from the list of found devices and enter the password "0000" (most phones do not require a password). Once paired, the earphone indicator light will turn off, indicating successful pairing. You can now use the earphones for calls and music.

 MFB Button

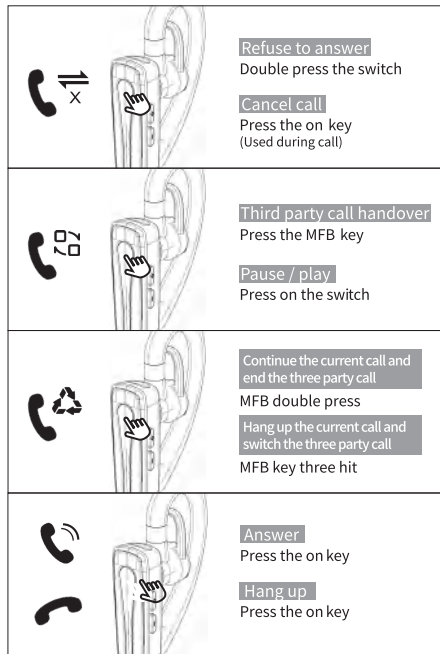

Volume +
Press the volume+ key
Next Song
Long press on the volume+ button for 1s.

Volume -
Press the volume- key
Last Song
Long press on the volume- button for 1s.

Video call turn off the microphone
Long press the volume '+' for 2 seconds
Turn on the microphone for a video call
Volume '-' long press for 2 seconds

Packing Contents

1. Earbuds * 1
2. Charging case * 1
3. Type-C charging cable * 1
4. User Manual * 1

Safety Precautions

Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging case and they will restart after recollecting.

Why do the earbuds turn off automatically?

Why cannot I recharge the charging case?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.

2. To ensure proper connection, press the earbuds to fully connect to the charging points of the charging case.

3. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth.

4. Please wipe the sweat from the earbuds before putting into the charging case.

5. Once the prompt tone "Low battery" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging case reaches to "10", please recharge the charging case. Please pay attention to not using up the battery of the earbuds and charging case, as it may shorten the service life of the built-in lithium battery.

Why is there no sound from the earbud, or the music is disconnected?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.

2. To ensure proper connection, "Press the earbuds to fully connect to the charging point of the charging case"

3. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth.

4. Please wipe the sweat from the earbuds before putting into the charging case.

5. Once the prompt tone "Low battery" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging case reaches to "10", please recharge the charging case. Please pay attention to not using up the battery of the earbuds and charging case, as it may shorten the service life of the built-in lithium battery.

Why I cannot detect Wireless ? Why Wireless pairing failed?

1. The wireless range is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.

2. If the earbuds are connected to other mobile phone or devices, please disconnect first.

3. Please reboot the Wireless device and reset the earbuds.

Why is there no sound from the earbud, or the music is disconnected?

 
1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.

2. To ensure proper connection, "Press the earbuds to fully connect to the charging point of the charging case"


3. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth.

4. Please wipe the sweat from the earbuds before putting into the charging case.

5. Once the prompt tone "Low battery" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging case reaches to "10", please recharge the charging case. Please pay attention to not using up the battery of the earbuds and charging case, as it may shorten the service life of the built-in lithium battery.

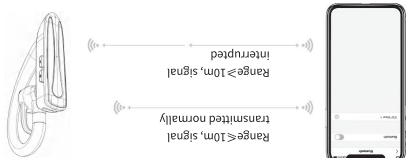

Mobile Phone Transmission Distance

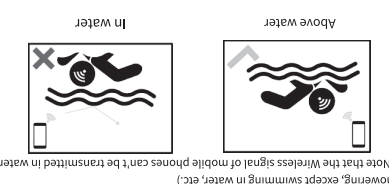 

* Note that the Wireless signal of mobile phones can't be transmitted in water, etc.)

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)

Version	VS.1
Wireless support	A2DP,AVRCP,HFP,HSP,EDR
Communication range	≤10m
Frequency band	2.402GHz-2.480GHz
Electrical impedance	130±10%
Standby time	180h
Call time	10-12h
Music playing time	10-12h
Earbuds battery capacity	120mAh
Host battery capacity	800mAh
Charging bin recharging time	About 1.5h
Charging time of headset	About 1.5h
Weight	76g

Product specification

100% battery level means fully recharged.

2. The digital display of the charging case will indicate the recharging process, and with a Type-C cable connected to a computer, or other charger with a Type-C interface.

3. Please use a mobile phone adapter to recharge the charging case. You may charge the charging case with a Type-C cable connected to a computer, or other charger with a Type-C interface.

How to recharge the charging case

How to reset?

When the headset is off, press the on / off key for 8 seconds. Put the headset into the charging compartment, and the headset will automatically turn on and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

How to recharge the earbuds

1. Put the headset in the charging case, the headset will be automatically turned off and then charged.

2. When the headset is fully charged, the red light of the headset indicator will be off.

Pair with PC/Laptop

Open computer settings - devices - Bluetooth and other devices - turn on Bluetooth - add Bluetooth or other devices - search for Bluetooth devices - EW Wear 1 - pair/connect - play music.

Note: If the computer does not have Bluetooth, please insert a Bluetooth adapter and download the Bluetooth driver before using it normally.

How to pair

1. Take it out of the charging case and turn it on.

2. The earphones flash red and blue alternately (pairing mode) - turn on Bluetooth - search for Bluetooth devices - EW Wear 1 - pair/connect - play music.

3. Open the settings of your phone/tablet - Bluetooth - turn on Bluetooth - search for Bluetooth devices - EW Wear 1 - pair/connect - play music.

1. In the first time use, take the earbuds from the charging case and peel off the protective film. Once put into the charging case, the earbuds will turn off and initiate recharging automatically. When taken out from the charging case, the earbuds will turn on automatically.

2. After use, put the earbuds into the charging case, and it will turn off automatically.

ON/OFF switch



Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Electronic World LLC. may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user ' s authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.