

PRINT BACK TO BACK
Folded Size: 3.2" (w) x 4" (h)
Pairing name: "iHip Art Speaker"

FOLDING INSTRUCTIONS

[illegible]

INSIDE

Specifications:

PRODUCT: BLUETOOTH SPEAKER WALL ART ASST
Model No.: CYS-58
Size: 30 x 30 x 4.0cm
Material: MDF Board
RT Version: 5.1

Speaker: 4 Q 3W
Battery: 800mAh
Charging time: 1H
Cable: 30cm/Type-C Port

Turning ON/OFF Speaker:

Move the "ON/OFF" switch to the left to turn the speaker ON.
Move the "ON/OFF" switch to the right to turn the speaker OFF.

Bluetooth® Wireless Connection:

Your speaker can wirelessly stream audio from any Bluetooth® enabled device within 30 Feet. Simply follow the steps below:

- Turn ON the speaker. You will then hear the indication tone.
- Activate the Bluetooth on your mobile phone, tablet, or computer. It will search for various devices. The pairing name of this speaker is **"iHip Art Speaker"**. Pair it with this device.
- Once paired successfully, you would hear an indication sound. If you fail to pair it within the time frame or you want to pair it with a new device please repeat steps 1-3
- Select your favorite song on your device and music will now stream through the Bluetooth speaker.

NOTE: The speaker will automatically pair with previously paired devices.

FM Mode:

Press "MODE" button to switch from Bluetooth Mode to FM Mode. When in FM mode, press the **▶||** button to automatically select the station

TF Card Slot:

This speaker can play MP3 and WAV music files using the TF Card port. Once a TF card is inserted, the speaker will auto-switch from Bluetooth mode to TF Card mode. Once the TF card is removed, the speaker will auto-switch to Bluetooth mode.

Switching the Artwork:

You can change out the artwork in your speaker in 3 simple steps:

- PULL**
- PLACE**
- PRESS**

Push the tab (located on the bottom right of artwork) to remove the artwork from the speaker frame.

Place the new artwork inside the frame while ensuring the 4 velcro circles on the back of the replacement art are aligned with the 4 velcro circles inside the art frame.

Press art into frame to secure

Music Controls:

Please ensure that your device (Smartphone, tablet, or computer) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Next track (Playing music):
Short press the **▶||** button to play the next track

Decrease Volume (Playing music):
Long press the **⏮/V+** button to decrease the volume

Increase Volume (Playing music):
Long press the **⏭/V+** button to increase the volume

Previous track (Playing music):
Short press the **⏮/V+** button to play the previous track

Phone Call Controls:

Please ensure that your cell phone is paired with the speaker to use the below functions.

Answer Incoming Call:
Short press the **▶||** button once to answer an incoming call.

End Call: After your phone conversation, short press the **▶||** button to end the call.

Volume Increase (During a call):
Long press the **⏭/V+** button to increase the volume

Redial last number (Standby mode & connected to a device):
Short press the **▶||** button twice

Volume Decrease (During a call):
Long press the **⏮/V+** button to decrease the volume

Charging Instructions:

For best results, fully charge the speaker before use.

Connect the charging cord (included) to the charging port of the speaker and insert the other end into a PC, ACDC adapter, or similar suitable power source.

The LED indicator will flash, indicating the battery is being charged.

Once the speaker is fully charged, the LED light will go out.

Control Panel:

Pairing Name: "iHip Art Speaker"