



Caution

 
- Small parts. Keep out of reach of small children.
- Please operate in an open field without any wave interference.
- When transmitter is low in power, please stop and change batteries immediately.
- Exhaust battery should be safely dispose, please do not discard at will.
- Please store the car and the transmitter in a dry and cool environment.
- Keep away from fire, hot or humid environment.
- If car battery is wet, be sure to wipe and dry it completely to avoid any damage.

1. Product Configuration



Pictures for reference only, please subject to the actual products.

2. Install Transmitter Batteries

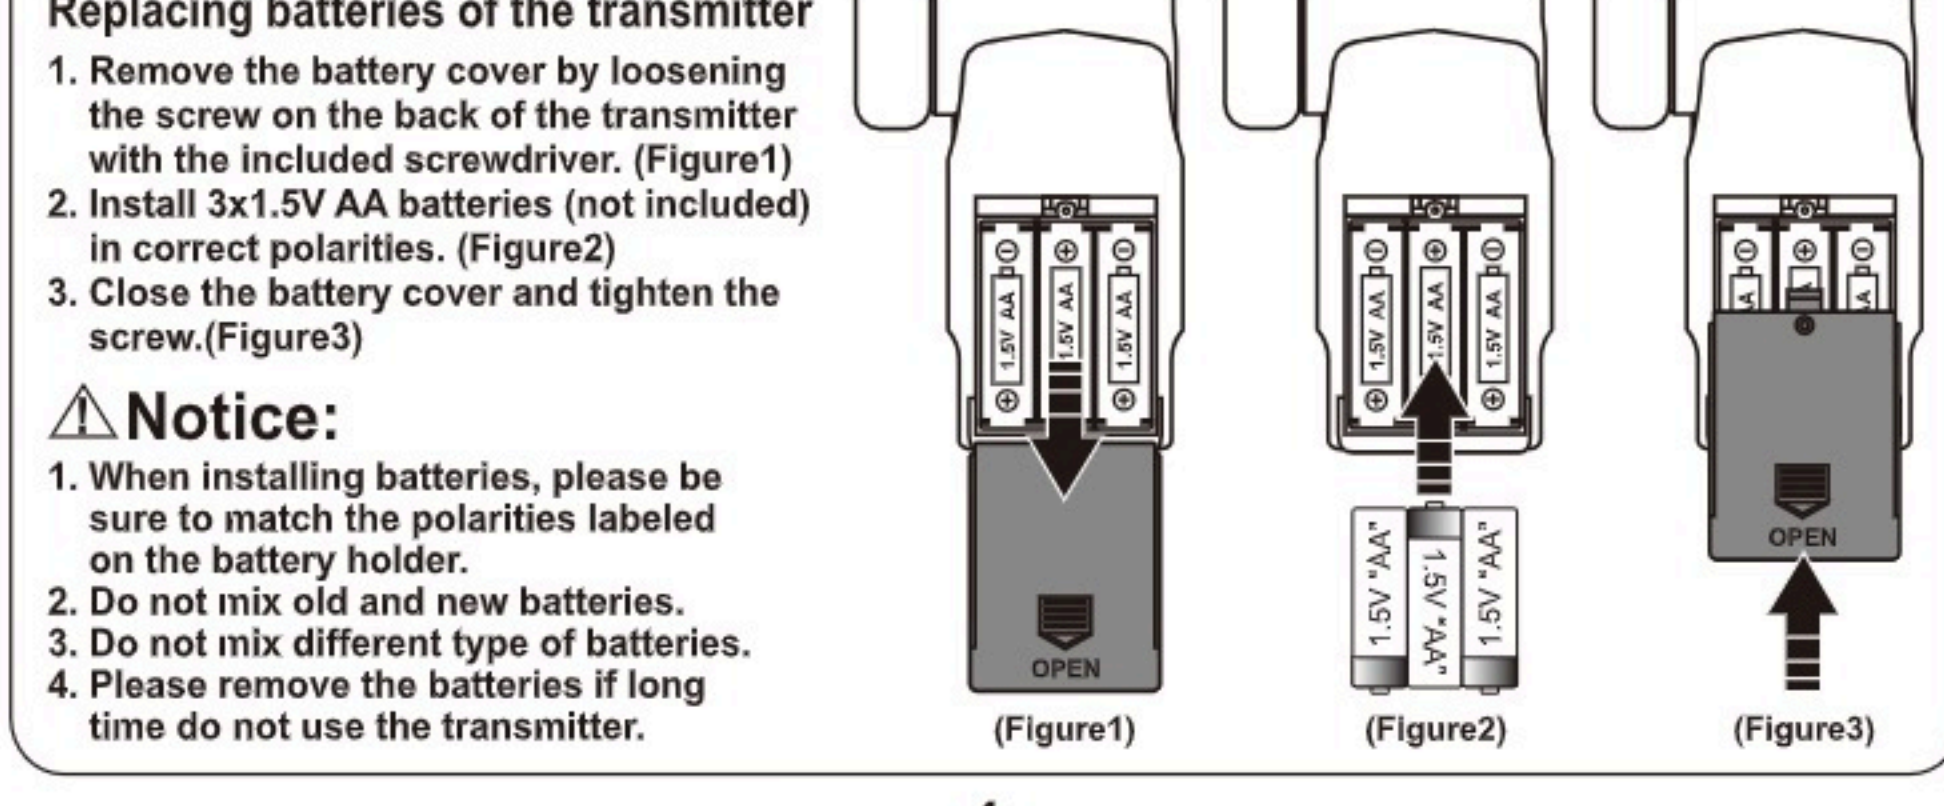


Replacing batteries of the transmitter

- Remove the battery cover by loosening the screw on the back of the transmitter with the included screwdriver. (Figure1)
- Install 3x1.5V AA batteries (not included) in correct polarities. (Figure2)
- Close the battery cover and tighten the screw. (Figure3)

Notice:

- When installing batteries, please be sure to match the polarities labeled on the battery holder.
- Do not mix old and new batteries.
- Do not mix different type of batteries.
- Please remove the batteries if long time do not use the transmitter.

 3. Charge and Install Rechargeable Battery Pack

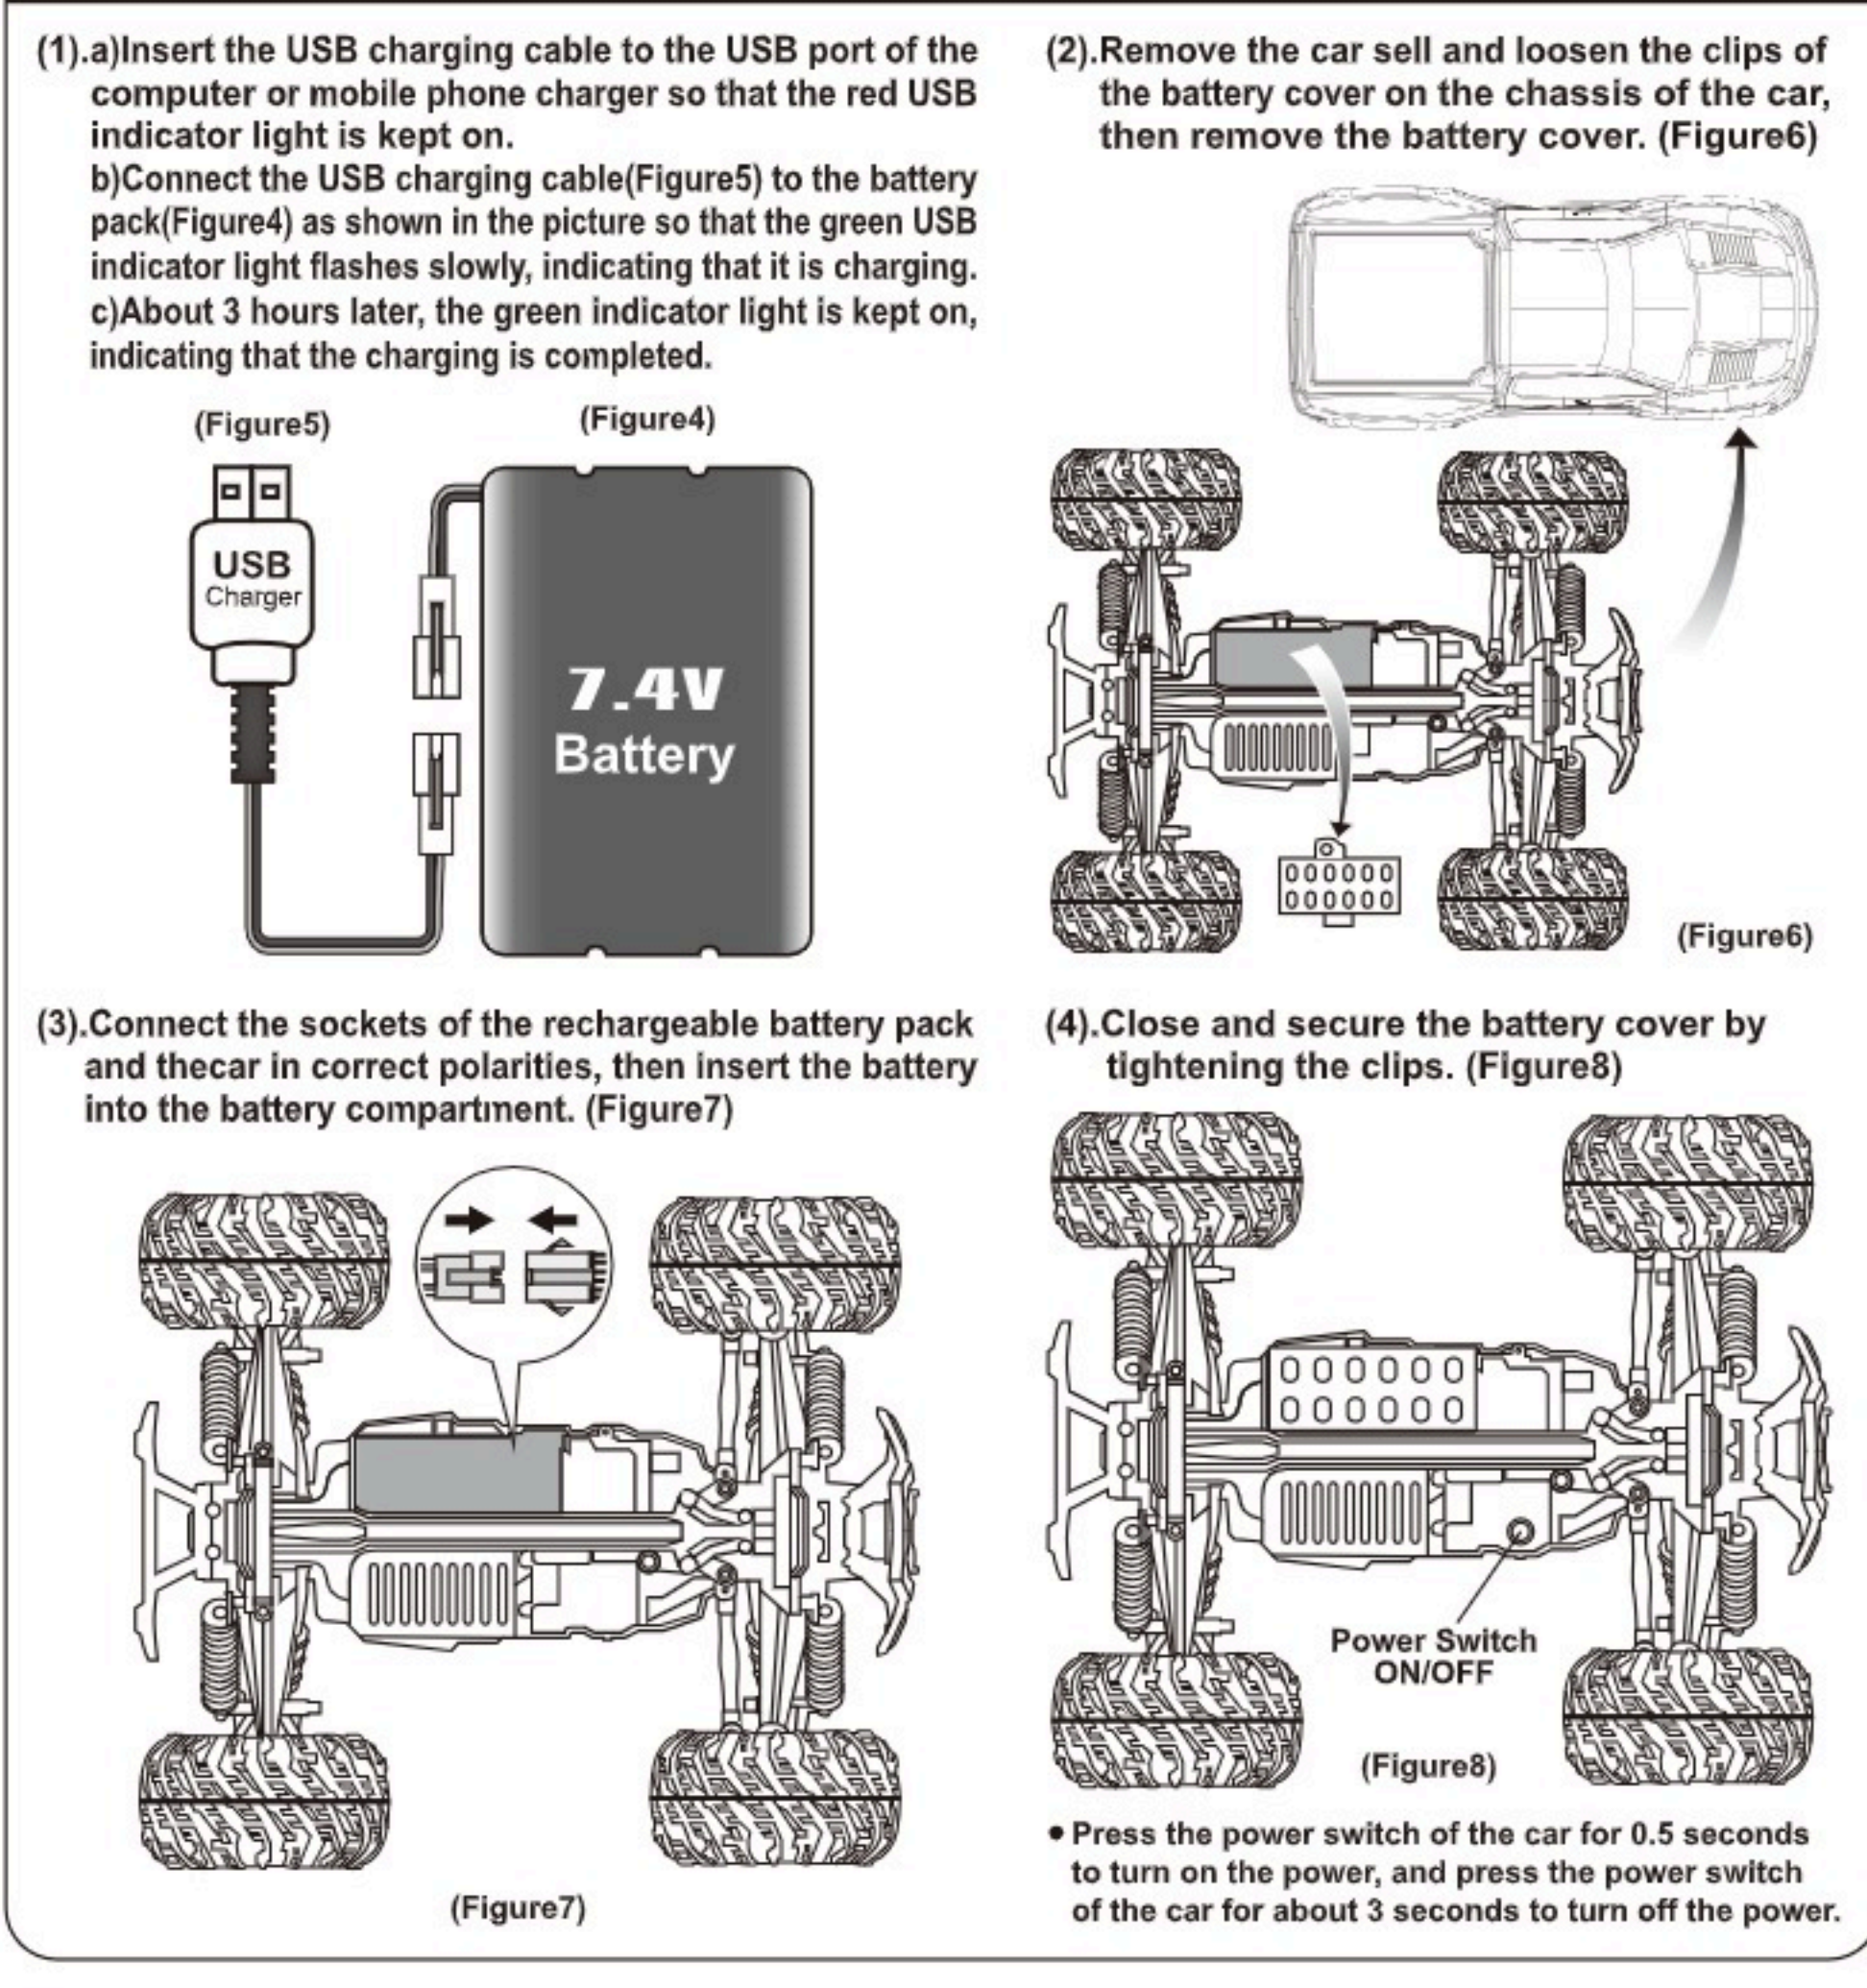

(1) Insert the USB charging cable to the USB port of the computer or mobile phone charger so that the red USB indicator light is kept on.

(2) Remove the car sell and loosen the clips of the battery cover on the chassis of the car, then remove the battery cover. (Figure6)

(3) Connect the sockets of the rechargeable battery pack and the car in correct polarities, then insert the battery into the battery compartment. (Figure7)

 
(4) Close and secure the battery cover by tightening the clips. (Figure8)

Press the power switch of the car for 0.5 seconds to turn on the power, and press the power switch of the car for about 3 seconds to turn off the power.

4. Charger/Battery Pack/Circuit board Precautions

- To prevent the Li-ion battery pack from being charged over voltage, which could lead to damage or explosion, the charger uses a voltage limit protection device. And to maintain the battery pack's charging capacity and performance, we suggest not to charge it continuously for more than 24 hours.
- The battery uses a low voltage and power over-discharge protection device. When the battery is over-discharged, a re-charged is required to activate the battery again. It is recommended that you remove the battery and turn the switch to "off" position when the car is not being used.
- The circuit board uses an overheating protection function. When the circuit board is overheated, the car will be disabled (not moving forward/backward) for 3-5 seconds before being restored.

5. Control Methods

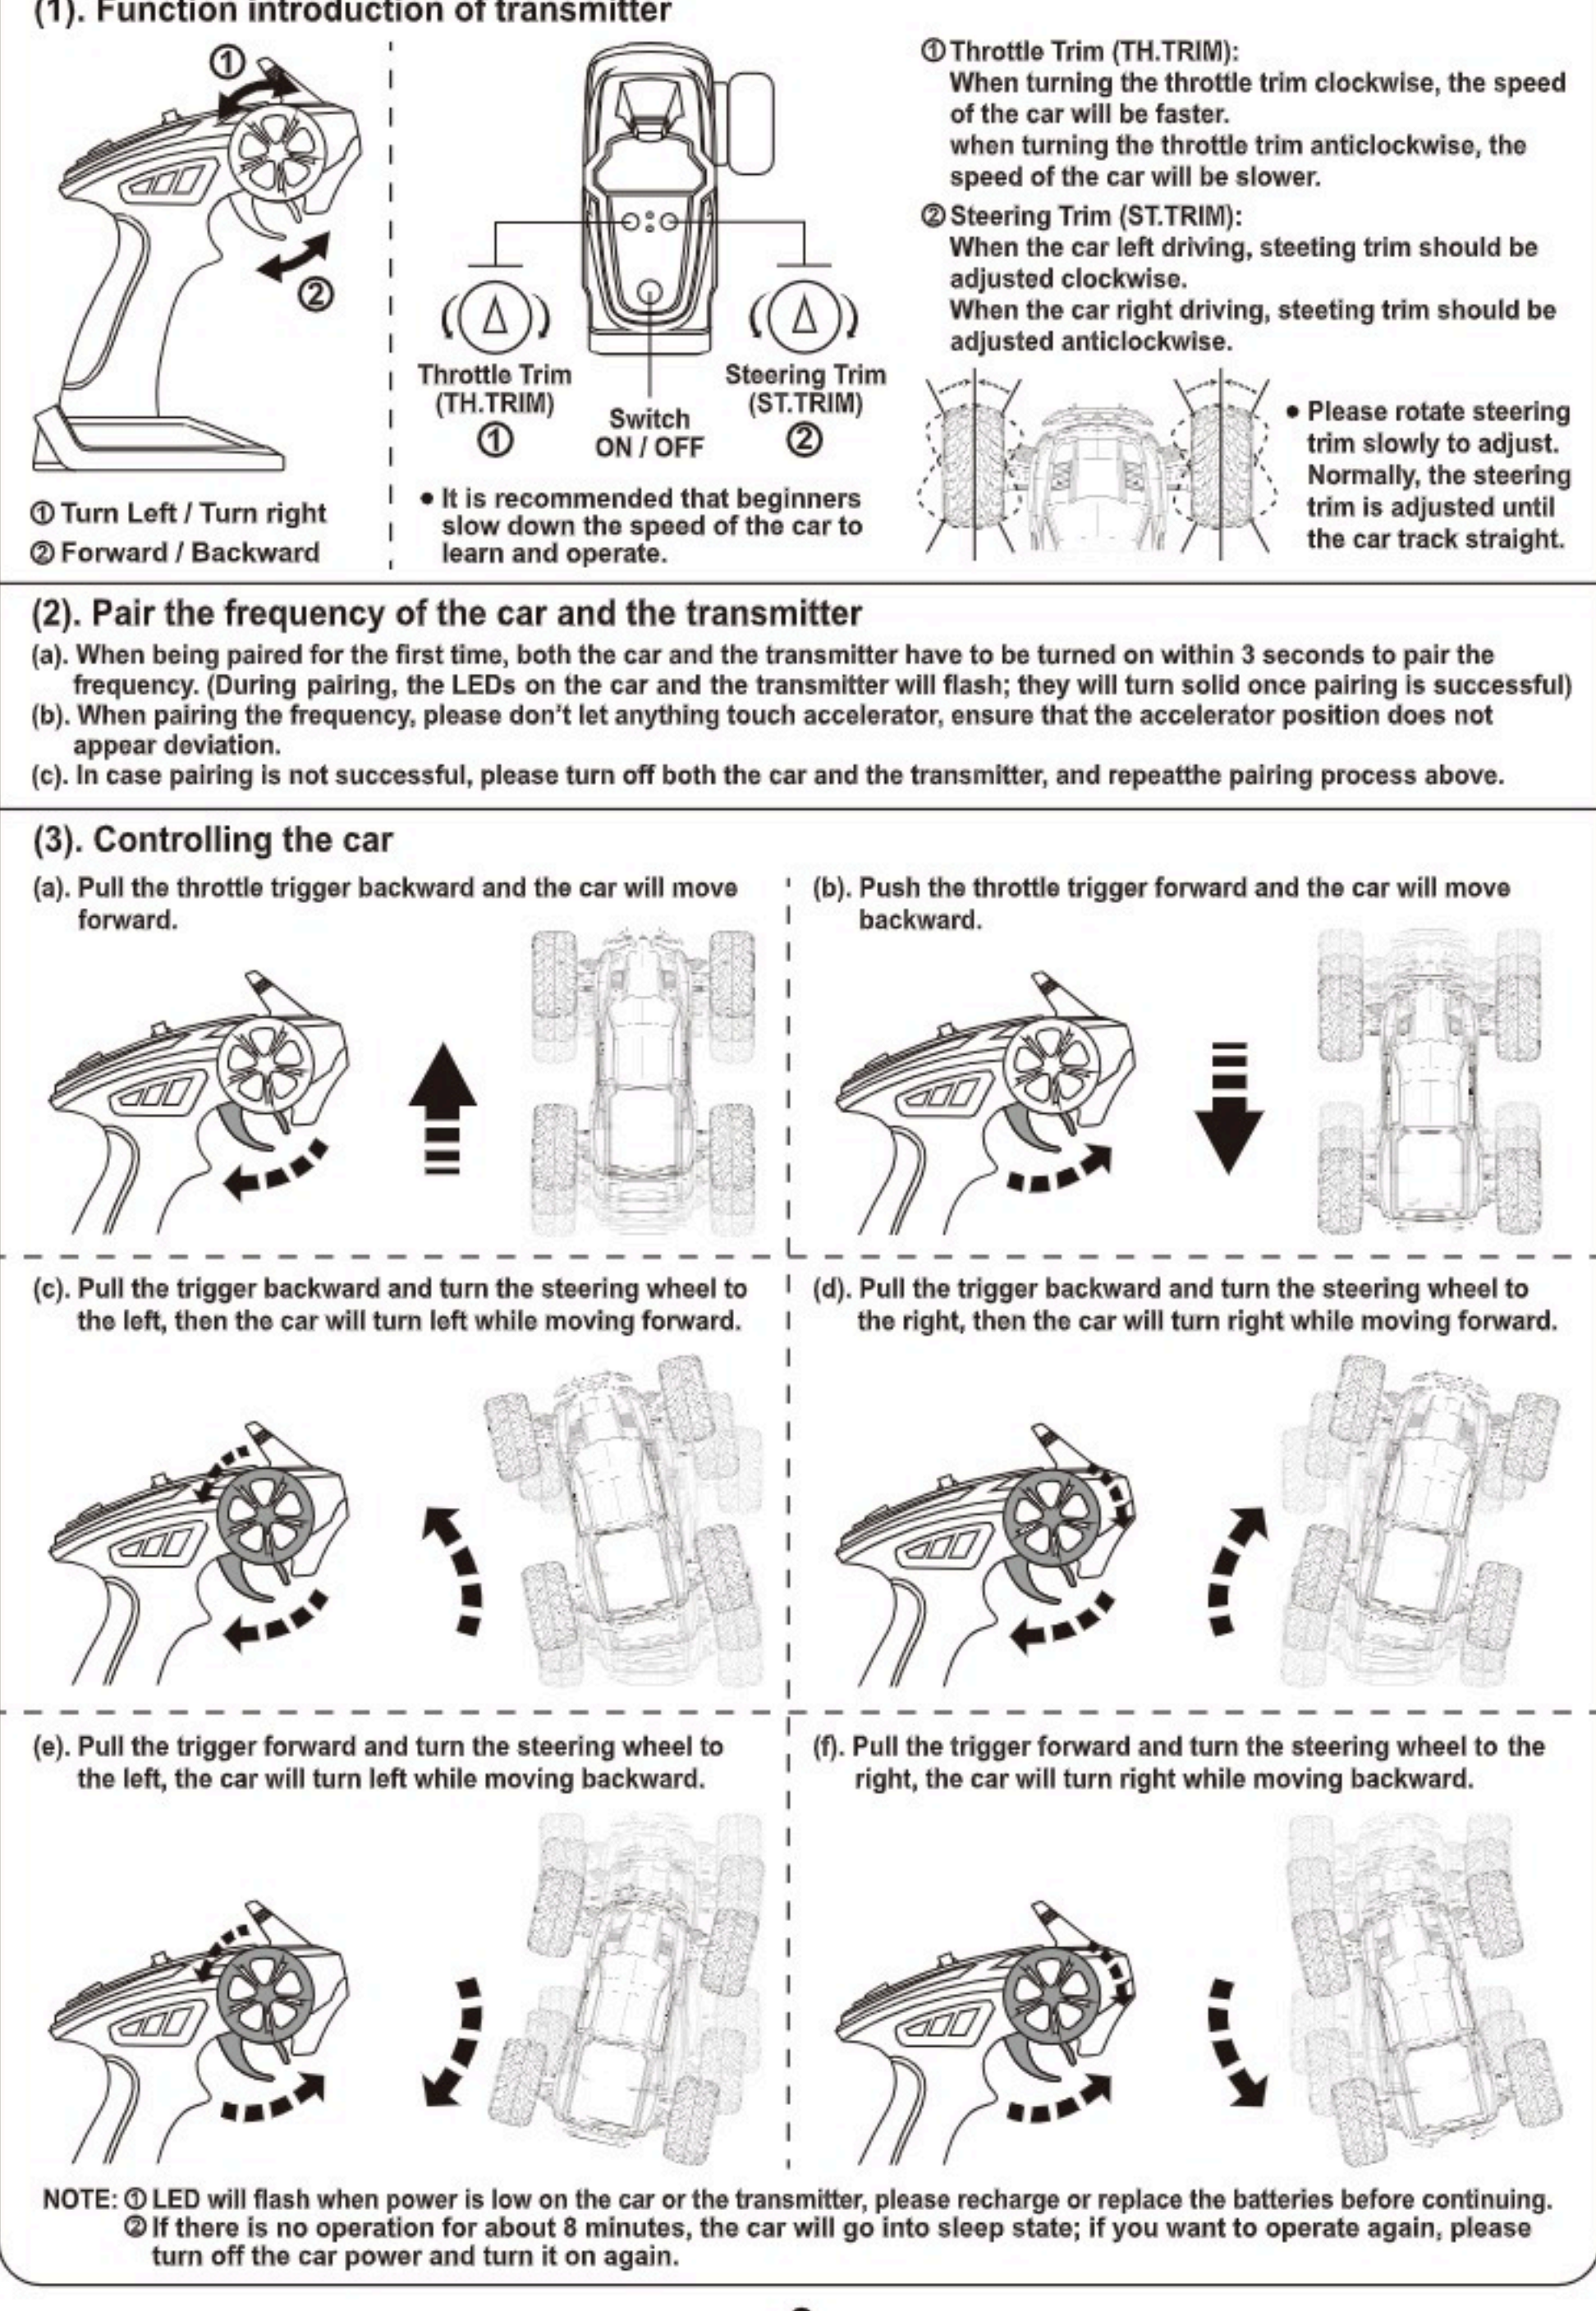

NOTE: LED will flash when power is low on the car or the transmitter, please recharge or replace the batteries before continuing. If there is no operation for about 8 minutes, the car will go into sleep state; if you want to operate again, please turn off the car power and turn it on again.

Notice




- Please note the battery polarities when installing or replacing batteries
- Non-rechargeable batteries can not be charged
- Remove rechargeable battery pack from car before charging
- Charge the battery under adult supervision
- Do not mix new and old batteries, or batteries of different types
- Remove batteries from car once they are exhausted
- Watch for short circuits at power terminals
- Touching the transmitter antenna while operating the car can affect the remote control distance; broken antennas should be handled by an adult
- This car is equipped with powerful driving forces. When moving at high speed, please do not try to break abruptly due to inertia.
- When the car move slowly, it indicates power is low. Please recharge following charging instructions.
- When charging, please ensure power sockets are connected properly.
- While not used for a long time, please remove batteries from the car and the transmitter.
- Unpack the car under adult supervision.
- Keep this manual for future reference.

No. G16-01 Product Name Car shell Specifications 2.5X7PB Quantity 1X1 Remarks Silver-grey Yellow Green	No. G16-02 Product Name Car shell Specifications 2.5X7PB Quantity 1X1 Remarks Silver-grey Blue-green Black red	No. G16-03 Product Name Car shell Specifications 2.5X7PB Quantity 1X1 Remarks Silver-grey Green Black red
No. G16-04 Product Name Car shell Specifications 2.5X7PB Quantity 1X1 Remarks Silver-grey Orange pink	No. G16-05 Product Name Suspension arm Specifications 2.5X7PB Quantity 1X2 Remarks	No. G16-06 Product Name Front bumper block Specifications 2.5X7PB Quantity 1X1 Remarks
No. G16-07 Product Name Rear bumper block Specifications 2.5X7PB Quantity 1X1 Remarks	No. G16-08 Product Name Front upper arm Specifications 2.5X7PB Quantity 1X2 Remarks L and R	No. G16-09 Product Name Rear upper arm Specifications 2.5X7PB Quantity 1X2 Remarks

No. G16-10 Product Name Rear gearbox cover Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-11 Product Name Front suspension cup Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-12 Product Name Front gearbox cover Specifications 12X13X3.5mm Quantity 1X1 Remarks
No. G16-13 Product Name Shock proof plank Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-14 Product Name Front connecting rod Specifications 12X13X3.5mm Quantity 1X3 Remarks	No. G16-15 Product Name Rear connecting rod Specifications 12X13X3.5mm Quantity 1X4 Remarks
No. G16-16 Product Name Rear suspension base Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-17 Product Name Motor fastener Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-18 Product Name Car chassis Specifications 12X13X3.5mm Quantity 1X1 Remarks
No. G16-19 Product Name Car shell bracket Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-20 Product Name Transmission cup Specifications 12X13X3.5mm Quantity 1X4 Remarks	No. G16-21 Product Name Steering arm set Specifications 12X13X3.5mm Quantity 1X1 Remarks
No. G16-22 Product Name Body clips Specifications 12X13X3.5mm Quantity 1X8 Remarks	No. G16-23 Product Name Steering engine Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-24 Product Name Main drive shaft assembly Specifications 12X13X3.5mm Quantity 1X4 Remarks

No. G16-25 Product Name Copper bushing Specifications 12X13X3.5mm Quantity 1X8 Remarks	No. G16-26 Product Name Screw Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-27 Product Name Tire Specifications 12X13X3.5mm Quantity 1X4 Remarks
No. G16-28 Product Name USB charger Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-29 Product Name Shock Absorbers Specifications 12X13X3.5mm Quantity 1X4 Remarks	No. G16-30 Product Name Shaft Specifications 12X13X3.5mm Quantity 1X2 Remarks
No. G16-31 Product Name Differential Specifications 12X13X3.5mm Quantity 1X1 Remarks complete set	No. G16-32 Product Name 390 Motor Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-33 Product Name Dash receiver Specifications 12X13X3.5mm Quantity 1X1 Remarks
No. G16-34 Product Name 2.4G Transmitter Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-35 Product Name 7.4V Battery Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-36 Product Name Screw shaft Specifications 12X13X3.5mm Quantity 1X4 Remarks
No. G16-37 Product Name Bearing Specifications 12X13X3.5mm Quantity 1X8 Remarks	No. G16-38 Product Name Battery cover Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-39 Product Name Round headed screw Specifications 12X13X3.5mm Quantity 1X4 Remarks

No. G16-40 Product Name Round headed screw Specifications 12X13X3.5mm Quantity 1X8 Remarks	No. G16-41 Product Name screw Specifications 12X13X3.5mm Quantity 1X1 Remarks	No. G16-42 Product Name screw cap Specifications 12X13X3.5mm Quantity 1X8 Remarks
No. G16-43 Product Name screw Specifications 12X13X3.5mm Quantity 1X12 Remarks	No. G16-44 Product Name screw Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-45 Product Name screw Specifications 12X13X3.5mm Quantity 1X6 Remarks
No. G16-46 Product Name screw Specifications 12X13X3.5mm Quantity 1X2 Remarks	No. G16-47 Product Name screw Specifications 12X13X3.5mm Quantity 1X6 Remarks	No. G16-48 Product Name screw Specifications 12X13X3.5mm Quantity 1X14 Remarks
No. G16-49 Product Name screw Specifications 12X13X3.5mm Quantity 1X2 Remarks		

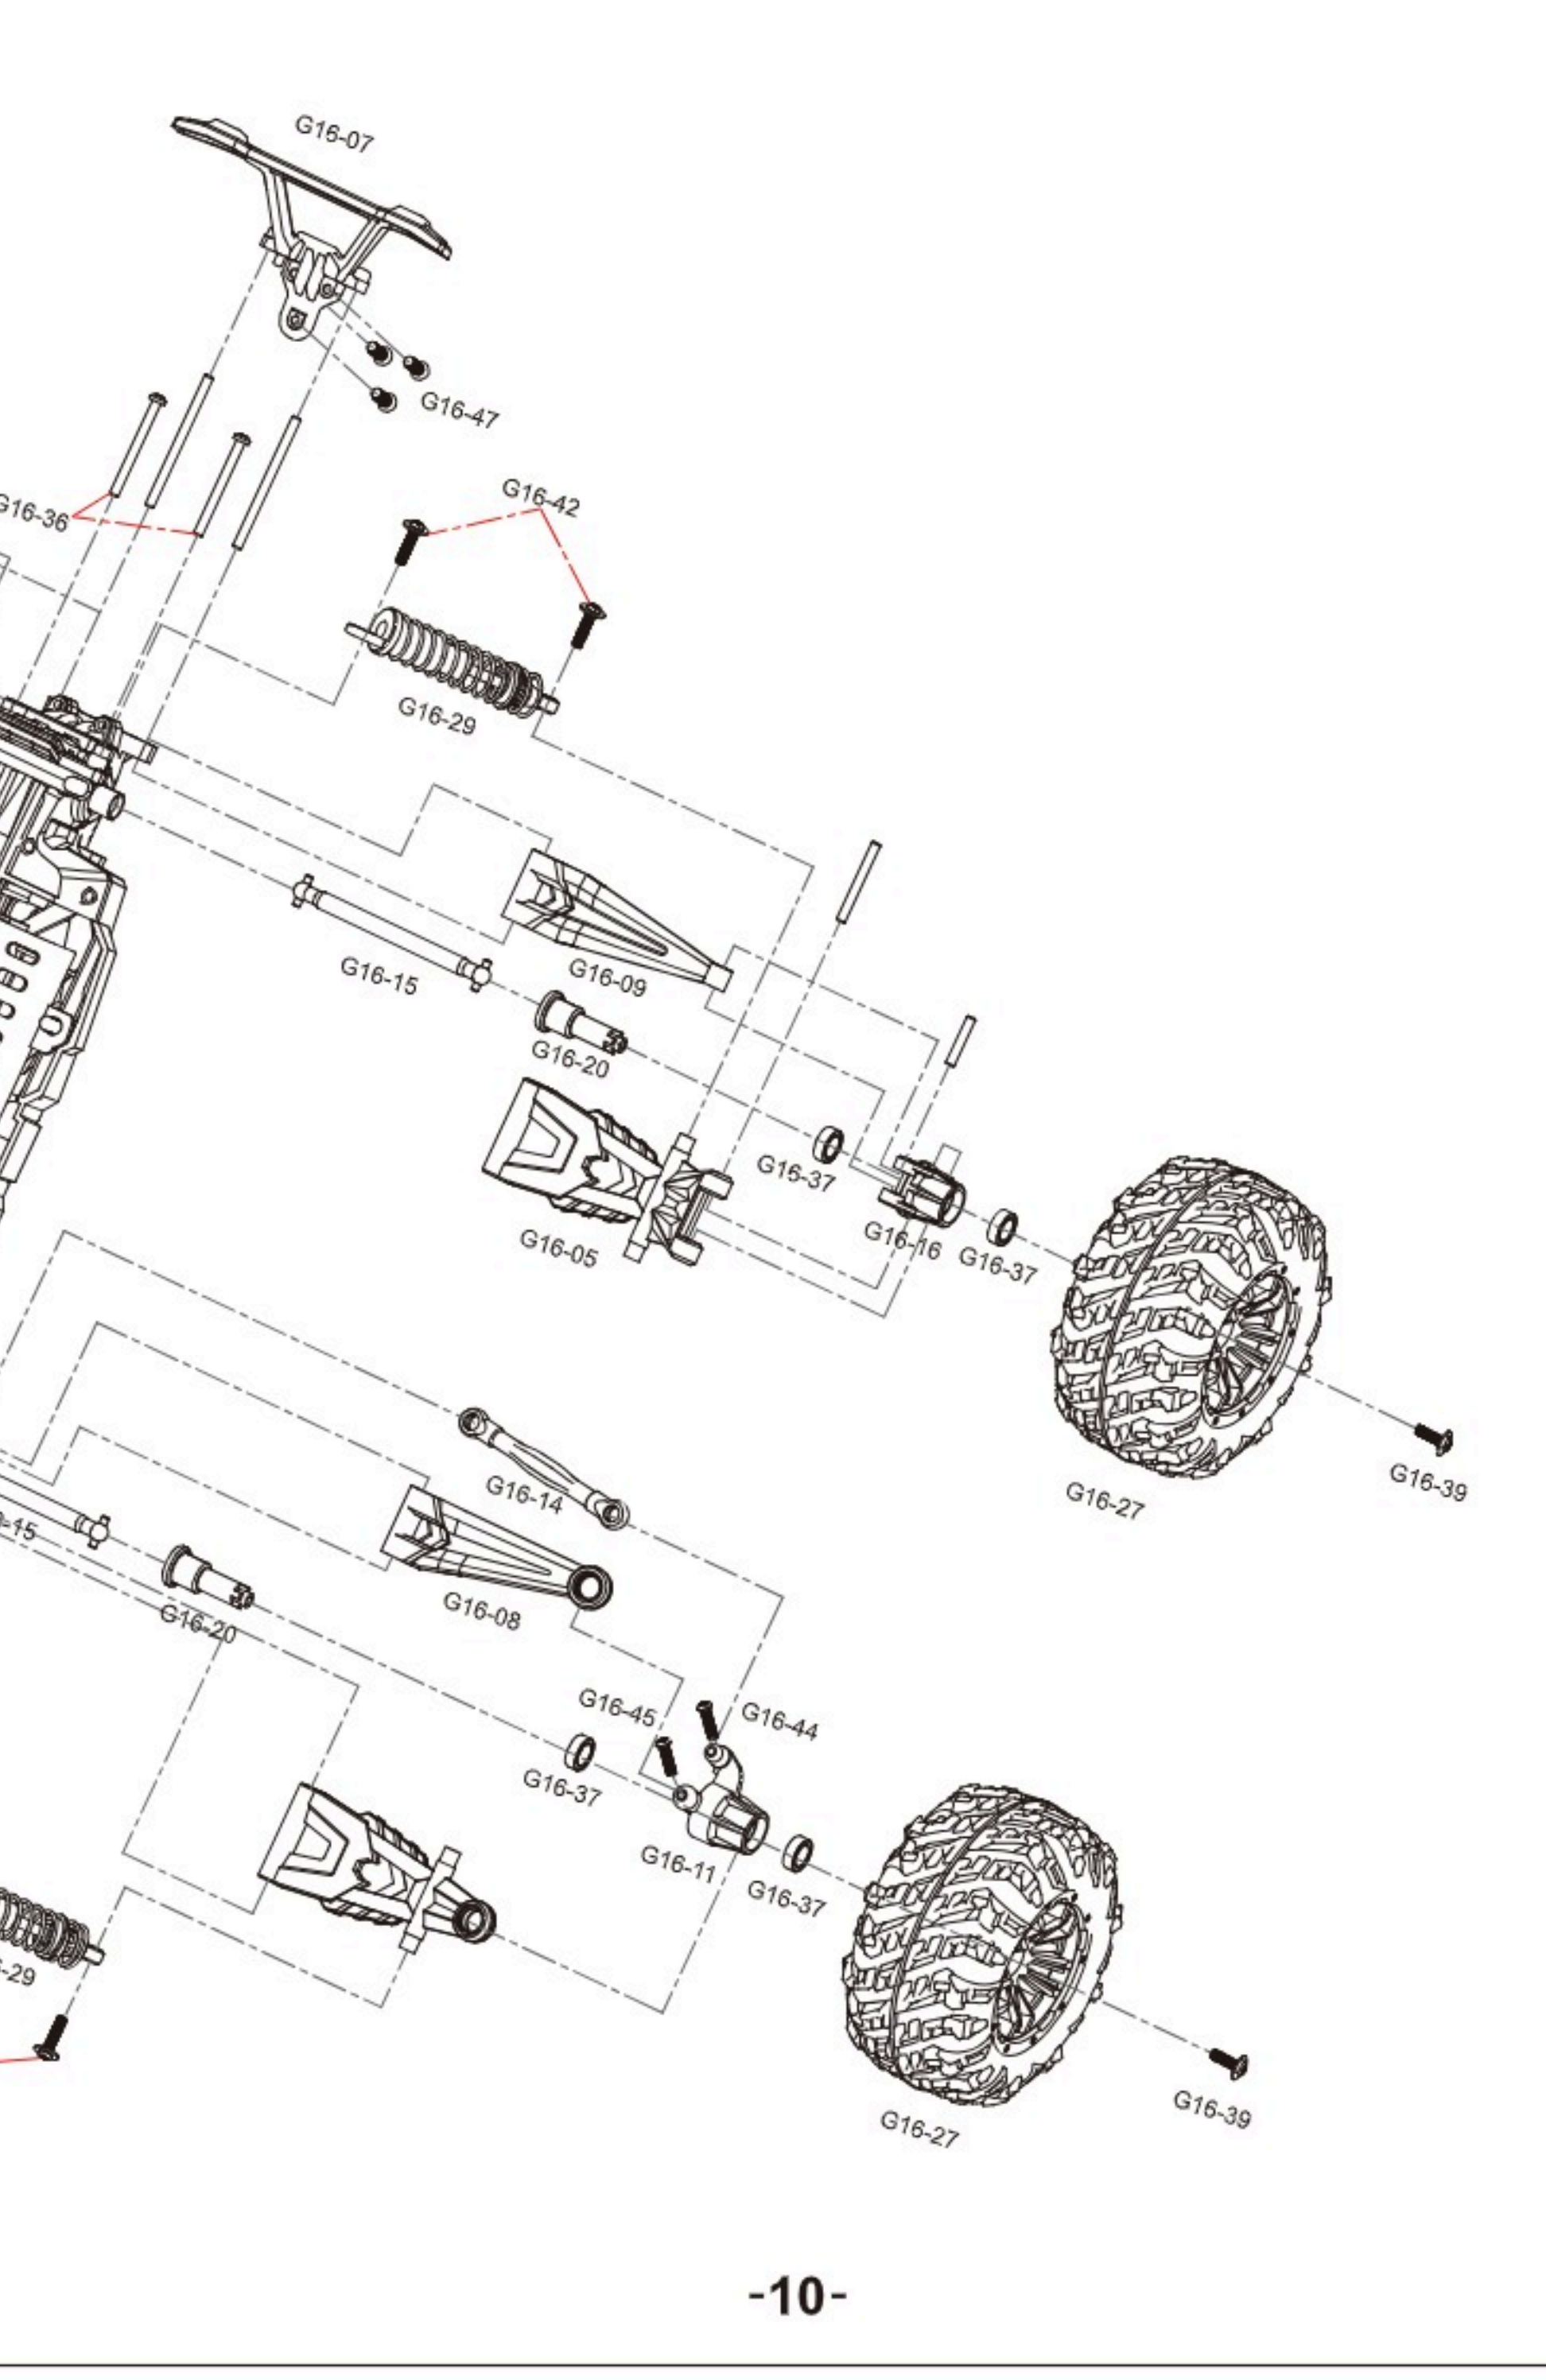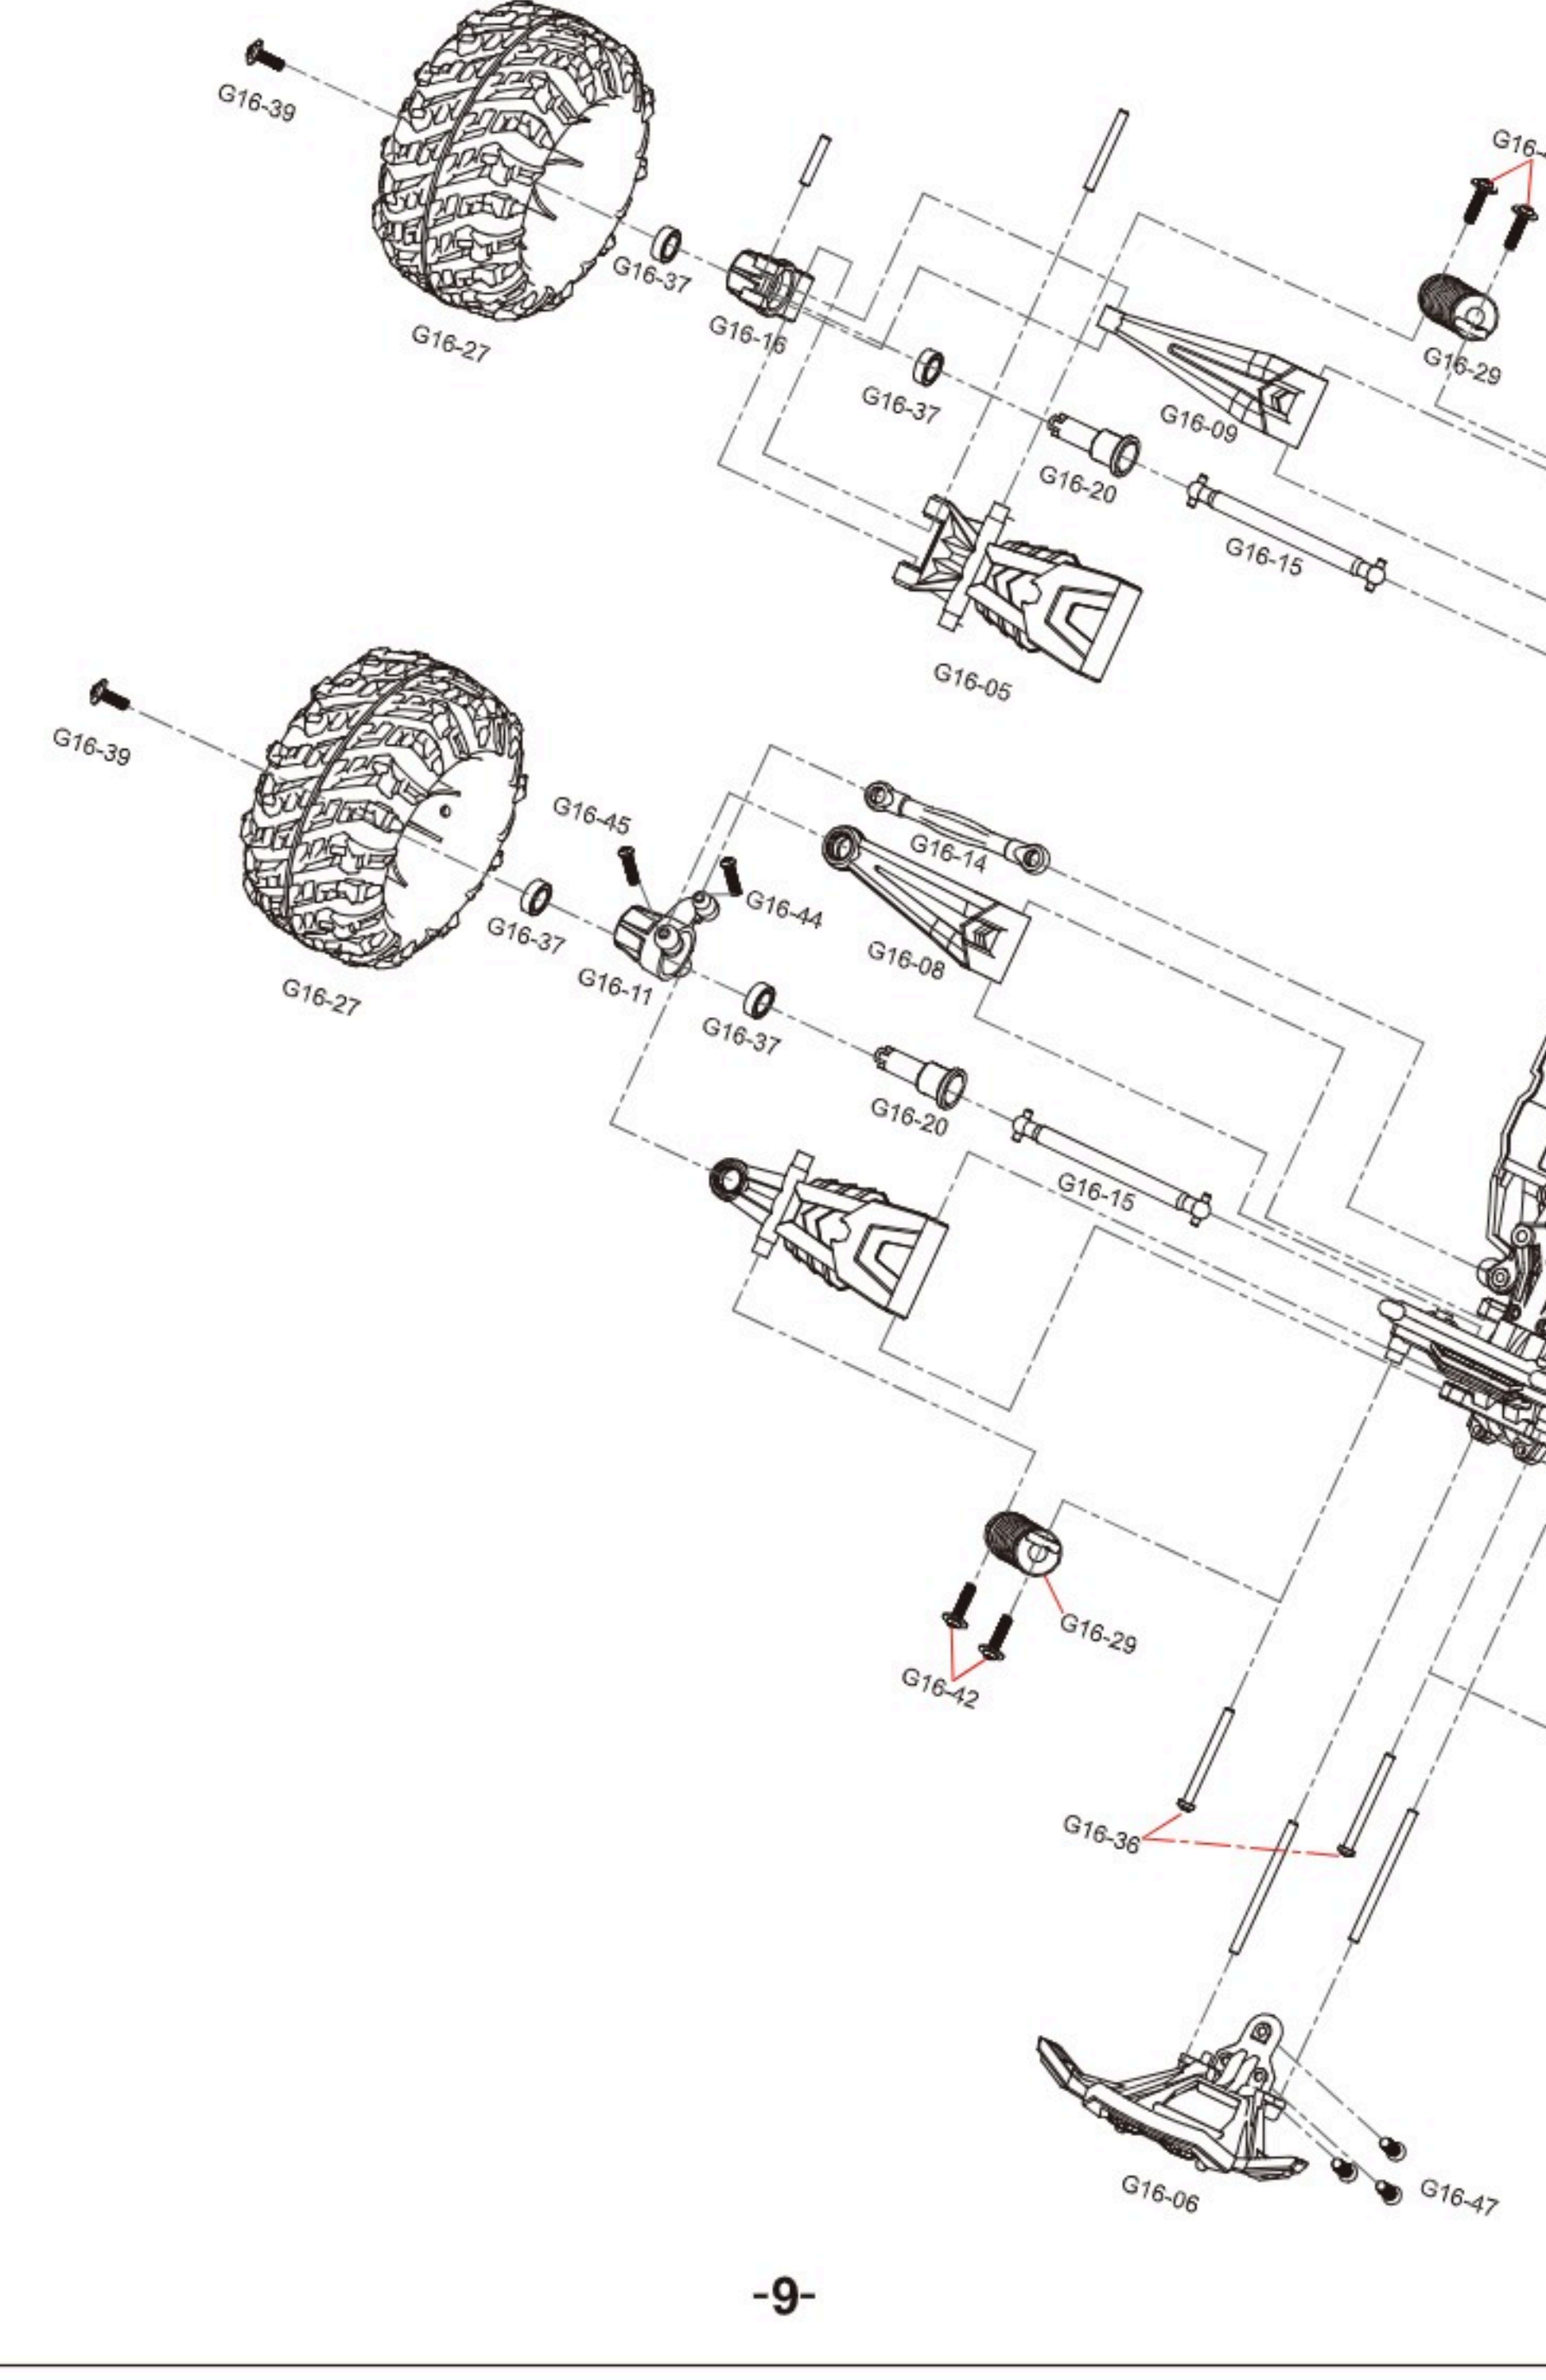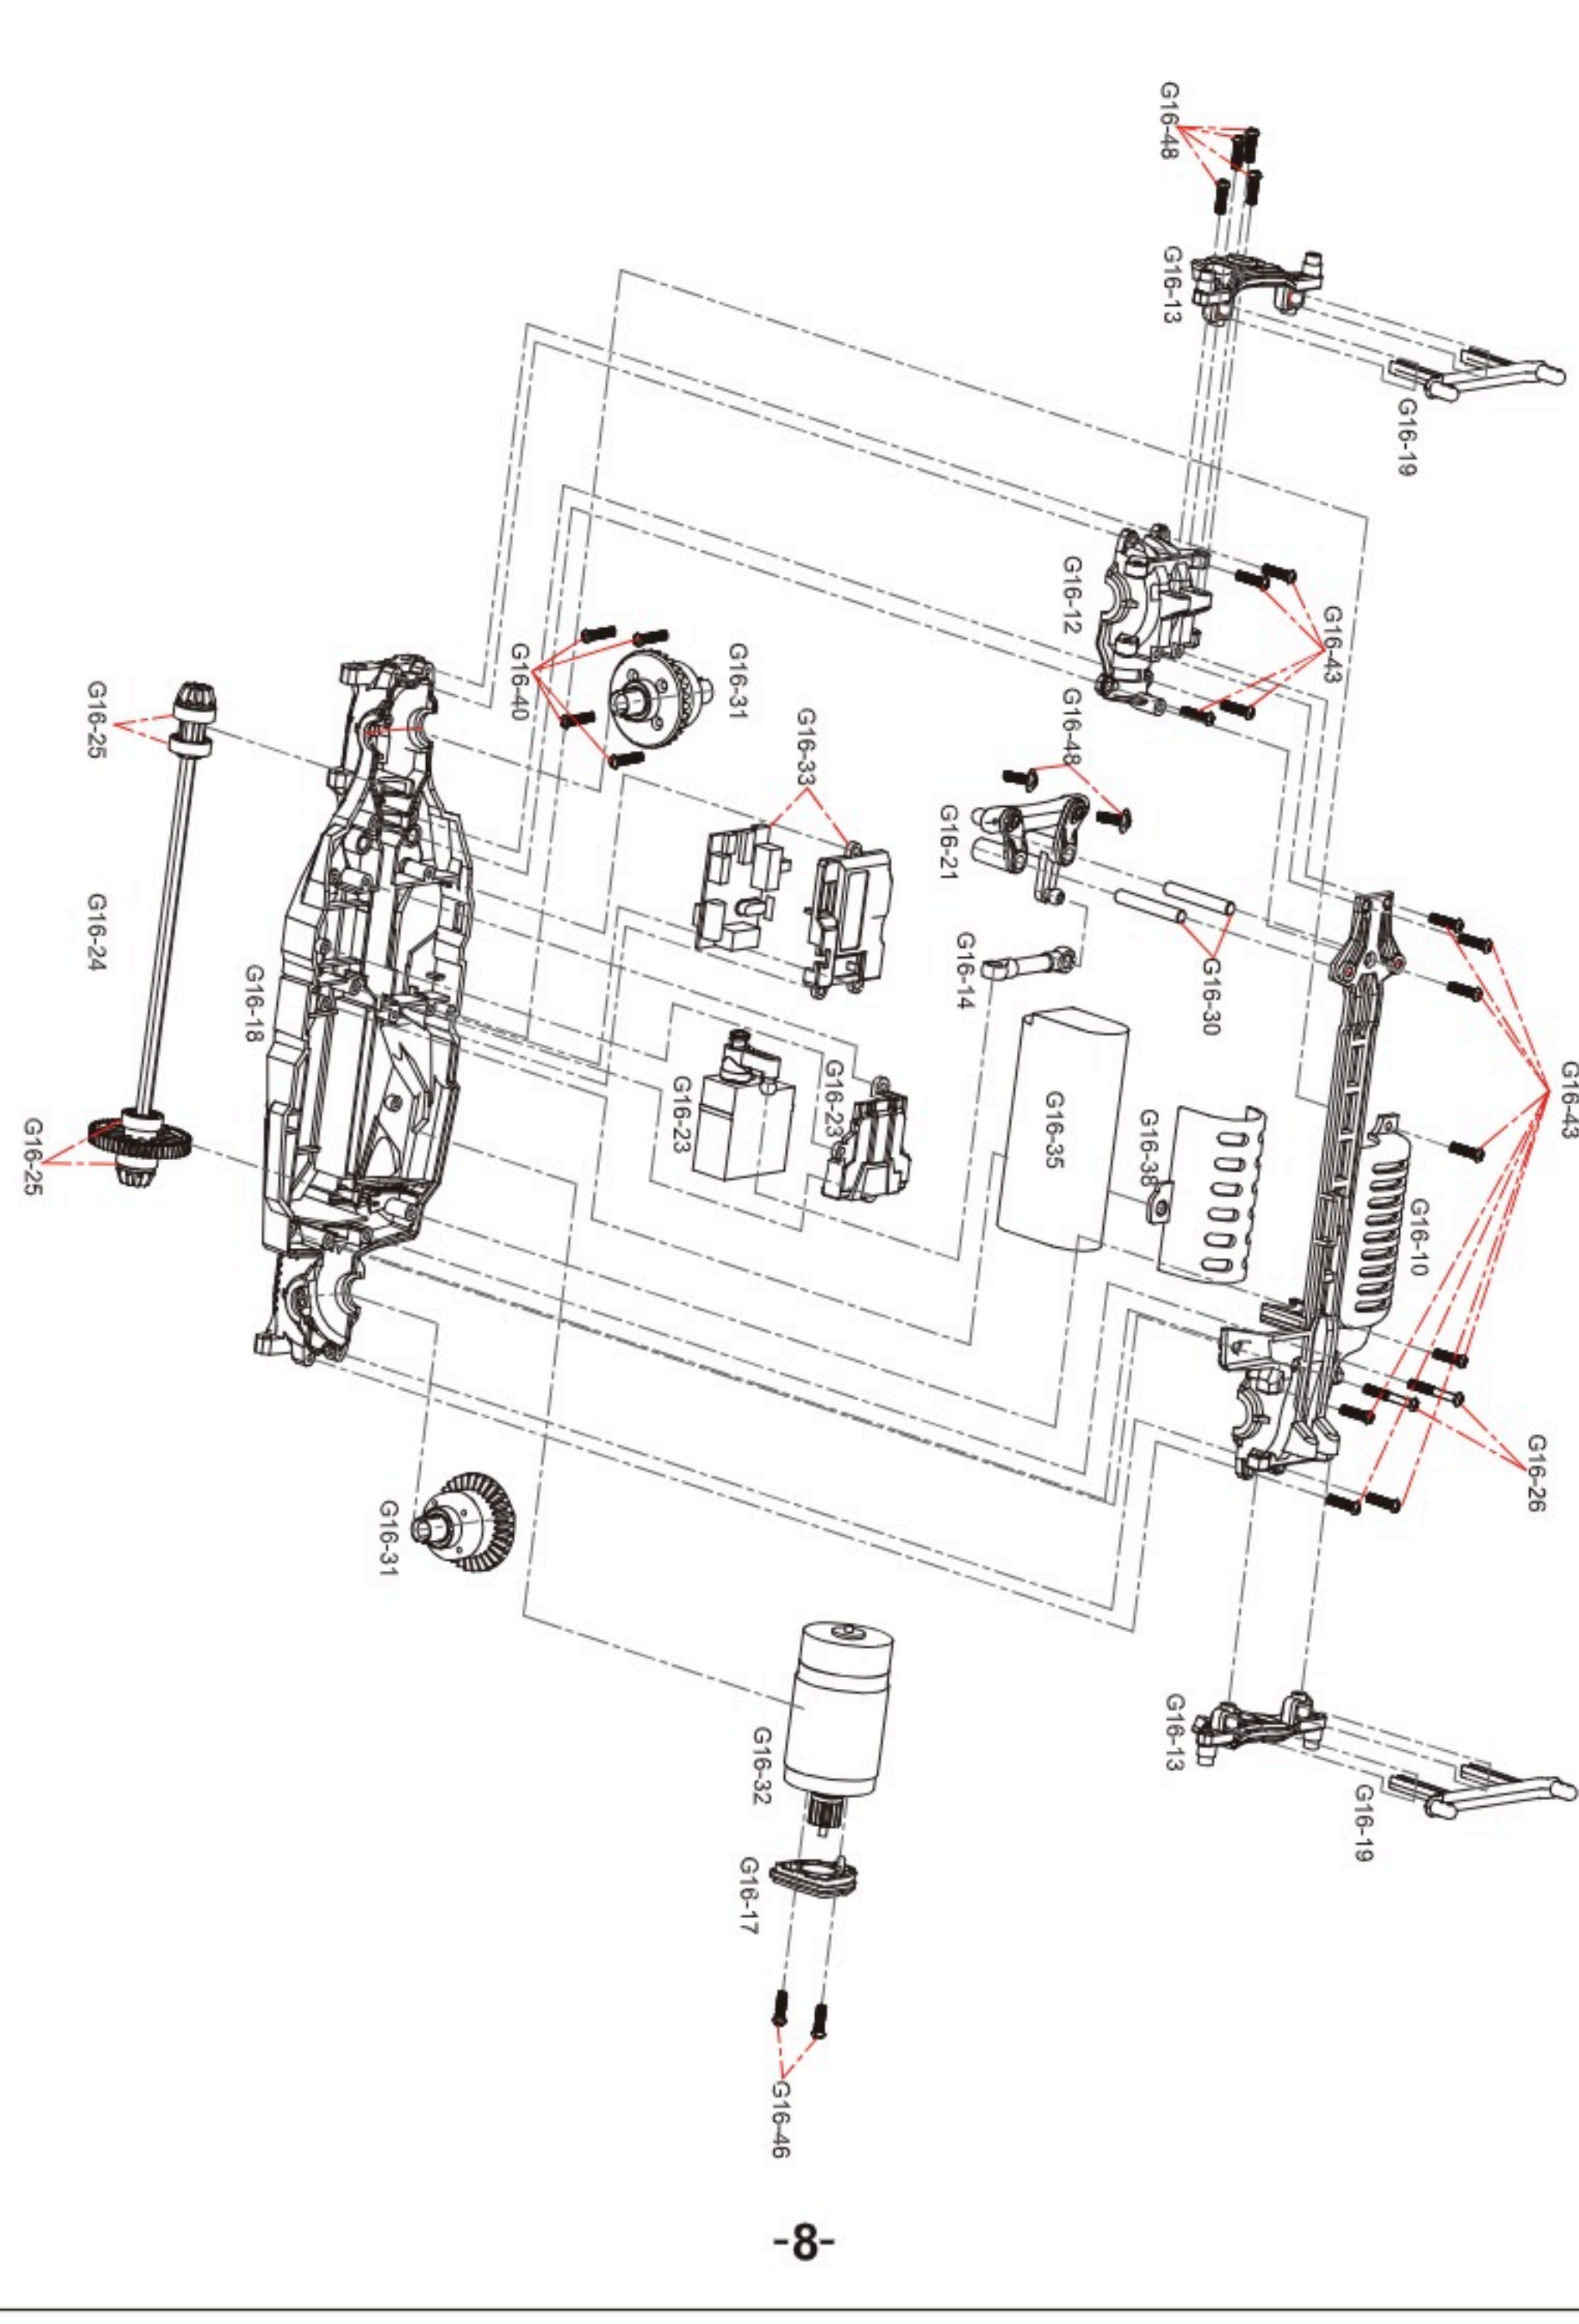   

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

