 





11N40MIMO-Ant2-5310-PASS

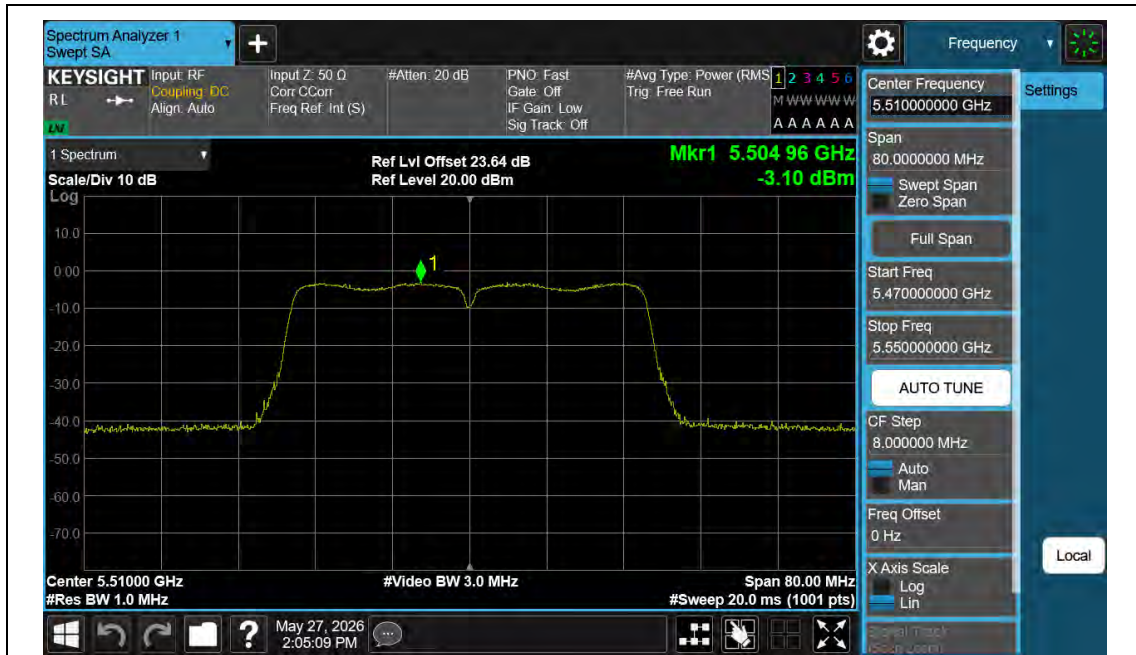


11N40MIMO-Ant1-5510-PASS



 
11N40MIMO-Ant2-5510-PASS

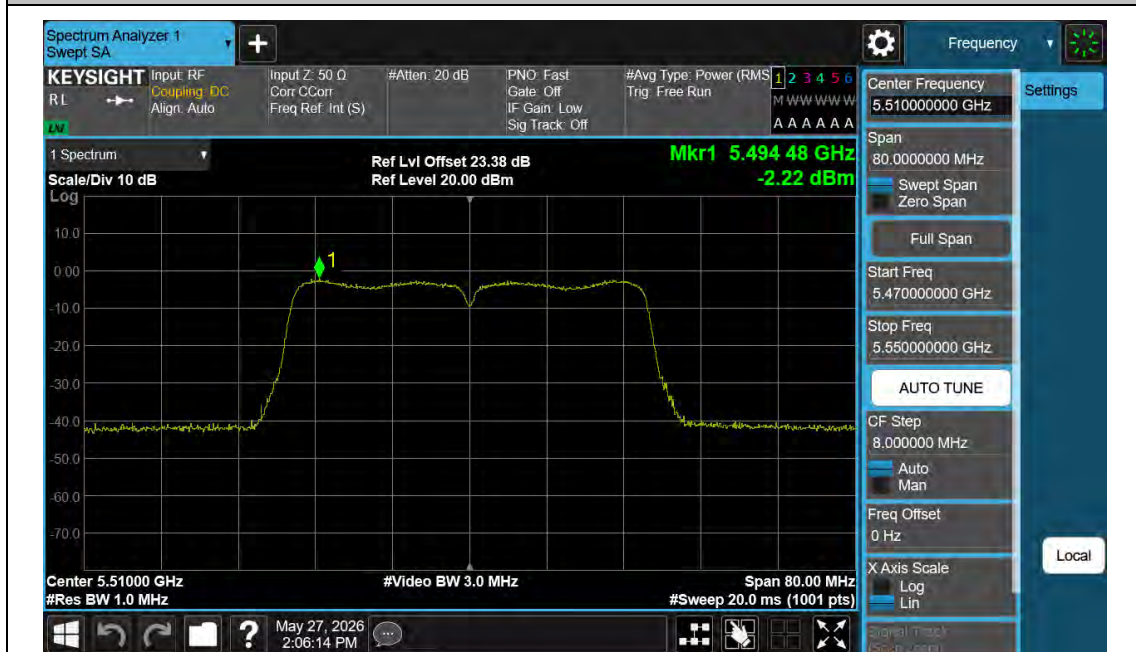


11N40MIMO-Ant1-5590-PASS

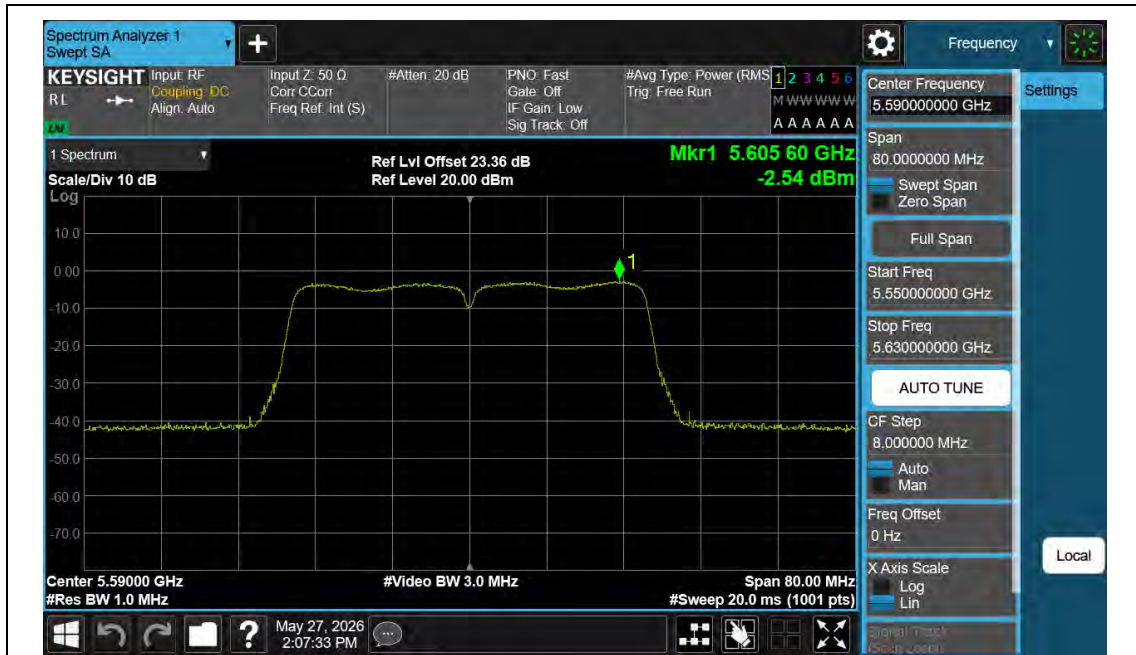 


11N40MIMO-Ant2-5590-PASS

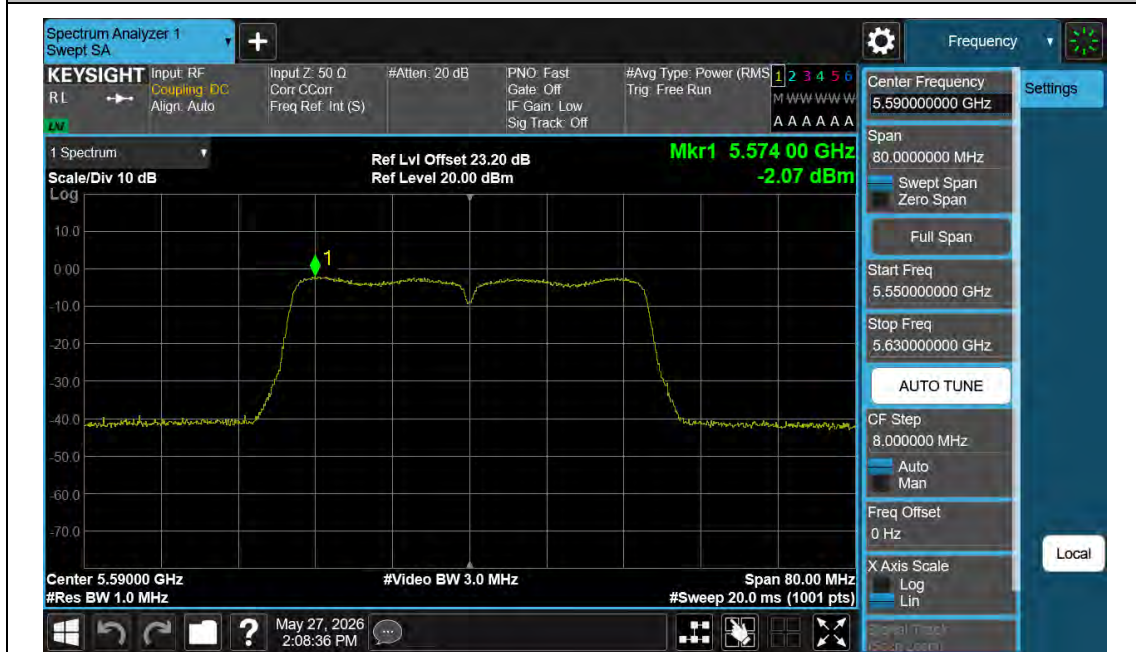 


11N40MIMO-Ant1-5670-PASS

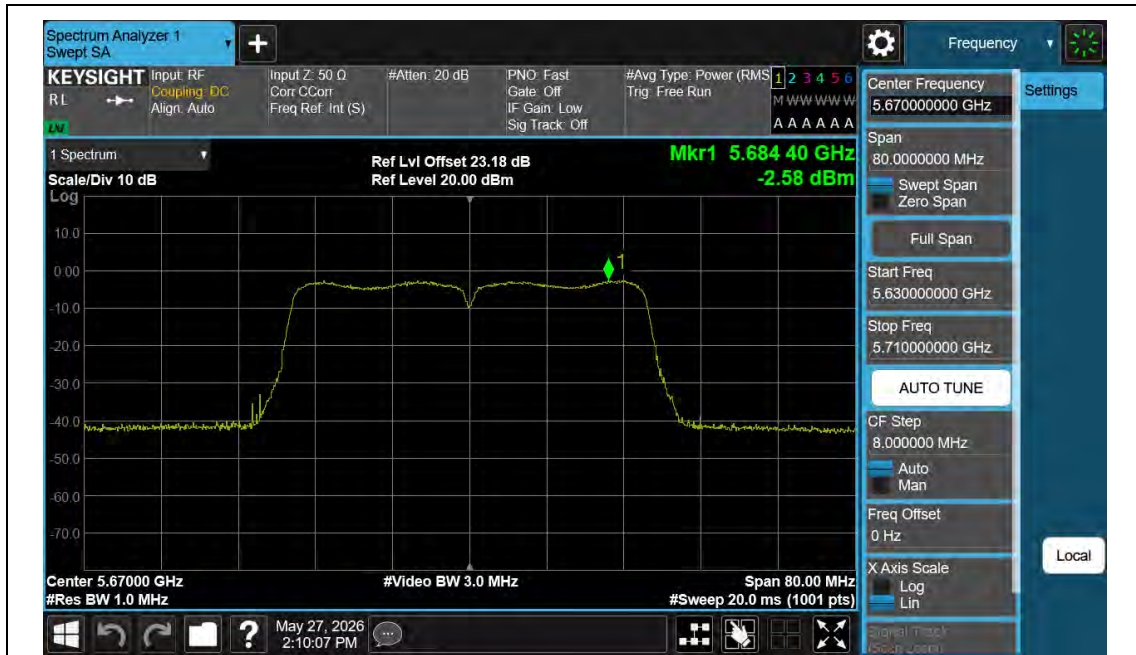 


11N40MIMO-Ant2-5670-PASS

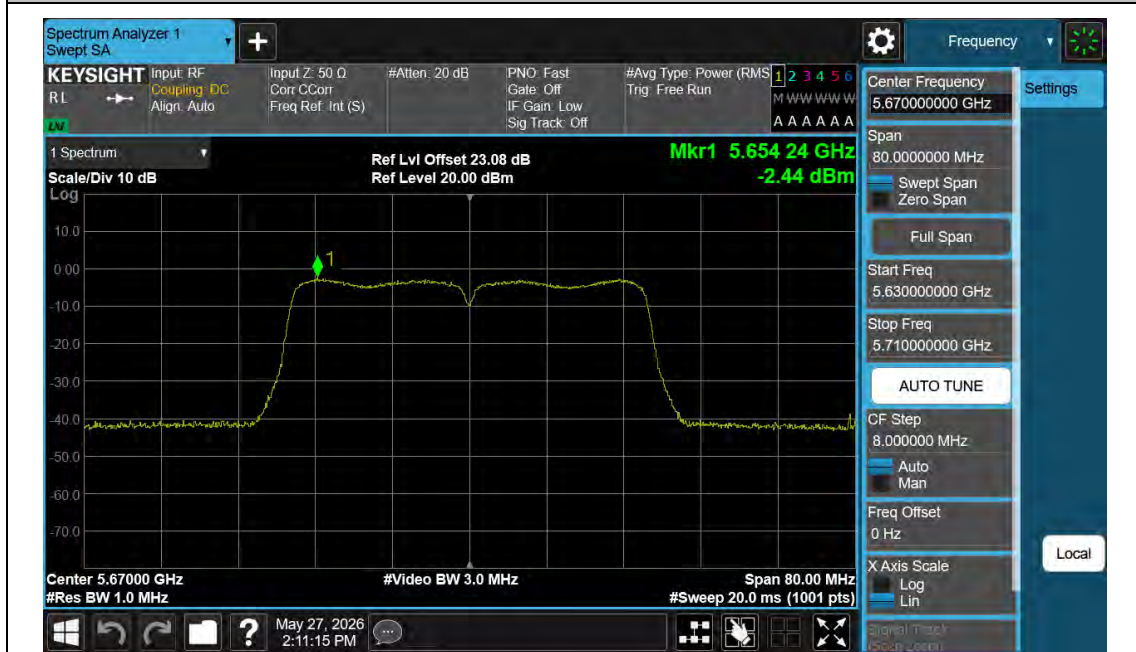 


11N40MIMO-Ant1-5755-PASS

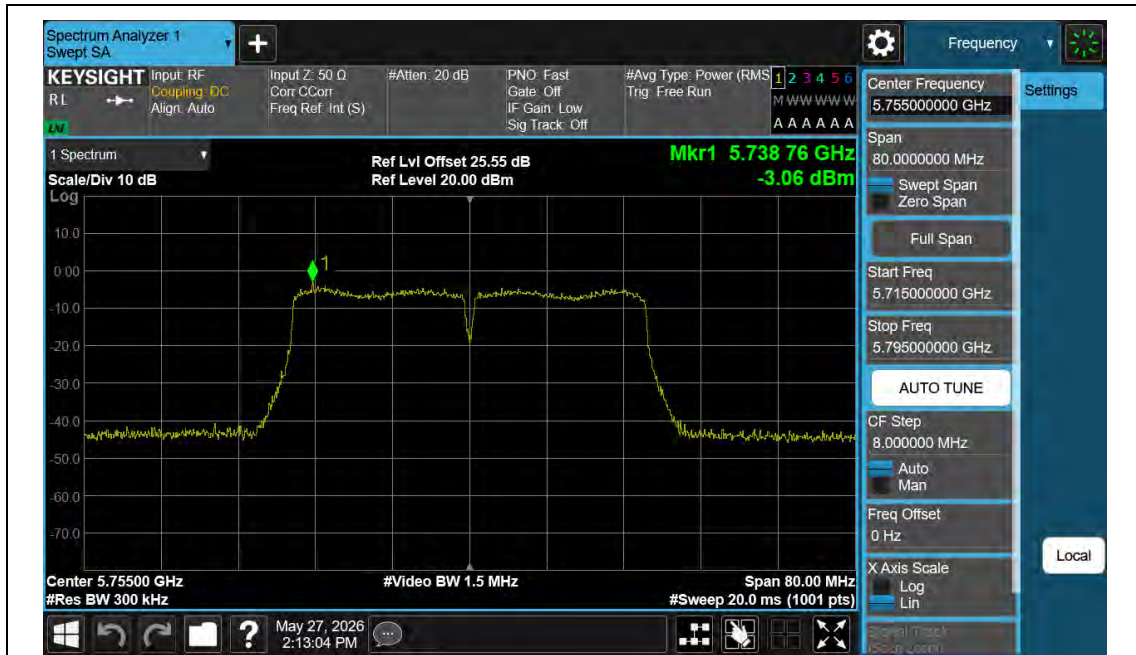 


11N40MIMO-Ant2-5755-PASS

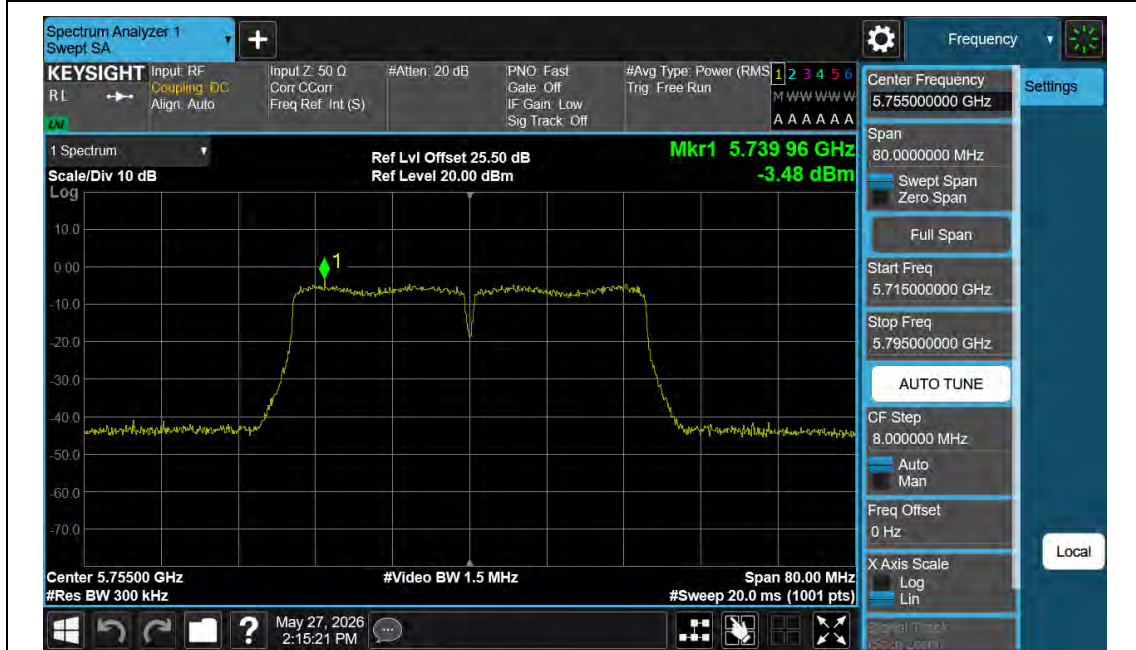 

11N40MIMO-Ant1-5795-PASS

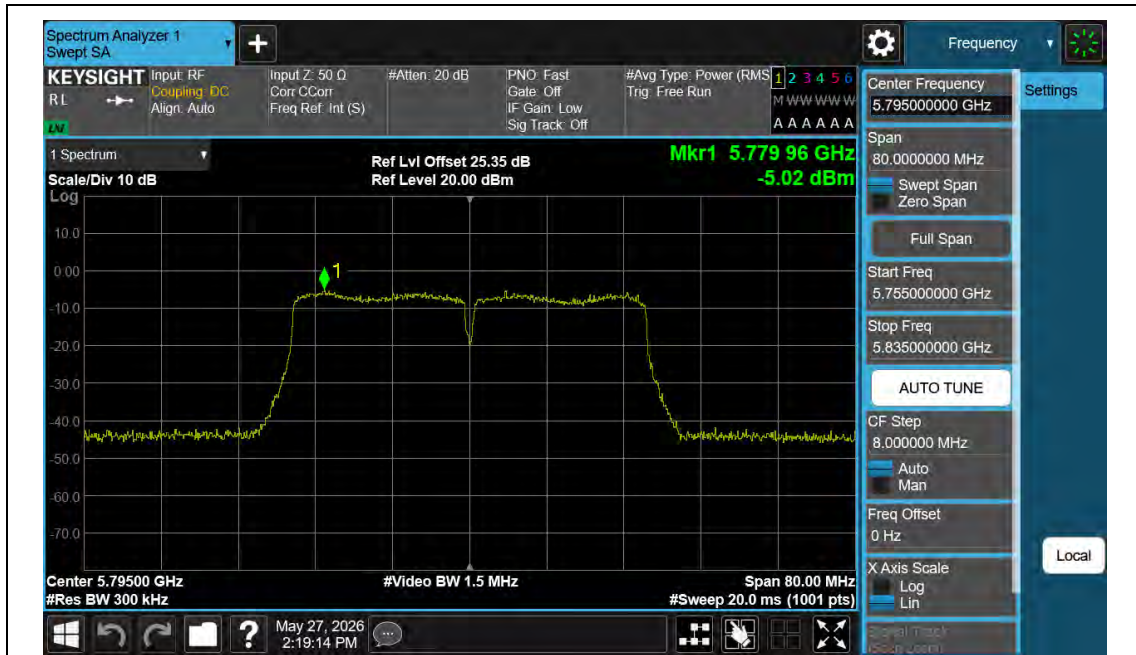 

11N40MIMO-Ant2-5795-PASS

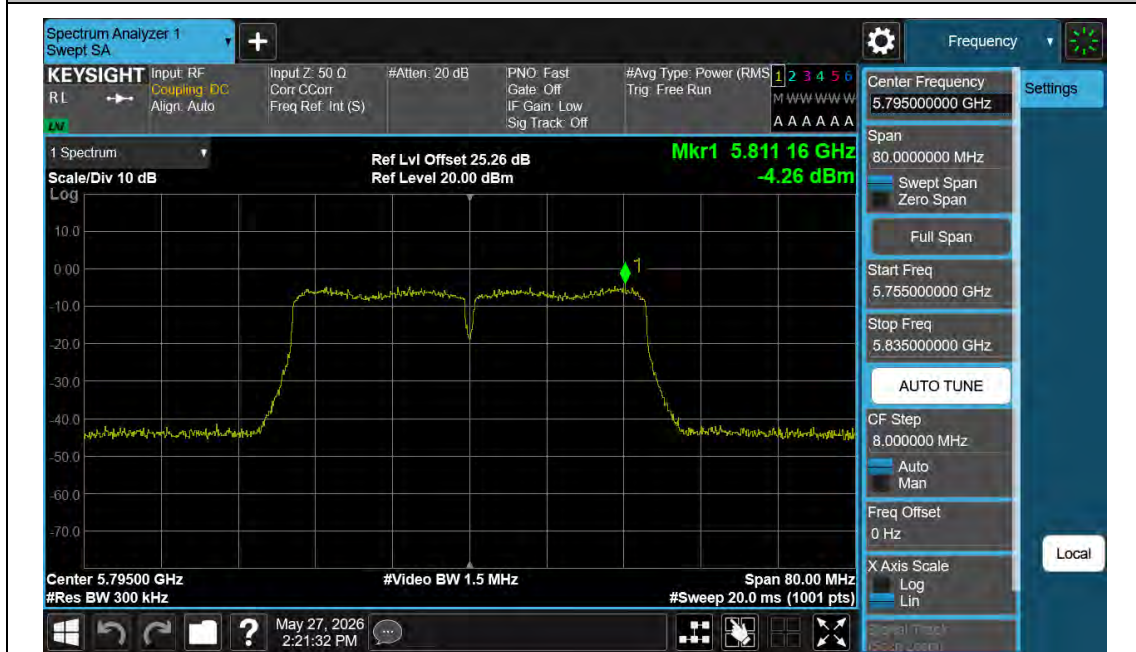 

11AC20MIMO-Ant1-5180-PASS



11AC20MIMO-Ant2-5180-PASS



11AC20MIMO-Ant1-5200-PASS



11AC20MIMO-Ant2-5200-PASS



11AC20MIMO-Ant1-5240-PASS



11AC20MIMO-Ant2-5240-PASS



11AC20MIMO-Ant1-5260-PASS



11AC20MIMO-Ant2-5260-PASS



11AC20MIMO-Ant1-5300-PASS



11AC20MIMO-Ant2-5300-PASS



 
11AC20MIMO-Ant1-5320-PASS




11AC20MIMO-Ant2-5320-PASS




11AC20MIMO-Ant1-5500-PASS

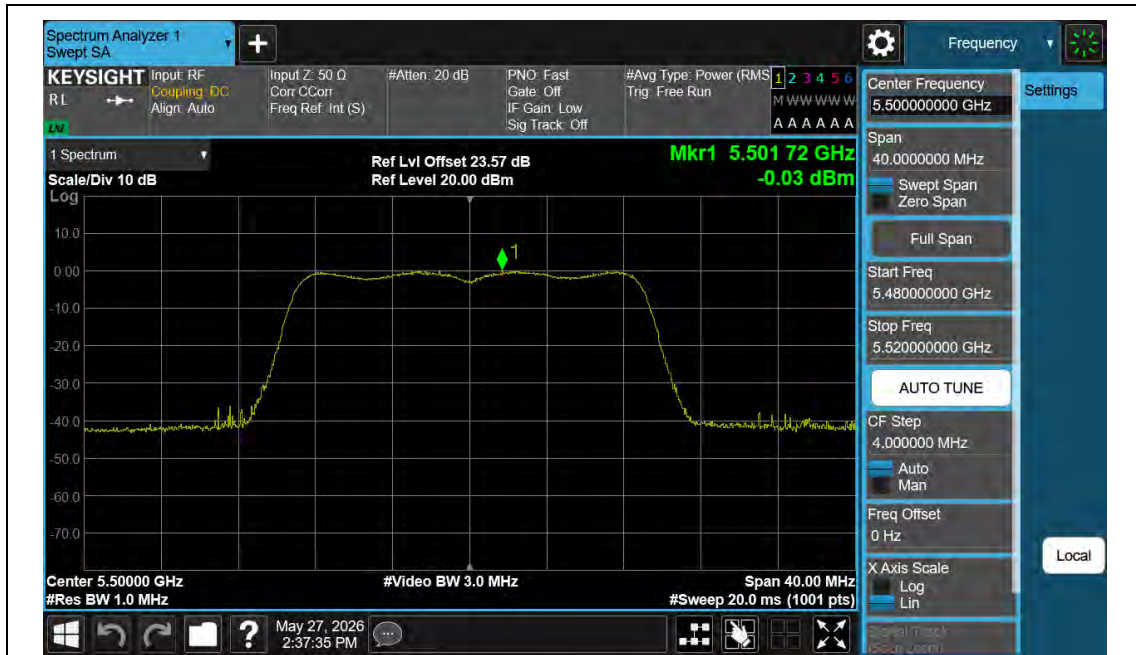


11AC20MIMO-Ant2-5500-PASS

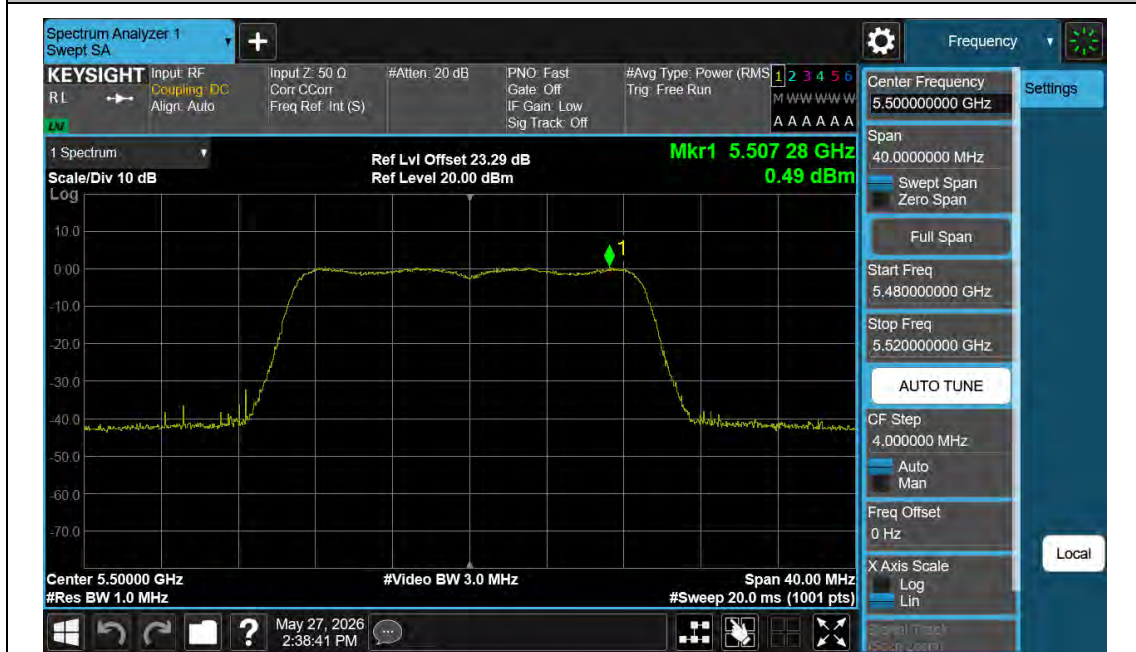 

11AC20MIMO-Ant1-5580-PASS

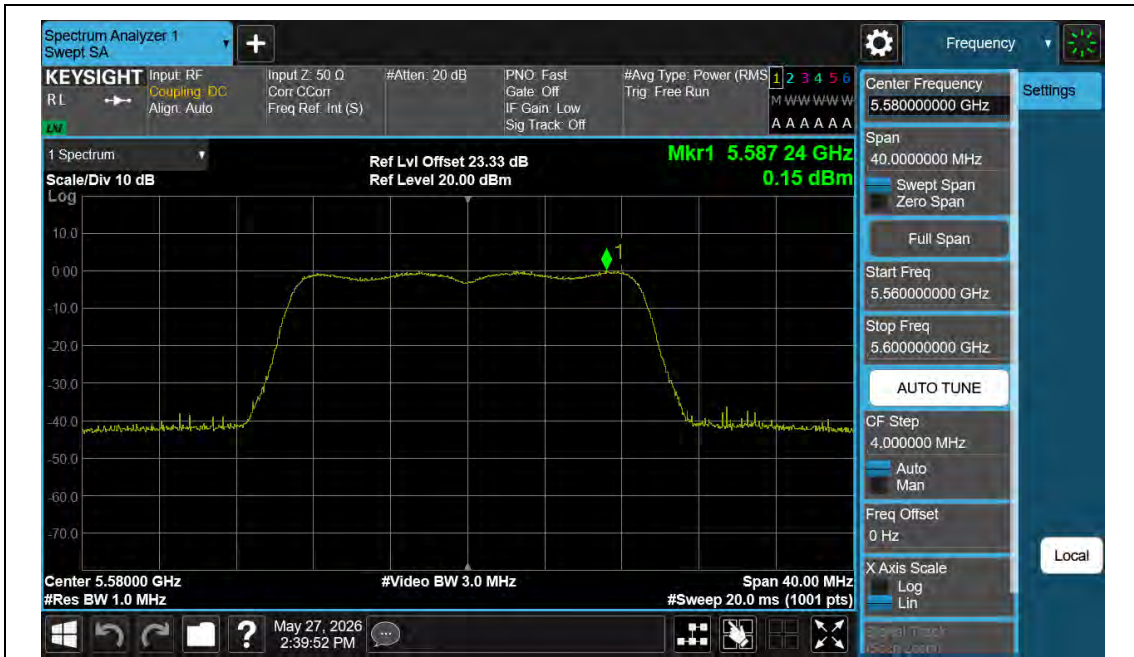 


11AC20MIMO-Ant2-5580-PASS

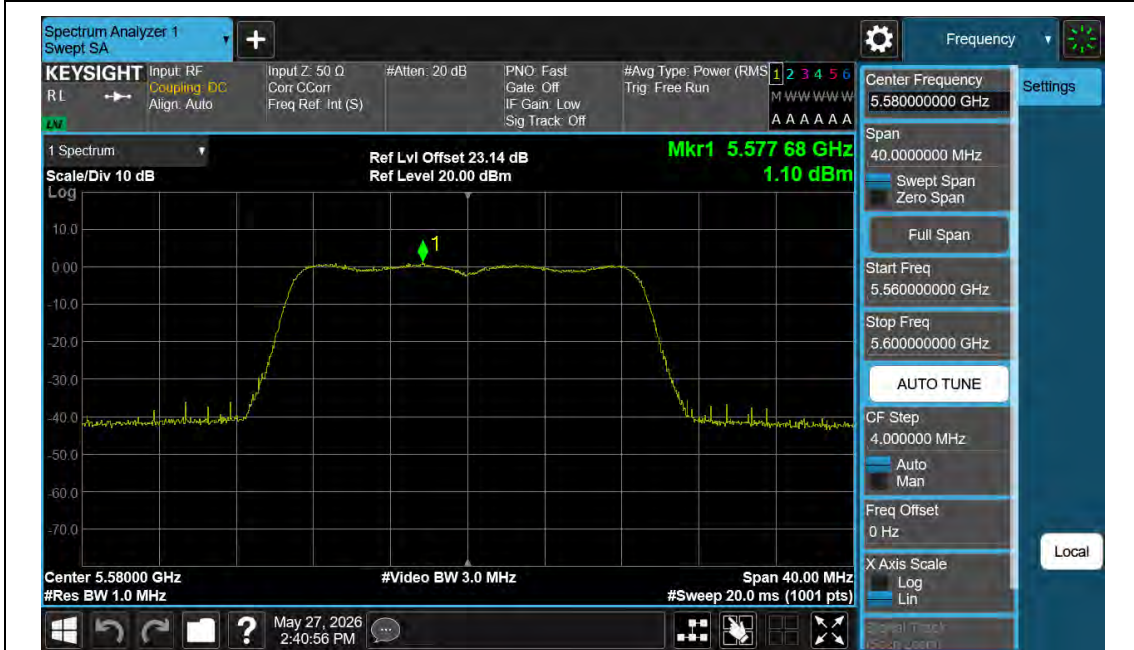 

11AC20MIMO-Ant1-5700-PASS



 11AC20MIMO-Ant2-5700-PASS

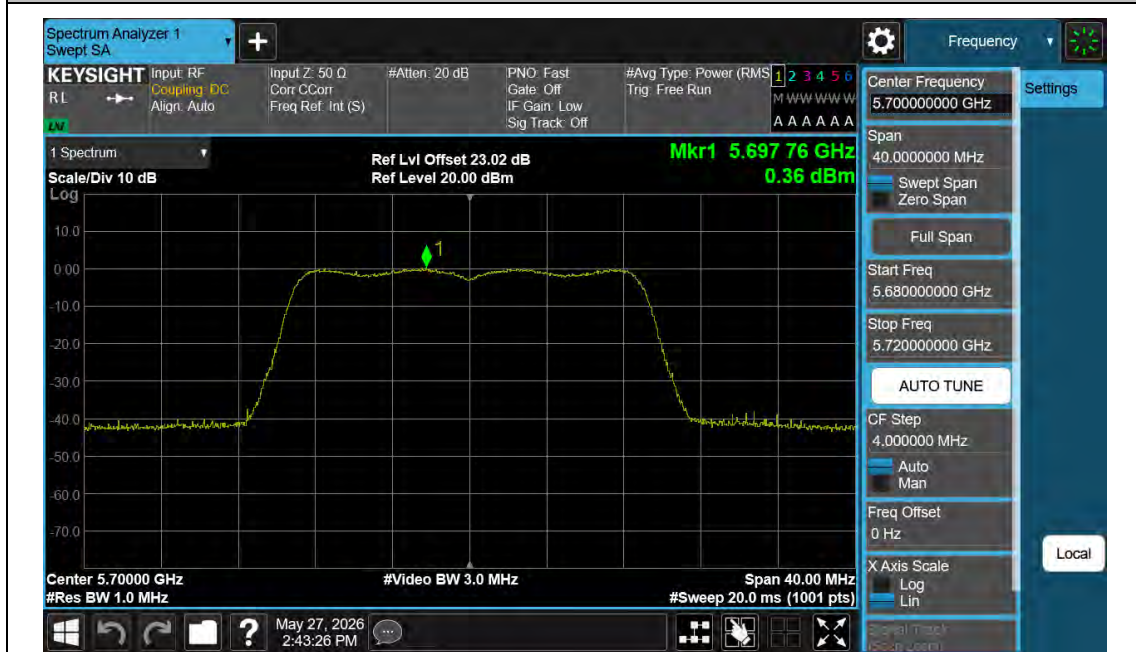

11AC20MIMO-Ant1-5745-PASS



11AC20MIMO-Ant2-5745-PASS



11AC20MIMO-Ant1-5785-PASS



11AC20MIMO-Ant2-5785-PASS



 
11AC20MIMO-Ant1-5825-PASS




11AC20MIMO-Ant2-5825-PASS



11AC40MIMO-Ant1-5190-PASS

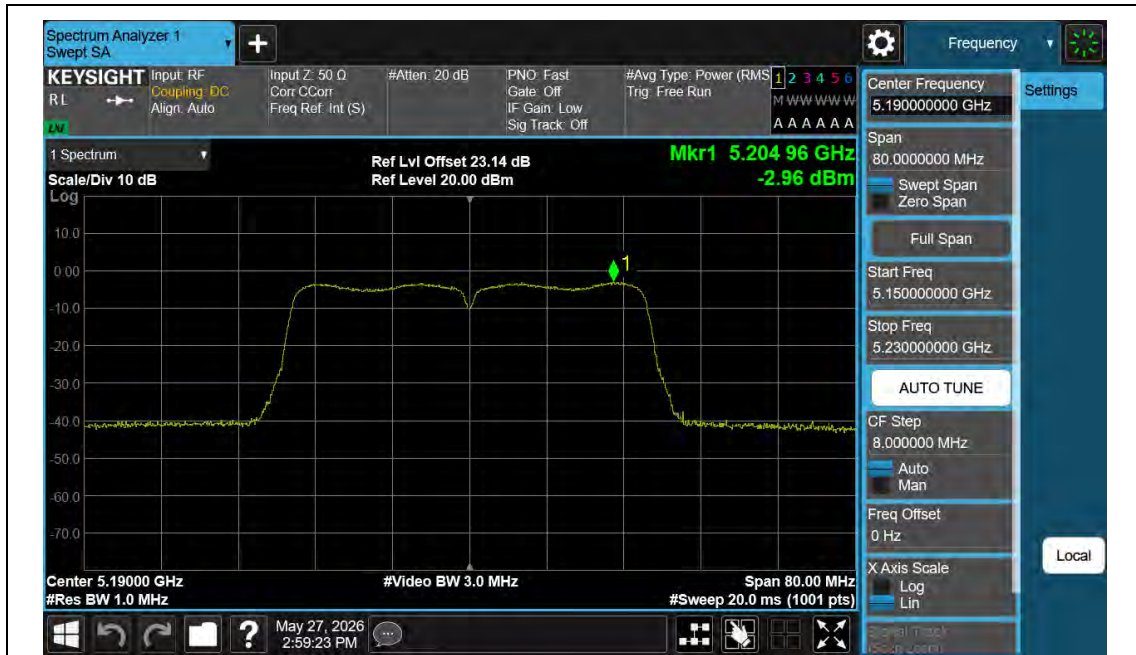


11AC40MIMO-Ant2-5190-PASS

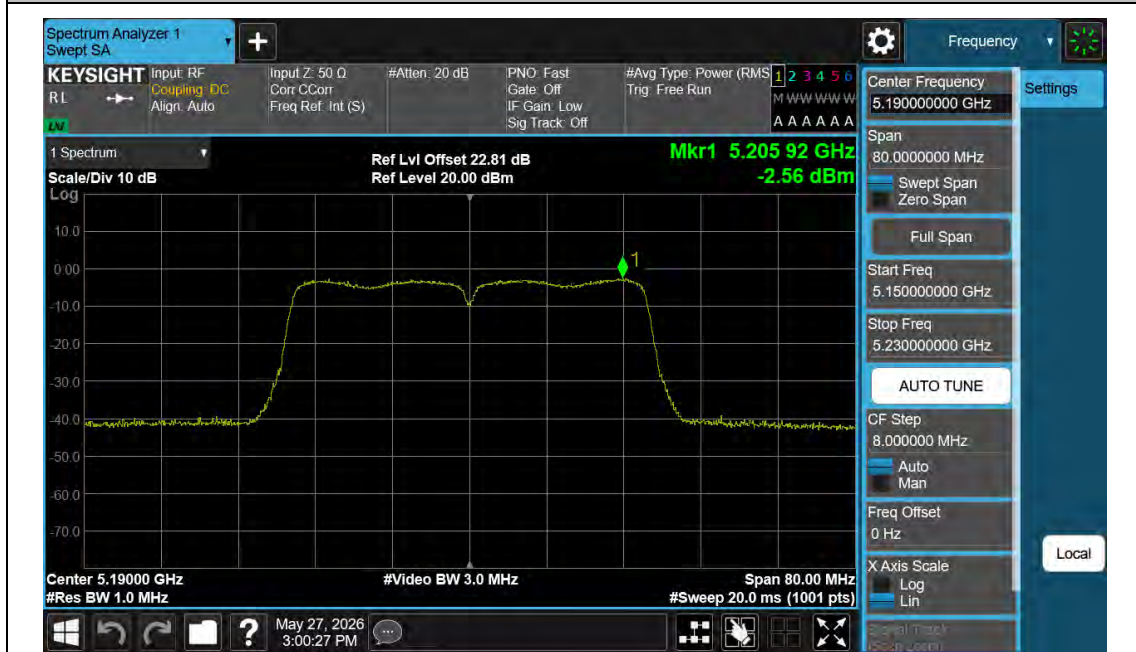 

11AC40MIMO-Ant1-5230-PASS



 
11AC40MIMO-Ant2-5230-PASS

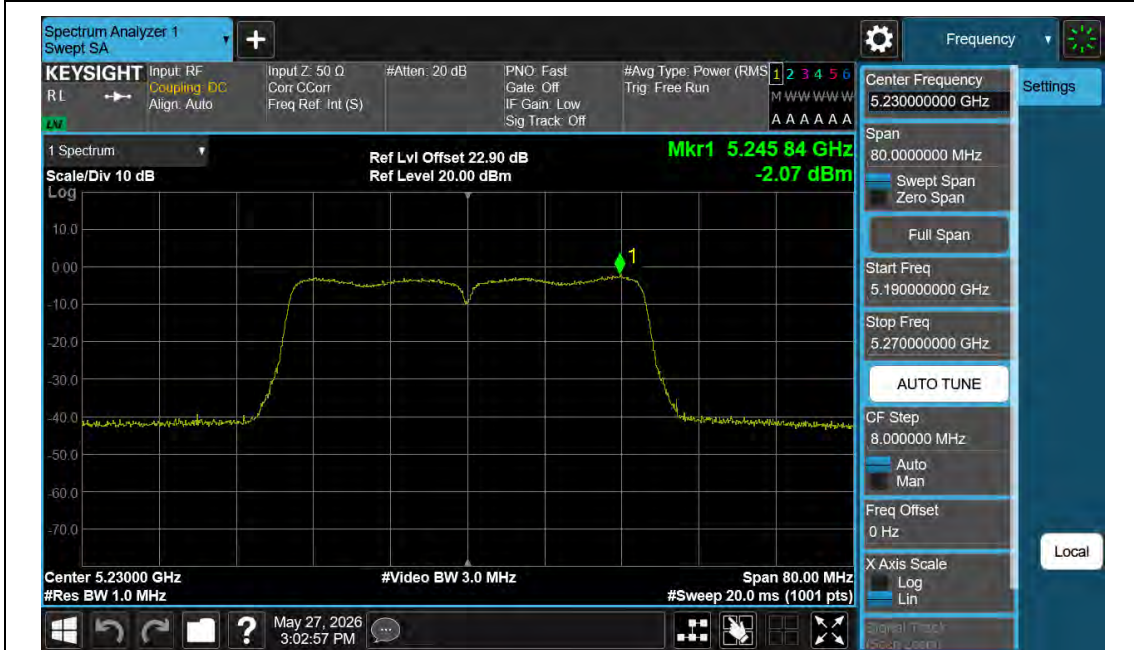

11AC40MIMO-Ant1-5270-PASS



 
11AC40MIMO-Ant2-5270-PASS

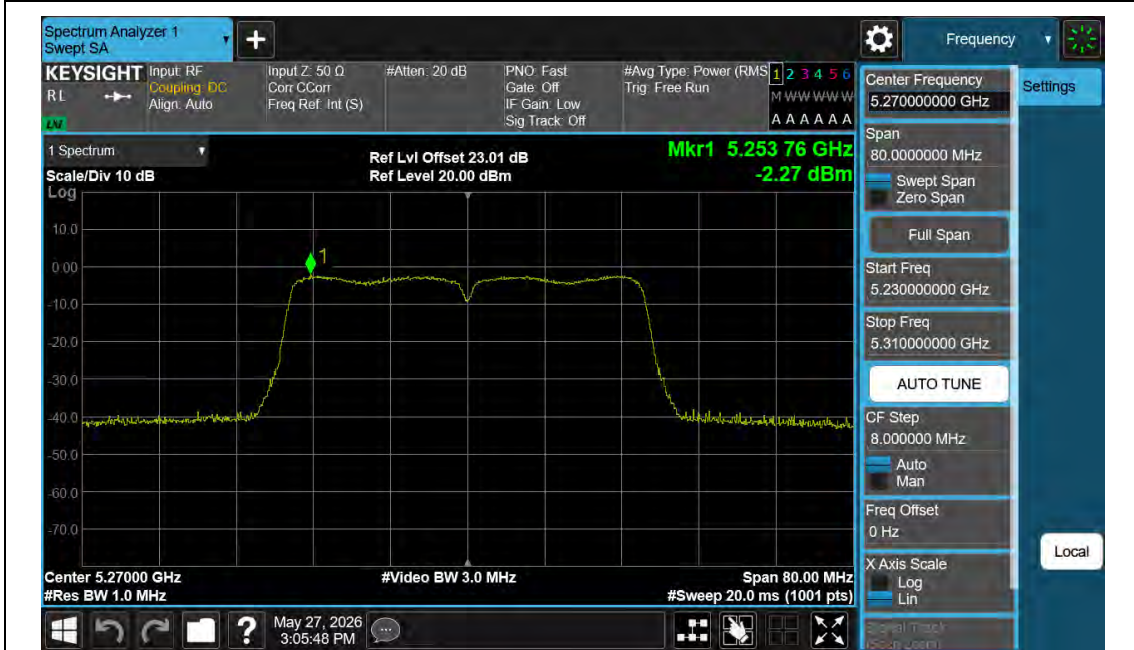


11AC40MIMO-Ant1-5310-PASS



 
11AC40MIMO-Ant2-5310-PASS

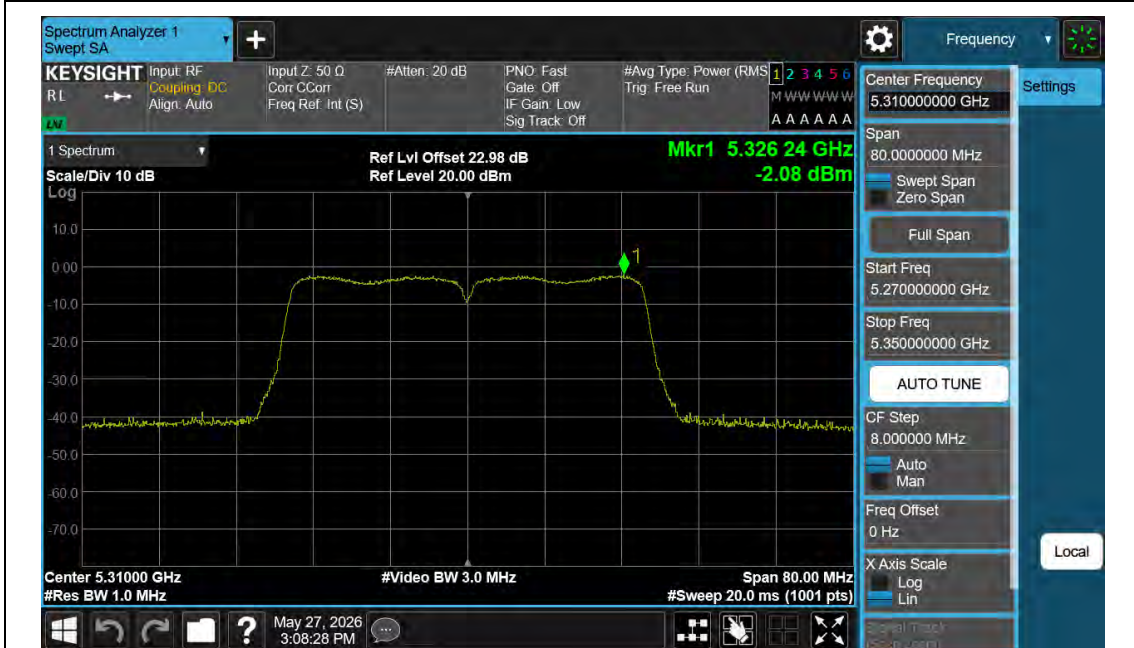


11AC40MIMO-Ant1-5510-PASS

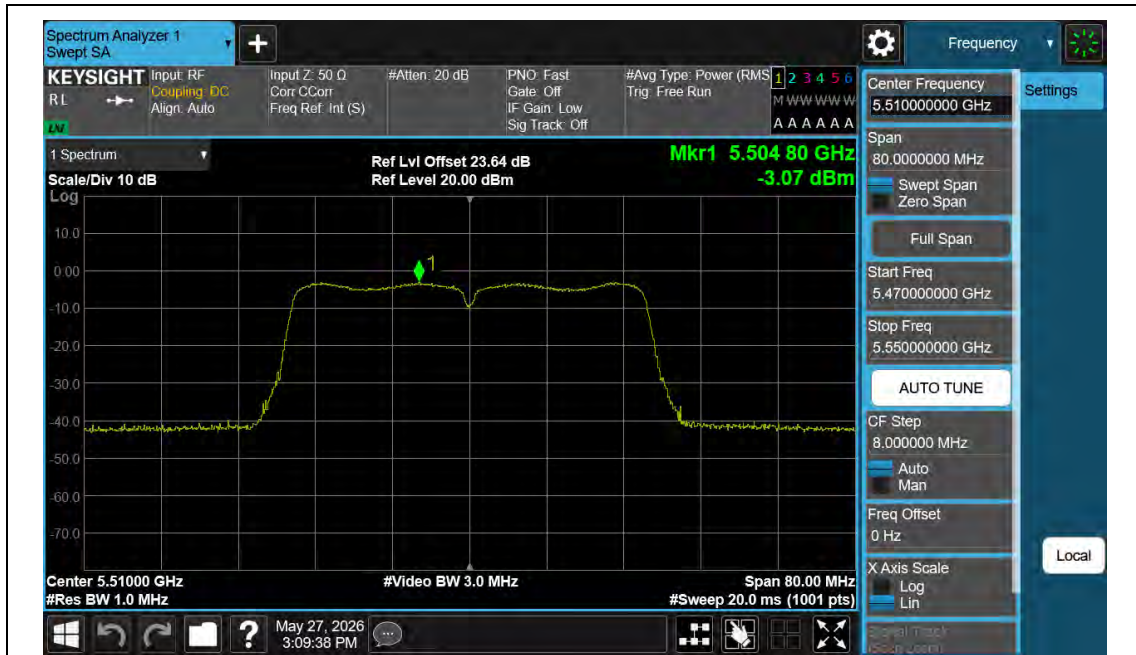 


11AC40MIMO-Ant2-5510-PASS

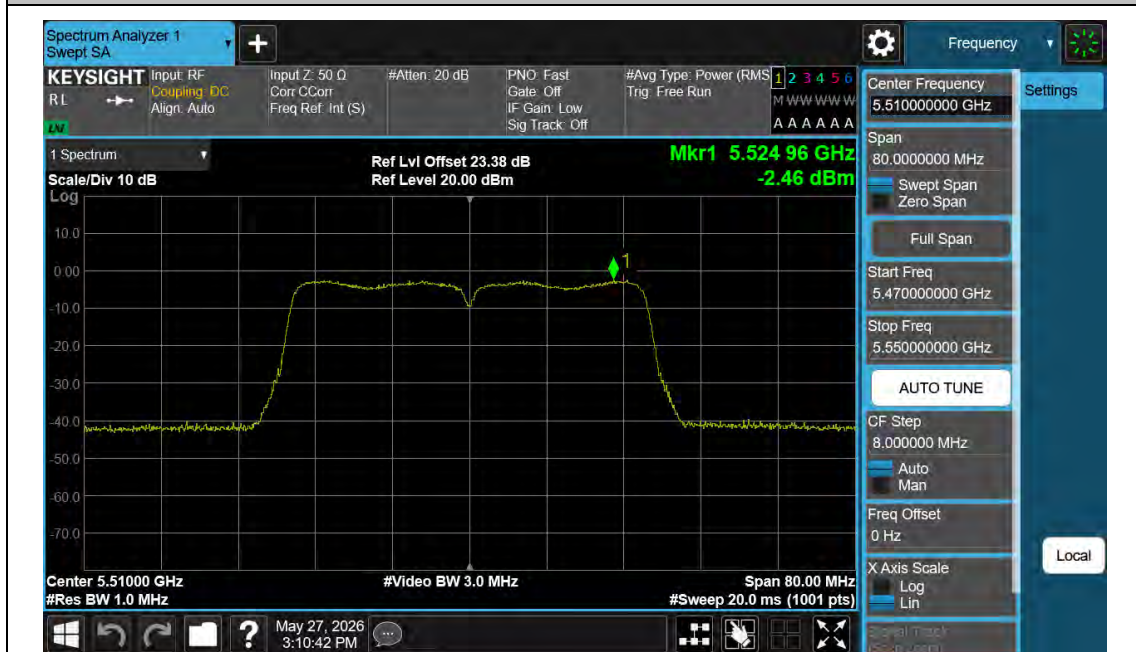 


11AC40MIMO-Ant1-5590-PASS

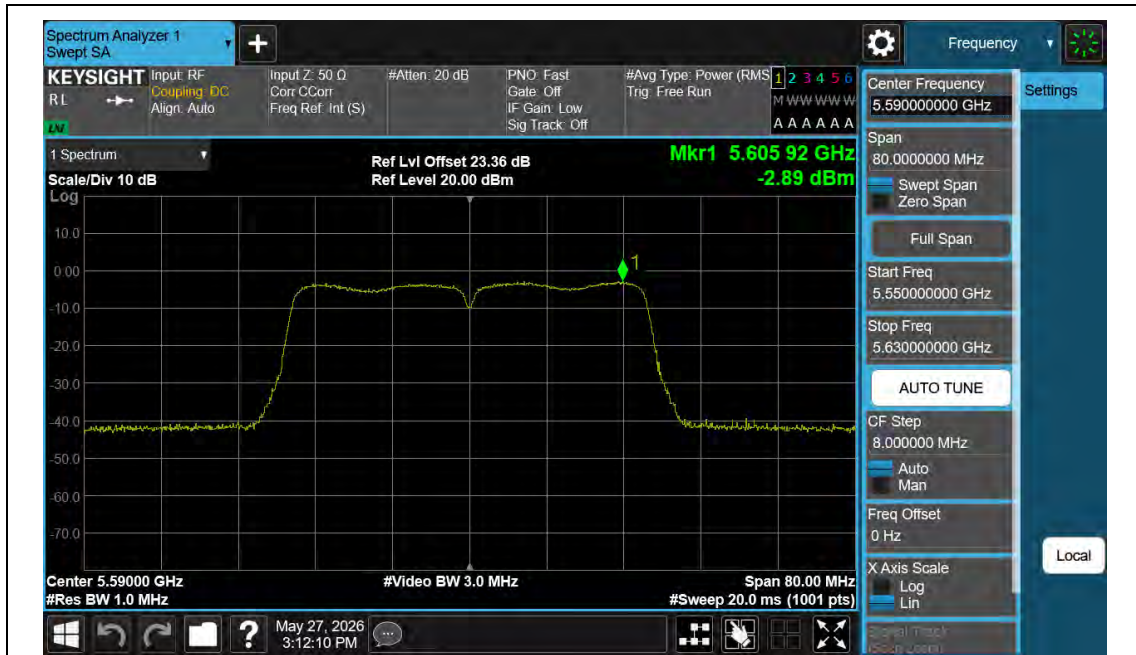 


11AC40MIMO-Ant2-5590-PASS

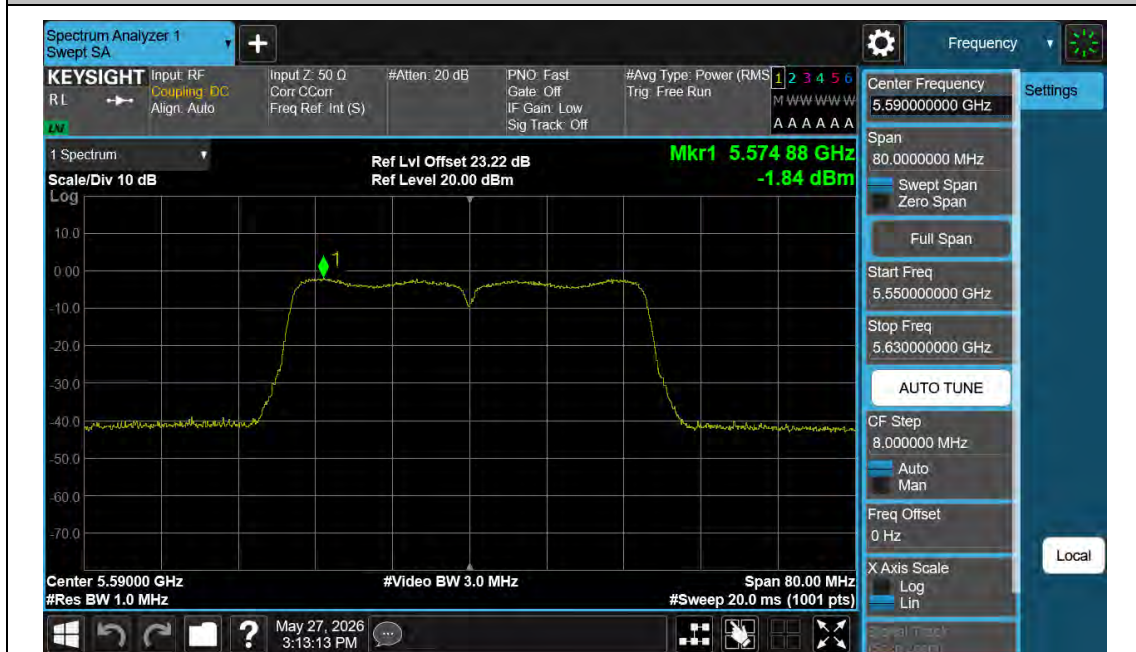 


11AC40MIMO-Ant1-5670-PASS

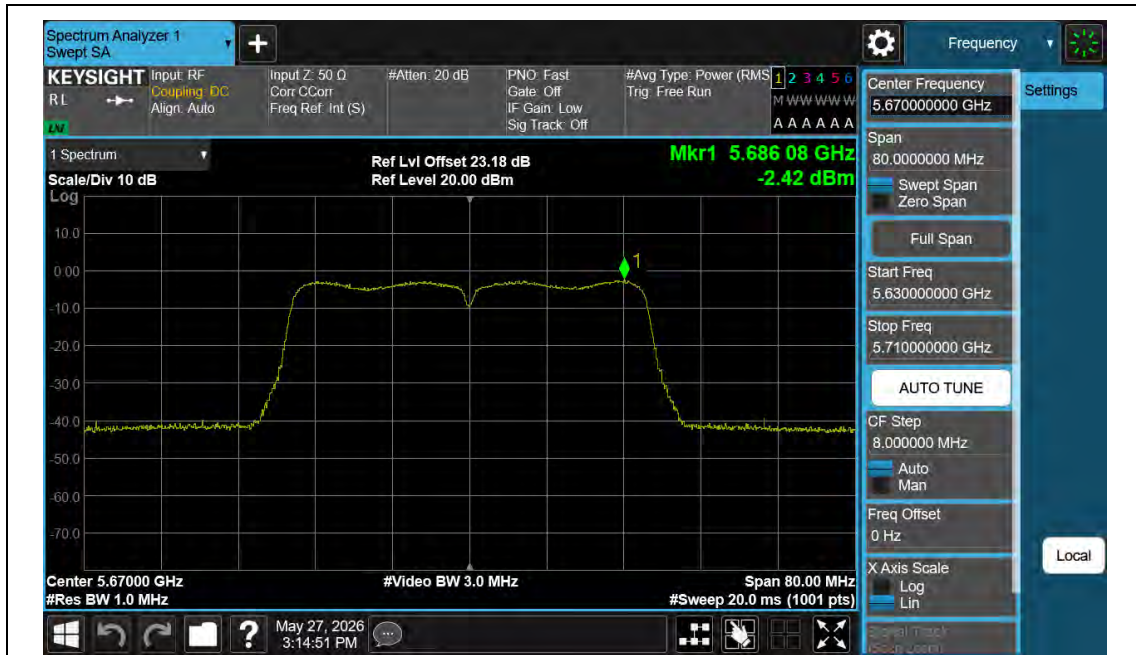 


11AC40MIMO-Ant2-5670-PASS

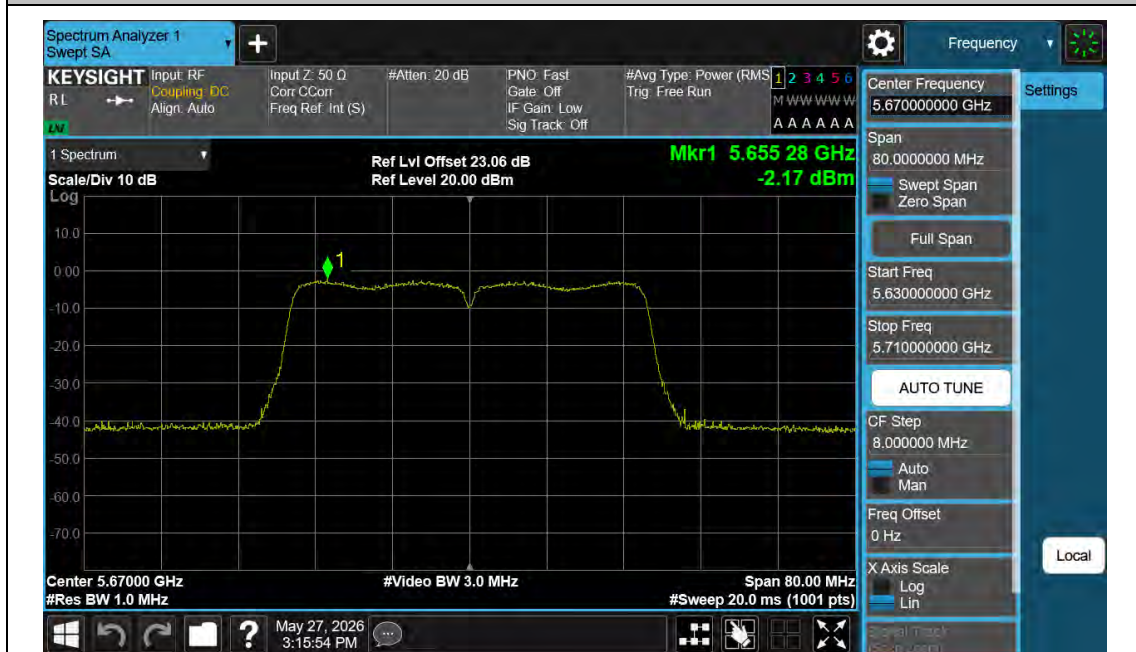 


11AC40MIMO-Ant1-5755-PASS

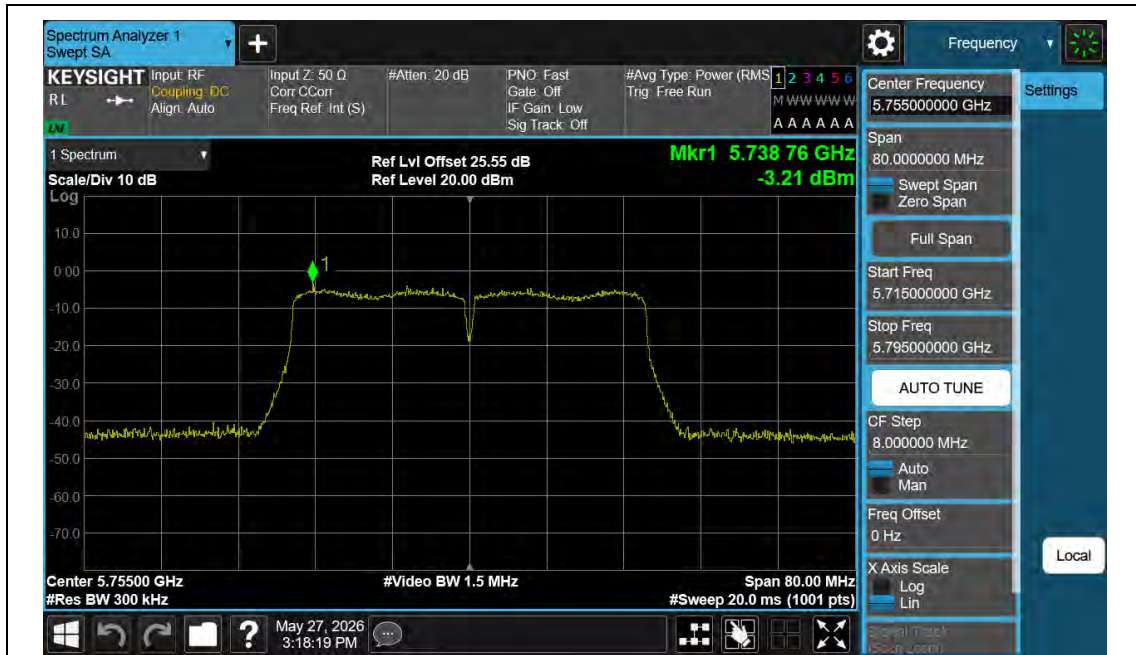 


11AC40MIMO-Ant2-5755-PASS

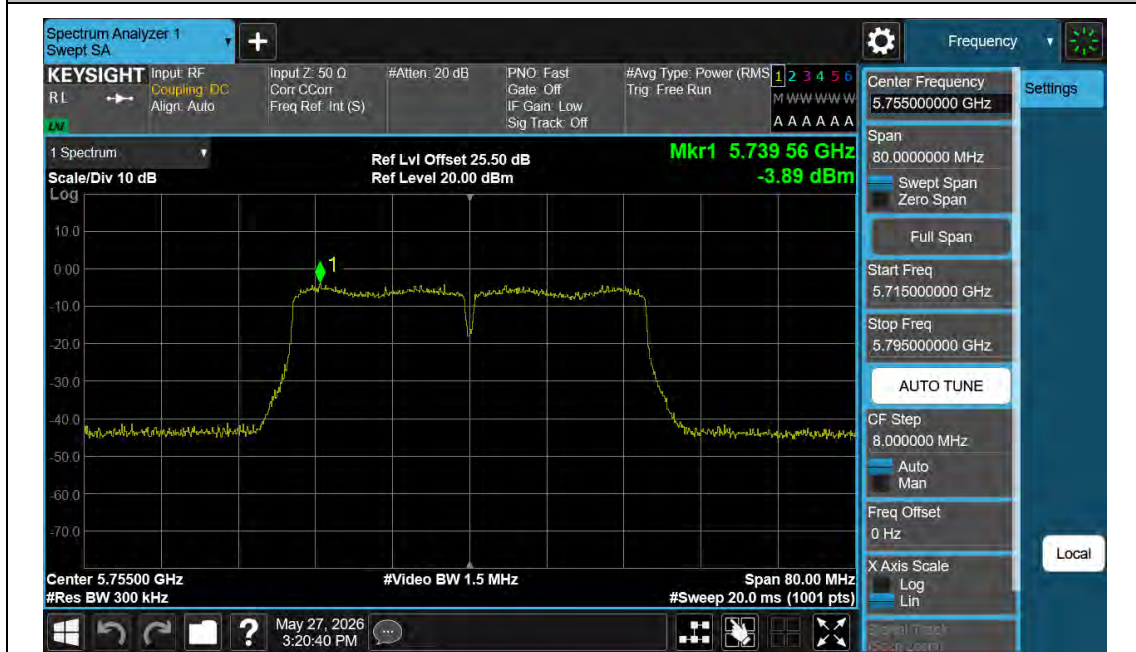 


11AC40MIMO-Ant1-5795-PASS

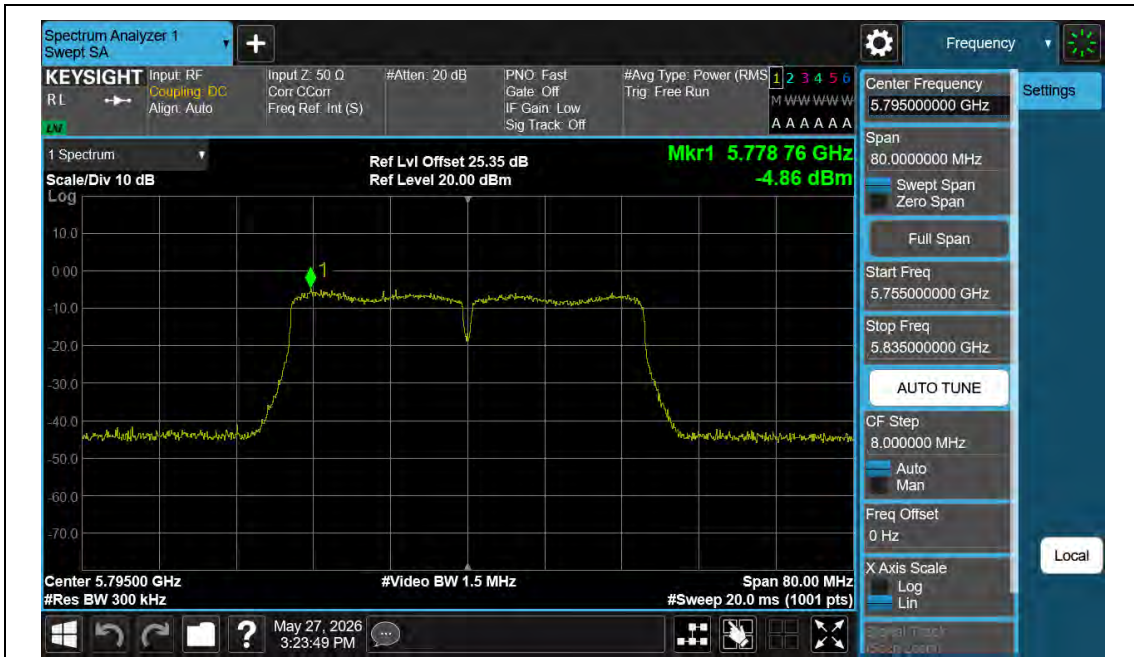 

11AC40MIMO-Ant2-5795-PASS

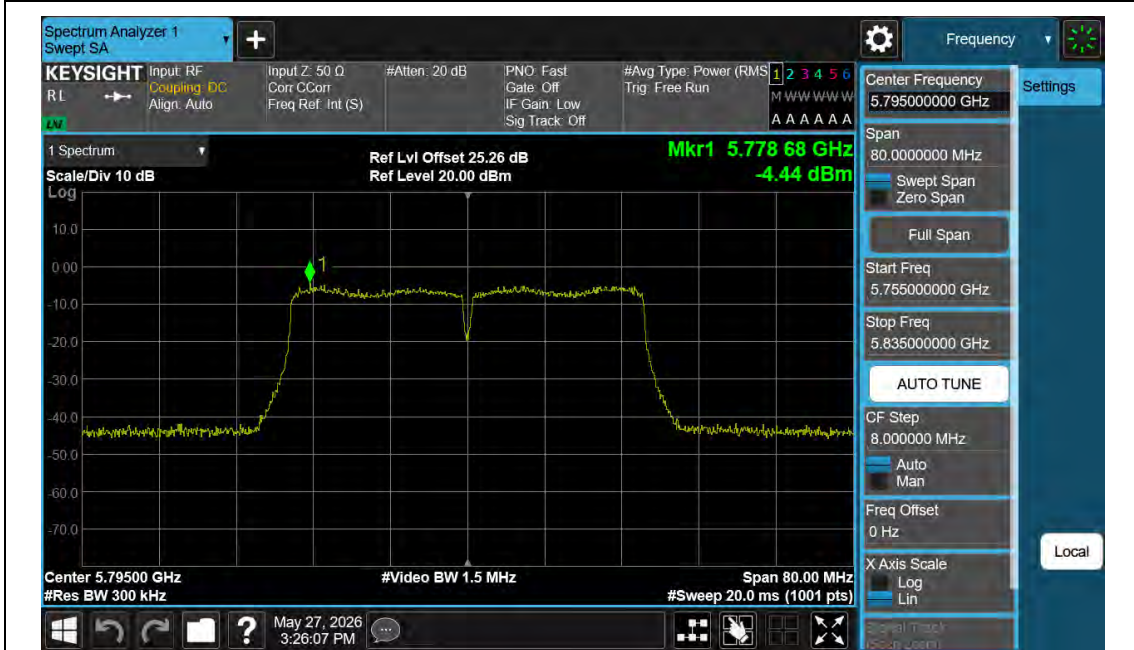 

11AC80MIMO-Ant1-5210-PASS

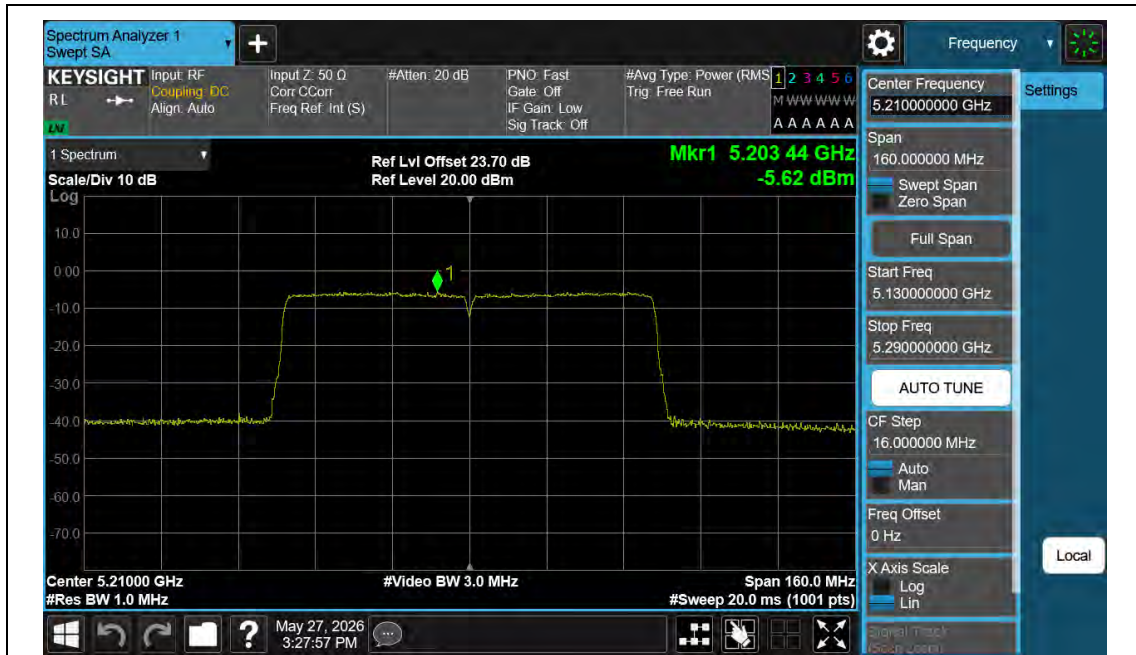 

11AC80MIMO-Ant2-5210-PASS



11AC80MIMO-Ant1-5290-PASS



11AC80MIMO-Ant2-5290-PASS



11AC80MIMO-Ant1-5530-PASS



 
11AC80MIMO-Ant2-5530-PASS



11AC80MIMO-Ant1-5610-PASS




11AC80MIMO-Ant2-5610-PASS

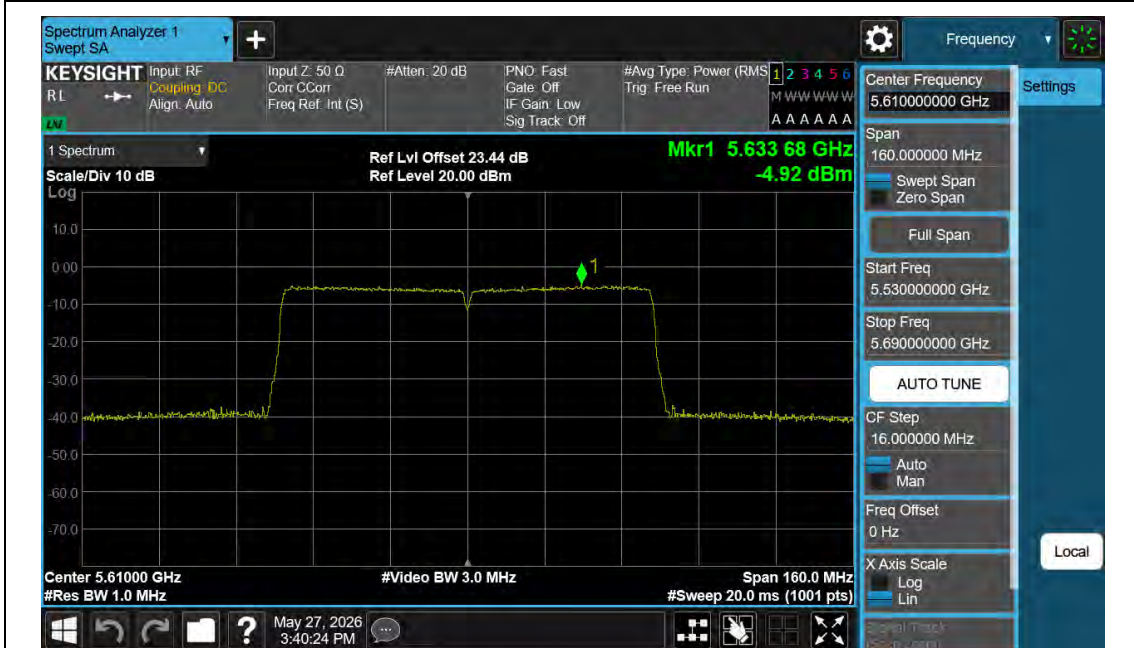

11AC80MIMO-Ant1-5775-PASS



 11AC80MIMO-Ant2-5775-PASS

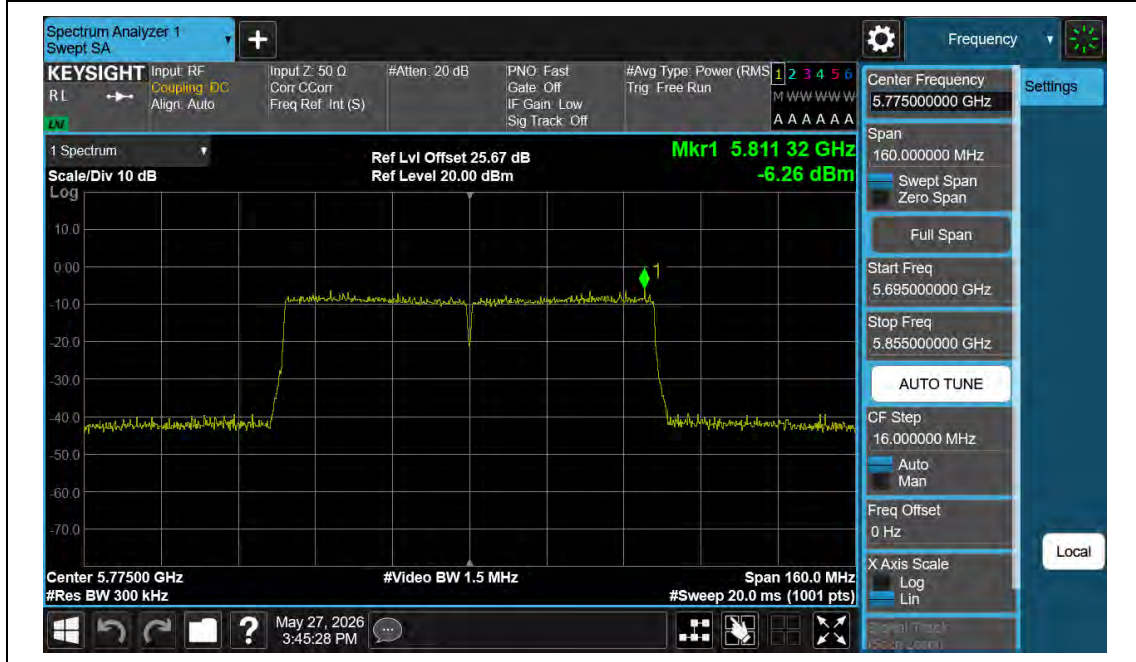

Appendix E: Frequency Stability

Test Result

TestMode	Antenna	Frequen cy[MHz]	Voltage [Vdc]	Temper ature (°C)	Deviation (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
11A	Ant1	5180	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5180	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5180	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	HV	NT	0.00	0.000000	20	PASS

TestMode	Antenna	Frequen cy[MHz]	Voltage [Vdc]	Temper ature (°C)	Deviation (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
11A	Ant1	5180	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	0	0.00	0.000000	20	PASS

11A	Ant1	5500	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	50	0.00	0.000000	20	PASS