



User Manual

A4 Thermal Paper Printer

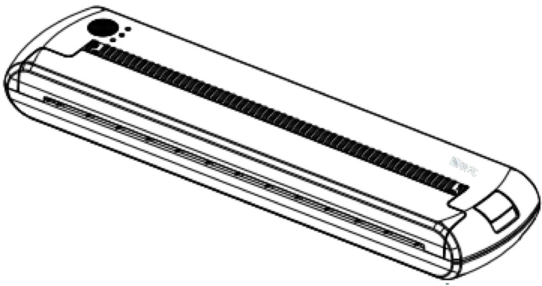


-1-

1.Packing Instruction

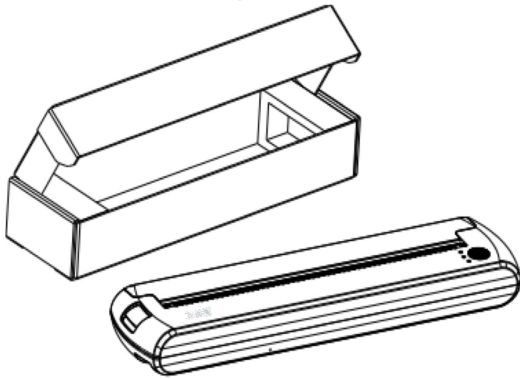


A4 Thermal Paper Printer

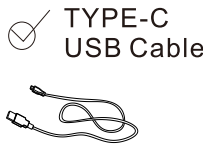

TYPE-C
USB Cable

 
User Manual and
warranty card




-2-

2.Operating Instructions

1.1Paper Feed

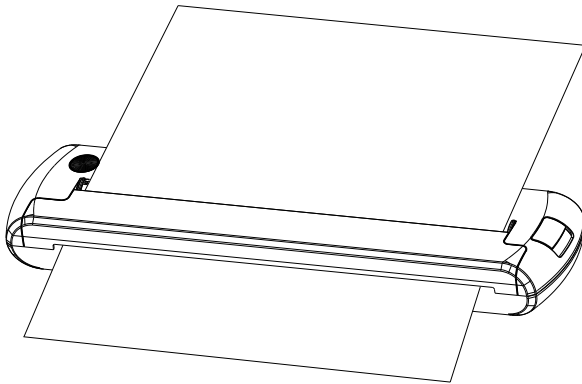


1.2.Exception Handling&Daily Cleaning

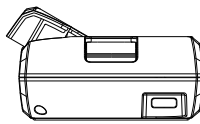

Push the button and open the cover to keep an angle.

-3-

3.Key Functions

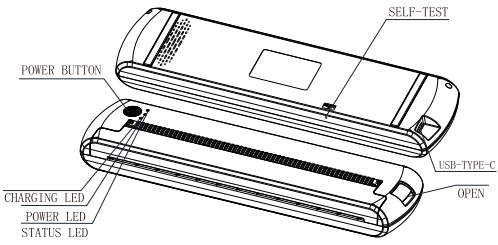

Power LED: High battery show green; Low battery show red.
Charging LED: LED is on when charging; LED is off when fully charged.

Status LED: LED is off when printer is in a normal state (placed paper, pressed cover down); LED flash red when the printer is in an error state (out of paper or cover opened).

Power button: Press and hold for 3s to power on, 2s to off. Short press to feed shortly.

Cover open button: Open cover for cleaning TPH and removing paper jam.

Reset button: Printer freezes, use the ejector pin to insert the reset hole to press the reset button to turn printer off.

Self-test: Placed paper, power off printer, then press and hold the power button for 5s to print self-test.

4.APP print

4.1.App Download


4.1.1.The QR code is on the back of the printer

Scan the first QR code with your mobile phone to get APP
Scan the second QR code through the APP to connect to the printer via bluetooth




4.1.2.Search "Thermalprinter."in Apple Store or Google play

-4-

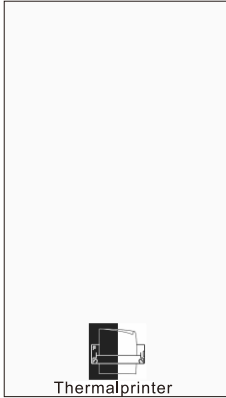


1. Download and install

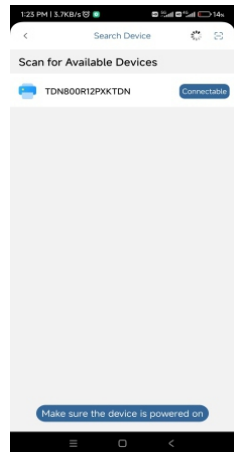

3. Tap available Bluetooth devices"TPD800R21XXXXX"



2. Tap on the top "Thermal Printer"

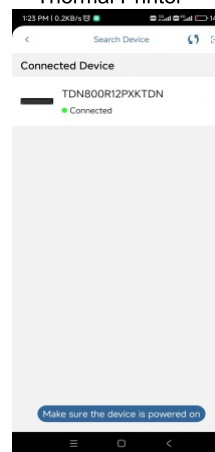


4. Connection completed


-5-




5. Select the file to be printed

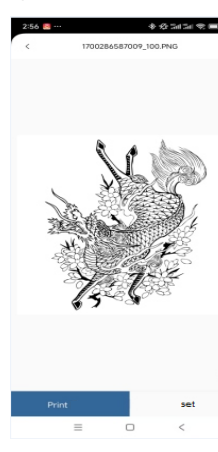

7. Tap "print".

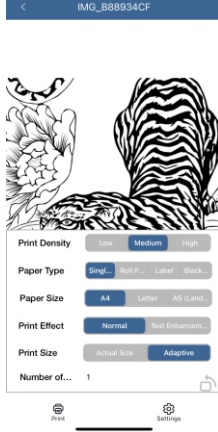

6. Set as needed

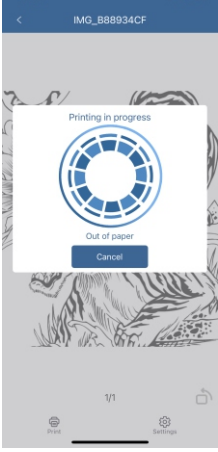

8. Printing.....

-6-

5.PC Print(Windows and Mac)

5.1.Driver download

5.1.1.Download link:

Scan QR code to get download link




Windows




MAC

5.2.WINDOWS Driver installation

5.2.1.Connect the Printer machine to PC via USB cable.

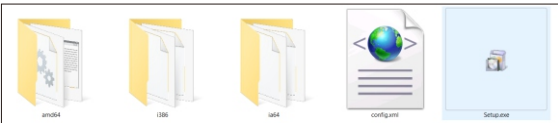


5.2.2.Double click "Setup.exe".

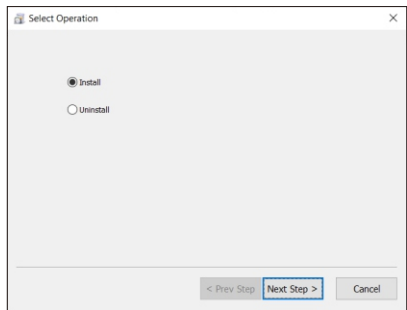


5.2.3.Click "Next Step".


-7-

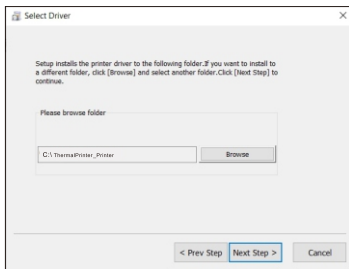

5.2.4.Select the installation path.

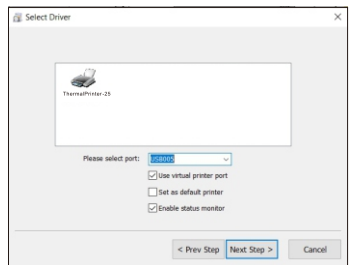

5.2.5.Select "Use virtual printer port"and "Enable status monitor", then click "Next Step".

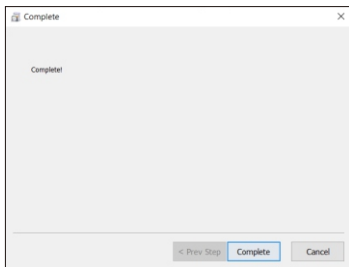


5.2.6.complete.

-8-


5.3.Mac Driver installation



5.3.1.Double click "ThermalPrinter25_Mac.pkg".

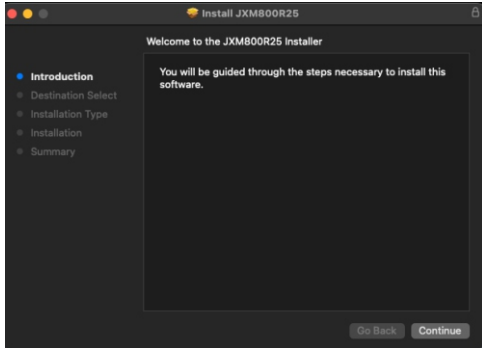


5.3.2.Click "Continue".

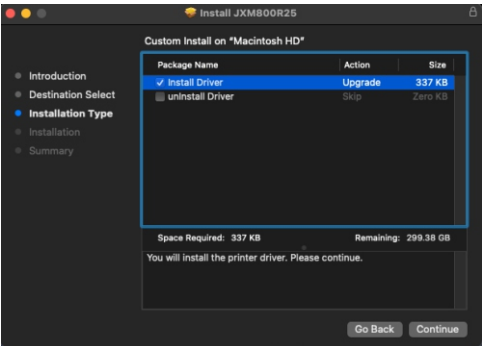


5.3.3.Click "Continue".


-9-

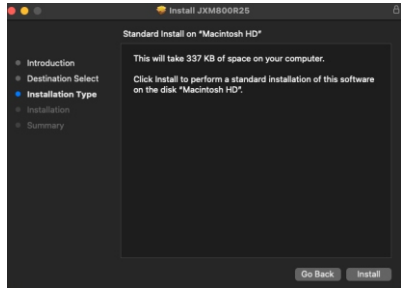

5.3.4.Click "Install".

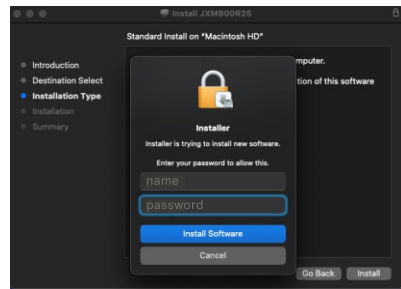

5.2.5.Enter password.

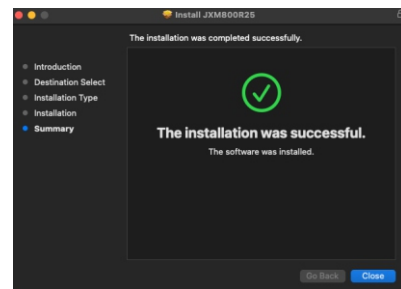

5.2.6.complete.

-10-

6.Announcements

- If there is smoke, abnormal smell, or abnormal noise, turn off the power immediately. Continued to use may cause fire. You should unplug it immediately and contact the seller for advice.
- Do not attempt to repair the machine by yourself to avoid other faults.
- Do not disassemble or correct by yourself. Avoid damage to the machine or cause fire.
- Do not use a power supply that is not configured by the producers to avoid faults.
- Prevent foreign matter from falling into the machine, so as not to cause fire.
- If liquid flow into the machine, unplug it immediately, and contact the seller to find a solution, continued to use may cause fire.
- Do not use cables that are not configured by the company.
- Different connection methods may damage the machine.
- Place the machine on a firm, stable platform to avoid falling damage.
- Do not use the machine in damp and dusty places. pay attention to moisture proof.
- Please turn off the power when not in use for a long time.

7.The warranty and maintenance

The company guarantees that the product can play its superior performance under normal use and maintenance, and the company also provides a one-year warranty service.

Warranty

The maintenance of this product should be carried out by professionals with certain maintenance experience. Please do not change components without authorization during maintenance. Damage to drive board caused by unauthorized maintenance is not within the scope of warranty.

- Warning:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- RF exposure statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- A.The driver board is damaged due to improper operation.
B.Damage caused by customer's own maintenance and transformation.
C.Damage caused by non-compliance with machine operating conditions.
D.Damage caused by natural disasters.

Statement

This is a class B product which may cause radio interference in the living environment. In this case, users may be required to take practical action against their interference.

-10-

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

-10-